

**TOWBARS
WIRING KITS
LOAD CARRIERS**

WESTFALIA



CATALOGUE 2013

TOWBARS AT A GLANCE

RX

The combination of compact design and a special swivel mechanism, makes it possible for this towbar to be fitted to cars with limited space between the bumper and rear panel. The electrical socket is mounted on the towball neck, and this provides a very convenient and easy to use connection between the car and trailer or cycle carrier.



A40H/V

It uses three balls that hold the towbar neck secure in the receiver, without any play or wear. This ensures total safety, yet easy operation and the highest level of quality.



A50H

To use the towbar, the towbar neck is inserted horizontally into the receiver. It is locked automatically. The towbar neck is secured against theft by means of a lock.



F 10/20

The fixed swan neck model is the lowest-priced towbar. The Westfalia towbar is distinguished by its ease of fit and precision assembly (OEM quality).



WIRING KITS

Westfalia wiring kits match perfectly to the vehicle's structure. The product portfolio ranges from kits with relay technology to high-tech CAN-Bus kits; these kits are connected actively to the vehicle's databus. Being consistently innovative due to on site research and development at the Electronics Competence Centre, Westfalia is the leading supplier of wiring kits in Europe.



ABOUT US

STATE OF THE ART PRODUCTION, TESTS AND LOGISTICS

State of the art design and production processes, including 3D CAD systems, numerous welding robots, laser cutting systems, and CNC processing centres ensure custom-tailored, high quality and perfectly fitting towbars. To meet our high standards for quality in corrosion protection, we apply cathodic dip coating to our towbars. In our own labs, the products are tested according to vehicle standards EC 94/20, ECE R55 and Carlos TC. The logistic centre provides the just-in-time delivery for our OE and OES customers and a 24-hour service for the aftermarket.

OUR PILOT PLANT - WESTFALIA'S INNOVATION CENTRE


In 2009, Westfalia's pilot plant was launched, an innovation centre where the most critical development processes for our products come together, both in terms of space and personnel. The close proximity of everyone involved in the process is an important step in increasing the effectiveness of project management. In an area of 3500 m² on two stories, every opportunity is provided to enable the maximum cooperation and communication among the five project teams.



QUALITY FROM OEM

Quality is the driver for success at Westfalia. As one of the leading manufacturers of automotive components, we set quality benchmarks with precision manufacturing of our products and the dedicated performance of our employees. Striving for continual improvement and increased efficiency is a central aspect of our corporate culture. This makes it possible for us to offer you solutions that ensure the highest level of quality and mutually beneficial business partnerships.

The excellent reputation of our brand is derived from our high-quality towbars, which are developed in close cooperation with the automobile industry to meet each individual vehicles towing requirements. This guarantees absolute precision, a quick and simple assembly. Quality is also the focus for the electrical kits that Westfalia develops. The electrical kits contain, for instance, original control units in order to guarantee optimal functionality and quick installation. The precision craftsmanship enhances the quality of the towbar and the safety of the driver. The most recent example of our “power of innovation” is our rear end carrier for bicycles: compact, easy to use and with the highest payload. The extraordinary safety and quality standard is confirmed by intensive testing. Trust the certified quality from Westfalia - The only towbar, when quality matters.

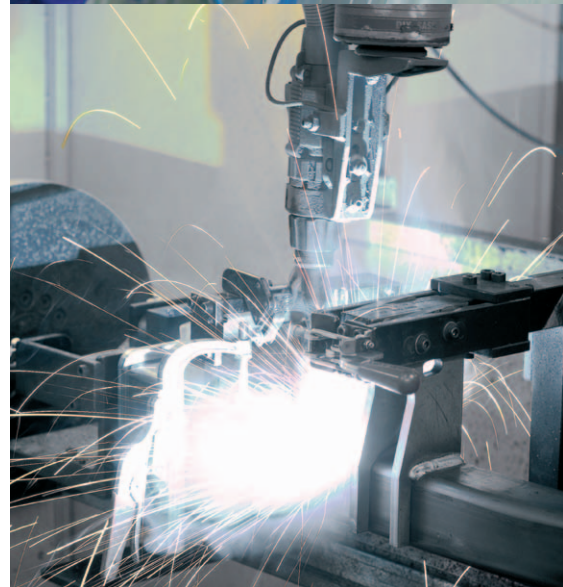

RX

THE RETRACTABLE TOWBAR



Westfalia's premium quality product range is now available, branded as the „RX System“. These products have been developed as a result of many years of collaboration and innovative development with the worlds leading vehicle manufacturers. This world leading technology is now available to the aftermarket.

Thanks to its compact design and precision rotation mechanism, the new „RX System“ can now provide design solutions that were previously not possible on some vehicles because of restricted installation space between the vehicles rear panel and the bumper. If a bumper cut is required, Westfalia has precisely followed the cut specified by the vehicle manufacturer.

The towbar is unlocked using an easy-to-access handle positioned behind the bumper. The towbar neck is then rotated by hand into the final locked position. For your safety and peace of mind, an audible warning tone will sound if the mechanism is not in the locked position.



The electrical socket is conveniently located on the towbar neck, making the connection between car and trailer or cycle carrier could not be simpler. When the towbar is not in use, the towbar neck and electrical socket can be swivelled back and out of sight behind the vehicles bumper.



The „RX system“ is supplied complete with the appropriate 13-pin, vehiclespecific wiring kit.



KITS

EVERYTHING FROM
ONE SOURCE AT A
COMPETITIVE PRICE

TOWBAR

- Retractable, Detachable or Fixed Systems
- High Quality
- Type Approved
- Easy to Use
- Reliable
- Innovative




PLUS



WIRING KIT CAR SPECIFIC

- Original Equipment
- Easy to Fit
- Very Reliable
- Complete Range
- Vehicle Specific

KITS ARE AVAILABLE
IN OUR CATALOGUE
WITH THE LABELING:

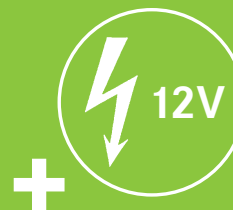

pictogram
of the towbar

KIT = towbar
+ car specific
wiring kit



AWARDED SEVEN
TIMES IN A ROW

Dear WESTFALIA customer:

You now have in your hands the new 2013 WESTFALIA catalogue covering towbars, electrical kits, bicycle racks and spare parts. We have made every effort to incorporate the suggestions and modifications that you have provided us with to further enhance this catalogue. This catalogue provides a wealth of important information and is designed to help you develop and promote your towbar fitting business.

Please note the following:

Fold-out flap on front cover

The legend that corresponds to the columns in this catalogue can be found on the fold-out flap attached to the inside of the front cover of this catalogue. If necessary, you can tear it off and use it as an insert.

KIT = Towbar + 13-pin electrical kit

Our KIT program has been further enhanced with the introduction of additional references. You will now find a KIT for nearly all of our towbar range which is supplied complete with a vehicle specific wiring kit. You can identify these KITs by the last figures of the part number: ... 900013. The part numbers of the older KITs will be adapted to the same standard on a step by step basis.

Installation times

The specified installation times should only be used as an indication of the time required to carry out an installation. The length of time required to complete this will depend on a number of factors, the condition of the vehicle and/or the skills and experience of the individual carrying out the work. In certain circumstances, the specification of a vehicle may vary significantly, such as when an automatic CD changer has to be removed in order to install the electrical equipment, then the required assembly time may increase considerably. Where possible, always try and ascertain the full specification of the vehicle.

Electrical kits

Many questions regarding electrical kits can be resolved by using the "electrical kit info-centre" (on page 373). Here you will find a comprehensive glossary of explanations about electrical kits as well as useful technical information about plug and relay assignments, control units and individual parts. To help you easily identify any spare part requirements, you will find images of the various accessories and spare parts within this section. To assist you further the functions of our electrical kits are easily identifiable in a new comprehensive format in columns 14-21 (refer also to the legend on the fold-out flap).

Vehicles with parking sensors:

When mounting permanently attached towbars, the towball may in some instances activate the vehicles rear parking sensors. This problem can be overcome by fitting a detachable towbar where the neck can be removed from the vehicle when not required for towing. Some vehicles do come with cut off switches for the rear parking sensors but you should check with the customer to confirm that this is an acceptable solution.

Towbars and energy-saving vehicles

Some energy-saving vehicles, for example the Mercedes Blue Efficiency and the VW Blue Motion etc. have not been homologated for towing and therefore have no towing capacity. Always check the VIN plate or the vehicle handbook to verify the towing capacity of the vehicle.

The following is valid before assembling a towbar and an electrical kit:

Always observe the instructions of the vehicle manufacturer in the operating manual of the vehicle.

Content

from page

— Introduction.....	1
— Content.....	2
— Kits.....	4
— Alfa Romeo.....	18
— Audi.....	20
— BMW.....	46
— Cadillac.....	60
— Chevrolet.....	61
— Chrysler.....	65
— Citroën.....	68
— Dacia.....	87
— Daihatsu.....	91
— Dodge.....	92
— Fiat.....	93
— Ford.....	107
— Honda.....	127
— Hummer.....	130
— Hyundai.....	131
— Isuzu.....	137
— Iveco-Magirus.....	138
— Jeep.....	139
— Kia.....	142
— Lancia.....	149
— Land Rover.....	152
— Lexus.....	154
— Mazda.....	155
— Mercedes-Benz.....	160
— Mini.....	183
— Mitsubishi.....	185
— Nissan.....	189
— Opel.....	197
— Peugeot.....	217
— Porsche.....	234
— Renault.....	235
— Saab.....	251
— Seat.....	253
— Skoda.....	259
— Smart.....	269
— Ssang Yong.....	270
— Subaru.....	271
— Suzuki.....	274
— Toyota.....	277
— Volkswagen.....	291
— Volvo.....	337

— Mercedes Sprinter / VW-LT	346
— Universal towing brackets	348
— Towballs and Couplings	350
— Swap system	352
— Special towbars / Couplings for US vehicles	354
— Accessories for towbars	357
— Steps	360
— Spare parts for towbars	361
— Spare parts for Monoflex towbars	362
— Plug covers for detachable towbars	364
— General information for towbars	372
— Electrical kits - Info centre	373
— CAN electrical kits	379
— Extention kits	380
— Universal electrical kits	381
— Adapters and plugs	382
— Sockets and seals	383
— Relays 12V	386
— Accessories	389
— Control units 12V	390
— Pin assignments	391
— Control Units and Sockets for wiring kit	393
— Rear end carrier: Accessories and spare parts	401
— FAQs	409
— Terms of delivery	412

WESTFALIA

KITS

Summary of Estatenation Kits

Car model	Year of construction	Order no.	System
Alfa 159 Saloon	09/06-	306356900113	KIT A40V
Alfa 159 Sportwagon	03/06-	306356900113	KIT A40V
Audi A3	09/96-05/03	305391900113	KIT F20
Audi A3	09/96-05/03	305392900113	KIT A40V
Audi A3	09/96-05/03	305393900113	KIT A40V
Audi A3 Convertible	04/08-	305389900113	KIT F20
Audi A3 Convertible	04/08-	305390900113	KIT A40V
Audi A3 Sportback, 5 doors	09/04-	305299900113	KIT F20
Audi A3 Sportback, 5 doors	09/04-	305300900113	KIT A40V
Audi A3, 3 doors	05/03-	305389900113	KIT F20
Audi A3, 3 doors	05/03-	305390900113	KIT A40V
Audi A3, 3 doors	05/12-	305401900113	KIT F20
Audi A3, 3 doors	05/12-	305403900113	KIT A40V
Audi A3, 3 doors	05/12-	305404900113	KIT A40V
Audi A3, 3 doors	05/12-	321737900113	KIT F20
Audi A4 Allroad Quattro	06/09-	305425900113	KIT A40V
Audi A4 Avant	11/04-08	305301900113	KIT F20
Audi A4 Avant	11/04-08	305302900113	KIT A40V
Audi A4 Avant	01/96-11/01	305394900113	KIT F10
Audi A4 Avant	01/96-11/01	305395900113	KIT A40V
Audi A4 Avant	04/08-	305324900113	KIT F20
Audi A4 Avant	04/08-	305425900113	KIT A40V
Audi A4 Avant	11/01-11/04	305205900113	KIT F20
Audi A4 Avant	11/01-11/04	305206900113	KIT A40V
Audi A4 Convertible	05/02-05	305205900113	KIT F20
Audi A4 Convertible	05/02-05	305206900113	KIT A40V
Audi A4 Convertible	10/05-	305301900113	KIT F20
Audi A4 Convertible	10/05-	305302900113	KIT A40V
Audi A4 Saloon	09/07-	305324900113	KIT F20
Audi A4 Saloon	09/07-	305425900113	KIT A40V
Audi A4 Saloon	11/00-11/04	305205900113	KIT F20
Audi A4 Saloon	11/00-11/04	305206900113	KIT A40V
Audi A4 Saloon	11/04-09/07	305301900113	KIT F20
Audi A4 Saloon	11/04-09/07	305302900113	KIT A40V
Audi A5 Convertible	09-	305324900113	KIT F20
Audi A5 Convertible	09-	305425900113	KIT A40V
Audi A5 Coupé	06/07-	305324900113	KIT F20
Audi A5 Coupé	06/07-	305425900113	KIT A40V
Audi A5 Sportback	07/09-	305324900113	KIT F20
Audi A5 Sportback	09/09-	305425900113	KIT A40V
Audi A6 Allroad	05/06-06/12	305309900113	KIT A40V
Audi A6 Allroad	06/12-	305407900113	KIT A40V
Audi A6 Avant	03/05-	305269900113	KIT A40V
Audi A6 Avant	03/05-	305274900113	KIT F20
Audi A6 Avant	03/05-	305398900113	KIT A40V
Audi A6 Avant	09/11-	305428900113	KIT F20
Audi A6 Avant	09/11-	305429900113	KIT A40V
Audi A6 Avant	97-03/05	305243900113	KIT A40V
Audi A6 Avant	97-03/05	305247900113	KIT F20
Audi A6 Saloon	03/11-	305400900113	KIT A40V
Audi A6 Saloon	04/04-	305269900113	KIT A40V
Audi A6 Saloon	04/04-	305274900113	KIT F20
Audi A6 Saloon	04/04-	305398900113	KIT A40V
Audi A6 Saloon	97-04/04	305330900113	KIT A40V
Audi A7	10/10-	305400900113	KIT A40V
Audi A8	11/02-03/10	305276900113	KIT A40V
Audi Q3	09/11-	305421900113	KIT F20

Summary of Estatenation Kits

Car model	Year of construction	Order no.	System
Audi Q3	09/11-	305423900113	KIT A40V
Audi Q5	10/08-	305351900113	KIT F20
Audi Q5	10/08-	305412900113	KIT A40V
Audi Q7	01/06-	305314900113	KIT A40V
BMW 1 Series Convertible	08-	303323900113	KIT A40V
BMW 1 Series Coupé	11/07-	303323900113	KIT A40V
BMW 1 Series, 3-/5 doors Hatchback	09/11-	303317900113	KIT A40V
BMW 1 Series, 3-/5 doors Hatchback	09/11-	303320900113	KIT F20
BMW 1 Series, 5 doors Hatchback	09/04-	303323900113	KIT A40V
BMW 3 Series Convertible	99-	303153900113	KIT F10
BMW 3 Series Convertible	99-	303230900113	KIT A40V
BMW 3 Series Coupé	04/99-08/06	303153900113	KIT F10
BMW 3 Series Coupé	04/99-08/06	303230900113	KIT A40V
BMW 3 Series Saloon	02/12-	303351900113	KIT F20
BMW 3 Series Saloon	02/12-	303352900113	KIT A40V
BMW 3 Series Saloon	03/05-	303330900113	KIT A40V
BMW 3 Series Saloon	03/05-	303331900113	KIT F20
BMW 3 Series Saloon	04/98-03/05	303153900113	KIT F10
BMW 3 Series Saloon	04/98-03/05	303230900113	KIT A40V
BMW 3 Series Touring	09/05-	303330900113	KIT A40V
BMW 3 Series Touring	09/05-	303331900113	KIT F20
BMW 3 Series Touring	09/12-	303351900113	KIT F20
BMW 3 Series Touring	09/12-	303352900113	KIT A40V
BMW 3 Series Touring	99-09/05	303164900113	KIT F10
BMW 3 Series Touring	99-09/05	303232900113	KIT A40V
BMW 5 Series Saloon	03/10-	303338900113	KIT A40V
BMW 5 Series Saloon	07/03-	303212900113	KIT F20
BMW 5 Series Saloon	07/03-	303235900113	KIT A40V
BMW 5 Series Saloon	07/03-	303294900113	KIT A40V
BMW 5 Series Touring	03/97-06/04	303151900113	KIT F10
BMW 5 Series Touring	03/97-06/04	303229900113	KIT A40V
BMW 5 Series Touring	07/04-09/10	303212900113	KIT F20
BMW 5 Series Touring	07/04-09/10	303235900113	KIT A40V
BMW 5 Series Touring	07/04-09/10	303294900113	KIT A40V
BMW 5 Series Touring	09/10-	303338900113	KIT A40V
BMW X1	10/09-	303313900113	KIT F20
BMW X1	10/09-	303314900113	KIT A40V
BMW X3	01/04-11/10	303304900113	KIT A40V
BMW X3	01/04-11/10	303327900113	KIT F20
BMW X3	11/10-	303339900113	KIT F20
BMW X3	11/10-	303340900113	KIT A40V
BMW X5	06/00-12/06	303207900113	KIT A40V
BMW X5	07-	303273900113	KIT A40V
BMW X6	05/08-	303290900113	KIT A40V
Chevrolet Aveo Hatchback	07/11-	342182900113	KIT F20
Chevrolet Aveo Hatchback	07/11-	342183900113	KIT A40V
Chevrolet Aveo Saloon	07/11-	342187900113	KIT F20
Chevrolet Aveo Saloon	07/11-	342188900113	KIT A40V
Chevrolet Captiva (S3X)	06/06-	349024900113	KIT F20
Chevrolet Captiva (S3X)	06/06-	349025900113	KIT A40V
Chevrolet Cruze 4 doors Saloon	05/09-	314372900113	KIT A40V
Chevrolet Cruze 4 doors Saloon	05/09-	314373900113	KIT F20
Chevrolet Cruze 5 doors Hatchback	07/11-	314416900113	KIT A40V
Chevrolet Cruze 5 doors Hatchback	07/11-	314418900113	KIT F20
Chevrolet Cruze Estate/Station Wagon	06/12-	314469900113	KIT F20
Chevrolet Cruze Estate/Station Wagon	06/12-	314470900113	KIT A40V

Summary of Estatenation Kits

Car model	Year of construction	Order no.	System
Citroën Berlingo	11/96-04/08	304054900113	KIT F20
Citroën Berlingo First	04/08-11/11	304054900113	KIT F20
Citroën Berlingo L1	04/08-11/11	304091900113	KIT F20
Citroën Berlingo L1	04/08-11/11	304092900113	KIT A40V
Citroën Berlingo L2	04/08-11/11	304129900113	KIT F20
Citroën Berlingo L2	04/08-11/11	304131900113	KIT A40V
Citroën C Crosser	09/07-	340094900113	KIT A40V
Citroën C3	01/10-	304136900113	KIT F20
Citroën C3	01/10-	304137900113	KIT A50H
Citroën C3 Picasso	03/09-	304127900113	KIT F20
Citroën C3 Picasso	03/09-	304139900113	KIT A40V
Citroën C4 Aircross	03/12-	340092900113	KIT F20
Citroën C4 Aircross	03/12-	340093900113	KIT A40V
Citroën C4 Grand Picasso	11/06-01/11	304099900113	KIT F20
Citroën C4 Grand Picasso	11/06-01/11	304100900113	KIT A40V
Citroën C4 Saloon	11/10-	304147900113	KIT F20
Citroën C4 Saloon	11/10-	304148900113	KIT A40V
Citroën C4 Picasso	11/06-01/11	304099900113	KIT F20
Citroën C4 Picasso	11/06-01/11	304100900113	KIT A40V
Citroën C5 Van	05/08-	304145900113	KIT A40V
Citroën C5 Van	05/08-	304146900113	KIT F20
Citroën C5 Saloon	05/08-	304145900113	KIT A40V
Citroën C5 Saloon	05/08-	304146900113	KIT F20
Citroën C8	10/05-	315097900113	KIT A40V
Citroën C8	10/05-	315098900113	KIT F20
Citroën DS3	01/10-	304136900113	KIT F20
Citroën DS3	01/10-	304137900113	KIT A50H
Citroën DS4	04/11-	304147900113	KIT F20
Citroën DS4	04/11-	304148900113	KIT A40V
Citroën Jumper	02/11-	306272900113	KIT A40V
Citroën Jumper	02/11-	306357900113	KIT F40
Citroën Jumper	06/06-	306318900113	KIT F40
Citroën Jumper	06/06-02/11	306271900113	KIT A40V
Citroën Jumper	06/06-02/11	306330900113	KIT F40
Citroën Jumpy	01/07-	306331900113	KIT F20
Citroën Jumpy	01/07-	306333900113	KIT A50H
Citroën Nemo	02/08-	306349900113	KIT F20
Citroën Nemo	02/08-	306350900113	KIT A50H
Dacia Dokker	11/12-	316333900113	KIT F20
Dacia Dokker	11/12-	316334900113	KIT A40V
Dacia Duster, SUV	03/10-	316314900113	KIT F20
Dacia Duster, SUV	03/10-	316315900113	KIT A40V
Dacia Lodgy, J 92	06/12-	316321900113	KIT F20
Dacia Lodgy, J 92	06/12-	316324900113	KIT A40V
Dacia Lodgy, J 92	06/12-	316345900113	KIT F20
Dacia Logan Van	01/08-	316259900113	KIT F20
Dacia Logan Van Express	03/09-	316259900113	KIT F20
Dacia Sandero	01/13-	316343900113	KIT F20
Dacia Sandero	01/13-	316344900113	KIT A40V
Dacia Sandero	06/08-01/13	316286900113	KIT F20
Dacia Sandero	06/08-01/13	316287900113	KIT A50H
Daihatsu Charade	05/11-	335383900113	KIT A40V
Fiat 500 L	10/12-	306400900113	KIT A40V
Fiat 500 L	10/12-	306401900113	KIT F20
Fiat Bravo	04/07-	306286900113	KIT A40V
Fiat Doblo	09/05-02/10	306278900113	KIT F20
Fiat Doblo	09/05-02/10	306279900113	KIT A40V

Summary of Estatenation Kits

Car model	Year of construction	Order no.	System
Fiat Doblo + Doblo Cargo	02/10-	306368900113	KIT F20
Fiat Doblo + Doblo Cargo	02/10-	306369900113	KIT A40V
Fiat Doblo + Doblo Cargo	02/10-	306381900113	KIT A50H
Fiat Doblo + Doblo Cargo	02/10-	306382900113	KIT F30
Fiat Ducato	02/11-	306272900113	KIT A40V
Fiat Ducato	02/11-	306357900113	KIT F40
Fiat Ducato	06/06-	306318900113	KIT F40
Fiat Ducato	06/06-02/11	306271900113	KIT A40V
Fiat Ducato	06/06-02/11	306330900113	KIT F40
Fiat Fiorino Van / Qubo	02/08-	306349900113	KIT F20
Fiat Fiorino Van / Qubo	02/08-	306350900113	KIT A50H
Fiat Panda	02/12-	306385900113	KIT F20
Fiat Panda	02/12-	306394900113	KIT A40V
Fiat Panda	09/03-	306248900113	KIT F20
Fiat Panda	09/03-	306249900113	KIT A40V
Fiat Punto EVO	10/09-	306374900113	KIT A40V
Fiat Punto EVO	10/09-	306375900113	KIT F20
Fiat Scudo	01/07-	306331900113	KIT F20
Fiat Scudo	01/07-	306333900113	KIT A50H
Fiat Sedici	04/06-	306276900113	KIT F20
Fiat Sedici	04/06-	306277900113	KIT A40V
Fiat Ulysse	10/05-	315097900113	KIT A40V
Fiat Ulysse	10/05-	315098900113	KIT F20
Ford B-Max	09/12-	307333900113	KIT A40V
Ford B-Max	09/12-	307397900113	KIT F20
Ford C-Max	09/10-	307402900113	KIT F20
Ford C-Max	09/10-	307402900113	KIT F20
Ford C-Max	09/10-	307441900113	KIT A40V
Ford Fiesta	10/08-	307330900113	KIT A40V
Ford Fiesta	10/08-	307363900113	KIT F20
Ford Fiesta	11/05-10/08	307283900113	KIT F10
Ford Fiesta Van	07-	307283900113	KIT F10
Ford Focus C-Max	10/03-11/10	307407900113	KIT A40V
Ford Focus C-Max	10/03-11/10	307438900113	KIT F20
Ford Focus Hatchback	01/08-03/11	307264900113	KIT F20
Ford Focus Hatchback	01/08-03/11	307436900113	KIT A40V
Ford Focus Hatchback	03/11-	307459900113	KIT F20
Ford Focus Hatchback	03/11-	307459900113	KIT F20
Ford Focus Hatchback	03/11-	307461900113	KIT A40V
Ford Focus Hatchback	10/04-01/08	307453900113	KIT A40V
Ford Focus Hatchback	10/04-01/08	307454900113	KIT F20
Ford Focus Estate	03/05-04/11	307337900113	KIT F20
Ford Focus Estate	03/05-04/11	307338900113	KIT A40V
Ford Focus Estate	04/11-	307456900113	KIT F20
Ford Focus Estate	04/11-	307458900113	KIT A40V
Ford Fusion	11/05-	307289900113	KIT F10
Ford Galaxy	05/00-06	321665900113	KIT F20
Ford Galaxy	05/00-06	321775900113	KIT A40V
Ford Galaxy 7 seats	05/06-	307306900113	KIT F20
Ford Galaxy 7 seats	05/06-	307355900113	KIT A40V
Ford Grand C-Max	09/10-	307402900113	KIT F20
Ford Grand C-Max	09/10-	307441900113	KIT A40V
Ford Kuga	04/13-	307473900113	KIT F20
Ford Kuga	04/13-	307474900113	KIT A40V
Ford Kuga	05/08-04/13	307345900113	KIT F20
Ford Kuga	05/08-04/13	307464900113	KIT A40V

Summary of Estatenation Kits

Car model	Year of construction	Order no.	System
Ford Mondeo 5 doors	06/07-	307329900113	KIT A40V
Ford Mondeo Estate	06/07-	307403900113	KIT F20
Ford Mondeo Estate	06/07-	307455900113	KIT A40V
Ford Ranger III	03/12-	307443900113	KIT F30
Ford S-Max	05/06-	307304900113	KIT F20
Ford S-Max	05/06-	307305900113	KIT A40V
Ford Tourneo Connect	03-	307262900113	KIT F20
Ford Transit Connect	03-	307262900113	KIT F20
Ford Transit Van	04/00-	307260900113	KIT F30
Honda CRV	01/07-11/12	338053900113	KIT F20
Honda CRV	01/07-11/12	338094900113	KIT MFII
Honda CRV	11/12-	338107900113	KIT F20
Honda CRV	11/12-	338108900113	KIT A40V
Hyundai I 30 cw/Estate	06/12-	346073900113	KIT F20
Hyundai I 30 cw/Estate	06/12-	346074900113	KIT A40V
Hyundai I 30 Hatchback	03/12-	345086900113	KIT A40V
Hyundai I 30 Hatchback	03/12-	346071900113	KIT A40V
Hyundai I 40 cw	07/11-	346082900113	KIT F20
Hyundai I 40 cw	07/11-	346083900113	KIT A40V
Hyundai I 40 Saloon	02/12-	346070900113	KIT F20
Hyundai I 40 Saloon	02/12-	346072900113	KIT A40V
Hyundai IX 20	11/10-	346063900113	KIT F20
Hyundai IX 20	11/10-	346064900113	KIT A40V
Hyundai IX 35	03/10-	346048900113	KIT F20
Hyundai IX 35	03/10-	346049900113	KIT A40V
Hyundai Santa Fe	03/06-	346810900113	KIT F20
Hyundai Santa Fe	03/06-	346811900113	KIT A40V
Hyundai Santa Fe	09/12-	346075900113	KIT F20
Hyundai Santa Fe	09/12-	346076900113	KIT A40V
Hyundai Tucson	09/04-	346018900113	KIT F20
Hyundai Tucson	09/04-	346019900113	KIT A40V
Jeep Commander	05/06-	342102900113	KIT F20
Jeep Commander	05/06-	342103900113	KIT A40V
Jeep Grand Cherokee	03/06-03/11	342102900113	KIT F20
Jeep Grand Cherokee	03/06-03/11	342103900113	KIT A40V
Jeep Grand Cherokee	04/11-	342185900113	KIT A40V
Kia Carens	03/13-	345091900113	KIT F20
Kia Carens	03/13-	345092900113	KIT A40V
Kia Cee'd 5 doors	06/12-	345086900113	KIT A40V
Kia Cee'd Sporty Wagon	09/09-	345027900113	KIT F20
Kia Cee'd Sporty Wagon	09/09-	345059900113	KIT A40V
Kia Cee'd sw/Sportswagon	10/12-	345088900113	KIT F20
Kia Cee'd sw/Sportswagon	10/12-	345089900113	KIT A40V
Kia Optima	04/12-	345081900113	KIT F20
Kia Optima	04/12-	345082900113	KIT A40V
Kia Picanto	05/11-	345077900113	KIT F20
Kia Picanto	05/11-	345080900113	KIT A50H
Kia Rio Hatchback	08/11-	345090900113	KIT A40V
Kia Rio Hatchback	08/11-08/12	345084900113	KIT A40V
Kia Sorento	07/06-10/09	345039900113	KIT A40V
Kia Sorento	07/06-10/09	345060900113	KIT F20
Kia Sorento	10/09-10/12	345066900113	KIT F20
Kia Sorento	10/09-10/12	345068900113	KIT A40V
Kia Sorento	10/09-10/12	345400900113	KIT F20
Kia Sorento	10/09-10/12	345401900113	KIT A40V

Summary of Estatenation Kits

Car model	Year of construction	Order no.	System
Kia Sportage	08/10-	345078900113	KIT F20
Kia Sportage	08/10-	345079900113	KIT A40V
Kia Sportage	08/10-	345087900113	KIT F20
Kia Sportage	12/04-08/10	345073900113	KIT F20
Kia Sportage	12/04-08/10	345074900113	KIT A40V
Lancia Phedra	10/05-	315097900113	KIT A40V
Lancia Phedra	10/05-	315098900113	KIT F20
Land Rover Range-Rover Evoque	09/11-	323102900113	KIT A40V
Lexus RX 350 / 450 h	05/09-	335357900113	KIT A40V
Lexus RX 350 / 450 h	05/09-	335358900113	KIT A40V
Mazda 3 Hatchback	03/09-	343038900113	KIT A40V
Mazda 5	06/05-10/10	343040900113	KIT A40V
Mazda 6 Saloon	02/13-	343070900113	KIT F20
Mazda 6 Saloon	02/13-	343071900113	KIT A40V
Mazda 6 Saloon	03/08-02/13	343048900113	KIT F20
Mazda 6 Saloon	03/08-02/13	343058900113	KIT A40V
Mazda 6 Van	02/13-	343070900113	KIT F20
Mazda 6 Van	02/13-	343071900113	KIT A40V
Mazda 6 Van	03/08-02/13	343048900113	KIT F20
Mazda 6 Van	03/08-02/13	343058900113	KIT A40V
Mazda CX5	04/12-	343053900113	KIT F20
Mazda CX5	04/12-	343056900113	KIT A40V
Mazda CX7	10/07-	343066900113	KIT F20
Mazda CX7	10/07-	343067900113	KIT A40V
Mazda Pickup BT50	06/12-	307443900113	KIT F30
Mercedes A Class	09/04-	313171900113	KIT F20
Mercedes A Class	09/04-	313231900113	KIT A40V
Mercedes A Class	09/12-	313386600001	RX
Mercedes A Class	09/12-	313396900113	KIT F20
Mercedes A Class	09/12-	313398900113	KIT A40V
Mercedes A Class	97-09/04	313185900113	KIT F10
Mercedes B Class	06/05-	313171900113	KIT F20
Mercedes B Class	06/05-	313231900113	KIT A40V
Mercedes B Class	11/11-	313386600001	RX
Mercedes B Class	11/11-	313396900113	KIT F20
Mercedes B Class	11/11-	313398900113	KIT A40V
Mercedes Citan	10/12-	316352900113	KIT F20
Mercedes Citan	10/12-	316353900113	KIT A40V
Mercedes C Class Coupé	06/11-	313211900113	KIT A40V
Mercedes C Class Coupé	06/11-	313389900113	KIT F20
Mercedes C Class Van	06/01-09/07	313166900113	KIT F20
Mercedes C Class Van	06/01-09/07	313167900113	KIT A40V
Mercedes C Class Van	07/09-	313211900113	KIT A40V
Mercedes C Class Van	07/09-	313389900113	KIT F20
Mercedes C Class Van	09/07-07/09	313214900113	KIT F20
Mercedes C Class Van	09/07-07/09	313315900113	KIT A40V
Mercedes C Class Saloon	03/07-07/09	313214900113	KIT F20
Mercedes C Class Saloon	03/07-07/09	313315900113	KIT A40V
Mercedes C Class Saloon	06/00-03/07	313166900113	KIT F20
Mercedes C Class Saloon	06/00-03/07	313167900113	KIT A40V
Mercedes C Class Saloon	07/09-	313211900113	KIT A40V
Mercedes C Class Saloon	07/09-	313389900113	KIT F20
Mercedes E Class Convertible	03/10-	313211900113	KIT A40V
Mercedes E Class Convertible	03/10-	313389900113	KIT F20
Mercedes E Class Coupé	05/09-	313211900113	KIT A40V
Mercedes E Class Coupé	05/09-	313389900113	KIT F20

Summary of Estatenation Kits

Car model	Year of construction	Order no.	System
Mercedes E Class Van	03-09/09	313203900113	KIT F20
Mercedes E Class Van	03-09/09	313204900113	KIT A40V
Mercedes E Class Van	09/09-	313371900113	KIT F20
Mercedes E Class Van	09/09-	313373900113	KIT A40V
Mercedes E Class Saloon	03/02-09	313194900113	KIT F20
Mercedes E Class Saloon	03/02-09	313195900113	KIT A40V
Mercedes E Class Saloon	03/09-	313360900113	KIT F20
Mercedes E Class Saloon	03/09-	313361900113	KIT A40V
Mercedes E Class Saloon	06/95-03/02	313160900113	KIT A40V
Mercedes GLK	07/09-	313252900113	KIT A40V
Mercedes GLK	07/09-	313433900113	KIT F20
Mercedes GLK	07/09-	313434900113	KIT A40V
Mercedes M Class	11/11-	313406900113	KIT A40V
Mercedes Sprinter Van	04/06-	313376900113	KIT F40
Mercedes Sprinter flatbed	04/06-	313275900113	KIT F40
Mercedes Sprinter faltbed	04/06-	313377900113	KIT F40
Mercedes Vito / Viano / V Class	02/04-	313240900113	KIT F20
Mercedes Vito / Viano / V Class	02/04-	313382900113	KIT A40V
Mini R60 Countryman	09/10-	323097900113	KIT A40V
Mitsubishi Crossover ASX	06/10-	340092900113	KIT F20
Mitsubishi Crossover ASX	06/10-	340093900113	KIT A40V
Mitsubishi Outlander	04/07-09/12	340094900113	KIT A40V
Mitsubishi Outlander	09/12-	340098900113	KIT F20
Mitsubishi Outlander	09/12-	340099900113	KIT A40V
Nissan Juke	10/10-	332304900113	KIT A40V
Nissan Juke	10/10-	332305900113	KIT A40V
Nissan NV 200 / Evalia	10/09-	332264900113	KIT F20
Nissan NV 200 / Evalia	10/09-	332265900113	KIT A40V
Nissan Pathfinder	03/05-	332301900113	KIT F20
Nissan Pathfinder	03/05-	332303900113	KIT A40V
Nissan Pixo	09-	332306900113	KIT F20
Nissan Primastar	03/10-	314870900113	KIT F30
Nissan Primastar	08/06-03/10	314364900113	KIT F30
Nissan Qashqai, Qashqai +2	02/07-	332246900113	KIT F20
Nissan Qashqai, Qashqai +2	02/07-	332247900113	KIT A40V
Nissan X-Trail	06/07-	332261900113	KIT F20
Nissan X-Trail	06/07-	332262900113	KIT A50H
Opel Agila	04/08-	314308900113	KIT F20
Opel Agila	04/08-	314309900113	KIT AHII
Opel Antara	02/07-05/11	314304900113	KIT F20
Opel Antara	02/07-05/11	314305900113	KIT A40V
Opel Antara	05/11-	314421900113	KIT F20
Opel Antara	05/11-	314422900113	KIT A40V
Opel Astra Coupé	00-03/04	314236900113	KIT F20
Opel Astra G Caravan	03/98-10/04	314275900113	KIT F20
Opel Astra G Saloon	03/98-03/04	314236900113	KIT F20
Opel Astra H Caravan	10/04-	314285900113	KIT F20
Opel Astra H Caravan	10/04-	314287900113	KIT A40V
Opel Astra H Hatchback	03/04-	314281900113	KIT A40V
Opel Astra H Hatchback	03/04-	314299900113	KIT F20
Opel Astra H Van	06-	314285900113	KIT F20
Opel Astra H Van	06-	314287900113	KIT A40V
Opel Astra J 4 doors Saloon	10/12-	314412900113	KIT F20
Opel Astra J 4 doors Saloon	10/12-	314414900113	KIT A40V
Opel Astra J Hatchback	10/12-	314474900113	KIT F20
Opel Astra J Hatchback	12/09-	314473900113	KIT A40V

Summary of Estatenation Kits

Car model	Year of construction	Order no.	System
Opel Astra J Hatchback	12/09-10/12	314386900113	KIT A40V
Opel Astra J Hatchback	12/09-10/12	314387900113	KIT F20
Opel Astra J GTC	01/12-	314440900113	KIT A40V
Opel Astra J GTC	01/12-	314441900113	KIT F20
Opel Astra J Sports Tourer	11/10-	314406900113	KIT A40V
Opel Astra J Sports Tourer	11/10-	314407900113	KIT F20
Opel Combo	02/12-	306368900113	KIT F20
Opel Combo	02/12-	306369900113	KIT A40V
Opel Combo	02/12-	306381900113	KIT A50H
Opel Combo	02/12-	306382900113	KIT F30
Opel Corsa Combo Van	03/02-	314282900113	KIT F20
Opel Corsa D	10/06-	314306900113	KIT F20
Opel Corsa D	10/06-	314307900113	KIT A40V
Opel Insignia Saloon	11/08-	314341900113	KIT A40V
Opel Insignia Saloon	11/08-	314389900113	KIT F20
Opel Insignia Sports Tourer	08/09-	314342900113	KIT A40V
Opel Insignia Sports Tourer	08/09-	314390900113	KIT F20
Opel Meriva	05/03-	314289900113	KIT A40V
Opel Meriva	06/10-	314392900113	KIT A40V
Opel Meriva	06/10-	314394900113	KIT F20
Opel Mokka	10/12-	314450900113	KIT F20
Opel Mokka	10/12-	314451900113	KIT A40V
Opel Vivaro Van	03/10-	314870900113	KIT F30
Opel Vivaro Van	08/06-03/10	314364900113	KIT F30
Opel Zafira	04/99-07/05	314362900113	KIT F20
Opel Zafira Tourer	01/12-	314437900113	KIT A40V
Opel Zafira Tourer	01/12-	314438900113	KIT F20
Opel Zafira, Zafira Family	07/05-	314293900113	KIT A40V
Opel Zafira, Zafira Family	07/05-	314361900113	KIT F20
Peugeot 207	04/06-	315113900113	KIT F20
Peugeot 207	04/06-	315114900113	KIT A50H
Peugeot 207 sw / Estate	06/07-	315118900113	KIT F20
Peugeot 207 sw / Estate	06/07-	315119900113	KIT A40V
Peugeot 208	04/12-	315184900113	KIT F20
Peugeot 208	04/12-	315185900113	KIT A50H
Peugeot 3008	06/09-	315157900113	KIT F20
Peugeot 3008	06/09-	315158900113	KIT A40V
Peugeot 307 Hatchback	07/05-	315108900113	KIT F20
Peugeot 307 Hatchback	07/05-	315109900113	KIT A40V
Peugeot 307 sw	07/05-	315099900113	KIT F20
Peugeot 307 sw	07/05-	315103900113	KIT A40V
Peugeot 308 Hatchback	05/11-	315188900113	KIT A40V
Peugeot 308 Hatchback	10/07-05/11	315401900113	KIT A40V
Peugeot 308 sw	05/08-	315151900113	KIT F20
Peugeot 308 sw	05/08-	315152900113	KIT A40V
Peugeot 4007	09/07-	340094900113	KIT A40V
Peugeot 4008	03/12-	340092900113	KIT F20
Peugeot 4008	03/12-	340093900113	KIT A40V
Peugeot 407 Estate / sw	01/05-07/08	315104900113	KIT F20
Peugeot 407 Estate / sw	01/05-07/08	315105900113	KIT A40V
Peugeot 407 Saloon	05/04-07/08	315104900113	KIT F20
Peugeot 407 Saloon	05/04-07/08	315105900113	KIT A40V
Peugeot 5008	09/09-	315177900113	KIT F20
Peugeot 5008	09/09-	315178900113	KIT A40V
Peugeot 508 Estate	03/11-	315180900113	KIT F20
Peugeot 508 Estate	03/11-	315182900113	KIT A40V
Peugeot 508 Saloon	03/11-	315175900113	KIT A40V

Summary of Estatenation Kits

Car model	Year of construction	Order no.	System
Peugeot 807	10/05-	315097900113	KIT A40V
Peugeot 807	10/05-	315098900113	KIT F20
Peugeot Bipper + Teepee	02/08-	306349900113	KIT F20
Peugeot Bipper + Teepee	02/08-	306350900113	KIT A50H
Peugeot Boxer Van	02/11-	306272900113	KIT A40V
Peugeot Boxer Van	02/11-	306357900113	KIT F40
Peugeot Boxer Van	06/06-02/11	306271900113	KIT A40V
Peugeot Boxer Van	06/06-02/11	306330900113	KIT F40
Peugeot Boxer flatbed	06/06-	306318900113	KIT F40
Peugeot Expert	01/07-	306331900113	KIT F20
Peugeot Expert	01/07-	306333900113	KIT A50H
Peugeot Partner Van	08-11/11	304129900113	KIT F20
Peugeot Partner Van	08-11/11	304131900113	KIT A40V
Peugeot Partner Van	04/08-11/11	304091900113	KIT F20
Peugeot Partner Van	04/08-11/11	304092900113	KIT A40V
Peugeot Partner Van	11/96-04/08	304054900113	KIT F20
Peugeot Partner Origin	04/08-	304054900113	KIT F20
Porsche Cayenne	04/10-	321736900113	KIT A40V
Porsche Cayenne	12/02-04/10	321500900113	KIT A40V
Renault Clio III	05/09-	316251900113	KIT F20
Renault Clio III	10/05-	316252900113	KIT A40V
Renault Clio III Grandtour	01/08-	316277900113	KIT F20
Renault Clio III Grandtour	01/08-	316278900113	KIT A40V
Renault Clio IV	11/12-	316335900113	KIT A50H
Renault Clio IV Grandtour	03/13-	316336900113	KIT F20
Renault Clio IV Grandtour	03/13-	316337900113	KIT A40V
Renault Grand Kangoo	02/08	316269900113	KIT A40V
Renault Grand Kangoo	02/08-	316268900113	KIT F20
Renault Grand Scenic	04/09-	316295900113	KIT F20
Renault Grand Scenic	04/09-	316297900113	KIT A40V
Renault Kangoo	05/97-02/08	316201900113	KIT F20
Renault Kangoo + Kangoo Rapid	02/08-	316268900113	KIT F20
Renault Kangoo + Kangoo Rapid	02/08-	316269900113	KIT A50H
Renault Koleos	09/08-	316226900113	KIT F20
Renault Koleos	09/08-	316227900113	KIT A40V
Renault Laguna Grandtour	01/08-	316264900113	KIT F20
Renault Laguna Grandtour	01/08-	316265900113	KIT A40V
Renault Mégane 5 doors	11/08-	316272900113	KIT F20
Renault Mégane 5 doors	11/08-	316273900113	KIT A40V
Renault Mégane Grandtour	06/09-	316289900113	KIT F20
Renault Mégane Grandtour	06/09-	316291900113	KIT A50H
Renault Mégane Grandtour	07/03-06/09	316208900113	KIT F20
Renault Mégane Grandtour	07/03-06/09	316209900113	KIT A40V
Renault Scenic	06/09-	316292900113	KIT F20
Renault Scenic	06/09-	316294900113	KIT A40V
Renault Scenic	07/03-06/09	316206900113	KIT F20
Renault Scenic	07/03-06/09	316207900113	KIT A40V
Renault Trafic Van	03/10-	314870900113	KIT F30
Renault Trafic Van	08/06-03/10	314364900113	KIT F30
Seat Alhambra	05/00-09/10	321665900113	KIT F20
Seat Alhambra	05/00-09/10	321775900113	KIT A40V
Seat Alhambra	10/10-	321698900113	KIT F20
Seat Alhambra	10/10-	321700900113	KIT A40V
Seat Altea	06/04-	344043900113	KIT F20
Seat Altea	06/04-	344044900113	KIT A40V
Seat Altea XL + Freetrack	10/06-	344043900113	KIT F20
Seat Altea XL + Freetrack	10/06-	344048900113	KIT A40V

Summary of Estatenation Kits

Car model	Year of construction	Order no.	System
Seat Exeo Saloon and ST/Estate	03/09-	344053900113	KIT F20
Seat Exeo Saloon and ST/Estate	03/09-	344054900113	KIT A40V
Seat Ibiza ST/Estate / 3-/5 doors	07/08-	344060900113	KIT A40V
Seat Leon	11/12-	344062900113	KIT F20
Seat Leon	11/12-	344063900113	KIT A40V
Seat Toledo	02/13-	317106900113	KIT F20
Seat Toledo	02/13-	317107900113	KIT A40V
Seat Toledo	11/04-	344043900113	KIT F20
Seat Toledo	11/04-	344044900113	KIT A40V
Skoda Fabia I Estate/Saloon	11/00-12/07	317059900113	KIT F20
Skoda Fabia I Hatchback	12/99-06/07	317043900113	KIT F20
Skoda Fabia II Estate	01/08-05/10	317085900113	KIT F20
Skoda Fabia II Estate	01/08-05/10	317086900113	KIT A40V
Skoda Fabia II Estate	05/10-	317250900113	KIT F20
Skoda Fabia II Estate	05/10-	317251900113	KIT A40V
Skoda Fabia II Hatchback	05/10-	317250900113	KIT F20
Skoda Fabia II Hatchback	05/10-	317251900113	KIT A40V
Skoda Fabia II Hatchback	06/07-05/10	317085900113	KIT F20
Skoda Fabia II Hatchback	06/07-05/10	317086900113	KIT A40V
Skoda Octavia I Saloon/Estate	12/96-01/05	317015900113	KIT F20
Skoda Octavia I Saloon/Estate	12/96-01/05	317016900113	KIT A40V
Skoda Octavia II Estate	01/05-	317102900113	KIT A40V
Skoda Octavia II Estate	01/05-	317104900113	KIT F20
Skoda Octavia II Saloon	01/05-	317102900113	KIT A40V
Skoda Octavia II Saloon	01/05-	317104900113	KIT F20
Skoda Octavia III	02/13-	317096900113	KIT F20
Skoda Octavia III	02/13-	317098900113	KIT A40V
Skoda Rapid	10/12-	317106900113	KIT F20
Skoda Rapid	10/12-	317107900113	KIT A40V
Skoda Roomster	05/10-	317420900113	KIT F20
Skoda Roomster	05/10-	317421900113	KIT A40V
Skoda Roomster	09/06-05/10	317063900113	KIT F20
Skoda Roomster	09/06-05/10	317064900113	KIT A40V
Skoda Superb Estate	12/09-	317102900113	KIT A40V
Skoda Superb Estate	12/09-	317104900113	KIT F20
Skoda Superb Saloon	06/08-	317102900113	KIT A40V
Skoda Superb Saloon	06/08-	317104900113	KIT F20
Skoda Yeti	08/09-	317080900113	KIT F20
Skoda Yeti	08/09-	317105900113	KIT A40V
Ssang Yong Korando C	10/10-	349038900113	KIT F20
Ssang Yong Korando C	10/10-	349039900113	KIT A40V
Subaru XV	03/12-	348037900113	KIT A40V
Suzuki Alto	09-	332306900113	KIT F20
Suzuki Splash	08-	314308900113	KIT F20
Suzuki Splash	08-	314309900113	KIT AHII
Suzuki SX4	06/06-	306276900113	KIT F20
Suzuki SX4	06/06-	306277900113	KIT A40V
Toyota Auris 3/5 doors	03/07-	335333600001	KIT F20
Toyota Auris 3/5 doors	03/07-	335334600001	KIT A40V
Toyota Avensis Saloon, 4 doors	02/09-	335343900113	KIT F20
Toyota Avensis Saloon, 4 doors	02/09-	335344900113	KIT A40V
Toyota Avensis Saloon, 5 doors	01/09-	335343900113	KIT F20
Toyota Avensis Saloon, 5 doors	01/09-	335344900113	KIT A40V
Toyota Avensis Saloon, 5 doors	04/03-01/09	335310600001	KIT F20
Toyota Avensis Saloon, 5 doors	04/03-01/09	335311600001	KIT A40V
Toyota Avensis Saloon	04/03-01/09	335306600001	KIT F20
Toyota Avensis Saloon	04/03-01/09	335306600001	KIT F20

Summary of Estatenation Kits

Car model	Year of construction	Order no.	System
Toyota Avensis Estate	01/09-	335345900113	KIT F20
Toyota Avensis Estate	01/09-	335346900113	KIT A40V
Toyota Avensis Estate	04/03-01/09	335308600001	KIT F20
Toyota Avensis Estate	04/03-01/09	335309600001	KIT A40V
Toyota Corolla Verso	04/04-09	335322900113	KIT F20
Toyota Corolla Verso	04/04-09	335323900113	KIT A40V
Toyota Hiace	09/95-	335356600001	KIT F10
Toyota Hilux Double Cab, 4x4	05-10/10	335409900107	KIT F40
Toyota Hilux Double Cab, 4x4	05-10/10	335409900113	KIT F40
Toyota Hilux Double Cab, 4x4	10/10-	335408900107	KIT F40
Toyota Hilux Double Cab, 4x4	10/10-	335408900113	KIT F40
Toyota Hilux Extra Cab, 4x4	05-08/10	335409900107	KIT F40
Toyota Hilux Extra Cab, 4x4	05-08/10	335409900113	KIT F40
Toyota Hilux Extra Cab, 4x4	08/10-	335408900107	KIT F40
Toyota Hilux Extra Cab, 4x4	08/10-	335408900113	KIT F40
Toyota Hilux Single Cab, 4x4	10/10-	335408900107	KIT F40
Toyota Hilux Single Cab, 4x4	10/10-	335408900113	KIT F40
Toyota Landcruiser	11/09-	335397900113	KIT F40
Toyota Landcruiser	11/09-	335398900113	KIT A40V
Toyota Pro Ace	04/12-	306331900113	KIT F20
Toyota Pro Ace	04/12-	306333900113	KIT A50H
Toyota RAV4	03/06-	335347600001	KIT F20
Toyota RAV4	03/06-	335348600001	KIT A40V
Toyota Verso	04/09-	335363900113	KIT F20
Toyota Verso	04/09-	335400900113	KIT F20
Toyota Verso	04/09-	335411900113	KIT A40V
Toyota Verso	04/09-	335421900113	KIT A40V
Toyota Verso S	01/11-	335413900113	KIT F20
Toyota Verso S	01/11-	335414900113	KIT A40V
Toyota Yaris	10/11-	335382900113	KIT F20
Toyota Yaris	10/11-	335383900113	KIT A40V
VW Bora Saloon	10/98-	321457900113	KIT F20
VW Bora Saloon	10/98-	321465900113	KIT A40V
VW Bora Variant	10/98-	305222900113	KIT F20
VW Bora Variant	10/98-	305223900113	KIT A40V
VW Caddy Cross	03/13-	321554900113	KIT F20
VW Caddy Cross	03/13-	321660900113	KIT A40V
VW Caddy III / Caddy Life	02/04-08/10	321659900113	KIT A40V
VW Caddy III / Caddy Life	02/04-08/10	321661900113	KIT F20
VW Caddy III / Caddy Life	09/10-	321554900113	KIT F20
VW Caddy III / Caddy Life	09/10-	321660900113	KIT A40V
VW Caddy Maxi	09/10-	321554900113	KIT F20
VW Caddy Maxi	09/10-	321660900113	KIT A40V
VW Caddy Maxi	10/07-08/10	321659900113	KIT A40V
VW Caddy Maxi	10/07-08/10	321661900113	KIT F20
VW CC	12-	321821900113	KIT F20
VW CC	12-	321823900113	KIT A40V
VW CC	12-	321824600001	RX
VW Crafter Van	04/06-	313376900113	KIT F40
VW Crafter flatbed	04/06-	313275900113	KIT F40
VW Crafter flatbed	04/06-	313377900113	KIT F40
VW Golf IV Saloon	10/97-	321457900113	KIT F20
VW Golf IV Saloon	10/97-	321465900113	KIT A40V
VW Golf IV Variant	10/97-	305222900113	KIT F20
VW Golf IV Variant	10/97-	305223900113	KIT A40V
VW Golf V Saloon	11/03-	321750900113	KIT F20
VW Golf V Saloon	11/03-	321751900113	KIT A40V








Summary of Estatenation Kits

Car model	Year of construction	Order no.	System
VW Golf V Plus	03/05-	321750900113	KIT F20
VW Golf V Plus	03/05-	321751900113	KIT A40V
VW Golf V Variant	06/07-	321630900113	KIT A40V
VW Golf V Variant	06/07-	321662900113	KIT F20
VW Golf VI Convertible	06/11-	321730900113	KIT A40V
VW Golf VI Saloon	10/08-	321750900113	KIT F20
VW Golf VI Saloon	10/08-	321751900113	KIT A40V
VW Golf VI Plus	03/09-	321750900113	KIT F20
VW Golf VI Plus	03/09-	321751900113	KIT A40V
VW Golf VI Variant	06/09-	321630900113	KIT A40V
VW Golf VI Variant	06/09-	321662900113	KIT F20
VW Golf VII Saloon	10/12-	305404900113	KIT A40V
VW Golf VII Saloon	10/12-	321737900113	KIT F20
VW Jetta	01/11-	321778900113	KIT A40V
VW Jetta	01/11-	321825900113	KIT F20
VW Jetta	08/05-12/10	321630900113	KIT A40V
VW Jetta	08/05-12/10	321662900113	KIT F20
VW Passat CC	03/05-	321546900113	KIT A40V
VW Passat Saloon	03/05-10/10	321544900113	KIT F20
VW Passat Saloon	03/05-10/10	321546900113	KIT A40V
VW Passat Saloon	10/10-	321821900113	KIT F20
VW Passat Saloon	10/10-	321823900113	KIT A40V
VW Passat Saloon	10/10-	321824600001	RX
VW Passat Saloon	11/00-08/05	321772900113	KIT F20
VW Passat Variant	09/05-10/10	321544900113	KIT F20
VW Passat Variant	09/05-10/10	321546900113	KIT A40V
VW Passat Variant	10/10-	321821900113	KIT F20
VW Passat Variant	10/10-	321823900113	KIT A40V
VW Passat Variant	10/10-	321824600001	RX
VW Passat Variant	11/00-09/05	321505900113	KIT A40V
VW Passat Variant	11/00-09/05	321632900113	KIT F20
VW Polo	06/09-	321741900113	KIT F20
VW Polo	06/09-	321748900113	KIT A40V
VW Polo Bluemotion	06/09-	321741900113	KIT F20
VW Polo Bluemotion	06/09-	321748900113	KIT A40V
VW Polo Cross	02/06-06/09	321523900113	KIT A40V
VW Polo Cross	02/06-06/09	321607900113	KIT F20
VW Polo Cross	06/09-	321741900113	KIT F20
VW Polo Cross	06/09-	321748900113	KIT A40V
VW Polo Fun	04-09	321523900113	KIT A40V
VW Polo Fun	04-09	321607900113	KIT F20
VW Polo Gti	06/09-	321741900113	KIT F20
VW Polo Gti	06/09-	321748900113	KIT A40V
VW Polo Hatchback	05/05-09	321523900113	KIT A40V
VW Polo Hatchback	05/05-09	321607900113	KIT F20
VW Sharan	05/00-08/10	321665900113	KIT F20
VW Sharan	05/00-08/10	321775900113	KIT A40V
VW Sharan	09/10-	321698900113	KIT F20
VW Sharan	09/10-	321700900113	KIT A40V
VW Tiguan	11/07-	321727900113	KIT F20
VW Tiguan	11/07-	321728900113	KIT A40V
VW Touareg	04/10-	321736900113	KIT A40V
VW Touareg	11/02-04/10	321500900113	KIT A40V
VW Touran	03/03-	321536900113	KIT F20
VW Touran	03/03-	321838900113	KIT A40V

Summary of Estatenation Kits

Car model	Year of construction	Order no.	System
VW Transporter T4 Van	09/98-07/03	321391900113	KIT F10
VW Transporter T5 Van	03-10/09	321717900113	KIT A40V
VW Transporter T5 Van	03-10/09	321792900113	KIT F10
VW Transporter T5 Van	10/09-	321650900113	KIT F10
VW Transporter T5 Van	10/09-	321651900113	KIT A40V
Volvo C30	12/06-	320065900113	KIT F20
Volvo C30	12/06-	320066900113	KIT A40V
Volvo S40 / V50	06/07-	320059900113	KIT F20
Volvo S40 / V50	06/07-	320060900113	KIT A40V
Volvo S60	06/10-	320071900113	KIT F20
Volvo S60	06/10-	320072900113	KIT A40V
Volvo V40	09/12-	320107900113	KIT F20
Volvo V40	09/12-	320108900113	KIT A40V
Volvo V60	11/10-	320071900113	KIT F20
Volvo V60	11/10-	320072900113	KIT A40V
Volvo V70	09/07-	320069900113	KIT F20
Volvo V70	09/07-	320073900113	KIT F20
Volvo V70	09/07-	320075900113	KIT A40V
Volvo V70	09/07-	320076900113	KIT A40V
Volvo XC60	11/08-	320063900113	KIT F20
Volvo XC60	11/08-	320064900113	KIT A40V
Volvo XC70	09/07-	320073900113	KIT F20
Volvo XC70	09/07-	320076900113	KIT A40V
Volvo XC70	09/07-	320092900113	KIT AVII
Volvo XC70	09/07-	320095900113	KIT F20
Volvo XC90	10/04-	320057900113	KIT A40V

legend towbars

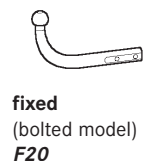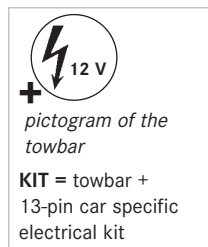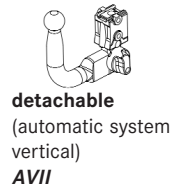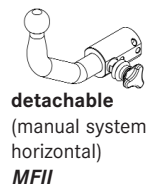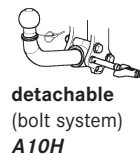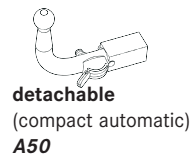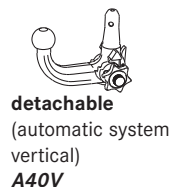




















legend electrical kits

S car specific electrical-kit
- universal electrical-kit
C2 flash control C2
A flash control acoustic
CAN . . . flash control CAN
FRE . . . flash control frequency
C coding necessary
C1 possible without coding -> C2 with buzzer
- coding <u>not</u> necessary
E PDC cut off
E1 PDC cut off (universal preliminary setup)
E2 PDC (push-button in the dashboard)
- no PDC cut off
D permanent plus
D1 permanent plus optional (extension kit 300027300113)
- no permanent plus
L charging line
L1 charging line optional (extension kit 300028300113)
- no charging line
V electrical connection in front
H electrical connection in back
R right hand drive
L left hand drive
B both

electrical-kit: ...1.7 = 7-pins
... 1.3 = 13-pins





		System	No.	ECE F-No.		min.	<div style="display: flex; justify-content: space-between;"> <div> <p>visible cutout</p> <p>invisible cutout</p> </div> <div> <p>weight</p> <p></p> </div> <div> <p>towing capacity</p> <p>vertical load</p> <p></p> <p></p> </div> </div>	Kg	D- value kN	kg	kg		No. 12 V	S	C2 A CAN FRE	C C1	E E1 E2	D D1	L L1	V H		min.
--	--	---------------	------------	---------------------	--	-------------	--	-----------	--------------------------	-----------	-----------	--	--------------------	----------	---	-----------------------	------------------------------------	-----------------------	-----------------------	----------------------	--	-------------



Alfa Romeo

Alfa 147	10/00-		306 264 600 001	1878	>150	✂	19	7,9	80	1400		306 228 300 113	S FRE --	E	D1	L1	V	105	B
Alfa 156 Saloon & Sportwagon exc. GTA - 250 HP	11/97- 07/03		306 219 600 001	0596	>150		25,6	8,7	90	1600		306 189 300 113	S FRE --	E	D1	L1	V	120	L
Alfa 156 Saloon & Sportwagon exc. GTA - 250 HP inc. facelift from 07/03 discontinued model	11/97-		306 220 600 001	0596	>150		26,5	8,7	90	1600		306 189 300 113	S FRE --	E	D1	L1	V	120	L
Alfa 159 Saloon exc. GTA - 250 HP	09/06-		306 355 600 001	2615	120		24	9,9	100	1800		306 220 300 113	S FRE --	E	D	L1	H	90	B
Alfa 159 Saloon exc. GTA - 250 HP	09/06-		306 356 600 001	2616	120		25	9,9	100	1800		306 220 300 113	S FRE --	E	D	L1	H	90	B
Alfa 159 Saloon KIT = towbar inc. electrical kit 13 pins exc. GTA - 250 HP	09/06-		306 356 900 113	2616	120		27	9,9	100	1800		electrical kit 13 pins in the kit: 306 220 300 113	S FRE --	E	D	L1	H	90	B
Alfa 159 Sportwagon	03/06-		306 355 600 001	2615	120		24	9,9	100	1800		306 220 300 113	S FRE --	E	D	L1	H	90	B
Alfa 159 Sportwagon	03/06-		306 356 600 001	2616	120		25	9,9	100	1800		306 220 300 113	S FRE --	E	D	L1	H	90	B
Alfa 159 Sportwagon KIT = towbar inc. electrical kit 13 pins	03/06-		306 356 900 113	2616	120		27	9,9	100	1800		electrical kit 13 pins in the kit: 306 220 300 113	S FRE --	E	D	L1	H	90	B
Alfa Giulietta	04/10-		306 372 600 001	3059	90	✂	25	8,3	90	1500		306 371 300 113	S FRE --	E	D1	L1	V	105	B
Alfa GT exc. GTA exc. Selespeed (foreign make) discontinued model	03/04-		306 256 600 001	4303	90		22,5	8,3	60	1500		306 228 300 113	S FRE --	E	D1	L1	V	105	B
Alfa Mito	09/08-		306 375 600 001	3136	90	✂	19	6,7	75	1100		306 606 300 113	S FRE --	E	D1	L1	V	105	B







Alfa Mito	09/08-		306 374 600 001	3141	90	✂	19	6,7	75	1100	306 606 300 113	S	FRE --	E	D1	L1	V	105	B
------------------	--------	---	------------------------	------	----	---	----	-----	----	------	------------------------	---	--------	---	----	----	---	-----	---






Audi

Audi A1	08/10-		317 085 600 001	3270	40		14,5	7,2	86	1200	with preliminary setup	S	CAN	C	E	--	--	H	B	
											305 329 300 107	S	CAN	C	E	D	L1	H	B	
											with preliminary setup	S	CAN	C	E	D	L1	H	B	
											305 329 300 113	S	CAN	C	E	D	L1	H	B	
											extension kit for vehicles without black support for fuse box on the passenger side	S	CAN	C	E	D	L1	V	60	B
											305 330 300 001	S	CAN	C	E	--	--	V	L	
											without preliminary setup	S	CAN	C	E	D	L	V	L	
305 330 300 107	S	CAN	C	E	D	L1	V	105	R											
Audi A1	08/10-		317 086 600 001	3271	40		14,5	7,2	86	1200	with preliminary setup	S	CAN	C	E	--	--	H	B	
											305 329 300 107	S	CAN	C	E	D	L1	H	B	
											with preliminary setup	S	CAN	C	E	D	L1	H	B	
											305 329 300 113	S	CAN	C	E	D	L1	H	B	
											extension kit for vehicles without black support for fuse box on the passenger side	S	CAN	C	E	D	L1	V	60	B
											305 330 300 001	S	CAN	C	E	--	--	V	L	
											without preliminary setup	S	CAN	C	E	D	L	V	L	
305 330 300 107	S	CAN	C	E	D	L1	V	105	R											
305 330 300 113	S	CAN	C	E	D	L	V	L												
321 600 300 153	S	CAN	C	E	D	L1	V	105	R											





Audi A1 Sportback	02/12-		317 085 600 001	40	14,5	7,2	86	1200	with preliminary setup	S	CAN	C	E	--	H		B								
									305 329 300 107																
									with preliminary setup	S	CAN	C	E	D	L1	H									
									305 329 300 113																
									extension kit for vehicles without black support for fuse box on the passenger side																
									without preliminary setup	S	CAN	C	E	D1	L1	V	60								
									305 330 300 001																
Audi A1 Sportback	02/12-		317 086 600 001	40	14,5	7,2	86	1200	with preliminary setup	S	CAN	C	E	--	H		B								
									305 329 300 107																
									with preliminary setup	S	CAN	C	E	D	L1	H									
									305 329 300 113																
									extension kit for vehicles without black support for fuse box on the passenger side																
									without preliminary setup	S	CAN	C	E	D1	L1	V	60								
									305 330 300 001																
without preliminary setup	S	CAN	C	E	D	L	V																		
321 600 300 153																									
without preliminary setup	S	CAN	C	E	D	L1	V	105																	
321 600 300 153																									
without preliminary setup	S	CAN	C	E	D	L1	V	105																	
321 600 300 153																									
without preliminary setup	S	CAN	C	E	D	L1	V	105																	
321 600 300 153																									
without preliminary setup	S	CAN	C	E	D	L1	V	105																	
321 600 300 153																									
without preliminary setup	S	CAN	C	E	D	L1	V	105																	
321 600 300 153																									
without preliminary setup	S	CAN	C	E	D	L1	V	105																	
321 600 300 153																									
without preliminary setup	S	CAN	C	E	D	L1	V	105																	
321 600 300 153																									
without preliminary setup	S	CAN	C	E	D	L1	V	105																	
321 600 300 153																									
without preliminary setup	S	CAN	C	E	D	L1	V	105																	
321 600 300 153																									
without preliminary setup	S	CAN	C	E	D	L1	V	105																	





Audi

Audi A3 exc. Quattro + S3 Please order additionally seal for frame to prevent exhaust leaking into the vehicle, order no. 900002504014.	09/96-05/03		305 222 600 001	0867	120	✂	17,5	8,9	75	1650	additional kit for checkcontrol 305 160 300 173 305 223 300 107 305 223 300 113	S -- -- S FRE -- S FRE --	-- -- E -- -- E D1 --	-- -- -- -- D1 L1 V	V V V	45 60 60	L L L
Audi A3 KIT = towbar inc. electrical kit 13 pins exc. Quattro + S3 Please order additionally seal for frame to prevent exhaust leaking into the vehicle, order no. 900002504014.	09/96-05/03		305 391 900 113	0867	120	✂	19,5	8,9	75	1650	additional kit for checkcontrol (Please order additionally.) 305 160 300 173 electrical kit 13 pins in the kit. 305 223 300 113	S -- -- S -- -- S FRE --	-- -- -- -- E D1 --	-- -- -- -- L1 V	V V V	45 60 60	L L L
Audi A3 exc. Quattro + S3 fits sports model Please order additionally seal for frame to prevent exhaust leaking into the vehicle, order no. 900002504014.	09/96-05/03		305 223 600 001	0859	120	✂	16,8	8,9	75	1650	additional kit for checkcontrol 305 160 300 173 305 223 300 107 305 223 300 113	S -- -- S FRE -- S FRE --	-- -- E -- -- E D1 --	-- -- -- -- L1 V	V V V	45 60 60	L L L
Audi A3 KIT = towbar inc. electrical kit 13 pins exc. Quattro + S3 Please order additionally seal for frame to prevent exhaust leaking into the vehicle, order no. 900002504014.	09/96-05/03		305 392 900 113	0859	120	✂	18,8	8,9	75	1650	additional kit for checkcontrol (Please order additionally.) 305 160 300 173 electrical kit 13 pins in the kit. 305 223 300 113	S -- -- S -- -- S FRE --	-- -- -- -- E D1 --	-- -- -- -- L1 V	V V V	45 60 60	L L L
Audi A3 Quattro + S3	09/96-05/03		305 277 600 001	0973	120	✂	17	8,9	75	1650	additional kit for checkcontrol 305 160 300 173 305 223 300 107 305 223 300 113	S -- -- S FRE -- S FRE --	-- -- E -- -- E D1 --	-- -- -- -- L1 V	V V V	45 60 60	L L L
Audi A3 KIT = towbar inc. electrical kit 13 pins Quattro + S3	09/96-05/03		305 393 900 113	0973	120	✂	19	8,9	75	1650	additional kit for checkcontrol (Please order additionally.) 305 160 300 173 electrical kit 13 pins in the kit. 305 223 300 113	S -- -- S -- -- S FRE --	-- -- -- -- E D1 --	-- -- -- -- L1 V	V V V	45 60 60	L L L






<p>Audi A3 Convertible Please check the operating instructions of the vehicle before fitting the towbar. models S3 04/08-. Please check if the vehicle is allowed for towing trailers by the car manufacturer.</p>		<p>321 750 600 001</p>	<p>2950</p>	<p>60</p>	<p>✂</p>	<p>17</p>	<p>9,4 100</p>	<p>1700</p>	<p>305 256 300 107 305 256 300 113</p>	<p>S CAN S CAN</p>	<p>E E</p>	<p>-- --</p>	<p>V V</p>	<p>120 120</p>	<p>B B</p>
<p>Audi A3 Convertible KIT = towbar inc. electrical kit 13 pins Please check the operating instructions of the vehicle before fitting the towbar. models S3 04/08-. Please check if the vehicle is allowed for towing trailers by the car manufacturer.</p>		<p>305 389 900 113</p>	<p>2951</p>	<p>60</p>	<p>✂</p>	<p>19</p>	<p>9,4 100</p>	<p>1700</p>	<p>electrical kit 13 pins in the kit: 305 256 300 113</p>	<p>S CAN S CAN</p>	<p>E E</p>	<p>-- --</p>	<p>V V</p>	<p>120 120</p>	<p>B B</p>
<p>Audi A3 Convertible Please check the operating instructions of the vehicle before fitting the towbar. inc. S-Line models S3 04/08-. Please check if the vehicle is allowed for towing trailers by the car manufacturer. For optimal fit, order spoiler and cover at Audi dealer.</p>		<p>321 751 600 001</p>	<p>2951</p>	<p>60</p>	<p>✂</p>	<p>17</p>	<p>9,4 100</p>	<p>1700</p>	<p>305 256 300 113</p>	<p>S CAN S CAN</p>	<p>E E</p>	<p>-- --</p>	<p>V V</p>	<p>120 120</p>	<p>B B</p>
<p>Audi A3 Convertible KIT = towbar inc. electrical kit 13 pins Please check the operating instructions of the vehicle before fitting the towbar. inc. S-Line models S3 04/08-. Please check if the vehicle is allowed for towing trailers by the car manufacturer. For optimal fit, order spoiler and cover at Audi dealer.</p>		<p>305 390 900 113</p>	<p>2951</p>	<p>60</p>	<p>✂</p>	<p>19</p>	<p>9,4 100</p>	<p>1700</p>	<p>electrical kit 13 pins in the kit: 305 256 300 113</p>	<p>S CAN S CAN</p>	<p>E E</p>	<p>-- --</p>	<p>V V</p>	<p>120 120</p>	<p>B B</p>
<p>Audi A3 Sportback inc.: 06/08- facelift, inc. Quattro, inc. V6 3,2l, 250 HP models S3 04/08-. Please check if the vehicle is allowed for towing trailers by the car manufacturer. Please check the operating instructions of the vehicle before fitting the towbar! inc. facelift 06/08-</p>		<p>305 299 600 001</p>	<p>1815</p>	<p>120</p>	<p>✂</p>	<p>16,5</p>	<p>9,7 100</p>	<p>1800</p>	<p>305 256 300 107 305 256 300 113</p>	<p>S CAN S CAN</p>	<p>E E</p>	<p>-- --</p>	<p>V V</p>	<p>120 120</p>	<p>B B</p>











Audi

<p>Audi A3 Sportback KIT = towbar inc. electrical kit 13 pins inc.: 06/08- facelift, inc.Quattro, inc.V6 3,2 l, 250 HP models S3 04/08-: Please check if the vehicle is allowed for towing trailers by the car manufacturer. Please check the operating instructions of the vehicle before fitting the towbar! inc. facelift 06/08-</p>	<p>09/04-</p> 	<p>305 299 900 113</p>	<p>1815</p>	<p>120</p>	<p>18,5</p>	<p>9,7 100</p>	<p>1800</p>	<p>electrical kit 13 pins in the kit: 305 256 300 113</p>	<p>S CAN C</p>	<p>E D -- V 120 B</p>
<p>Audi A3 Sportback inc. Facelift 06/08-, inc.Quattro, inc. S-Line, inc.V6 3,2 l, 250 HP models S3 04/08-: Please check if the vehicle is allowed for towing trailers by the car manufacturer. Please check the operating instructions of the vehicle before fitting the towbar! For optimal fit, order spoiler and cover at Audi dealers. inc. facelift 06/08-</p>	<p>09/04-</p> 	<p>305 300 600 001</p>	<p>1813</p>	<p>120</p>	<p>17,5</p>	<p>9,7 100</p>	<p>1800</p>	<p>electrical kit 13 pins in the kit: 305 256 300 107 305 256 300 113</p>	<p>S CAN C S CAN C</p>	<p>E D -- V 120 B E D -- V 120 B</p>
<p>Audi A3 Sportback KIT = towbar inc. electrical kit 13 pins inc. Facelift 06/08-, inc.Quattro, inc. S-Line, inc.V6 3,2 l, 250 HP models S3 04/08-: Please check if the vehicle is allowed for towing trailers by the car manufacturer. Please check the operating instructions of the vehicle before fitting the towbar! For optimal fit, order spoiler and cover at Audi dealers. inc. facelift 06/08-</p>	<p>09/04-</p> 	<p>305 300 900 113</p>	<p>1813</p>	<p>120</p>	<p>18,5</p>	<p>9,7 100</p>	<p>1800</p>	<p>electrical kit 13 pins in the kit: 305 256 300 113</p>	<p>S CAN C</p>	<p>E D -- V 120 B</p>
<p>Audi A3, 3 doors front wheel drive inc. Quattro, inc. S3 04/06-, inc. V6 3,2 l, 250 HP models S3 04/08-: Please check if the vehicle is allowed for towing trailers by the car manufacturer. Please check the operating instructions of the vehicle before fitting the towbar!</p>	<p>05/03-</p> 	<p>321 750 600 001</p>	<p>2950</p>	<p>60</p>	<p>17</p>	<p>9,4 100</p>	<p>1700</p>	<p>electrical kit 13 pins in the kit: 305 256 300 107 305 256 300 113</p>	<p>S CAN C S CAN C</p>	<p>E D -- V 120 B E D -- V 120 B</p>








<p>Audi A3, 3 doors KIT = towbar inc. electrical kit 13 pins front wheel drive inc. Quattro, inc. S3 04/06-, inc. V6 3.2 l, 250 HP models S3 04/08-: Please check if the vehicle is allowed for towing trailers by the car manufacturer. Please check the operating instructions of the vehicle before fitting the towbar!</p>		<p>305 389 900 113</p>	<p>2950</p>	<p>60</p>	<p>19</p>	<p>9,4 100</p>	<p>1700</p>	<p>electrical kit 13 pins in the kit: 305 256 300 113</p>	<p>S CAN C</p>	<p>E D -- V</p>	<p>120 B</p>
<p>Audi A3, 3 doors front wheel drive inc. Quattro, inc. S-Line and S3 04/06-, inc. V6 3.2 l, 250 HP models S3 04/08-: Please check if the vehicle is allowed for towing trailers by the car manufacturer. Please check the operating instructions of the vehicle before fitting the towbar! Please order separately spoiler inc. cover at Audi dealers.</p>		<p>321 751 600 001</p>	<p>2951</p>	<p>60</p>	<p>17</p>	<p>9,4 100</p>	<p>1700</p>	<p>305 256 300 113</p>	<p>S CAN C</p>	<p>E D -- V</p>	<p>120 B</p>
<p>Audi A3, 3 doors KIT = towbar inc. electrical kit 13 pins front wheel drive inc. Quattro, inc. S-Line and S3 04/06-, inc. V6 3.2 l, 250 HP models S3 04/08-: Please check if the vehicle is allowed for towing trailers by the car manufacturer. Please check the operating instructions of the vehicle before fitting the towbar! Please order separately spoiler inc. cover at Audi dealers.</p>		<p>305 390 900 113</p>	<p>2951</p>	<p>60</p>	<p>19</p>	<p>9,4 100</p>	<p>1700</p>	<p>electrical kit 13 pins in the kit: 305 256 300 113</p>	<p>S CAN C</p>	<p>E D -- V</p>	<p>120 B</p>
<p>Audi A3, 3 doors</p>		<p>321 737 600 001</p>	<p>3469</p>	<p>60</p>	<p>17</p>	<p>9,9 80</p>	<p>2000</p>	<p>with preliminary setup 305 403 300 107 with preliminary setup 305 403 300 113 without preliminary setup 305 404 300 107 without preliminary setup 305 404 300 113</p>	<p>S S S S S S</p>	<p>V V</p>	<p>B B B B B B</p>







Audi

Audi A3, 3 doors KIT = towbar inc. electrical kit 13 pins	05/12-		305 401 900 113	3469	60	✂	19	9,9	80	2000	electrical kit 13 pins in the kit: for prepared vehicles 305 403 300 113	S				V		B
Audi A3, 3 doors KIT = towbar inc. electrical kit 13 pins	05/12-		321 737 900 113	3469	60	✂	19	9,9	80	2000	electrical kit 13 pins in the kit: for vehicles without preparation: 305 404 300 113	S						B
Audi A3, 3 doors	05/12-		321 785 600 001	3564	60	✂	17	9,9	80	2000	with preliminary setup 305 403 300 107 with preliminary setup 305 403 300 113 without preliminary setup 305 404 300 107 without preliminary setup 305 404 300 113	S				V		B
Audi A3, 3 doors	05/12-		305 403 600 001	3468	60	✂	17	9,9	80	2000	with preliminary setup 305 403 300 107 with preliminary setup 305 403 300 113 without preliminary setup 305 404 300 107 without preliminary setup 305 404 300 113	S				V		B
Audi A3, 3 doors KIT = towbar inc. electrical kit 13 pins	05/12-		305 403 900 113	3468	60	✂	19	9,9	80	2000	electrical kit 13 pins in the kit: for prepared vehicles 305 403 300 113	S				V		B


Audi A3, 3 doors KIT = towbar inc. electrical kit 13 pins	05/12-		305 404 900 113	3468	60		19	9,9	80	2000		electrical kit 13 pins in the kit: for vehicles without preparation: 305 404 300 113	S									B	
Audi A4 Allroad Quattro B8 inc. S5 / S-Line / Quattro Sport, exc.RS For S4 / S5 please order extended socket holder, order no. 905323608001. Please check the operating instructions of the vehicle before fitting the towbar! Please order separately the moulded towball holder 8T0 012 109 C at Audi-dealers. Attention: Depending on the engine variation it may be necessary to change the cooling system of the vehicle.	06/09-		305 425 600 001	2244	90		18	11	90	2000		305 214 300 107 305 214 300 113	S S	CAN CAN	C C	E E	-- D	L1 L1	H H	60 60			B B
Audi A4 Allroad Quattro KIT = towbar inc. electrical kit 13 pins B8 inc. S5 / S-Line / Quattro Sport, exc.RS For S4 / S5 please order extended socket holder, order no. 905323608001. Please check the operating instructions of the vehicle before fitting the towbar! Please order separately the moulded towball holder 8T0 012 109 C at Audi-dealers. Attention: Depending on the engine variation it may be necessary to change the cooling system of the vehicle.	06/09-		305 425 900 113	2244	90		20	11	90	2000		electrical kit 13 pins in the kit: 305 214 300 113	S	CAN	C	E	D	L1	H	60			B
Audi A4 Avant inc. Quattro + S4, exc. RS 4	01/96- 11/01		305 179 600 001	0176	150		18	10,1	75	1800		additional kit for checkcontrol 305 160 300 173 305 221 300 107 305 221 300 113	S S S	-- FRE FRE	-- -- --	-- E E	-- -- D1	V V L1	45 60 60			L B B	
Audi A4 Avant KIT = towbar inc. electrical kit 13 pins inc. Quattro + S4, exc. RS 4	01/96- 11/01		305 394 900 113	0176	150		20	10,1	75	1800		additional kit for checkcontrol (Please order additionally.) 305 160 300 173 electrical kit 13 pins in the kit: 305 221 300 113	S	--	--	--	--	V	45			L	











Audi

Audi A4 Avant inc. Quattro + S4, exc. RS 4	01/96- 11/01		305 220 600 001	0138	120	✂	19	10,1	75	1800	additional kit for checkcontrol 305 160 300 173 305 221 300 107 305 221 300 113	S -- -- S FRE -- S FRE --	-- -- E -- -- E D1 --	-- -- -- -- D1 L1	V V V	45 60 60	L B B
Audi A4 Avant KIT = towbar inc. electrical kit 13 pins inc. Quattro + S4, exc. RS 4	01/96- 11/01		305 395 900 113	0138	120	✂	21	10,1	75	1800	additional kit for checkcontrol (Please order additionally.) 305 160 300 173 electrical kit 13 pins in the kit: 305 221 300 113	S -- -- S -- -- S FRE --	-- -- -- -- E D1 --	-- -- -- -- L1 V	V V V	45 60 60	L B B
Audi A4 Avant B6 Quattro and S-Line, exc. S4	11/01- 11/04		305 205 600 001	0981	120	✂	18,5	10,3	85	2000	305 215 300 107 305 215 300 113	S CAN C S CAN C	E -- -- E D1 --	-- -- -- --	H H	75 75	B B
Audi A4 Avant KIT = towbar inc. electrical kit 13 pins B6 Quattro and S-Line, exc. S4	11/01- 11/04		305 205 900 113	0981	120	✂	20,5	10,3	85	2000	electrical kit 13 pins in the kit: 305 215 300 113	S CAN C	E D1 --	-- --	H	75	B
Audi A4 Avant B6 SIARR	11/01- 11/04		305 336 600 001	3809	120	✂	26	9,02	75	1700	305 215 300 107 305 215 300 113	S CAN C S CAN C	E -- -- E D1 --	-- -- -- --	H H	75 75	B B
Audi A4 Avant B6 Quattro and S-Line, exc. S4	11/01- 11/04		305 206 600 001	0894	120	✂	20	10,3	85	2000	305 215 300 107 305 215 300 113	S CAN C S CAN C	E -- -- E D1 --	-- -- -- --	H H	75 75	B B
Audi A4 Avant KIT = towbar inc. electrical kit 13 pins B6 Quattro and S-Line, exc. S4	11/01- 11/04		305 206 900 113	0894	120	✂	22	10,3	85	2000	electrical kit 13 pins in the kit: 305 215 300 113	S CAN C	E D1 --	-- --	H	75	B







Audi A4 Avant B7 exc. RS4/S4, inc. Quattro, inc. S-line Please check the operating instructions of the vehicle before fitting the towbar!	11/04-08		305 301 600 001	1862	120	✂	20	10,41	100	2000		305 208 300 147 305 208 300 153 305 209 300 107 305 209 300 113 305 210 300 107 305 210 300 113	S CAN C S CAN C S FRE -- S FRE -- S CAN C S CAN C	-- D1 -- D1 E E	-- D1 -- D1 -- D1	-- L1 -- L1 -- L1	H H H H V V	100 100 60 60 105 105	R R B B L L
Audi A4 Avant KIT = towbar inc. electrical kit 13 pins B7 exc. RS4/S4, inc. Quattro, inc. S-line Please check the operating instructions of the vehicle before fitting the towbar!	11/04-08		305 301 900 113	1862	120	✂	22	10,41	100	2000		electrical kit 13 pins in the kit: 305 210 300 113	S CAN C	E	D1	L1	V	105	L
Audi A4 Avant KIT = towbar inc. electrical kit 13 pins B7 exc. RS4/S4, inc. Quattro, inc. S-line Please check the operating instructions of the vehicle before fitting the towbar!	11/04-08		305 301 900 153	1862	120	✂	22	10,41	100	2000		electrical kit 13 pins in the kit: 305 208 300 153	S CAN C	--	D1	L1	H	100	R
Audi A4 Avant B7 exc. RS4/S4, inc. S-line, inc. Quattro, Please check the operating instructions of the vehicle before fitting the towbar!	11/04-08		305 302 600 001	1861	120	✂	20	10,41	100	2000		305 208 300 147 305 208 300 153 305 209 300 107 305 209 300 113 305 210 300 107 305 210 300 113	S CAN C S CAN C S FRE -- S FRE -- S CAN C S CAN C	-- D1 -- D1 E E	-- D1 -- D1 -- D1	-- L1 -- L1 -- L1	H H H H V V	100 100 60 60 105 105	R R B B L L
Audi A4 Avant KIT = towbar inc. electrical kit 13 pins B7 exc. RS4/S4, inc. Quattro, inc. S-line Please check the operating instructions of the vehicle before fitting the towbar!	11/04-08		305 302 900 113	1861	120	✂	22	10,41	100	2000		electrical kit 13 pins in the kit: 305 210 300 113	S CAN C	E	D1	L1	V	105	L
Audi A4 Avant KIT = towbar inc. electrical kit 13 pins B7 exc. RS4/S4, inc. S-line, inc. Quattro, Please check the operating instructions of the vehicle before fitting the towbar!	11/04-08		305 302 900 153	1861	120	✂	22	10,41	100	2000		electrical kit 13 pins in the kit: 305 208 300 153	S CAN C	--	D1	L1	H	100	R







Audi

<p>Audi A4 Avant B8 inc. S5 / S-Line / Quattro, exc. RS4 Please check the operating instructions of the vehicle before fitting the towbar! Attention: Depending on the engine variation it may be necessary to change the cooling system of the vehicle.</p>	<p>04/08-</p> 	<p>305 324 600 001</p>	<p>2570</p>	<p>90</p>	<p>✂</p>	<p>19</p>	<p>11</p>	<p>90</p>	<p>2000</p>	<p>for vehicles with preparation: 305 213 300 113 for vehicles without preparation: 305 214 300 107 for vehicles without preparation: 305 214 300 113</p>	<p>S CAN C E D L1 H 60</p>	<p>L</p>
<p>Audi A4 Avant KIT = towbar inc. electrical kit 13 pins B8 inc. S5 / S-Line / Quattro, exc. RS4 Please check the operating instructions of the vehicle before fitting the towbar! Attention: Depending on the engine variation it may be necessary to change the cooling system of the vehicle.</p>	<p>04/08-</p> 	<p>305 324 900 113</p>	<p>2570</p>	<p>90</p>	<p>✂</p>	<p>21</p>	<p>11</p>	<p>90</p>	<p>2000</p>	<p>electrical kit 13 pins in the kit: for vehicles without preparation: 305 214 300 113</p>	<p>S CAN C E D L1 H 60</p>	<p>B</p>
<p>Audi A4 Avant B8 inc. S5 / S-Line / Quattro Sport, exc. RS For S4 / S5 please order extended socket holder, order no. 905323608001. Please check the operating instructions of the vehicle before fitting the towbar! Please order separately the moulded towball holder 8T0 012 109 C at Audi-dealers. Attention: Depending on the engine variation it may be necessary to change the cooling system of the vehicle.</p>	<p>04/08-</p> 	<p>305 425 600 001</p>	<p>2244</p>	<p>90</p>	<p>✂</p>	<p>18</p>	<p>11</p>	<p>90</p>	<p>2000</p>	<p>for vehicles with preparation: 305 213 300 113 for vehicles without preparation: 305 214 300 107 for vehicles without preparation: 305 214 300 113</p>	<p>S CAN C E D L1 H 60</p>	<p>L</p>
<p>Audi A4 Avant KIT = towbar inc. electrical kit 13 pins B8 inc. S5 / S-Line / Quattro Sport, exc. RS For S4 / S5 please order extended socket holder, order no. 905323608001. Please check the operating instructions of the vehicle before fitting the towbar! Please order separately the moulded towball holder 8T0 012 109 C at Audi-dealers. Attention: Depending on the engine variation it may be necessary to change the cooling system of the vehicle.</p>	<p>04/08-</p> 	<p>305 425 900 113</p>	<p>2244</p>	<p>90</p>	<p>✂</p>	<p>20</p>	<p>11</p>	<p>90</p>	<p>2000</p>	<p>electrical kit 13 pins in the kit: for vehicles without preparation: 305 214 300 113</p>	<p>S CAN C E D L1 H 60</p>	<p>B</p>





Audi A4 Convertible B6, exc. S4	05/02-05		305 205 600 001	0981	120	✂	18,5	10,3	85	2000		305 215 300 107 305 215 300 113	S CAN S CAN	C C	E E	-- D1	H H	75 75	B B	
Audi A4 Convertible KIT = towbar inc. electrical kit 13 pins B6, exc. S4	05/02-05		305 205 900 113	0981	120	✂	20,5	10,3	85	2000		electrical kit 13 pins in the kit: 305 215 300 113	S CAN	C	E	D1	H	75	B	
Audi A4 Convertible B6 inc. S-Line, exc. S4	05/02-05		305 206 600 001	0894	120	✂	20	10,3	85	2000		305 215 300 107 305 215 300 113	S CAN S CAN	C C	E E	-- D1	H H	75 75	B B	
Audi A4 Convertible KIT = towbar inc. electrical kit 13 pins B6 inc. S-Line, exc. S4	05/02-05		305 206 900 113	0894	120	✂	22	10,3	85	2000		electrical kit 13 pins in the kit: 305 215 300 113	S CAN	C	E	D1	H	75	B	
Audi A4 Convertible B7 exc. RS4/S4, inc. S-line	10/05-		305 301 600 001	1862	120	✂	20	10,41	100	2000		305 208 300 147 305 208 300 153 305 210 300 107 305 210 300 113	S CAN S CAN S CAN S CAN	C C C C	-- D1 E E	-- L1 -- V L1	H H V V	100 100 105 105	R R L L	
Audi A4 Convertible KIT = towbar inc. electrical kit 13 pins B7 exc. RS4/S4, inc. S-line	10/05-		305 301 900 113	1862	120	✂	22	10,41	100	2000		electrical kit 13 pins in the kit: 305 210 300 113	S CAN	C	E	D1	L1	V	105	L
Audi A4 Convertible KIT = towbar inc. electrical kit 13 pins B7 exc. RS4/S4, inc. S-line	10/05-		305 301 900 153	1862	120	✂	22	10,41	100	2000		electrical kit 13 pins in the kit: 305 208 300 153	S CAN	C	--	D1	L1	H	100	R
Audi A4 Convertible B7 exc. RS4/S4, inc. S-line	10/05-		305 302 600 001	1861	120	✂	20	10,41	100	2000		305 208 300 147 305 208 300 153 305 210 300 107 305 210 300 113	S CAN S CAN S CAN S CAN	C C C C	-- D1 E E	-- L1 -- V L1	H H V V	100 100 105 105	R R L L	
Audi A4 Convertible KIT = towbar inc. electrical kit 13 pins B7 exc. RS4/S4, inc. S-line	10/05-		305 302 900 113	1861	120	✂	22	10,41	100	2000		electrical kit 13 pins in the kit: 305 210 300 113	S CAN	C	E	D1	L1	V	105	L
Audi A4 Convertible KIT = towbar inc. electrical kit 13 pins B7 exc. RS4/S4, inc. S-line	10/05-		305 302 900 153	1861	120	✂	22	10,41	100	2000		electrical kit 13 pins in the kit: 305 208 300 153	S CAN	C	--	D1	L1	H	100	R





Audi

Audi A4 Saloon B5, inc. Quattro + S4	11/94- 11/00		305 179 600 001	0176	150	✂	18	10,1	75	1800		03/99- 300 078 300 113 additional kit for checkcontrol 305 160 300 173 -02/99 305 177 300 107 -02/99 305 177 300 113	-- FRE -- S -- -- S FRE -- S FRE --	E1 D1 -- -- E -- -- E D1	L1 -- -- V -- -- L1	V -- -- V -- -- V		B L L L	
Audi A4 Saloon B5, inc. Quattro + S4	11/94- 11/00		305 220 600 001	0138	120	✂	19	10,1	75	1800		03/99- 300 078 300 113 additional kit for checkcontrol 305 160 300 173 -02/99 305 177 300 107 -02/99 305 177 300 113	-- FRE -- S -- -- S FRE -- S FRE --	E1 D1 -- -- E -- -- E D1	L1 -- -- V -- -- L1	V -- -- V -- -- V		B L L L	
Audi A4 Saloon B6 Quattro and S-Line, exc. S4	11/00- 11/04		305 205 600 001	0981	120	✂	18,5	10,3	85	2000		305 215 300 107 305 215 300 113	S CAN C S CAN C	E -- E D1	-- -- -- --	H --	H H	75 75	B B
Audi A4 Saloon KIT = towbar inc. electrical kit 13 pins B6 Quattro and S-Line, exc. S4	11/00- 11/04		305 205 900 113	0981	120	✂	20,5	10,3	85	2000		electrical kit 13 pins in the kit: 305 215 300 113	S CAN C	E D1	--	H	H	75	B
Audi A4 Saloon B6 SIARR	11/00- 11/04		305 336 600 001	3809	120	✂	26	9,02	75	1700		305 215 300 107 305 215 300 113	S CAN C S CAN C	E D1 E D1	-- -- -- --	H H	H H	75 75	B B
Audi A4 Saloon B6 S-Line and Quattro exc. S4 Please check the operating instructions of the vehicle before fitting the towbar!	11/00- 11/04		305 206 600 001	0894	120	✂	20	10,3	85	2000		305 215 300 107 305 215 300 113	S CAN C S CAN C	E D1 E D1	-- -- -- --	H H	H H	75 75	B B





Audi A4 Saloon KIT = towbar inc. electrical kit 13 pins B6 S-Line and Quattro exc. S4 Please check the operating instructions of the vehicle before fitting the towbar!	11/04- 11/04		305 206 900 113	0894	120	✂	22	10,3	85	2000		electrical kit 13 pins in the kit: 305 215 300 113	S CAN C	E D1	--	H	75	B	
Audi A4 Saloon B7 exc. RS4/S4, inc. Quattro, inc. S-line Please check the operating instructions of the vehicle before fitting the towbar!	11/04- 09/07		305 301 600 001	1862	120	✂	20	10,41	100	2000		305 208 300 107 305 208 300 113 305 208 300 147 305 208 300 153 305 210 300 107 305 210 300 113	S FRE -- S FRE -- S CAN C S CAN C S CAN C S CAN C	-- D1 -- D1 E D1	-- L1 -- L1 -- L1	V V H H V V	90 90 100 100 105 105	B B R R L L	
Audi A4 Saloon KIT = towbar inc. electrical kit 13 pins B7 exc. RS4/S4, inc. Quattro, inc. S-line Please check the operating instructions of the vehicle before fitting the towbar!	11/04- 09/07		305 301 900 113	1862	120	✂	22	10,41	100	2000		electrical kit 13 pins in the kit: 305 210 300 113	S CAN C	E D1	L1	V	105	L	
Audi A4 Saloon KIT = towbar inc. electrical kit 13 pins B7 exc. RS4/S4, inc. Quattro, inc. S-line Please check the operating instructions of the vehicle before fitting the towbar!	11/04- 09/07		305 301 900 153	1862	120	✂	22	10,41	100	2000		electrical kit 13 pins in the kit: 305 208 300 153	S CAN C	--	D1	L1	H	100	R
Audi A4 Saloon B7 exc. RS4/S4, inc. Quattro, inc. S-line Please check the operating instructions of the vehicle before fitting the towbar!	11/04- 09/07		305 302 600 001	1861	120	✂	20	10,41	100	2000		305 208 300 107 305 208 300 113 305 208 300 147 305 208 300 153 305 210 300 107 305 210 300 113	S FRE -- S FRE -- S CAN C S CAN C S CAN C S CAN C	-- D1 -- D1 E D1	-- L1 -- L1 -- L1	V V H H V V	90 90 100 100 105 105	B B R R L L	
Audi A4 Saloon KIT = towbar inc. electrical kit 13 pins B7 exc. RS4/S4, inc. Quattro, inc. S-line Please check the operating instructions of the vehicle before fitting the towbar!	11/04- 09/07		305 302 900 113	1861	120	✂	22	10,41	100	2000		electrical kit 13 pins in the kit: 305 210 300 113	S CAN C	E D1	L1	V	105	L	





Audi

<p>Audi A4 Saloon KIT = towbar inc. electrical kit 13 pins B7 exc. RS4/S4, inc. Quattro, inc. S-line Please check the operating instructions of the vehicle before fitting the towbar!</p>	<p>11/04-09/07</p> 	<p>305 302 900 153</p>	<p>1861</p>	<p>120</p>	<p>✂</p>	<p>22 10,41 100 2000</p>	<p>electrical kit 13 pins in the kit: 305 208 300 153</p>	<p>S CAN C -- D1 L1 H 100 R</p>
<p>Audi A4 Saloon B8 inc. S5 / S-Line / Quattro, exc. RS4 Please check the operating instructions of the vehicle before fitting the towbar! Attention: Depending on the engine variation it may be necessary to change the cooling system of the vehicle.</p>	<p>09/07</p> 	<p>305 324 600 001</p>	<p>2570</p>	<p>90</p>	<p>✂</p>	<p>19 11 90 2000</p>	<p>for vehicles with preparation: 305 213 300 113 for vehicles without preparation: 305 214 300 107 for vehicles without preparation: 305 214 300 113</p>	<p>S CAN C E D L1 H 60 L S CAN C E -- H 60 B S CAN C E D L1 H 60 B</p>
<p>Audi A4 Saloon KIT = towbar inc. electrical kit 13 pins B8 inc. S5 / S-Line / Quattro, exc. RS4 Please check the operating instructions of the vehicle before fitting the towbar! Attention: Depending on the engine variation it may be necessary to change the cooling system of the vehicle.</p>	<p>09/07-</p> 	<p>305 324 900 113</p>	<p>2570</p>	<p>90</p>	<p>✂</p>	<p>21 11 90 2000</p>	<p>electrical kit 13 pins in the kit: for vehicles without preparation: 305 214 300 113</p>	<p>S CAN C E D L1 H 60 B</p>
<p>Audi A4 Saloon B8 inc. S5 / S-Line / Quattro Sport, exc. RS For S4 / S5 please order extended socket holder, order no. 905323608001. Please check the operating instructions of the vehicle before fitting the towbar! Please order separately the moulded towball holder 8T0 012 109 C at Audi-dealers. Attention: Depending on the engine variation it may be necessary to change the cooling system of the vehicle.</p>	<p>09/07-</p> 	<p>305 425 600 001</p>	<p>2244</p>	<p>90</p>	<p>✂</p>	<p>18 11 90 2000</p>	<p>for vehicles with preparation: 305 213 300 113 for vehicles without preparation: 305 214 300 107 for vehicles without central plug connection 305 214 300 113</p>	<p>S CAN C E D L1 H 60 L S CAN C E -- H 60 B S CAN C E D L1 H 60 B</p>


















<p>Audi A4 Saloon KIT = towbar inc. electrical kit 13 pins B8 inc. S5 / S-Line / Quattro Sport, exc. RS For S4 / S5 please order extended socket holder, order no. 905323608001. Please check the operating instructions of the vehicle before fitting the towbar! Please order separately the moulded towball holder 8T0 012 109 C at Audi-dealers. Attention: Depending on the engine variation it may be necessary to change the cooling system of the vehicle.</p>	<p>09/07-</p> 	<p>305 425 900 113</p>	<p>2244</p>	<p>90</p>	<p>✂</p>	<p>20</p>	<p>11</p>	<p>90</p>	<p>2000</p>	<p>electrical kit 13 pins in the kit: for vehicles without preparation: 305 214 300 113</p> <p>S CAN C E D L1 H 60 B</p>
<p>Audi A5 Convertible inc. S5 / S-Line, exc. RS Please check the operating instructions of the vehicle before fitting the towbar! Attention: Depending on the engine variation it may be necessary to change the cooling system of the vehicle.</p>	<p>09-</p> 	<p>305 324 600 001</p>	<p>2570</p>	<p>90</p>	<p>✂</p>	<p>19</p>	<p>11</p>	<p>90</p>	<p>2000</p>	<p>for vehicles with preparation: 305 213 300 113 for vehicles without preparation: 305 214 300 107 for vehicles without preparation: 305 214 300 113</p> <p>S CAN C E D L1 H 60 L S CAN C E -- H 60 B S CAN C E D L1 H 60 B</p>
<p>Audi A5 Convertible KIT = towbar inc. electrical kit 13 pins inc. S5 / S-Line, exc. RS Please check the operating instructions of the vehicle before fitting the towbar! Attention: Depending on the engine variation it may be necessary to change the cooling system of the vehicle.</p>	<p>09-</p> 	<p>305 324 900 113</p>	<p>2570</p>	<p>90</p>	<p>✂</p>	<p>21</p>	<p>11</p>	<p>90</p>	<p>2000</p>	<p>electrical kit 13 pins in the kit: for vehicles without preparation: 305 214 300 113</p> <p>S CAN C E D L1 H 60 B</p>
<p>Audi A5 Convertible B8 inc. S5 / S-Line / Quattro Sport, exc. RS For S4 / S5 please order extended socket holder, order no. 905323608001. Please check the operating instructions of the vehicle before fitting the towbar! Please order separately the moulded towball holder 8T0 012 109 C at Audi-dealers. Attention: Depending on the engine variation it may be necessary to change the cooling system of the vehicle.</p>	<p>09-</p> 	<p>305 425 600 001</p>	<p>2244</p>	<p>90</p>	<p>✂</p>	<p>18</p>	<p>11</p>	<p>90</p>	<p>2000</p>	<p>for vehicles with preparation: 305 213 300 113 for vehicles without preparation: 305 214 300 107 for vehicles without preparation: 305 214 300 113</p> <p>S CAN C E D L1 H 60 L S CAN C E -- H 60 B S CAN C E D L1 H 60 B</p>



















Audi

<p>Audi A5 Convertible KIT = towbar inc. electrical kit 13 pins B8 inc. S5 / S-Line / Quattro Sport, exc. RS For S4 / S5 please order extended socket holder, order no. 905323608001. Please check the operating instructions of the vehicle before fitting the towbar! Please order separately the moulded towball holder 8T0 012 109 C at Audi-dealers. Attention: Depending on the engine variation it may be necessary to change the cooling system of the vehicle.</p>	<p>09-</p> 	<p>305 425 900 113</p>	<p>2244</p>	<p>90</p>	<p>20</p>	<p>11</p>	<p>90</p>	<p>2000</p>	<p>electrical kit 13 pins in the kit: for vehicles without preparation: 305 214 300 113</p>	<p>S CAN C E D L1 H 60 B</p>
<p>Audi A5 Coupé inc. S5 / S-Line, exc. RS Please check the operating instructions of the vehicle before fitting the towbar! Attention: Depending on the engine variation it may be necessary to change the cooling system of the vehicle.</p>	<p>06/07-</p> 	<p>305 324 600 001</p>	<p>2570</p>	<p>90</p>	<p>19</p>	<p>11</p>	<p>90</p>	<p>2000</p>	<p>for vehicles with preparation: 305 213 300 113 for vehicles without preparation: 305 214 300 107 for vehicles without preparation: 305 214 300 113</p>	<p>S CAN C E D L1 H 60 L S CAN C E -- H 60 B S CAN C E D L1 H 60 B</p>
<p>Audi A5 Coupé KIT = towbar inc. electrical kit 13 pins inc. S5 / S-Line, exc. RS Please check the operating instructions of the vehicle before fitting the towbar! Attention: Depending on the engine variation it may be necessary to change the cooling system of the vehicle.</p>	<p>06/07-</p> 	<p>305 324 900 113</p>	<p>2570</p>	<p>90</p>	<p>21</p>	<p>13</p>	<p>90</p>	<p>2000</p>	<p>electrical kit 13 pins in the kit: for vehicles without preparation: 305 214 300 113</p>	<p>S CAN C E D L1 H 60 B</p>
<p>Audi A5 Coupé B8 inc. S5 / S-Line / Quattro Sport, exc. RS For S4 / S5 please order extended socket holder, order no. 905323608001. Please check the operating instructions of the vehicle before fitting the towbar! Please order separately the moulded towball holder 8T0 012 109 C at Audi-dealers. Attention: Depending on the engine variation it may be necessary to change the cooling system of the vehicle.</p>	<p>06/07-</p> 	<p>305 425 600 001</p>	<p>2244</p>	<p>90</p>	<p>18</p>	<p>11</p>	<p>90</p>	<p>2000</p>	<p>for vehicles with preparation: 305 213 300 113 for vehicles without preparation: 305 214 300 107 for vehicles without preparation: 305 214 300 113</p>	<p>S CAN C E D L1 H 60 L S CAN C E -- H 60 B S CAN C E D L1 H 60 B</p>







<p>Audi A5 Coupé KIT = towbar inc. electrical kit 13 pins B8 inc. S5 / S-Line / Quattro Sport, exc. RS For S4 / S5 please order extended socket holder, order no. 905323608001. Please check the operating instructions of the vehicle before fitting the towbar! Please order separately the moulded towball holder 8T0 012 109 C at Audi-dealers. Attention: Depending on the engine variation it may be necessary to change the cooling system of the vehicle.</p>	<p>06/07-</p> 	<p>305 425 900 113</p>	<p>2244</p>	<p>90</p>	<p>20</p>	<p>11</p>	<p>90</p>	<p>2000</p>	<p>electrical kit 13 pins in the kit: for vehicles without preparation: 305 214 300 113</p>	<p>S CAN C</p>	<p>D L1 H 60 B</p>
<p>Audi A5 Sportback inc. S5 / S-Line, exc. RS Please check the operating instructions of the vehicle before fitting the towbar! Attention: Depending on the engine variation it may be necessary to change the cooling system of the vehicle.</p>	<p>09/09-</p> 	<p>305 324 600 001</p>	<p>2570</p>	<p>90</p>	<p>19</p>	<p>11</p>	<p>90</p>	<p>2000</p>	<p>305 214 300 107 305 214 300 113</p>	<p>S CAN C S CAN C</p>	<p>-- H L1 H 60 B D L1 H 60 B</p>
<p>Audi A5 Sportback KIT = towbar inc. electrical kit 13 pins inc. S5 / S-Line, exc. RS Please check the operating instructions of the vehicle before fitting the towbar! Attention: Depending on the engine variation it may be necessary to change the cooling system of the vehicle.</p>	<p>07/09-</p> 	<p>305 324 900 113</p>	<p>2570</p>	<p>90</p>	<p>21</p>	<p>11</p>	<p>90</p>	<p>2000</p>	<p>electrical kit 13 pins in the kit: 305 214 300 113</p>	<p>S CAN C</p>	<p>D L1 H 60 B</p>
<p>Audi A5 Sportback B8 inc. S5 / S-Line / Quattro Sport, exc. RS For S4 / S5 please order extended socket holder, order no. 905323608001. Please check the operating instructions of the vehicle before fitting the towbar! Please order separately the moulded towball holder 8T0 012 109 C at Audi-dealers. Attention: Depending on the engine variation it may be necessary to change the cooling system of the vehicle.</p>	<p>09/09-</p> 	<p>305 425 600 001</p>	<p>2244</p>	<p>90</p>	<p>18</p>	<p>11</p>	<p>90</p>	<p>2000</p>	<p>305 214 300 107 305 214 300 113</p>	<p>S CAN C S CAN C</p>	<p>-- H L1 H 60 B D L1 H 60 B</p>



























Audi

Audi A5 Sportback KIT = towbar inc. electrical kit 13 pins B8 inc. S5 / S-Line / Quattro Sport, exc.RS For S4 / S5 please order extended socket holder, order no. 905323608001. Please check the operating instructions of the vehicle before fitting the towbar! Please order separately the moulded towball holder 8T0 012 109 C at Audi-dealers. Attention: Depending on the engine variation it may be necessary to change the cooling system of the vehicle.	09/09-		305 425 900 113	2244	90		20	11	90	2000	electrical kit 13 pins in the kit: 305 214 300 113	S CAN	C	E	D	L1	H	60	B
Audi A6 Allroad Quattro Aluminium bumper carrier can only be obtained from Audi, Audi-order-no.: 4Z7 807 313A	05/00- 05		305 225 600 001	0714	120		25,2	11,8	95	2300	305 191 300 107 305 191 300 113	S FRE -- S FRE --	E -- E D1	-- L1	V			90	B
Audi A6 Allroad Please order spoiler at Audi dealers.	05/06- 06/12		305 309 600 001	2121	90		31	12	90	2200	305 268 300 113	S CAN	C	E	D	L1	H	45	B
Audi A6 Allroad KIT = towbar inc. electrical kit 13 pins Please order spoiler at Audi dealers.	05/06- 06/12		305 309 900 113	2121	90		33	12	90	2200	electrical kit 13 pins in the kit: 305 268 300 113	S CAN	C	E	D	L1	H	45	B
Audi A6 Allroad	06/12-		305 407 600 001		90			12,6	100	2500	305 385 300 113	S CAN	C	E	D	L1	H	45	B
Audi A6 Allroad KIT = towbar inc. electrical kit 13 pins	06/12-		305 407 900 113		90			12,6	100	2500	electrical kit 13 pins in the kit: 305 385 300 113	S CAN	C	E	D	L1	H	45	B
Audi A6 Avant front wheel drive, without height control	97- 03/05		305 247 600 001	0203	120		21,8	11	85	2100	305 191 300 107 305 191 300 113	S FRE -- S FRE --	E -- E D1	-- L1	V			90	B
Audi A6 Avant KIT = towbar inc. electrical kit 13 pins front wheel drive, without height control	97- 03/05		305 247 900 113	0203	120		23,8	11	85	2100	electrical kit 13 pins in the kit: 305 191 300 113	S FRE --	E	D1	L1	V		90	B
Audi A6 Avant front wheel drive, without height control	97- 03/05		305 243 600 001	0153	120		22,8	11	85	2100	305 191 300 107 305 191 300 113	S FRE -- S FRE --	E -- E D1	-- L1	V			90	B












Audi A6 Avant KIT = towbar inc. electrical kit 13 pins front wheel drive, without height control	97- 03/05		305 243 900 113	0153	120		25	11	85	2100	electrical kit 13 pins in the kit: 305 191 300 113	S FRE --	E --	D1	L1	V	90	B
Audi A6 Avant front wheel drive, with height control	97- 03/05		305 248 600 001	0203	120		20,6	11	85	2100	305 191 300 107 305 191 300 113	S FRE -- S FRE --	E -- E --	D1	L1	V	90	B
Audi A6 Avant front wheel drive, with height control	97- 03/05		305 244 600 001	0153	120		22,2	11	85	2100	305 191 300 107 305 191 300 113	S FRE -- S FRE --	E -- E --	D1	L1	V	90	B
Audi A6 Avant Quattro, without height control, exc. RS6	97- 03/05		305 249 600 001	0218	120		21,7	11	85	2100	305 191 300 107 305 191 300 113	S FRE -- S FRE --	E -- E --	D1	L1	V	90	B
Audi A6 Avant Quattro, without height control, exc. RS6	97- 03/05		305 245 600 001	0144	120		23	11	85	2100	305 191 300 107 305 191 300 113	S FRE -- S FRE --	E -- E --	D1	L1	V	90	B
Audi A6 Avant Quattro, with height control, exc. RS6	97- 03/05		305 250 600 001	0218	120		21	11	85	2100	305 191 300 107 305 191 300 113	S FRE -- S FRE --	E -- E --	D1	L1	V	90	B
Audi A6 Avant Quattro, with height control, exc. RS6	97- 03/05		305 246 600 001	0144	120		22,5	11	85	2100	305 191 300 107 305 191 300 113	S FRE -- S FRE --	E -- E --	D1	L1	V	90	B
Audi A6 Avant with steel springs inc. S line, inc. S6, inc. Quattro, exc. RS6 To guarantee an optimal fit of the bumper it is necessary to mount a bumper reinforcement. Please order from Westfalia no. 905269619001 in combination with Audi no. 4F0 807 381.	03/05-		305 274 600 001	1648	120		19	12	90	2200	305 268 300 113	S CAN C	E D	D	L1	H	45	B
Audi A6 Avant KIT = towbar inc. electrical kit 13 pins with steel springs inc. S line, inc. S6, inc. Quattro, exc. RS6 To guarantee an optimal fit of the bumper it is necessary to mount a bumper reinforcement. Please order from Westfalia no. 905269619001 in combination with Audi no. 4F0 807 381.	03/05-		305 274 900 113	1648	120		21	12	90	2200	electrical kit 13 pins in the kit: 305 268 300 113	S CAN C	E D	D	L1	H	45	B



















Audi

<p>Audi A6 Avant with steel springs inc. S6, exc. RS6, inc. Quattro, exc. LeMans edition To guarantee an optimal fit of the bumper it is necessary to mount a bumper reinforcement. Please order from Westfalia no. 905269619001 in combination with Audi no. 4F0 807 381. Please order separately cover for bumper cutout from Audi dealers.</p>	03/05-		305 269 600 001	1647	120	✂ 21,5	12 90 2200	305 268 300 113	S CAN	E D L1 H	45 B
<p>Audi A6 Avant KIT = towbar inc. electrical kit 13 pins with steel springs inc. S6, exc. RS6, inc. Quattro</p>	03/05-		305 269 900 113	1647	120	✂ 22,5	12 90 2200	electrical kit 13 pins in the kit: 305 268 300 113	S CAN C	E D L1 H	45 B
<p>Audi A6 Avant with steel springs S-line and LeMans edition only 09/08- To guarantee an optimal fit of the bumper it is necessary to mount a bumper reinforcement. Please order from Westfalia no. 905269619001 in combination with Audi no. 4F0 807 381. Please order separately cover for bumper cutout from Audi dealers.</p>	03/05-		305 398 600 001	1647	120	✂ 23	12 90 2200	305 268 300 113	S CAN C	E D L1 H	45 B
<p>Audi A6 Avant KIT = towbar inc. electrical kit 13 pins with steel springs S-line and LeMans edition only 09/08- To guarantee an optimal fit of the bumper it is necessary to mount a bumper reinforcement. Please order from Westfalia no. 905269619001 in combination with Audi no. 4F0 807 381. Please order separately cover for bumper cutout from Audi dealers.</p>	03/05-		305 398 900 113	1647	120	✂ 25	12 90 2200	electrical kit 13 pins in the kit: 305 268 300 113	S CAN C	E D L1 H	45 B
<p>Audi A6 Avant with height control inc. Quattro, inc. S6, inc. S-line -08/08, exc. RS6 For optimal fit, order bumper reinforcement Westfalia no. 905269619001 in combination with Audi no. 4F0 807 381.</p>	03/05-		305 291 600 001	1647	120	✂ 24,5	12 90 2200	305 268 300 113	S CAN C	E D L1 H	45 B
<p>Audi A6 Avant</p>	09/11-		305 428 600 001	3284	90	✂ 20	12,6 100 2500	305 385 300 113	S CAN C	E D L1 H	45 B





Audi A6 Avant KIT = towbar inc. electrical kit 13 pins	09/11-		305 428 900 113	3284	90		22	12,6	100	2500	electrical kit 13 pins in the kit: 305 385 300 113	S CAN C	E	D	L1	H	45	B
Audi A6 Avant	09/11-		305 429 600 001	3281	90		21	12,6	100	2500	305 385 300 113	S CAN C	E	D	L1	H	45	B
Audi A6 Avant KIT = towbar inc. electrical kit 13 pins	09/11-		305 429 900 113	3281	90		23	12,6	100	2500	electrical kit 13 pins in the kit: 305 385 300 113	S CAN C	E	D	L1	H	45	B
Audi A6 Saloon front wheel drive, without height control	97- 04/04		305 247 600 001	0203	120		21,8	11	85	2100	305 171 300 107 305 171 300 113	S FRE -- S FRE --	E -- E D1	-- D1	-- L1	V V	90 90	L L
Audi A6 Saloon front wheel drive, without height control	97- 04/04		305 243 600 001	0153	120		22,8	11	85	2100	305 171 300 107 305 171 300 113	S FRE -- S FRE --	E -- E D1	-- D1	-- L1	V V	90 90	L L
Audi A6 Saloon KIT = towbar inc. electrical kit 13 pins front wheel drive, without height control	97- 04/04		305 330 900 113	0153	120		25	11	85	2100	electrical kit 13 pins in the kit: 305 171 300 113	S FRE --	E D1	L1	V	90	L	
Audi A6 Saloon front wheel drive, with height control	97- 04/04		305 248 600 001	0203	120		20,6	11	85	2100	305 171 300 107 305 171 300 113	S FRE -- S FRE --	E -- E D1	-- D1	-- L1	V V	90 90	L L
Audi A6 Saloon front wheel drive, with height control	97- 04/04		305 244 600 001	0153	120		22,2	11	85	2100	305 171 300 107 305 171 300 113	S FRE -- S FRE --	E -- E D1	-- D1	-- L1	V V	90 90	L L
Audi A6 Saloon Quattro, without height control, exc. RS6	97- 04/04		305 249 600 001	0218	120		21,7	11	85	2100	305 171 300 107 305 171 300 113	S FRE -- S FRE --	E -- E D1	-- D1	-- L1	V V	90 90	L L
Audi A6 Saloon Quattro, without height control, exc. RS6	97- 04/04		305 245 600 001	0144	120		23	11	85	2100	305 171 300 107 305 171 300 113	S FRE -- S FRE --	E -- E D1	-- D1	-- L1	V V	90 90	L L
Audi A6 Saloon Quattro, with height control, exc. RS6	97- 04/04		305 250 600 001	0218	120		21	11	85	2100	305 171 300 107 305 171 300 113	S FRE -- S FRE --	E -- E D1	-- D1	-- L1	V V	90 90	L L
Audi A6 Saloon Quattro, with height control, exc. RS6	97- 04/04		305 246 600 001	0144	120		22,5	11	85	2100	305 171 300 107 305 171 300 113	S FRE -- S FRE --	E -- E D1	-- D1	-- L1	V V	90 90	L L
Audi A6 Saloon with steel springs inc. S-line, inc. S6, exc. RS6, inc. Quattro	04/04-		305 274 600 001	1648	120		19	12	90	2200	305 268 300 113	S CAN C	E	D	L1	H	45	B







Audi









Audi A6 Saloon KIT = towbar inc. electrical kit 13 pins with steel springs inc. S-line, inc. S6, exc. RS6, inc. Quattro	04/04-		305 274 900 113	1648	120	↘	21	12	90	2200	electrical kit 13 pins in the kit: 305 268 300 113	S CAN C	D	L1	H	45	B	
Audi A6 Saloon with steel springs inc. S6, exc. RS6, inc. Quattro	04/04-		305 269 600 001	1647	120	↘	21,5	12	90	2200	305 268 300 113	S CAN C	E	D	L1	H	45	B
Audi A6 Saloon KIT = towbar inc. electrical kit 13 pins with steel springs inc. S6, exc. RS6, inc. Quattro	04/04-		305 269 900 113	1647	120	↘	22,5	12	90	2200	electrical kit 13 pins in the kit: 305 268 300 113	S CAN C	E	D	L1	H	45	B
Audi A6 Saloon with steel springs S-line and LeMans 09/08-	04/04-		305 398 600 001	1647	120	↘	23	12	90	2200	305 268 300 113	S CAN C	E	D	L1	H	45	B
Audi A6 Saloon KIT = towbar inc. electrical kit 13 pins with steel springs S-line and LeMans 09/08-	04/04-		305 398 900 113	1647	120	↘	25	12	90	2200	electrical kit 13 pins in the kit: 305 268 300 113	S CAN C	E	D	L1	H	45	B
Audi A6 Saloon with height control inc. Quattro, inc. S6, exc. RS6, inc. S-line	04/04-		305 291 600 001	1647	120	↘	24,5	12	90	2200	305 268 300 113	S CAN C	E	D	L1	H	45	B
Audi A6 Saloon	03/11-		305 399 600 001	3284	90	↘	20	12,6	100	2500	305 385 300 113	S CAN C	E	D	L1	H	45	B
Audi A6 Saloon	03/11-		305 400 600 001	3281	90	↘	21	12,6	100	2500	305 385 300 113	S CAN C	E	D	L1	H	45	B
Audi A6 Saloon KIT = towbar inc. electrical kit 13 pins	03/11-		305 400 900 113	3281	90	↘	23	12,6	100	2500	electrical kit 13 pins in the kit: 305 385 300 113	S CAN C	E	D	L1	H	45	B
Audi A7	10/10-		305 399 600 001	3284	90	↘	20	12,6	100	2500	305 385 300 113	S CAN C	E	D	L1	H	45	B
Audi A7	10/10-		305 400 600 001	3281	90	↘	21	12,6	100	2500	305 385 300 113	S CAN C	E	D	L1	H	45	B















Audi A7 KIT = towbar inc. electrical kit 13 pins	10/10-		305 400 900 113	3281	90		23	12,6	100	2500		electrical kit 13 pins in the kit: 305 385 300 113	S CAN C	E D	L1 H	45	B
Audi A8 inc. S8 + Quattro	11/02- 03/10		305 276 600 001	1088	<150		28,4	12,5	95	2430		305 227 300 113	S CAN C	E D	-- H	60	B
Audi A8 KIT = towbar inc. electrical kit 13 pins inc. S8 + Quattro	11/02- 03/10		305 276 900 113	1088	<150		30,4	12,5	95	2430		electrical kit 13 pins in the kit: 305 227 300 113	S CAN C	E D	-- H	60	B
Audi A8	03/10-		305 384 600 001	3393	60		26	12,6	100	2200		305 384 300 113	S CAN C	E D	L1 H	60	B
Audi Q3	09/11-		305 421 600 001	3415	90		19	12,6	100	2500		305 410 300 107 305 410 300 113	S CAN C S CAN C	E E	V V	B	B
Audi Q3 KIT = towbar inc. electrical kit 13 pins	09/11-		305 421 900 113	3415	90		21	12,6	100	2500		electrical kit 13 pins in the kit: 305 410 300 113	S CAN C	E	V	B	B
Audi Q3	09/11-		305 423 600 001	3281	90			12,6	100	2500		305 410 300 107 305 410 300 113	S CAN C S CAN C	E E	V V	B	B
Audi Q3 KIT = towbar inc. electrical kit 13 pins	09/11-		305 423 900 113	3281	90			12,6	100	2500		electrical kit 13 pins in the kit: 305 410 300 113	S CAN C	E	V	B	B
Audi Q5 inc. S-Line Please check the operating instructions of the vehicle before fitting the towbar. Attention: Depending on the engine variation it may be necessary to change the cooling system of the vehicle. Monoflex	10/08-		305 351 600 001	3896	90		24	11,09	80	2000		305 216 300 107 305 216 300 113	S CAN C S CAN C	E D	-- L1 H	60	B













Audi














<p>Audi Q5 KIT = towbar inc. electrical kit 13 pins inc. S-Line Please check the operating instructions of the vehicle before fitting the towbar. Attention: Depending on the engine variation it may be necessary to change the cooling system of the vehicle. Monoflex</p>	<p>10/08-</p> 	<p>305 351 900 113</p>	<p>3896</p>	<p>90</p>	<p>✂</p>	<p>26</p>	<p>11,09</p>	<p>80</p>	<p>2000</p>	<p>electrical kit 13 pins in the kit: 305 216 300 113</p>	<p>S CAN</p>	<p>C</p>	<p>E</p>	<p>D</p>	<p>L1</p>	<p>H</p>	<p>60</p>	<p>B</p>
<p>Audi Q5 inc. S-Line Please check the operating instructions of the vehicle before fitting the towbar. Attention: Depending on the engine variation it may be necessary to change the cooling system of the vehicle. Monoflex discontinued model</p>	<p>10/08-</p> 	<p>305 381 600 001</p>	<p>3896</p>	<p>90</p>	<p>✂</p>	<p>24</p>	<p>11,09</p>	<p>80</p>	<p>2000</p>	<p>305 216 300 107 305 216 300 113</p>	<p>S CAN S CAN</p>	<p>C C</p>	<p>E E</p>	<p>-- L1</p>	<p>H H</p>	<p>60 60</p>	<p>B B</p>	
<p>Audi Q5 inc. S-Line Please check the operating instructions of the vehicle before fitting the towbar. Please order separately spoiler inc. cover at Audi dealers. Attention: Depending on the engine variation it may be necessary to change the cooling system of the vehicle. Monoflex</p>	<p>10/08-</p> 	<p>305 412 600 001</p>	<p>4271</p>	<p>90</p>	<p>✂</p>	<p>24</p>	<p>11,09</p>	<p>80</p>	<p>2000</p>	<p>305 216 300 107 305 216 300 113</p>	<p>S CAN S CAN</p>	<p>C C</p>	<p>E E</p>	<p>-- L1</p>	<p>H H</p>	<p>60 60</p>	<p>B B</p>	
<p>Audi Q5 KIT = towbar inc. electrical kit 13 pins inc. S-Line Please check the operating instructions of the vehicle before fitting the towbar. Attention: Depending on the engine variation it may be necessary to change the cooling system of the vehicle. Monoflex</p>	<p>10/08-</p> 	<p>305 412 900 113</p>	<p>4271</p>	<p>90</p>	<p>✂</p>	<p>26</p>	<p>11,09</p>	<p>80</p>	<p>2000</p>	<p>electrical kit 13 pins in the kit: 305 216 300 113</p>	<p>S CAN</p>	<p>C</p>	<p>E</p>	<p>D</p>	<p>L1</p>	<p>H</p>	<p>60</p>	<p>B</p>






<p>Audi Q7 inc. S-Line Please order separately spoiler at Audi dealer. Please check the operating instructions of the vehicle before fitting the towbar. replaced by 304415600001 discontinued model</p>		<p>305 314 600 001</p>	<p>1874</p>	<p>120</p>		<p>34</p>	<p>16,4 140</p>	<p>3500</p>	<p>for vehicles with electrical tailgate For vehicles without electrical tailgate please order separately additional kit: 305 500 300 001 305 500 300 113</p>	<p>S S CAN</p>	<p>C</p>	<p>E</p>	<p>D</p>	<p>L1</p>	<p>H</p>	<p>60</p>	<p>B</p>
<p>Audi Q7 inc. S-Line Please order separately spoiler at Audi dealer. Please check the operating instructions of the vehicle before fitting the towbar.</p>		<p>305 415 600 001</p>	<p>3286</p>	<p>120</p>		<p>34</p>	<p>16,4 140</p>	<p>3500</p>	<p>for vehicles with electrical tailgate For vehicles without electrical tailgate please order separately additional kit: 305 500 300 001 305 500 300 113</p>	<p>S S CAN</p>	<p>C</p>	<p>E</p>	<p>D</p>	<p>L1</p>	<p>H</p>	<p>60</p>	<p>B</p>
<p>Audi Q7 KIT = towbar inc. electrical kit 13 pins inc. S-Line Please order separately spoiler at Audi dealer. Please check the operating instructions of the vehicle before fitting the towbar.</p>		<p>305 314 900 113</p>	<p>1874</p>	<p>120</p>		<p>36</p>	<p>16,4 140</p>	<p>3500</p>	<p>for vehicles with electrical tailgate For vehicles without electrical tailgate please order separately additional kit: 305 500 300 001 electrical kit 13 pins in the kit: 305 500 300 113</p>	<p>S S CAN</p>	<p>C</p>	<p>E</p>	<p>D</p>	<p>L1</p>	<p>H</p>	<p>60</p>	<p>B</p>
<p>Audi RS4 Avant is not permitted to tow by manufacturer.</p>																	<p>L</p>
<p>Audi RS6 -02/05 is not permitted to tow by manufacturer.</p>																	<p>L</p>
<p>Audi TT is not permitted to tow by manufacturer.</p>																	<p>L</p>













BMW 1 Series Convertible E88 inc. Sports 135i is not homologated for towing.	08-		303 323 600 001	2704	60	20	8	90	1400		303 460 300 107 303 460 300 113	S CAN -- S CAN --	E -- E D L1 H	60 60	B B
BMW 1 Series Convertible KIT = towbar inc. electrical kit 13 pins E88 inc. Sports 135i is not homologated for towing.	08-		303 323 900 113	1869	60	22	8	90	1400		electrical kit 13 pins in the kit. 303 460 300 113	S CAN --	E D L1 H	60	B
BMW 1 Series Coupé E82 135i is not homologated for towing.	11/07-		303 323 600 001	2704	60	20	8	90	1400		303 460 300 107 303 460 300 113	S CAN -- S CAN --	E -- E D L1 H	60 60	B B
BMW 1 Series Coupé KIT = towbar inc. electrical kit 13 pins E82 135i is not homologated for towing.	11/07-		303 323 900 113	1869	60	22	8	90	1400		electrical kit 13 pins in the kit. 303 460 300 113	S CAN --	E D L1 H	60	B
BMW 1 Series, 3/5 doors Hatchback F20/F21	09/11-		303 320 600 001	3405		17,5	8	75	1300		PDC cut off doesn't work 303 338 300 107 PDC cut off doesn't work 303 338 300 113	S CAN -- S CAN --	E -- E D L1 V		B B
BMW 1 Series, 3/5 doors Hatchback KIT = towbar inc. electrical kit 13 pins F20/F21	09/11-		303 320 900 113	3405		19,5	8	75	1300		electrical kit 13 pins in the kit. PDC cut off doesn't work 303 338 300 113	S CAN --	E D L1 V		B
BMW 1 Series, 3/5 doors Hatchback F20/F21 Please order separately thermal-insulation plate for socket holder, no. 7 277 733 at BMW dealers.	09/11-		303 317 600 001	3404		20	8	75	1300		PDC cut off doesn't work 303 338 300 107 PDC cut off doesn't work 303 338 300 113	S CAN -- S CAN --	E -- E D L1 V		B B
BMW 1 Series, 3/5 doors Hatchback KIT = towbar inc. electrical kit 13 pins F20/F21 Please order separately thermal-insulation plate for socket holder, no. 7 277 733 at BMW dealers.	09/11-		303 317 900 113	3404		22	8	75	1300		electrical kit 13 pins in the kit. PDC cut off doesn't work 303 338 300 113	S CAN --	E D L1 V		B







BMW 1 Series, 5 doors Hatchback E87 / E81 135i is not homologated for towing. With vehicles year of construction -07/05 the fixed towbar attachment bolts on the vehicle must be changed at a BMW garage.	09/04-		303 323 600 001	2704	60		20	8	90	1400		303 460 300 107 303 460 300 113	S CAN -- S CAN --	E -- E D L1 H	--	H	60	B
BMW 1 Series, 5 doors Hatchback KIT = towbar inc. electrical kit 13 pins E87 / E81 135i is not homologated for towing. With vehicles year of construction -07/05 the fixed towbar attachment bolts on the vehicle must be changed at a BMW garage.	09/04-		303 323 900 113	1869	60		22	8	90	1400		electrical kit 13 pins in the kit: 303 460 300 113	S CAN --	E D L1 H	L1	H	60	B
BMW 3 Series Compact E36/5 discontinued model	05/94- 05/01		303 125 600 001	0071	150		15,1	8,5	75	1600		300 072 300 107 300 072 300 113 300 078 300 113	-- FRE -- -- FRE -- -- FRE --	E1 -- E1 D1 V E1 D1 L1 V	--	V		B
BMW 3 Series Compact E36/5 discontinued model	05/94- 05/01		303 124 600 001	0065	150		17,8	8,5	75	1600		300 072 300 107 300 072 300 113 300 078 300 113	-- FRE -- -- FRE -- -- FRE --	E1 -- E1 D1 V E1 D1 L1 V	--	V		B
BMW 3 Series Compact E46 (E46/5) exc. M3, exc. vehicles with sport equipment	06/01- 05		303 196 600 001	0255			16	9,9	75	1940		303 140 300 107 303 140 300 113	S FRE -- S FRE --	E -- E D L1 V	--	V	105	L
BMW 3 Series Compact E46 (E46/5) steel construction exc. M3, exc. vehicles with sport equipment Please order separately cover for bumper cutout at BMW dealer's, BMW no.: - model 2003: 5112 8244 380, model 2003 -: 5112 7112 481.	06/01- 05		303 231 600 001	0804			17	9,9	75	1980		303 140 300 107 303 140 300 113	S FRE -- S FRE --	E -- E D L1 V	--	V	105	L
BMW 3 Series Convertible E36 (E36/C) exc. M3 (Please order from BMW Motorsport, Munich)	93-		303 148 600 001	0070	150		16,4	9,3	75	1800		300 072 300 107 300 072 300 113 300 078 300 113	-- FRE -- -- FRE -- -- FRE --	E1 -- E1 D1 V E1 D1 L1 V	--	V		B
BMW 3 Series Convertible E36 (E36/C) exc. M3 (Please order from BMW Motorsport, Munich)	93-		303 095 600 001	0021	>150		18,5	9,3	75	1900		300 072 300 107 300 072 300 113 300 078 300 113	-- FRE -- -- FRE -- -- FRE --	E1 -- E1 D1 V E1 D1 L1 V	--	V		B








BMW 3 Series Convertible E46 (E46/C) exc. M3	99-		303 153 600 001	0255	150	 15,6	9,9	75	1940		303 140 300 107 303 140 300 113	S FRE -- S FRE --	E -- E D	-- L1	V V	105 105	L L
BMW 3 Series Convertible KIT = towbar inc. electrical kit 13 pins E46 (E46/C) exc. M3	99-		303 153 900 113	0255	150	 17,6	9,9	75	1940		electrical kit 13 pins in the kit. 303 140 300 113	S FRE --	E D	L1	V	105	L
BMW 3 Series Convertible E46 (E46/C) exc. M3, fits M Sport Please order separately cover for bumper cutout at BMW dealer's, BMW no.: - model 2003: 5112 8244 380, model 2003 - : 5112 7112 481	99-		303 230 600 001	0189	150	 13,8	9,9	75	1940		303 140 300 107 303 140 300 113	S FRE -- S FRE --	E -- E D	-- L1	V V	105 105	L L
BMW 3 Series Convertible KIT = towbar inc. electrical kit 13 pins E46 (E46/C) exc. M3, fits M Sport Please order separately cover for bumper cutout at BMW dealer's, BMW no.: - model 2003: 5112 8244 380, model 2003 - : 5112 7112 481	99-		303 230 900 113	0189	150	 19	9,9	75	1940		electrical kit 13 pins in the kit. 303 140 300 113	S FRE --	E D	L1	V	105	L
BMW 3 Series Convertible E93 angular position of the towball exc. models 335i and 335td and/or vehicles with turbocharger	03/06-		303 267 600 001	2000		25,5	10	75	1800		303 460 300 107 303 460 300 113	S CAN -- S CAN --	E -- E D	-- L1	H H	60 60	B B
BMW 3 Series Convertible E93 inc. Sports angular position of the towball, receptor tube is not in centre inc. models 335i and 335td and/or vehicles with turbocharger please order extra carriers for exhaust, order no. 303266600015	03/06-		303 266 600 001	2001		27	10	75	1800		303 460 300 107 303 460 300 113	S CAN -- S CAN --	E -- E D	-- L1	H H	60 60	B B
BMW 3 Series Coupé E36 (E36/2) exc. M3 (Please order from BMW Motorsport, Munich)	92-		303 148 600 001	0070	150	 16,4	9,3	75	1800		300 072 300 107 300 072 300 113 300 078 300 113	-- FRE -- -- FRE -- -- FRE --	E1 -- E1 D1 E1 D1	-- L1 L1	V V V		B B B

















BMW 3 Series Saloon E36 (E36/4) exc. M3 (available form BMW-Motorsport, Munich)	01/91- 98		303 148 600 001	0070	150	 16,4	9,3	75	1800		300 072 300 107 300 072 300 113 300 078 300 113	-- FRE -- -- FRE -- -- FRE --	E1 -- E1 D1 E1 D1	-- L1 L1	V V V	B B B
BMW 3 Series Saloon E36 (E36/4) exc. M3 (available form BMW-Motorsport, Munich)	01/91- 98		303 095 600 001	0021	>150	 18,5	9,3	75	1800		300 072 300 107 300 072 300 113 300 078 300 113	-- FRE -- -- FRE -- -- FRE --	E1 -- E1 D1 E1 D1	-- L1 L1	V V V	B B B
BMW 3 Series Saloon E46 exc. M3	04/98- 03/05		303 153 600 001	0255	150	 15,6	9,9	75	1940		303 140 300 107 303 140 300 113	S FRE -- S FRE --	E -- E D	-- L1	V V	L L
BMW 3 Series Saloon KIT = towbar inc. electrical kit 13 pins E46 exc. M3	04/98- 03/05		303 153 900 113	0255	150	 17,6	9,9	75	1940	electrical kit 13 pins in the kit:	303 140 300 113	S FRE --	E D	L1	V	105 L
BMW 3 Series Saloon E46 (E46/2) steel construction inc. M Sport, exc. M3 Please order separately cover for bumper cutout at BMW dealer's, BMW no.: - model 9/2001: 5112 8238 819, model 9/2001 -: 5112 7045 526	04/98- 03/05		303 230 600 001	0189	150	 17	9,9	75	1940		303 140 300 107 303 140 300 113	S FRE -- S FRE --	E -- E D	-- L1	V V	L L
BMW 3 Series Saloon KIT = towbar inc. electrical kit 13 pins E46 (E46/2) steel construction inc. M Sport, exc. M3 Please order separately cover for bumper cutout at BMW dealer's, BMW no.: - model 9/2001: 5112 8238 819, model 9/2001 -: 5112 7045 526	04/98- 03/05		303 230 900 113	0189	150	 19	9,9	75	1940	electrical kit 13 pins in the kit:	303 140 300 113	S FRE --	E D	L1	V	105 L
BMW 3 Series Saloon E90 exc. M3, fits M Sport angular position of the towball exc. 335i and 335td and/or vehicles with turbocharger With vehicles year of construction 03/05 the fixed towbar attachment bolts on the vehicle must be changed at a BMW garage.	03/05-		303 331 600 001	1846		27	10	75	1800		303 460 300 107 303 460 300 113	S CAN -- S CAN --	E -- E D	-- L1	H H	60 60
















<p>BMW 3 Series Saloon KIT = towbar inc. electrical kit 13 pins E90 exc. M3, fits M Sport angular position of the towball exc. 335i and 335td and/or vehicles with turbocharger With vehicles year of construction 03/05 the fixed towbar attachment bolts on the vehicle must be changed at a BMW garage.</p>	<p>03/05-</p> 	<p>303 331 900 113</p>	<p>1846</p>	<p>29</p>	<p>10 75 1800</p>	<p>electrical kit 13 pins in the kit: 303 460 300 113</p>	<p>S CAN --</p>	<p>E D L1 H 60 B</p>
<p>BMW 3 Series Saloon E90 exc. M3, fits M Sport angular position of the towball, receptor tube is not in centre With vehicles year of construction 03/05 the fixed towbar attachment bolts on the vehicle must be changed at a BMW garage. For models 335i and 335td and/or vehicles with turbocharger please order extra carriers for exhaust, order no. 303240600015</p>	<p>03/05-</p> 	<p>303 330 600 001</p>	<p>1847</p>	<p>25,5</p>	<p>10 75 1800</p>	<p>303 460 300 107 303 460 300 113</p>	<p>S CAN -- S CAN --</p>	<p>E -- H 60 B E D L1 H 60 B</p>
<p>BMW 3 Series Saloon KIT = towbar inc. electrical kit 13 pins E90 exc. M3, fits M Sport angular position of the towball, receptor tube is not in centre With vehicles year of construction 03/05 the fixed towbar attachment bolts on the vehicle must be changed at a BMW garage. For models 335i and 335td and/or vehicles with turbocharger please order extra carriers for exhaust, order no. 303240600015</p>	<p>03/05-</p> 	<p>303 330 900 113</p>	<p>1846</p>	<p>29</p>	<p>10 75 1800</p>	<p>electrical kit 13 pins in the kit: 303 460 300 113</p>	<p>S CAN --</p>	<p>E D L1 H 60 B</p>
<p>BMW 3 Series Saloon F30 Please check the operating instructions of the vehicle before fitting the towbar.</p>	<p>02/12-</p> 	<p>303 351 600 001</p>	<p>3538 60</p>	<p>10 75 1800</p>	<p>303 460 300 107 303 460 300 113</p>	<p>S CAN -- S CAN --</p>	<p>E -- H 60 B E D L1 H 60 B</p>	
<p>BMW 3 Series Saloon KIT = towbar inc. electrical kit 13 pins F30 Please check the operating instructions of the vehicle before fitting the towbar.</p>	<p>02/12-</p> 	<p>303 351 900 113</p>	<p>3538 60</p>	<p>10 75 1800</p>	<p>electrical kit 13 pins in the kit: 303 460 300 113</p>	<p>S CAN --</p>	<p>E D L1 H 60 B</p>	









BMW 3 Series Saloon F30 BMW recommend fitting a heat shield for the detachable mechanism on petrol engines only - Order Westfalia mounting bracket 303352613001 and heat shield separately from BMW dealers. Please check the operating instructions of the vehicle before fitting the towbar.	02/12-		303 352 600 001	3484	60		21,5	10	75	1800		303 460 300 107 303 460 300 113	S CAN -- S CAN --	E -- E D	-- L1	H -- H	60 60	B B
BMW 3 Series Saloon KIT = towbar inc. electrical kit 13 pins F30 BMW recommend fitting a heat shield for the detachable mechanism on petrol engines only - Order Westfalia mounting bracket 303352613001 and heat shield separately from BMW dealers. Please check the operating instructions of the vehicle before fitting the towbar.	02/12-		303 352 900 113	3484	60		23,5	10	75	1800		electrical kit 13 pins in the kit: 303 460 300 113	S CAN --	E D	L1	H	60	B
BMW 3 Series Touring E36 (E36/3) exc. M3 (Please order from BMW Motorsport, Munich)	95-99		303 148 600 001	0070	150		16,4	9,3	75	1800		300 072 300 107 300 072 300 113 300 078 300 113	-- FRE -- -- FRE -- -- FRE --	E1 -- E1 D1 E1 D1	-- L1 L1	V V V		B B B
BMW 3 Series Touring E36 (E36/3) exc. M3 (Please order from BMW Motorsport, Munich)	95-99		303 095 600 001	0021	>150		18,5	9,3	75	1800		300 072 300 107 300 072 300 113 300 078 300 113	-- FRE -- -- FRE -- -- FRE --	E1 -- E1 D1 E1 D1	-- L1 L1	V V V		B B B
BMW 3 Series Touring E46 (E46/3)	99-09/05		303 164 600 001	0346	150		15,7	9,9	75	1940		303 140 300 107 303 140 300 113	S FRE -- S FRE --	E -- E D	-- L1	V V	105 105	L L
BMW 3 Series Touring KIT = towbar inc. electrical kit 13 pins E46 (E46/3)	99-09/05		303 164 900 113	0346	150		17,7	9,9	75	1940		electrical kit 13 pins in the kit: 303 140 300 113	S FRE --	E D	L1	V	105	L
BMW 3 Series Touring E46 (E46/3) steel construction inc. Sport Please order separately cover for bumper cutout at BMW dealer' s, BMW no. 51 12 8227 569.	99-09/05		303 232 600 001	0324	150		17	9,9	75	1940		303 140 300 107 303 140 300 113	S FRE -- S FRE --	E -- E D	-- L1	V V	105 105	L L

<p>BMW 3 Series Touring KIT = towbar inc. electrical kit 13 pins E46 (E46/3) steel construction inc. Sport Please order separately cover for bumper cutout at BMW dealer's, BMW no. 5112 8227 569.</p>	<p>99-09/05</p> 	<p>303 232 900 113</p>	<p>0324 150</p>	<p>19</p>	<p>9,9 75 1940</p>	<p>electrical kit 13 pins in the kit: 303 140 300 113</p>	<p>S FRE --</p>	<p>E D L1 V</p>	<p>105 L</p>
<p>BMW 3 Series Touring E91 inc. M Sport, exc. M3 angular position of the towball exc. 335i and 335td and/or vehicles with turbocharger</p>	<p>09/05-</p> 	<p>303 331 600 001</p>	<p>1847</p>	<p>25,5</p>	<p>10 75 1800</p>	<p>303 460 300 107 303 460 300 113</p>	<p>S CAN -- S CAN --</p>	<p>E D L1 H</p>	<p>60 B 60 B</p>
<p>BMW 3 Series Touring KIT = towbar inc. electrical kit 13 pins E91 inc. M Sport, exc. M3 angular position of the towball exc. 335i and 335td and/or vehicles with turbocharger</p>	<p>09/05-</p> 	<p>303 331 900 113</p>	<p>1847</p>	<p>27,5</p>	<p>10 75 1800</p>	<p>electrical kit 13 pins in the kit: 303 460 300 113</p>	<p>S CAN --</p>	<p>E D L1 H</p>	<p>60 B</p>
<p>BMW 3 Series Touring E91 inc. M Sport, exc. M3 angular position of the towball, receptor tube is not in centre For models 335i and 335td and/or vehicles with turbocharger please order extra carriers for exhaust, order no. 303240600015</p>	<p>09/05-</p> 	<p>303 330 600 001</p>	<p>1846</p>	<p>27</p>	<p>10 75 1800</p>	<p>303 460 300 107 303 460 300 113</p>	<p>S CAN -- S CAN --</p>	<p>E D L1 H</p>	<p>60 B 60 B</p>
<p>BMW 3 Series Touring KIT = towbar inc. electrical kit 13 pins E91 inc. M Sport, exc. M3 angular position of the towball, receptor tube is not in centre For models 335i and 335td and/or vehicles with turbocharger please order extra carriers for exhaust, order no. 303240600015</p>	<p>09/05-</p> 	<p>303 330 900 113</p>	<p>1846</p>	<p>29</p>	<p>10 75 1800</p>	<p>electrical kit 13 pins in the kit: 303 460 300 113</p>	<p>S CAN --</p>	<p>E D L1 H</p>	<p>60 B</p>
<p>BMW 3 Series Touring F31 Please check the operating instructions of the vehicle before fitting the towbar.</p>	<p>09/12-</p> 	<p>303 351 600 001</p>	<p>3538 60</p>	<p>10 75 1800</p>	<p>303 460 300 107 303 460 300 113</p>	<p>S CAN -- S CAN --</p>	<p>E D L1 H</p>	<p>60 B 60 B</p>	










BMW 3 Series Touring KIT = towbar inc. electrical kit 13 pins F31 Please check the operating instructions of the vehicle before fitting the towbar.	09/12-		303 351 900 113	3538	60			10	75	1800	electrical kit 13 pins in the kit: 303 460 300 113	S CAN --	E D L1 H	60	B
BMW 3 Series Touring F31 BMW recommend fitting a heat shield for the detachable mechanism on petrol engines only - Order Westfalia mounting bracket 303352613001 and heat shield separately from BMW dealers. Please check the operating instructions of the vehicle before fitting the towbar.	09/12-		303 352 600 001	3484	60	21,5		10	75	1800	303 460 300 107 303 460 300 113	S CAN -- S CAN --	E -- L1 H E D L1 H	60 60	B B
BMW 3 Series Touring KIT = towbar inc. electrical kit 13 pins F31 BMW recommend fitting a heat shield for the detachable mechanism on petrol engines only - Order Westfalia mounting bracket 303352613001 and heat shield separately from BMW dealers. Please check the operating instructions of the vehicle before fitting the towbar.	09/12-		303 352 900 113	3484	60	23,5		10	75	1800	electrical kit 13 pins in the kit: 303 460 300 113	S CAN --	E D L1 H	60	B
BMW 5 Series Gran Turismo Please order additionally lower part of the bumper at BMW dealer. Please check the operating instructions of the vehicle before fitting the towbar.	09/09-		303 336 600 001	3278	90	17	✂	11,9	100	2100	303 338 300 107 303 338 300 113	S CAN -- S CAN --	E -- L1 V E D L1 V		B B
BMW 5 Series Saloon E39	12/95-07/03		303 134 600 001	0109	>150	13,7	⊗	11,4	90	2200	-09/00 303 124 300 113 10/00- 303 127 300 113	S FRE -- S FRE --	E D1 L1 V E D1 L1 V	90 90	B L
BMW 5 Series Saloon E39 steel construction inc. Sport, exc. M5 Please order separately cover for bumper cutout at BMW dealer' s, BMW no. 5112 8219 106.	12/95-07/03		303 228 600 001	0109	>150	17,5	⊗	11,4	90	2200	-09/00 303 124 300 113 10/00- 303 127 300 113	S FRE -- S FRE --	E D1 L1 V E D1 L1 V	90 90	B L
BMW 5 Series Saloon E60 exc. M5, inc. vehicles with sport equipment	07/03-		303 212 600 001	1523	150	16,5	✂	11,4	90	2200	303 460 300 107 303 460 300 113	S CAN -- S CAN --	E -- L1 H E D L1 H	60 60	B B












BMW 5 Series Saloon KIT = towbar inc. electrical kit 13 pins E60 exc. M5, inc. vehicles with sport equipment	07/03-		303 212 900 113	1523	150		18,5	11,4	90	2200		electrical kit 13 pins in the kit: 303 460 300 113	S CAN --	E D L1 H 60	B
BMW 5 Series Saloon E60 exc. M5, only for vehicles with sport equipment Please order separately cover for bumper cutout 5112 7120 005 at BMW dealer's.	07/03-		303 235 600 001	1171			20	11,4	90	2200		303 460 300 107 303 460 300 113	S CAN -- S CAN --	E -- L1 H 60 E D L1 H 60	B B
BMW 5 Series Saloon KIT = towbar inc. electrical kit 13 pins E60 exc. M5, only for vehicles with sport equipment Please order separately cover for bumper cutout 5112 7120 005 at BMW dealer's.	07/03-		303 235 900 113	1171			22	11,4	90	2200		electrical kit 13 pins in the kit: 303 460 300 113	S CAN --	E D L1 H 60	B
BMW 5 Series Saloon E60 exc. M5, exc. vehicles with sport equipment	07/03-		303 294 600 001	2482	100		20	11,4	90	2200		303 460 300 107 303 460 300 113	S CAN -- S CAN --	E -- L1 H 60 E D L1 H 60	B B
BMW 5 Series Saloon KIT = towbar inc. electrical kit 13 pins E60 exc. M5, exc. vehicles with sport equipment	07/03-		303 294 900 113	2482	100		22	11,4	90	2200		electrical kit 13 pins in the kit: 303 460 300 113	S CAN --	E D L1 H 60	B
BMW 5 Series Saloon F10 Please check the operating instructions of the vehicle before fitting the towbar.	03/10-		303 337 600 001	3318	45			11,8	100	2200		303 338 300 107 303 338 300 113	S CAN -- S CAN --	E -- L1 V E D L1 V	B B
BMW 5 Series Saloon F10 Please check the operating instructions of the vehicle before fitting the towbar.	03/10-		303 338 600 001	3317	45			11,8	100	2200		303 338 300 107 303 338 300 113	S CAN -- S CAN --	E -- L1 V E D L1 V	B B
BMW 5 Series Saloon KIT = towbar inc. electrical kit 13 pins F10 Please check the operating instructions of the vehicle before fitting the towbar.	03/10-		303 338 900 113	3317	45			11,8	100	2200		electrical kit 13 pins in the kit: 303 338 300 113	S CAN --	E D L1 V	B
BMW 5 Series Touring E39/2 inc. vehicles with BMW-sport-equipment	03/97- 06/04		303 151 600 001	0109	>150		15,2	11,4	90	2200		303 123 300 113	S FRE --	E D1 L1 V 90	B

BMW 5 Series Touring KIT = towbar inc. electrical kit 13 pins E39/2 inc. vehicles with BMW-sport-equipment	03/97- 06/04		303 151 900 113	0109	>150		17,2	11,4	90	2200	electrical kit 13 pins in the kit: 303 123 300 113	S	FRE	--	E	D1	L1	V	90	B
BMW 5 Series Touring E39/2 steel construction inc. vehicles with BMW sport equipment Please order separately cover for bumper cutout at BMW dealer's, BMW no. 5112 8221 586.	03/97- 06/04		303 229 600 001	0109	>150		17,5	11,4	90	2200	303 123 300 113	S	FRE	--	E	D1	L1	V	90	B
BMW 5 Series Touring KIT = towbar inc. electrical kit 13 pins E39/2 steel construction inc. vehicles with BMW sport equipment Please order separately cover for bumper cutout at BMW dealer's, BMW no. 5112 8221 586.	03/97- 06/04		303 229 900 113	0109	>150		19,5	11,4	90	2200	electrical kit 13 pins in the kit: 303 123 300 113	S	FRE	--	E	D1	L1	V	90	B
BMW 5 Series Touring E61 exc. M5, inc. vehicles with sport equipment	07/04- 09/10		303 212 600 001	1523	150		16,5	11,4	90	2200	303 460 300 107 303 460 300 113	S	CAN	--	E	--	--	H	60	B
BMW 5 Series Touring KIT = towbar inc. electrical kit 13 pins E61 exc. M5, inc. vehicles with sport equipment	07/04- 09/10		303 212 900 113	1523	150		18,5	11,4	90	2200	electrical kit 13 pins in the kit: 303 460 300 113	S	CAN	--	E	D	L1	H	60	B
BMW 5 Series Touring E61 exc. M5, only for vehicles with sport equipment Please order separately cover for bumper cutout 5112 7126 377 at BMW dealer's.	07/04- 09/10		303 235 600 001	1171			20	11,4	90	2200	303 460 300 107 303 460 300 113	S	CAN	--	E	--	--	H	60	B
BMW 5 Series Touring KIT = towbar inc. electrical kit 13 pins E61 exc. M5, only for vehicles with sport equipment Please order separately cover for bumper cutout 5112 7126 377 at BMW dealer's.	07/04- 09/10		303 235 900 113	1171			22	11,4	90	2200	electrical kit 13 pins in the kit: 303 460 300 113	S	CAN	--	E	D	L1	H	60	B
BMW 5 Series Touring E61 exc. M5, exc. vehicles with sport equipment	07/04- 09/10		303 294 600 001	2482	100		20	11,4	90	2200	303 460 300 107 303 460 300 113	S	CAN	--	E	--	--	H	60	B
												S	CAN	--	E	D	L1	H	60	B

BMW 5 Series Touring KIT = towbar inc. electrical kit 13 pins E61 exc. M5, exc. vehicles with sport equipment	07/04- 09/10		303 294 900 113	2482	100		22	11,4	90	2200		electrical kit 13 pins in the kit: 303 460 300 113	S CAN --	E	D	L1	H	60	B
BMW 5 Series Touring F11 Please check the operating instructions of the vehicle before fitting the towbar.	09/10-		303 337 600 001	3318	45	✂		11,8	100	2200		303 338 300 107 303 338 300 113	S CAN -- S CAN --	E	--	--	V		B
BMW 5 Series Touring F11 Please check the operating instructions of the vehicle before fitting the towbar.	09/10-		303 338 600 001	3317	45	✂		11,8	100	2200		303 338 300 107 303 338 300 113	S CAN -- S CAN --	E	--	--	V		B
BMW 5 Series Touring KIT = towbar inc. electrical kit 13 pins F11 Please check the operating instructions of the vehicle before fitting the towbar.	09/10-		303 338 900 113	3317	45	✂		11,8	100	2200		electrical kit 13 pins in the kit: 303 338 300 113	S CAN --	E	D	L1	V		B
BMW 6 Series is not permitted to tow by manufacturer.																			L
BMW M5, E60/E61 from 2004- Towbar is only available at the BMW dealer's.																			
BMW X1 exc. BMW factory fit bike rack Please check the operating instructions of the vehicle before fitting the towbar.	10/09-		303 313 600 001	3254	90		17	10,3	80	2000		303 460 300 107 303 460 300 113	S CAN -- S CAN --	E	--	--	H	60	B
BMW X1 KIT = towbar inc. electrical kit 13 pins exc. BMW factory fit bike rack Please check the operating instructions of the vehicle before fitting the towbar.	10/09-		303 313 900 113	3254	90		17	10,3	80	2000		electrical kit 13 pins in the kit: 303 460 300 113	S CAN --	E	D	L1	H	60	B
BMW X1 exc. BMW factory fit bike rack Please check the operating instructions of the vehicle before fitting the towbar.	10/09-		303 314 600 001	3255	90		18	10,3	80	2000		303 460 300 107 303 460 300 113	S CAN -- S CAN --	E	--	--	H	60	B
BMW X1 KIT = towbar inc. electrical kit 13 pins exc. BMW factory fit bike rack Please check the operating instructions of the vehicle before fitting the towbar.	10/09-		303 314 900 113	3255	90		18	10,3	80	2000		electrical kit 13 pins in the kit: 303 460 300 113	S CAN --	E	D	L1	H	60	B
























BMW













BMW X3 Monoflex	01/04- 11/10		303 327 600 001	2708		✂	16	10,9	85	2000		303 189 300 113	S	FRE --	E	D	L1	V	120	B
BMW X3 KIT = towbar inc. electrical kit 13 pins Monoflex	01/04- 11/10		303 327 900 113	2708		✂	18	10,9	85	2000		electrical kit 13 pins in the kit: 303 189 300 113	S	FRE --	E	D	L1	V	120	B
BMW X3 inc. Sport and M Sport Depending upon equipment partial cutout + cover is necessary. Please order separately with the BMW dealer.	01/04- 11/10		303 304 600 001	1656			21	12,64	100	2200		303 189 300 113	S	FRE --	E	D	L1	V	120	B
BMW X3 KIT = towbar inc. electrical kit 13 pins inc. Sport and M Sport Depending upon equipment partial cutout + cover is necessary. Please order separately with the BMW dealer.	01/04- 11/10		303 304 900 113	1656			23	12,64	100	2200		electrical kit 13 pins in the kit: 303 189 300 113	S	FRE --	E	D	L1	V	120	B
BMW X3 F25 exc. M-Sport	11/10-		303 339 600 001	3280	60	✂	20	12	100	2400		303 338 300 107 303 338 300 113	S	CAN --	E	--	--	V		B
BMW X3 KIT = towbar inc. electrical kit 13 pins F25 exc. M-Sport	11/10-		303 339 900 113	3280	60	✂	22	12	100	2400		electrical kit 13 pins in the kit: 303 338 300 113	S	CAN --	E	D	L1	V		B
BMW X3 F25 exc. M-Sport	11/10-		303 340 600 001	3273	60	✂	21	12	100	2400		303 338 300 107 303 338 300 113	S	CAN --	E	--	--	V		B
BMW X3 KIT = towbar inc. electrical kit 13 pins F25 exc. M-Sport	11/10-		303 340 900 113	3273	60	✂	23	12	100	2400		electrical kit 13 pins in the kit: 303 338 300 113	S	CAN --	E	D	L1	V		B
BMW X5 E53 inc. M Sport and LeMans No towbar can be mounted on vehicles with US- specification.	06/00- 12/06		303 207 600 001	0552			34	15,5	150	3500		only for prepared vehicles 303 137 300 113	S	FRE --	E	D	--	H	30	B















BMW X5 KIT = towbar inc. electrical kit 13 pins E53 inc. M Sport and LeMans No towbar can be mounted on vehicles with US- specification.	06/00- 12/06		303 207 900 113	0552			36	15,5 150 3500	electrical kit 13 pins in the kit: for prepared vehicles 303 137 300 113	S FRE --	E D --	H 30	B
BMW X5 E70	07-		303 309 600 001	2623	60		30	16 150 3500	303 451 300 107 303 451 300 113	S CAN -- S CAN --	E D L1 H	45 45	B B
BMW X5 E70 inc. X5 M-Sport	07-		303 273 600 001	2475	60		29	15,5 150 3500	303 451 300 107 303 451 300 113	S CAN -- S CAN --	E D L1 H	45 45	B B
BMW X5 KIT = towbar inc. electrical kit 13 pins E70 inc. X5 M-Sport	07-		303 273 900 113	2475	60		31	15,5 150 3500	electrical kit 13 pins in the kit: 303 451 300 113	S CAN --	E D L1 H	45	B
BMW X6 inc. X6M Hybrid models are not permitted to tow by manufacturer. Please order separately cover for bumper cutout at BMW dealers. Please check the operating instructions of the vehicle before fitting the towbar.	05/08-		303 290 600 001	2506				16 140 3500	303 451 300 107 303 451 300 113	S CAN -- S CAN --	E D L1 H	45 45	B B
BMW X6 KIT = towbar inc. electrical kit 13 pins inc. X6M Hybrid models are not permitted to tow by manufacturer. Please order separately cover for bumper cutout at BMW dealers. Please check the operating instructions of the vehicle before fitting the towbar.	05/08-		303 290 900 113	2506				16 140 3500	electrical kit 13 pins in the kit: 303 451 300 113	S CAN --	E D L1 H	45	B
BMW Z4 / Z8 are not permitted to tow by manufacturer.													L




Chevrolet Aveo 3/5 doors Monoflex	08-07/11		342 143 600 001	2347	75		19	6,48	50	1100			300 072 300 107 300 072 300 113	-- --	FRE -- FRE --	E1 -- E1 D1	-- L1 V	V	B B
Chevrolet Aveo Hatchback Monoflex	07/11-		342 182 600 001	4384	45		19	6,62	44	1100			314 386 300 107 314 386 300 113	S CAN -- S CAN --	E -- E D	-- L1 V	V 75	75 75	B B
Chevrolet Aveo Hatchback KIT = towbar inc. electrical kit 13 pins Monoflex	07/11-		342 182 900 113	4384	45		21	6,62	44	1100			electrical kit 13 pins in the kit: 314 386 300 113	S CAN --	E D	L1 V	75	B	
Chevrolet Aveo Hatchback Monoflex	07/11-		342 183 600 001	4383	45		21	6,62	44	1100			314 386 300 107 314 386 300 113	S CAN -- S CAN --	E -- E D	-- L1 V	V 75	75 75	B B
Chevrolet Aveo Hatchback KIT = towbar inc. electrical kit 13 pins Monoflex	07/11-		342 183 900 113	4383	45		23	6,62	44	1100			electrical kit 13 pins in the kit: 314 386 300 113	S CAN --	E D	L1 V	75	B	
Chevrolet Aveo Saloon Monoflex	07/11-		342 187 600 001	4429	45		19	6,81	50	1100			314 386 300 107 314 386 300 113	S CAN -- S CAN --	E -- E D	-- L1 V	V 75	75 75	B B
Chevrolet Aveo Saloon KIT = towbar inc. electrical kit 13 pins Monoflex	07/11-		342 187 900 113	4429	45		21	6,81	50	1100			electrical kit 13 pins in the kit: 314 386 300 113	S CAN --	E D	L1 V	75	B	
Chevrolet Aveo Saloon Monoflex	07/11-		342 188 600 001	4089	45		21	6,81	50	1100			314 386 300 107 314 386 300 113	S CAN -- S CAN --	E -- E D	-- L1 V	V 75	75 75	B B
Chevrolet Aveo Saloon KIT = towbar inc. electrical kit 13 pins Monoflex	07/11-		342 188 900 113	4089	45		23	6,81	50	1100			electrical kit 13 pins in the kit: 314 386 300 113	S CAN --	E D	L1 V	75	B	
Chevrolet Captiva (S3X)	06/06-		349 024 600 001	2384	90		20	12,3	150	2500			349 025 300 113	S C2 --	E D1	L1 V	90	B	
Chevrolet Captiva (S3X) KIT = towbar inc. electrical kit 13 pins	06/06-		349 024 900 113	2384	90		22	12,3	150	2500			electrical kit 13 pins in the kit: 349 025 300 113	S C2 --	E D1	L1 V	90	B	
Chevrolet Captiva (S3X)	06/06-		349 033 600 001	2387	90		21,5	10,9	120	2000			349 025 300 113	S C2 --	E D1	L1 V	90	B	
Chevrolet Captiva (S3X)	06/06-		349 025 600 001	2385	90		21,5	12,39	150	2500			349 025 300 113	S C2 --	E D1	L1 V	90	B	

Chevrolet






Chevrolet Captiva (S3X) KIT = towbar inc. electrical kit 13 pins	06/06-		349 025 900 113	2385	90		23,5	12,39	150	2500	electrical kit 13 pins in the kit: 349 025 300 113	S C2 --	E --	D1	L1	V	90	B
Chevrolet Colorado Pick-up 2WD / 4WD / Crew Cab 4 WD Monoflex	04-		342 141 600 001	2660	75		28	12,41	140	2500	300 052 300 107 300 052 300 113	FRE -- FRE --	--	D1	--	V		B
Chevrolet Cruze 4 doors Saloon	05/09-		314 373 600 001	2908	60		23	9,6	75	1800	314 373 300 113 314 373 300 157	S FRE -- S --	--	D1	L1	H	60	B
Chevrolet Cruze 4 doors Saloon KIT = towbar inc. electrical kit 13 pins	05/09-		314 373 900 113	2908	60		25	9,6	75	1800	electrical kit 13 pins in the kit: 314 373 300 113	S FRE --	--	D1	L1	H	60	B
Chevrolet Cruze 4 doors Saloon	05/09-		314 372 600 001	2909	60		23	9,6	75	1800	314 373 300 113 314 373 300 157	S FRE -- S --	--	D1	L1	H	60	B
Chevrolet Cruze 4 doors Saloon KIT = towbar inc. electrical kit 13 pins	05/09-		314 372 900 113	2909	60		25	9,6	75	1800	electrical kit 13 pins in the kit: 314 373 300 113	S FRE --	--	D1	L1	H	60	B
Chevrolet Cruze 5 doors Hatchback	07/11-		314 418 600 001	3296	60		22	7,5	75	1200	314 386 300 107 314 386 300 113	S CAN -- S CAN --	E --	D	L1	V	75	B
Chevrolet Cruze 5 doors Hatchback KIT = towbar inc. electrical kit 13 pins	07/11-		314 418 900 113	3296	60		24	7,5	75	1200	electrical kit 13 pins in the kit: 314 386 300 113	S CAN --	E D	L1	V	75	B	
Chevrolet Cruze 5 doors Hatchback	07/11-		314 416 600 001	3291	60		22,5	7,5	75	1200	314 386 300 107 314 386 300 113	S CAN -- S CAN --	E --	D	L1	V	75	B
Chevrolet Cruze 5 doors Hatchback KIT = towbar inc. electrical kit 13 pins	07/11-		314 416 900 113	3291	60		24,5	7,5	75	1200	electrical kit 13 pins in the kit: 314 386 300 113	S CAN --	E D	L1	V	75	B	
Chevrolet Cruze Estate/Station Wagon	06/12-		314 469 600 001	3444	60			9,6	75	1200	314 386 300 107 314 386 300 113	S CAN -- S CAN --	E --	D	L1	V	75	B
Chevrolet Cruze Estate/Station Wagon KIT = towbar inc. electrical kit 13 pins	06/12-		314 469 900 113	3444	60			9,6	75	1200	electrical kit 13 pins in the kit: 314 386 300 113	S CAN --	E D	L1	V	75	B	




Chevrolet Cruze Estate/Station Wagon	06/12-		314 470 600 001	3443	60	✂	9,6	75	1200		314 386 300 107 314 386 300 113	S CAN -- S CAN --	E -- E --	-- L1	V -- V --	75 75	B B
Chevrolet Cruze Estate/Station Wagon KIT = towbar inc. electrical kit 13 pins	06/12-		314 470 900 113	3443	60	✂	9,6	75	1200		electrical kit 13 pins in the kit. 314 386 300 113	S CAN --	E --	D L1	V --	75	B
Chevrolet Epica Monoflex discontinued model	04/06-		342 145 600 001	3327	90	22	9,51	75	1800		300 072 300 107 300 072 300 113	FRE -- FRE --	E1 -- E1 --	-- L1	V -- V --		B B
Chevrolet Kalos 3/5 doors Monoflex	03-		342 143 600 001	2347	75	✂	6,48	50	1100		300 061 300 107 300 061 300 113	C2 -- C2 --	-- --	-- L1	H -- H --		B B
Chevrolet Lacetti (KLAN) Monoflex	04-		342 148 600 001	2510	90	19	7,73	65	1400		300 061 300 107 300 061 300 113	C2 -- C2 --	-- --	-- L1	H -- H --		B B
Chevrolet Matiz exc. vehicles with 0,8 l motor Monoflex	05-		342 146 600 001	3060	90	17	4,6	45	700		300 061 300 107 300 061 300 113	C2 -- C2 --	-- --	-- L1	H -- H --		B B
Chevrolet Nubira Estate Monoflex	09/04-		342 150 600 001	2650	<150	21	8,41	70	1500		300 061 300 107 300 061 300 113	C2 -- C2 --	-- --	-- L1	H -- H --		B B
Chevrolet Nubira Estate Monoflex	09/04-		342 151 600 001	2650	<150	21	8,41	70	1500		300 061 300 107 300 061 300 113	C2 -- C2 --	-- --	-- L1	H -- H --		B B
Chevrolet Nubira Saloon (KLAN) Monoflex	03/03-		342 148 600 001	2510	90	19	7,73	65	1400		300 061 300 107 300 061 300 113	C2 -- C2 --	-- --	-- L1	H -- H --		B B
Chevrolet Orlando replaced by: 314460600001 discontinued model	01/11-		314 419 600 001	3148	120	26	9,9	75	1600		314 386 300 107 314 386 300 113	S CAN -- S CAN --	E -- E --	-- L1	V -- V --	75 75	B B
Chevrolet Orlando Monoflex	01/11-		314 460 600 001	4370	60	23	9,9	75	1600		314 386 300 107 314 386 300 113	S CAN -- S CAN --	E -- E --	-- L1	V -- V --	75 75	B B
Chevrolet Orlando replaced by: 314461600001 discontinued model	01/11-		314 420 600 001	3147	120	27	9,9	75	1600		314 386 300 107 314 386 300 113	S CAN -- S CAN --	E -- E --	-- L1	V -- V --	75 75	B B






Chrysler 300 C Estate Monoflex	04-11/11		3439	60		21	11,04	80	2000	300 210 300 107	A --	E1 --	--	V	90	B	
										300 210 300 113	A --	E1 D1	--	L1	V	90	B
Chrysler 300 C Estate Monoflex	04-11/11		4151	60		21	11,04	80	2000	300 210 300 107	A --	E1 --	--	V	90	B	
										300 210 300 113	A --	E1 D1	--	L1	V	90	B
Chrysler 300 C Saloon Monoflex	04-11/11		3439	60		21	11,04	80	2000	300 210 300 107	A --	E1 --	--	V	90	B	
										300 210 300 113	A --	E1 D1	--	L1	V	90	B
Chrysler 300 C Saloon Monoflex	04-11/11		4151	60		21	11,04	80	2000	300 210 300 107	A --	E1 --	--	V	90	B	
										300 210 300 113	A --	E1 D1	--	L1	V	90	B
Chrysler Grand Voyager only for 2 WD from model '96, exc. vehicles with sport-exhaust	09/95-04/01		0134	>150		27	10,7	80	2000	300 072 300 107	FRE --	E1 --	--	V		B	
										300 072 300 113	FRE --	E1 D1	--	L1	V		B
Chrysler Grand Voyager exc. mod.05 7 seats Stow 'n Go	04/01-12/07		1016	90		21	10	80	1700	for vehicles with earth switched rear fog lights please order separately 2X:							
										300 065 300 005	--	--	--	H	15	B	
										300 072 300 107	--	FRE --	E1 --	--	V		B
										300 072 300 113	--	FRE --	E1 D1	L1	V		B
Chrysler Grand Voyager exc. mod.05 7 seats Stow 'n Go	04/01-12/07		1161	90		22,5	10	80	1700	for vehicles with earth switched rear fog lights please order separately 2X:							
										300 065 300 005	--	--	--	H	15	B	
										300 072 300 107	--	FRE --	E1 --	--	V		B
										300 072 300 113	--	FRE --	E1 D1	L1	V		B
Chrysler Grand Voyager RT Monoflex	01/08-		3744	120		31	10	85	1700	for vehicles with earth switched rear fog lights please order separately 2X:							
										300 065 300 005	--	--	--	H	15	B	
										300 210 300 107	--	A --	E1 --	--	V	90	B
										300 210 300 113	--	A --	E1 D1	L1	V	90	B

Chrysler Voyager exc. mod.05 7 seats Stow 'n Go	04/01-		342 092 600 001	1161	90	22,5	10	80	1700	for vehicles with earth switched rear fog lights please order separately 2x: 300 065 300 005 300 072 300 107 300 072 300 113	--	--	--	--	--	--	--	H	15	B
										--	FRE	E1	--	--	--	--	V	B		
										--	FRE	E1	D1	L1	V	B				
										--	FRE	E1	D1	L1	V	B				
Chrysler Voyager Stow 'n Go Monoflex	02/05-		342 156 600 001	2970	120	31	10,23	85	1700	for vehicles with earth switched rear fog lights please order separately 2x: 300 065 300 005 300 072 300 107 300 072 300 113	--	--	--	--	--	--	--	H	15	B
										--	FRE	E1	--	--	--	--	V	B		
										--	FRE	E1	D1	L1	V	B				
										--	FRE	E1	D1	L1	V	B				
Chrysler Voyager Stow 'n Go Monoflex	02/05-		342 157 600 001	2970	120	31	10,23	85	1700	for vehicles with earth switched rear fog lights please order separately 2x: 300 065 300 005 300 072 300 107 300 072 300 113	--	--	--	--	--	--	--	H	15	B
										--	FRE	E1	--	--	--	--	V	B		
										--	FRE	E1	D1	L1	V	B				
										--	FRE	E1	D1	L1	V	B				






Citroën










Citroën Berlingo van, minibus Multispace	11/96- 04/08		304 054 600 001	0191	90	✂ 14,8	7,8 70	1350		304 054 300 107 304 054 300 113	S FRE -- S FRE --	-- -- -- D1	-- -- -- V	75 75 75 75	L L
Citroën Berlingo KIT = towbar inc. electrical kit 13 pins van, minibus Multispace	11/96- 04/08		304 054 900 113	0191	90	✂ 16,8	7,8 70	1350		electrical kit 13 pins in the kit: 304 054 300 113	S FRE --	-- D1	-- V	75	L
Citroën Berlingo van, minibus Multispace discontinued model	11/96- 04/08		304 057 600 001	0222	90	✂ 17,5	7,8 70	1350		304 054 300 107 304 054 300 113	S FRE -- S FRE --	-- -- -- D1	-- V -- V	75 75 75 75	L L
Citroën Berlingo First	04/08-		304 054 600 001	0191	90	✂ 14,8	7,8 70	1350		304 054 300 107 304 054 300 113 -11/11 < OPR 12776 304 400 300 107 -11/11 > OPR 12776 304 400 300 113 11/11- > OPR 12775 304 402 300 107 11/11- > OPR 12775 304 402 300 113	S FRE -- S FRE -- S CAN C1 E S CAN C1 E S CAN C1 E S CAN C1 E S CAN C1 E	-- -- -- D1 E -- E D E -- E D L1	-- V -- V -- V L1 V -- V L1 V	75 75 75 75 -- -- 105 --	L L L L B B B B
Citroën Berlingo First KIT = towbar inc. electrical kit 13 pins	04/08- 11/11		304 054 900 113	0191	90	✂ 16,8	7,8 70	1350		electrical kit 13 pins in the kit: 304 054 300 113	S FRE --	-- D1	-- V	75	L

Citroën Berlingo First discontinued model		04/08-	304 057 600 001	0222	90	17,5	7,8	70	1350		S FRE --	--	--	V	75	L					
											S FRE --	--	D1	V	75	L					
											S CAN C1	E	--	V		B					
											S CAN C1	E	D	L1	V	B					
											S CAN C1	E	--	V	105	B					
											S CAN C1	E	D	L1	V	105	B				
											S CAN C1	E	D	L1	V	105	B				
Citroën Berlingo L1 short overhang, vehicle length = 4380 mm fits Multispace, inc. Berlingo E-Car SIARR		04/08-	304 091 600 001	0122	90	15	8,69	64	1600		S CAN C1	E	--	V		B					
											S CAN C1	E	D	L1	V	B					
											S CAN C1	E	--	V	105	B					
											S CAN C1	E	--	V	105	B					
											S CAN C1	E	D	L1	V	105	B				
											S CAN C1	E	D	L1	V	105	B				
											S CAN C1	E	D	L1	V	105	B				
Citroën Berlingo L1 KIT = towbar inc. electrical kit 13 pins short overhang, vehicle length = 4380 mm fits Multispace, inc. Berlingo E-Car SIARR		04/08- 11/11	304 091 900 113	0122	90	17	8,69	64	1600												














Citroën Berlingo L2 long overhang, vehicle length = 4628 mm SIARR		04/08-	304 130 600 001	0134	90	17,7	8,69	64	1600	-11/11 < OPR 12776 304 400 300 107	S CAN C1	E	--	V	B			
										-11/11 < OPR 12776 304 400 300 113	S CAN C1	E	D	L1	V	B		
										11/11- > OPR 12775 304 402 300 107	S CAN C1	E	--	V	105	B		
										11/11- > OPR 12775 304 402 300 113	S CAN C1	E	D	L1	V	105	B	
Citroën Berlingo L2 long overhang, vehicle length = 4628 mm SIARR		04/08-	304 131 600 001	0139	90	19	8,69	64	1600	-11/11 < OPR 12776 304 400 300 107	S CAN C1	E	--	V	B			
										-11/11 < OPR 12776 304 400 300 113	S CAN C1	E	D	L1	V	B		
										11/11- > OPR 12775 304 402 300 107	S CAN C1	E	--	V	105	B		
										11/11- > OPR 12775 304 402 300 113	S CAN C1	E	D	L1	V	105	B	
Citroën Berlingo L2 KIT = towbar inc. electrical kit 13 pins long overhang, vehicle length = 4628 mm SIARR		04/08- 11/11	304 131 900 113	0139	90	21	8,69	64	1600	electrical kit 13 pins in the kit: 304 400 300 113	S CAN C1	E	D	L1	V	B		
Citroën C Crosser Monoflex		09/07-	340 094 600 001	4337	90	27	10,92	100	2000	340 075 300 113	S FRE --	E	D	L	H	75	B	
Citroën C Crosser KIT = towbar inc. electrical kit 13 pins Monoflex		09/07-	340 094 900 113	4337	90	29	10,92	100	2000	electrical kit 13 pins in the kit: 340 075 300 113	S FRE --	E	D	L	H	75	B	
Citroën C1 is not permitted to tow by manufacturer.																		L








Citroën

Citroën C2 SIARR		03-	304 110 600 001	4812		18	3,97	25	565		-09/05	300 072 300 107	--	FRE --	E1 --	--	V	B		
												-09/05	300 072 300 113	--	FRE --	E1 D1	L1	V	B	
													09/05-	304 402 300 107	S	CAN C1	E --	--	V	105
													09/05-	304 402 300 107	S	CAN C1	E D	L1	V	105
													09/05-	304 402 300 113	S	CAN C1	E D	L1	V	105
Citroën C2 SIARR		03-	304 111 600 001	4812		19	3,97	25	565		-09/05	300 072 300 107	--	FRE --	E1 --	--	V	B		
												-09/05	300 072 300 113	--	FRE --	E1 D1	L1	V	B	
													09/05-	304 402 300 107	S	CAN C1	E --	--	V	105
													09/05-	304 402 300 107	S	CAN C1	E D	L1	V	105
													09/05-	304 402 300 113	S	CAN C1	E D	L1	V	105
Citroën C3		05/02- 11/09	304 074 600 001	1434	120	16	6,6	50	1100		-09/05	300 072 300 107	--	FRE --	E1 --	--	V	B		
												-09/05	300 072 300 113	--	FRE --	E1 D1	L1	V	B	
													09/05-	304 402 300 107	S	CAN C1	E --	--	V	105
													09/05-	304 402 300 107	S	CAN C1	E D	L1	V	105
													09/05-	304 402 300 113	S	CAN C1	E D	L1	V	105
Citroën C3 SIARR		05/02- 11/09	304 109 600 001	4115		23	6,51	48	1176		-09/05	300 072 300 107	--	FRE --	E1 --	--	V	B		
												-09/05	300 072 300 113	--	FRE --	E1 D1	L1	V	B	
													09/05-	304 402 300 107	S	CAN C1	E --	--	V	105
													09/05-	304 402 300 107	S	CAN C1	E D	L1	V	105
													09/05-	304 402 300 113	S	CAN C1	E D	L1	V	105
Citroën C3 exc. vehicles with park distance control SIARR		01/10-	304 136 600 001	0152		15,1	6,93	54	1225			304 402 300 107	S	CAN C1	E --	--	V	105		
													304 402 300 113	S	CAN C1	E D	L1	V	105	





Citroën C3 KIT = towbar inc. electrical kit 13 pins exc. vehicles with park distance control SIARR	01/10-		304 136 900 113	0152				17	6,93	54	1225		electrical kit 13 pins in the kit: 304 402 300 113	S CAN C1	E	D	L1	V	105	B
Citroën C3 exc. vehicles with park distance control SIARR	01/10-		304 141 600 001	0851					6,93	54	1225		electrical kit 13 pins in the kit: 304 402 300 107 304 402 300 113	S CAN C1 S CAN C1	E E	-- D	-- L1	V V	105 105	B B
Citroën C3 SIARR	01/10-		304 137 600 001	0147				16,4	6,93	54	1225		electrical kit 13 pins in the kit: 304 402 300 107 304 402 300 113	S CAN C1 S CAN C1	E E	-- D	-- L1	V V	105 105	B B
Citroën C3 KIT = towbar inc. electrical kit 13 pins SIARR	01/10-		304 137 900 113	0147				18,4	6,93	54	1225		electrical kit 13 pins in the kit: 304 402 300 113	S CAN C1	E	D	L1	V	105	B
Citroën C3 Picasso SIARR	03/09-		304 127 600 001	0099	60			15,2	7,3	61	1200		304 402 300 107 304 402 300 113	S CAN C1 S CAN C1	E E	-- D	-- L1	V V	105 105	B B
Citroën C3 Picasso KIT = towbar inc. electrical kit 13 pins SIARR	03/09-		304 127 900 113	0099	60			17,2	7,3	61	1200		electrical kit 13 pins in the kit: 304 402 300 113	S CAN C1	E	D	L1	V	105	B
Citroën C3 Picasso SIARR	03/09-		304 139 600 001	0099	60			15,2	7,3	61	1200		304 402 300 107 304 402 300 113	S CAN C1 S CAN C1	E E	-- D	-- L1	V V	105 105	B B
Citroën C3 Picasso KIT = towbar inc. electrical kit 13 pins SIARR	03/09-		304 139 900 113	0099	60			17,2	7,3	61	1200		electrical kit 13 pins in the kit: 304 402 300 113	S CAN C1	E	D	L1	V	105	B
Citroën C3 Pluriel	03/03-		304 076 600 001	1331	120			16	5,2	60	800		-09/05 300 072 300 107 -09/05 300 072 300 113 09/05- 300 210 300 107 09/05- 300 210 300 113	-- FRE -- -- FRE -- -- A -- -- A --	E1 -- E1 -- E1 -- E1 --	-- -- D1 -- -- D1	-- -- L1 -- -- L1	V V V V	B B 90 90	













Citroën

Citroën C3 X-TR 3 / 5 doors		05/02-	304 074 600 001	1434	120		16	6,6	50	1100	-09/05 300 072 300 107	--	FRE --	E1 --	--	V	B			
												-09/05 300 072 300 113	--	FRE --	E1 D1	L1	V	B		
													09/05- 300 210 300 107	--	A --	E1 --	--	V	90	B
													09/05- 300 210 300 113	--	A --	E1 D1	L1	V	90	B
													340 093 300 113	S	A --	E1 D	L	H	60	B
Citroën C4 Aircross Monoflex		03/12-	340 092 600 001	4251	90		22	8,51	70	1400	340 093 300 113	S	A --	E1 D	L	H	60	B		
Citroën C4 Aircross KIT = towbar inc. electrical kit 13 pins Monoflex		03/12-	340 092 900 113	4251	90		24	8,51	70	1400	electrical kit 13 pins in the kit: 340 093 300 113	S	A --	E1 D	L	H	60	B		
Citroën C4 Aircross Monoflex		03/12-	340 093 600 001	4249	90		24	8,51	70	1400	340 093 300 113	S	A --	E1 D	L	H	60	B		
Citroën C4 Aircross KIT = towbar inc. electrical kit 13 pins Monoflex		03/12-	340 093 900 113	4249	90		26	8,51	70	1400	electrical kit 13 pins in the kit: 340 093 300 113	S	A --	E1 D	L	H	60	B		
Citroën C4 Coupé fits hatchback, VTR, VTR Plus and VTS		11/04- 10/10	315 108 600 001	1903	60		19	9,1	80	1700	-01/07 300 210 300 107	--	A --	E1 --	--	V	90	B		
											-01/07 300 210 300 113	--	A --	E1 D1	L1	V	90	B		
											01/07- 304 402 300 107	S	CAN C1	E --	--	V	105	B		
											01/07- 304 402 300 113	S	CAN C1	E D	L1	V	105	B		
Citroën C4 Coupé fits hatchback, VTR, VTR Plus and VTS		11/04- 10/10	315 109 600 001	1888	60		21	9,1	80	1700	-01/07 300 210 300 107	--	A --	E1 --	--	V	90	B		
											-01/07 300 210 300 113	--	A --	E1 D1	L1	V	90	B		
											01/07- 304 402 300 107	S	CAN C1	E --	--	V	105	B		
											01/07- 304 402 300 113	S	CAN C1	E D	L1	V	105	B		













Citroën C4 Grand Picasso SIARR		11/06- 01/11	315 177 600 001	0074	120		21	10	75	1550	-01/11 OPR < 12531 304 401 300 107	S CAN C1	E	--	V	105	B	
											-01/11 OPR < 12531 304 401 300 113	S CAN C1	E	D	L1	V	105	B
											01/11- OPR > 12530 315 109 300 107	S CAN C	E	--	V	105	B	
											01/11- OPR > 12530 315 109 300 113	S CAN C	E	D	L1	V	105	B
											electrical kit 13 pins in the kit: 304 401 300 113	S CAN C1	E	D	L1	V	105	B
Citroën C4 Grand Picasso KIT = towbar inc. electrical kit 13 pins		11/06- 01/11	304 099 900 113	2327	60		24	9,7	75	1700								
											-01/11 OPR < 12531 304 401 300 107	S CAN C1	E	--	V	105	B	
											-01/11 OPR < 12531 304 401 300 113	S CAN C1	E	D	L1	V	105	B
											01/11- OPR > 12530 315 109 300 107	S CAN C	E	--	V	105	B	
											01/11- OPR > 12530 315 109 300 113	S CAN C	E	D	L1	V	105	B
Citroën C4 Grand Picasso SIARR		11/06-	315 179 600 001	0074	90		21	10	75	1550								
											-01/11 OPR < 12531 304 401 300 107	S CAN C1	E	--	V	105	B	
											-01/11 OPR < 12531 304 401 300 113	S CAN C1	E	D	L1	V	105	B
											01/11- OPR > 12530 315 109 300 107	S CAN C	E	--	V	105	B	
											01/11- OPR > 12530 315 109 300 113	S CAN C	E	D	L1	V	105	B
Citroën C4 Grand Picasso Monoflex		11/06-	315 178 600 001	4147	90		22,5	9,71	80	1700								
											-01/11 OPR < 12531 304 401 300 107	S CAN C1	E	--	V	105	B	
											-01/11 OPR < 12531 304 401 300 113	S CAN C1	E	D	L1	V	105	B
											01/11- OPR > 12530 315 109 300 107	S CAN C	E	--	V	105	B	
											01/11- OPR > 12530 315 109 300 113	S CAN C	E	D	L1	V	105	B








Citroën

Citroën C4 Grand Picasso KIT = towbar inc. electrical kit 13 pins Monoflex	11/06- 01/11		304 100 900 113	4147	60	✂ 24,7	9,71	80	1700	electrical kit 13 pins in the kit: 304 401 300 113	S CAN C1	E	D	L1	V	105	B
Citroën C4 Picasso SIARR	11/06-		315 177 600 001	0074	120	✂ 21	10	75	1550	-01/11 OPR < 12531 304 401 300 107 -01/11 OPR < 12531 304 401 300 113 01/11- OPR > 12530 315 109 300 107 01/11- OPR > 12530 315 109 300 113	S CAN C1	E	--	--	V	105	B
Citroën C4 Picasso KIT = towbar inc. electrical kit 13 pins	11/06- 01/11		304 099 900 113	2327	60	24	9,7	75	1700	electrical kit 13 pins in the kit: 304 401 300 113	S CAN C1	E	D	L1	V	105	B
Citroën C4 Picasso SIARR	11/06-		315 179 600 001	0074	90	✂ 21	10	75	1550	-01/11 OPR < 12531 304 401 300 107 -01/11 OPR < 12531 304 401 300 113 01/11- OPR > 12530 315 109 300 107 01/11- OPR > 12530 315 109 300 113	S CAN C1	E	--	--	V	105	B












Citroën C4 Picasso Monoflex		11/06- 01/11	315 178 600 001	4147	90		22,5	9,71	80	1700	-01/11 OPR < 12531 304 401 300 107	S CAN C1	E	--	V	105	B	
											-01/11 OPR < 12531 304 401 300 113	S CAN C1	E	D	L1	V	105	B
											01/11- OPR > 12530 315 109 300 107	S CAN C	E	--	V	105	B	
											01/11- OPR > 12530 315 109 300 113	S CAN C	E	D	L1	V	105	B
											electrical kit 13 pins in the kit: 304 401 300 113	S CAN C1	E	D	L1	V	105	B
Citroën C4 Picasso KIT = towbar inc. electrical kit 13 pins Monoflex		11/06- 01/11	304 100 900 113	4147	60		24,7	9,71	80	1700	-01/07 300 210 300 107	A --	E1	--	V	90	B	
											-01/07 300 210 300 113	A --	E1	D1	L1	V	90	B
											01/07- 304 402 300 107	S CAN C1	E	--	V	105	B	
											01/07- 304 402 300 113	S CAN C1	E	D	L1	V	105	B
Citroën C4 Saloon inc. Hatchback		11/04- 11/10	315 108 600 001	1903	60		19	9,1	80	1700	-01/07 300 210 300 107	A --	E1	--	V	90	B	
											-01/07 300 210 300 113	A --	E1	D1	L1	V	90	B
											01/07- 304 402 300 107	S CAN C1	E	--	V	105	B	
											01/07- 304 402 300 113	S CAN C1	E	D	L1	V	105	B
Citroën C4 Saloon inc. Hatchback		11/04- 11/10	315 109 600 001	1888	60		21	9,1	80	1700	-01/07 300 210 300 107	A --	E1	--	V	90	B	
											-01/07 300 210 300 113	A --	E1	D1	L1	V	90	B
											01/07- 304 402 300 107	S CAN C1	E	--	V	105	B	
											01/07- 304 402 300 113	S CAN C1	E	D	L1	V	105	B
Citroën C4 Saloon replaced by: 304147600001 SIARR discontinued model		11/10-	304 142 600 001	0168	60		17,4	9,19	75	1550	304 144 300 113	S CAN C	E	D	L	V	90	B
											304 144 300 113	S CAN C	E	D	L	V	90	B
Citroën C4 Saloon SIARR		11/10-	304 147 600 001	0168	60		17,4	9,19	75	1550	304 144 300 113	S CAN C	E	D	L	V	90	B
											304 144 300 113	S CAN C	E	D	L	V	90	B




Citroën

Citroën C4 Saloon KIT = towbar inc. electrical kit 13 pins SIARR	11/10-		304 147 900 113	0168	60	✂	19,4	9,19	75	1550		electrical kit 13 pins in the kit: 304 144 300 113	S CAN C	E	D	L	V	90	B
Citroën C4 Saloon replaced by: 304148600001 SIARR discontinued model	11/10-		304 144 600 001	0169	60	✂	19	9,19	75	1550		304 144 300 113	S CAN C	E	D	L	V	90	B
Citroën C4 Saloon SIARR	11/10-		304 148 600 001	0169	60	✂	19	9,19	75	1550		304 144 300 113	S CAN C	E	D	L	V	90	B
Citroën C4 Saloon KIT = towbar inc. electrical kit 13 pins SIARR	11/10-		304 148 900 113	0169	60	✂	21	9,19	75	1550		electrical kit 13 pins in the kit: 304 144 300 113	S CAN C	E	D	L	V	90	B
Citroën C5 Estate	10/04- 05/08		304 073 600 001	2210	60		28	10	85	1800		300 210 300 107 300 210 300 113	-- A -- -- A --	E1 -- E1 --	-- D1	-- L1	V V	90 90	B B
Citroën C5 Estate Monoflex	05/08-		304 146 600 001	4300	120	✂	22	10,4	80	1900		304 400 300 107 304 400 300 113	S CAN C1 S CAN C1	E -- E --	-- D	-- L1	V V		B B
Citroën C5 Estate KIT = towbar inc. electrical kit 13 pins Monoflex	05/08-		304 146 900 113	4300	120	✂	24	10,4	80	1900		electrical kit 13 pins in the kit: 304 400 300 113	S CAN C1	E	D	L1	V		B
Citroën C5 Estate Monoflex	05/08-		304 145 600 001	4255	120	✂	24,5	10,4	80	1900		304 400 300 107 304 400 300 113	S CAN C1 S CAN C1	E -- E --	-- D	-- L1	V V		B B
Citroën C5 Estate KIT = towbar inc. electrical kit 13 pins Monoflex	05/08-		304 145 900 113	4255	120	✂	26,5	10,4	80	1900		electrical kit 13 pins in the kit: 304 400 300 113	S CAN C1	E	D	L1	V		B
Citroën C5 Saloon Monoflex	05/08-		304 146 600 001	4300	120	✂	22	10,4	80	1900		304 400 300 107 304 400 300 113	S CAN C1 S CAN C1	E -- E --	-- D	-- L1	V V		B B
Citroën C5 Saloon KIT = towbar inc. electrical kit 13 pins Monoflex	05/08-		304 146 900 113	4300	120	✂	24	10,4	80	1900		electrical kit 13 pins in the kit: 304 400 300 113	S CAN C1	E	D	L1	V		B
Citroën C5 Saloon Monoflex	05/08-		304 145 600 001	4255	120	✂	24,5	10,4	80	1900		304 400 300 107 304 400 300 113	S CAN C1 S CAN C1	E -- E --	-- D	-- L1	V V		B B




Citroën C5 Saloon KIT = towbar inc. electrical kit 13 pins Monoflex	05/08-		304 145 900 113	4255	120	∞	26,5	10,4	80	1900		electrical kit 13 pins in the kit: 304 400 300 113	S CAN C1	E	D	L1	V	B
Citroën C8 SIARR	09/02-		315 098 600 001	0986	75	∞	19,8	10,8	100	1900		10/05- 304 400 300 107 10/05- 304 400 300 113 -09/05 315 097 300 107 -09/05 315 097 300 113	S CAN C1 S CAN C1 S FRE -- S FRE --	E E E E	-- D -- D1	-- L1 -- L1	V V H H	B B 45 45
Citroën C8 KIT = towbar inc. electrical kit 13 pins SIARR	10/05-		315 098 900 113	0986	75	∞	21,8	10,8	100	1900		electrical kit 13 pins in the kit: 304 400 300 113	S CAN C1	E	D	L1	V	B
Citroën C8 discontinued model	09/02-		315 117 600 001	0991	75	∞	23	10,8	100	1900		10/05- 304 400 300 107 10/05- 304 400 300 113 -09/05 315 097 300 107 -09/05 315 097 300 113	S CAN C1 S CAN C1 S FRE -- S FRE --	E E E E	-- D -- D1	-- L1 -- L1	V V H H	B B 45 45
Citroën C8	09/02-		315 097 600 001	0989	75	∞	22	10,8	100	1900		10/05- 304 400 300 107 10/05- 304 400 300 113 -09/05 315 097 300 107 -09/05 315 097 300 113	S CAN C1 S CAN C1 S FRE -- S FRE --	E E E E	-- D -- D1	-- L1 -- L1	V V H H	B B 45 45
Citroën C8 KIT = towbar inc. electrical kit 13 pins	10/05-		315 097 900 113	0989	75	∞	24	10,8	100	1900		electrical kit 13 pins in the kit: 304 400 300 113	S CAN C1	E	D	L1	V	B
Citroën DS3 exc. vehicles with park distance control SIARR	01/10-		304 136 600 001	0152		∞	15,1	6,93	54	1225		304 402 300 107 304 402 300 113	S CAN C1 S CAN C1	E E	-- D	-- L1	V V	105 105




Citroën

Citroën DS3 exc. vehicles with park distance control SIARR	01/10-		304 136 900 113	0152		✂	17	6,93	54	1225		electrical kit 13 pins in the kit: 304 402 300 113	S CAN C1	E	D	L1	V	105	B
Citroën DS3 SIARR	01/10-		304 141 600 001	0851		✂		6,93	54	1225		304 402 300 107 304 402 300 113	S CAN C1 S CAN C1	E E	-- D	-- L1	V V	105 105	B B
Citroën DS3 SIARR	01/10-		304 137 600 001	0147		✂	16,4	6,93	54	1225		304 402 300 107 304 402 300 113	S CAN C1 S CAN C1	E E	-- D	-- L1	V V	105 105	B B
Citroën DS3 KIT = towbar inc. electrical kit 13 pins SIARR	01/10-		304 137 900 113	0147		✂	18,4	6,93	54	1225		electrical kit 13 pins in the kit: 304 402 300 113	S CAN C1	E	D	L1	V	105	B
Citroën DS4 SIARR	04/11-		304 147 600 001	0168	60	✂	17,4	9,19	75	1550		304 144 300 113	S CAN C	E	D	L	V	90	B
Citroën DS4 KIT = towbar inc. electrical kit 13 pins SIARR	04/11-		304 147 900 113	0168	60	✂	19,4	9,19	75	1550		electrical kit 13 pins in the kit: 304 144 300 113	S CAN C	E	D	L	V	90	B
Citroën DS4 SIARR	04/11-		304 148 600 001	0169	60	✂	19	9,19	75	1550		304 144 300 113	S CAN C	E	D	L	V	90	B
Citroën DS4 KIT = towbar inc. electrical kit 13 pins SIARR	04/11-		304 148 900 113	0169	60	✂	21	9,19	75	1550		electrical kit 13 pins in the kit: 304 144 300 113	S CAN C	E	D	L	V	90	B
Citroën DS5 SIARR	02/12-		304 153 600 001					8,63	75	1500									
Citroën DS5 SIARR	02/12-		304 149 600 001					8,63	75	1500									
Citroën Evasion / Synergie	09/94- 08/02		315 072 600 001	0010	60	✂	15,5	10,9	100	2000		300 060 300 107 300 060 300 113	-- --	-- --	-- D1	-- L1	H H	45 45	B B






Citroën Jumper / Relay van/minibus, inc. 4 WD, exc. vehicles with gas bottle instead of the spare wheel 4 WD: bolt kit (order no. 906216650002) must be ordered separately, inc. vehicles until 10/95: body reinforcement kit van/minibus: 306142650002 must be ordered separately. Towball for vehicles with standard chassis: 329089600001 (not in cluded), Towball for vehicles with 16" wheels and reinforced springs: 329062600001 (not included) When mounting swap system to vehicles with standard chassis we recommend towball 3290596000001 (not included)	03/94- 06/06		306 216 600 001	0827	60	32,7	13,3 150 2500	discontinued model -03/02 306 142 300 107 -03/02 306 142 300 113 03/02- 306 216 300 107 03/02- 306 216 300 113	S	C2	--	--	--	--	--	--	H	45	L								
									S	C2	--	--	--	--	--	--	--	--	--	--	--	--	--	--	H	45	L
									S	FRE	--	--	--	--	--	--	--	--	--	--	--	--	--	--	V	75	B
									S	FRE	--	--	--	--	--	--	--	--	--	--	--	--	--	--	V	75	B
									S	FRE	--	--	--	--	--	--	--	--	--	--	--	--	--	--	V	75	B
Citroën Jumper / Relay flatbed, inc. 4 WD, exc. vehicles with gas bottle instead of the spare wheel 4 WD: bolt kit (order no. 906216650002) must be ordered separately Towball for vehicles with standard chassis: 329089600001 (not included), Towball for vehicles with 16" wheels and reinforced springs: 329062600001 (not included) When mounting swap system to vehicles with standard chassis we recommend towball 3290596000001 (not included)	03/94- 06/06		306 216 600 001	0827	60	32,7	13,3 150 2500	03/02- 300 052 300 107 03/02- 300 052 300 113 -03/02 300 060 300 113 -03/02 306 150 300 107	--	FRE	--	--	--	--	--	--	V		B								
									--	FRE	--	--	--	--	--	--	--	--	--	--	--	--	--	V		B	
									--	C2	--	--	--	--	--	--	--	--	--	--	--	--	--	--	H	45	B
									S	C2	--	--	--	--	--	--	--	--	--	--	--	--	--	--	H	45	L
									S	C2	--	--	--	--	--	--	--	--	--	--	--	--	--	--	H	45	L
Citroën Jumper / Relay van / minibus inc. towball SIARR	08/99- 06/06		306 329 600 001	1078	29	12,5 130 2000	discontinued model -03/02 306 142 300 107 -03/02 306 142 300 113 03/02- 306 216 300 107 03/02- 306 216 300 113	S	C2	--	--	--	--	--	--	--	H	45	L								
								S	C2	--	--	--	--	--	--	--	--	--	--	--	--	--	H	45	L		
								S	FRE	--	--	--	--	--	--	--	--	--	--	--	--	--	V	75	B		
								S	FRE	--	--	--	--	--	--	--	--	--	--	--	--	--	V	75	B		
								S	FRE	--	--	--	--	--	--	--	--	--	--	--	--	--	V	75	B		






















Citroën

<p>Citroën Jumper / Relay van / minibus inc. towball For vehicles with long superstructure L4/XL please order separately a set distance tubes to strengthen the framework. Some vehicles 03/08- do not have chassis bores. In this case it is necessary to bore them subsequent. For the mounting time will last 60 min. longer. SIARR</p>	06/06-		306 357 600 001	0067	60	✂	21	15,84	150	3000	<p>02/11- from chassis no. 1948841 306 271 300 107 02/11- from chassis no. 1948841 306 271 300 113 -02/11 chassis no. 1948840 306 510 300 107 -02/11 chassis no. 1948840 306 510 300 113</p>	S FRE --	E --	--	V	105	B	
<p>Citroën Jumper / Relay van / minibus inc. towball 329059600001 For vehicles with long superstructure L4/XL please order separately a set distance tubes to strengthen the framework. Some vehicles 03/08- do not have chassis bores. In this case it is necessary to bore them subsequent. For the mounting time will last 60 min. longer.</p>	06/06-		306 330 600 001	2215	60	✂	32	16,9	150	3000	<p>02/11- from chassis no. 1948841 306 271 300 107 02/11- from chassis no. 1948841 306 271 300 113 -02/11 chassis no. 1948840 306 510 300 107 -02/11 chassis no. 1948840 306 510 300 113</p>	S FRE --	E --	--	V	105	B	
<p>Citroën Jumper / Relay KIT = towbar inc. electrical kit 13 pins van / minibus inc. towball 329059600001 For vehicles with long superstructure L4/XL please order separately a set distance tubes to strengthen the framework. Some vehicles 03/08- do not have chassis bores. In this case it is necessary to bore them subsequent. For the mounting time will last 60 min. longer.</p>	06/06- 02/11		306 330 900 113	2215	60	✂	34	16,9	150	3000	<p>electrical kit 13 pins in the kit: 306 510 300 113</p>	S FRE --	E	D1	L1	V	105	B





<p>Citroën Jumper / Relay KIT = towbar inc. electrical kit 13 pins van / minibus inc. towball 329059600001 For vehicles with long superstructure L4/XL please order separately a set distance tubes to strengthen the framework. Some vehicles 03/08- do not have chassis bores. In this case it is necessary to bore them subsequent. For the mounting time will last 60 min. longer. SIARR</p>		<p>306 357 900 113</p>	<p>2215</p>	<p>60</p>	<p>34</p>	<p>16,9 150 3000</p>	<p>electrical kit 13 pins in the kit: 306 271 300 113</p>	<p>S FRE --</p>	<p>E D1</p>	<p>L1 V</p>	<p>105 B</p>
<p>Citroën Jumper / Relay van / minibus For vehicles with long superstructure L4/XL please order separately a set distance tubes to strengthen the framework. Some vehicles 03/08- do not have chassis bores. In this case it is necessary to bore them subsequent. For the mounting time will last 60 min. longer.</p>		<p>306 271 600 001</p>	<p>2476</p>	<p>60</p>	<p>32</p>	<p>16,9 150 3000</p>	<p>02/11- from chassis no. 1948841 306 271 300 107 02/11- from chassis no. 1948841 306 271 300 113 -02/11 chassis no. 1948840 306 510 300 107 -02/11 chassis no. 1948840 306 510 300 113</p>	<p>S FRE -- S FRE -- S FRE --</p>	<p>E -- E D1</p>	<p>-- V L1 V</p>	<p>105 B 105 B 105 B</p>
<p>Citroën Jumper / Relay KIT = towbar inc. electrical kit 13 pins van / minibus For vehicles with long superstructure L4/XL please order separately a set distance tubes to strengthen the framework. Some vehicles 03/08- do not have chassis bores. In this case it is necessary to bore them subsequent. For the mounting time will last 60 min. longer.</p>		<p>306 271 900 113</p>	<p>2476</p>	<p>60</p>	<p>34</p>	<p>16,9 150 3000</p>	<p>electrical kit 13 pins in the kit: 306 510 300 113</p>	<p>S FRE --</p>	<p>E D1</p>	<p>L1 V</p>	<p>105 B</p>















Citroën

<p>Citroën Jumper / Relay KIT = towbar inc. electrical kit 13 pins van / minibus For vehicles with long superstructure L4/XL please order separately a set distance tubes to strengthen the framework. Some vehicles 03/08- do not have chassis bores. In this case it is necessary to bore them subsequent. For the mounting time will last 60 min. longer.</p>	02/11-		306 272 900 113	2476	60	34	16,9	150	3000	electrical kit 13 pins in the kit: 306 271 300 113	S FRE --	E D1	L1	V	105	B
<p>Citroën Jumper / Relay flatbed inc. towball For vehicles with long superstructure L4/XL please order separately a set distance tubes to strengthen the framework. SIARR</p>	06/06-		306 357 600 001	0067	60	21	15,84	150	3000	S FRE -- S FRE --	-- D	-- V	-- V	90	90	L L
<p>Citroën Jumper / Relay flatbed inc. towball 329059600001 For vehicles with long superstructure L4/XL please order separately a set distance tubes to strengthen the framework.</p>	06/06-		306 318 600 001	2390	60	30,5	15,9	150	3000	S FRE -- S FRE --	-- D	-- V	-- V	90	90	L L
<p>Citroën Jumper / Relay KIT = towbar inc. electrical kit 13 pins flatbed inc. towball 329059600001 For vehicles with long superstructure L4/XL please order separately a set distance tubes to strengthen the framework.</p>	06/06-		306 318 900 113	2390	60	32,5	15,9	150	3000	electrical kit 13 pins in the kit: 306 531 300 113	S FRE --	-- D	-- V	90	90	L
<p>Citroën Jumper / Relay flatbed combined universal HGV towbar for towballs and coupling bolt inc. towball 329059600001 For vehicles with long superstructure L4/XL please order separately a set distance tubes to strengthen the framework, order no. 906270650003. Please order separately coupling bolt 342090600001</p>	06/06-		306 359 600 001	2997	90	40	12,5	150	2000	S FRE -- S FRE --	-- D	-- V	-- V	90	90	L L
<p>Citroën Jumper / Relay Motor homes no towbar in our sales program</p>	06/06-									306 531 300 183	S FRE --	-- D	L1	V	120	B









Citroën Jumpy / Dispatch		09/94-01/07	315 072 600 001	0010	60		15,5	10,9	100	2000	-07/97	300 060 300 107	--	C2	--	--	--	H	45	B	
												-07/97	300 060 300 113	--	C2	--	D1	L1	H	45	B
												08/97-	306 155 300 107	S	C2	--	--	--	H	45	L
												08/97-	306 155 300 113	S	C2	--	D	--	H	45	L
													304 400 300 107	S	CAN C1	E	--	--	V		B
Citroën Jumpy / Dispatch		01/07-	306 331 600 001	2411	75		22,5	12,2	122	2200		304 400 300 113	S	CAN C1	E	D	L1	V		B	
Citroën Jumpy / Dispatch KIT = towbar inc. electrical kit 13 pins		01/07-	306 331 900 113	2411	75		22,5	12,2	122	2200		electrical kit 13 pins in the kit: 304 400 300 113	S	CAN C1	E	D	L1	V		B	
Citroën Jumpy / Dispatch discontinued model		01/07-	306 332 600 001	2486	75		22,5	12,2	122	2200		304 400 300 107	S	CAN C1	E	--	--	V		B	
Citroën Jumpy / Dispatch		01/07-	306 333 600 001	2487	75		22,5	12,2	122	2200		304 400 300 107	S	CAN C1	E	--	--	V		B	
Citroën Jumpy / Dispatch KIT = towbar inc. electrical kit 13 pins		01/07-	306 333 900 113	2486	75		24,5	12,2	122	2200		electrical kit 13 pins in the kit: 304 400 300 113	S	CAN C1	E	D	L1	V		B	
Citroën Nemo exc. vehicles with gas drive		02/08-	306 349 600 001	2568	150		16,5	7,5	75	1300		306 580 300 107	S	FRE --	E	--	--	V	120	B	
Citroën Nemo KIT = towbar inc. electrical kit 13 pins exc. vehicles with gas drive		02/08-	306 349 900 113	2568	150		18,5	7,5	75	1300		electrical kit 13 pins in the kit: 306 580 300 113	S	FRE --	E	D1	L1	V	120	B	
Citroën Nemo exc. vehicles with gas drive		02/08-	306 351 600 001	2568	150		17	7,5	75	1300		306 580 300 107	S	FRE --	E	--	--	V	120	B	
Citroën Nemo exc. vehicles with gas drive		02/08-	306 350 600 001	2569	150		17	7,5	75	1300		306 580 300 113	S	FRE --	E	D1	L1	V	120	B	
Citroën Nemo KIT = towbar inc. electrical kit 13 pins exc. vehicles with gas drive		02/08-	306 350 900 113	2569	150		19	7,5	75	1300		electrical kit 13 pins in the kit: 306 580 300 113	S	FRE --	E	D1	L1	V	120	B	












Citroën






Citroën Xsara Picasso inc. facelift from 04/2004		09/99-	1209	90		16	7,5	90	1300		304 064 300 107	S	FRE --	E1 --	--	H	45	B
			304 069 600 001									304 064 300 113	S	FRE --	E1 D1	L1	H	45
Citroën Xsara Picasso inc. facelift from 04/2004		09/99-	2239	90		16	7,5	90	1300		304 064 300 107	S	FRE --	E1 --	--	H	45	B
			304 093 600 001									304 064 300 113	S	FRE --	E1 D1	L1	H	45
Citroën Xsara Picasso		09/99- 03/04	1063	120		17,5	7,5	90	1300		304 064 300 107	S	FRE --	E1 --	--	H	45	B
			304 068 600 001									304 064 300 113	S	FRE --	E1 D1	L1	H	45
Citroën Xsara Picasso		04/04-	1634	120		18	7,5	90	1300		304 064 300 107	S	FRE --	E1 --	--	H	45	B
			304 079 600 001									304 064 300 113	S	FRE --	E1 D1	L1	H	45

Dacia Dokker X67 SIARR	11/12-		316 333 600 001				7,3	75	1200	316 333 300 107 316 333 300 113	S S									
Dacia Dokker KIT = towbar inc. electrical kit 13 pins X67 SIARR	11/12-		316 333 900 113				7,3	75	1200	electrical kit 13 pins in the kit: 316 333 300 113	S									
Dacia Dokker X67 SIARR	11/12-		316 351 600 001				7,3	75	1200	316 333 300 107 316 333 300 113	S S									
Dacia Dokker X67 SIARR	11/12-		316 334 600 001				7,3	75	1200	316 333 300 107 316 333 300 113	S S									
Dacia Dokker KIT = towbar inc. electrical kit 13 pins X67 SIARR	11/12-		316 334 900 113				7,3	75	1200	electrical kit 13 pins in the kit: 316 333 300 113	S									
Dacia Duster, SUV 4x2 + 4x4 SIARR	03/10-		316 314 600 001	0897	120		8,32	75	1500	316 315 300 107 316 315 300 113 316 315 300 157	S S S	FRE -- FRE -- S --	-- -- --	-- D1 --	H H V	45 45 45	L L L			
Dacia Duster, SUV KIT = towbar inc. electrical kit 13 pins 4x2 + 4x4 SIARR	03/10-		316 314 900 113	0897	120		8,32	75	1500	electrical kit 13 pins in the kit: 316 315 300 113	S	FRE --	--	D1	L1	H	45	L		
Dacia Duster, SUV 4x2 + 4x4 SIARR	03/10-		316 315 600 001	0898	120		8,32	75	1500	316 315 300 107 316 315 300 113 316 315 300 157	S S S	FRE -- FRE -- S --	-- -- --	-- D1 --	H H V	45 45 45	L L L			
Dacia Duster, SUV KIT = towbar inc. electrical kit 13 pins 4x2 + 4x4 SIARR	03/10-		316 315 900 113	0898	120		8,32	75	1500	electrical kit 13 pins in the kit: 316 315 300 113	S	FRE --	--	D1	L1	H	45	L		
Dacia Lodgy, J 92 5 seats SIARR	06/12-		316 321 600 001		45		8,08	75	1400	316 321 300 113	S	A --	--	E1	D1	--	V	90	B	

















Dacia











Dacia Lodgy, J 92 KIT = towbar inc. electrical kit 13 pins 5 seats SIARR	06/12-		316 321 900 113	45	21	8,08	75	1400	electrical kit 13 pins in the kit: 316 321 300 113	S	A	--	E1	D1	--	V	90	B
Dacia Lodgy, J 92 7 seats S.I.A.R.R. SIARR	06/12-		316 345 600 001	45	19	8,08	75	1400	316 321 300 113	S	A	--	E1	D1	--	V	90	B
Dacia Lodgy, J 92 KIT = towbar inc. electrical kit 13 pins 7 seats S.I.A.R.R. SIARR	06/12-		316 345 900 113	45	21	8,08	75	1400	electrical kit 13 pins in the kit: 316 321 300 113	S	A	--	E1	D1	--	V	90	B
Dacia Lodgy, J 92 5/7 seats SIARR	06/12-		316 324 600 001	45	19,5	8,08	75	1400	316 321 300 113	S	A	--	E1	D1	--	V	90	B
Dacia Lodgy, J 92 KIT = towbar inc. electrical kit 13 pins 5/7 seats SIARR	06/12-		316 324 900 113	45	21,5	8,08	75	1400	electrical kit 13 pins in the kit: 316 321 300 113	S	A	--	E1	D1	--	V	90	B
Dacia Logan Estate exc. vehicles with gas drive SIARR	01/07-		316 259 600 001	60	22,6	7,73	75	1300	-12/07 300 072 300 107 -12/07 300 072 300 113 01/08- 316 259 300 113	--	FRE	--	E1	--	--	V	B	
Dacia Logan Estate KIT = towbar inc. electrical kit 13 pins exc. vehicles with gas drive SIARR	01/08-		316 259 900 113	60	24,6	7,73	75	1300	electrical kit 13 pins in the kit: 316 259 300 113	S	C2	--	--	D1	L1	V	45	L
Dacia Logan Estate exc. vehicles with gas drive SIARR	01/07-		316 307 600 001	60	23	7,73	75	1300	-12/07 300 072 300 107 -12/07 300 072 300 113 01/08- 316 259 300 113	--	FRE	--	E1	--	--	V	B	
										--	FRE	--	E1	D1	L1	V	B	
										S	C2	--	--	D1	L1	V	45	L

Dacia Logan Pick-up SIARR	03/09-		316 307 600 001	0154	60	23	7,73	75	1300		300 052 300 107 300 052 300 113	-- --	FRE FRE	-- --	D1	-- --	V V	B B		
Dacia Logan Saloon Phase I + II SIARR	05-		316 285 600 001	0096	120	21	6,41	75	1100		300 072 300 107 300 072 300 113	-- --	FRE FRE	E1 E1	-- D1	-- L1	V V	B B		
Dacia Logan Symbol Saloon L52 SIARR	01/13-		316 331 600 001				6,47	75	1100											
Dacia Logan Symbol Saloon L52 SIARR	01/13-		316 332 600 001				6,47	75	1100											
Dacia Logan Van Express exc. vehicles with gas drive SIARR	03/09-		316 259 600 001	0049	60	22,6	7,73	75	1300		316 259 300 113	S	C2	--	--	D1	L1	V	45	L
Dacia Logan Van Express KIT = towbar inc. electrical kit 13 pins exc. vehicles with gas drive SIARR	03/09-		316 259 900 113	0049	60	24,6	7,73	75	1300		electrical kit 13 pins in the kit: 316 259 300 113	S	C2	--	--	D1	L1	V	45	L
Dacia Logan Van Express SIARR	03/09-		316 307 600 001	0154	60	23	7,73	75	1300		316 259 300 113	S	C2	--	--	D1	L1	V	45	L
Dacia Sandero inc. Stepway, exc. GPL SIARR	06/08- 01/13		316 286 600 001	0127	60	15,5	7,3	75	1355		316 442 300 107 316 442 300 113	S	FRE	--	--	--	H	45	L	
Dacia Sandero KIT = towbar inc. electrical kit 13 pins inc. Stepway, exc. GPL SIARR	06/08- 01/13		316 286 900 113	0127	60	17,5	7,3	75	1355		electrical kit 13 pins in the kit: 316 442 300 113	S	FRE	--	--	D1	L1	H	45	L
Dacia Sandero inc. Stepway, exc. GPL SIARR	06/08- 01/13		316 287 600 001	0128	60	16,5	7,3	75	1355		316 442 300 107 316 442 300 113 316 442 300 157	S	FRE	--	--	--	H	45	L	
Dacia Sandero KIT = towbar inc. electrical kit 13 pins inc. Stepway, exc. GPL SIARR	06/08- 01/13		316 287 900 113	0128	60	18,5	7,3	75	1355		electrical kit 13 pins in the kit: 316 442 300 113	S	FRE	--	--	D1	L1	H	45	L











Daihatsu Charade	05/11-		335 350 600 001	2342	60	17	6,8	75	1200		335 411 300 107 335 411 300 113	S FRE -- S FRE --	-- -- D1	-- -- L1	V V	120 120	B B
Daihatsu Charade replaced by: 335383600001 discontinued model	05/11-		335 327 600 001	2164	60	18	6,8	75	1200		335 411 300 107 335 411 300 113	S FRE -- S FRE --	-- -- D1	-- -- L1	V V	120 120	B B
Daihatsu Charade	05/11-		335 383 600 001	3434	75	✂ 18,7	6,8	50	1200		335 383 300 107 335 383 300 113	S FRE -- S FRE --	E1 -- E1	-- -- D1	V V	120 120	
Daihatsu Charade KIT = towbar inc. electrical kit 13 pins	05/11-		335 383 900 113	3434	75	✂ 20,7	6,8	50	1200		electrical kit 13 pins in the kit: 335 383 300 113	S FRE --	E1 --	L1	V	120	
Daihatsu Terios	06/06-		342 107 600 001	2366	90	35	7,6	55	1350		300 072 300 107 300 072 300 113	-- FRE -- -- FRE --	E1 -- E1	-- -- D1	V V		B B






Dodge

Dodge Avenger Monoflex	01/07-		3678	150		23	8,75	85	1500				300 210 300 107 300 210 300 113	--	A --	E1 --	--	V --	90	B
Dodge Avenger Monoflex	01/07-		3678	150		23	8,75	85	1500				300 210 300 107 300 210 300 113	--	A --	E1 --	--	V --	90	B
Dodge Caliber Monoflex	06-		3376	60		18	8,32	75	1400				300 210 300 107 300 210 300 113	--	A --	E1 --	--	V --	90	B
Dodge Caliber Monoflex	06-		3376	60		18	8,32	75	1400				300 210 300 107 300 210 300 113	--	A --	E1 --	--	V --	90	B
Dodge Journey, JC 49	08-		2635	75		13,3	9,6	80	1600				300 210 300 107 300 210 300 113	--	A --	E1 --	--	V --	90	B
Dodge Journey, JC 49	08-		2645	75		15,8	9,6	80	1600				300 210 300 107 300 210 300 113	--	A --	E1 --	--	V --	90	B
Dodge Magnum Monoflex	01/07-		3439	60		21	11,04	80	2000				300 210 300 107 300 210 300 113	--	A --	E1 --	--	V --	90	B
Dodge Magnum Monoflex	01/07-		4151	60		21	11,04	80	2000				300 210 300 107 300 210 300 113	--	A --	E1 --	--	V --	90	B
Dodge Nitro exc. vehicles with 20" spare wheel Monoflex	07-		3590	45		35	15,26	140	3500				300 210 300 107 300 210 300 113	--	A --	E1 --	--	V --	90	B
Dodge Nitro fits SXT with 20" spare wheel but not SRT Monoflex	03/08-		3847	90		30	15,26	140	3500				300 210 300 107 300 210 300 113	--	A --	E1 --	--	V --	90	B



Fiat 500 inc. convertible exc. Abarth - 135 HP	07/07-		306 311 600 001	2416	90	✂	14	5,1	60	800	306 560 300 113	S FRE --	E	D1	--	V	120	L
Fiat 500 L inc. Trekking	10/12-		306 401 600 001	3496	60	✂	18	7,5	90	1200	306 397 300 107 306 397 300 113	S FRE -- S FRE --	E E	D1 D1	-- L1	V V	120 120	
Fiat 500 L KIT = towbar inc. electrical kit 13 pins inc. Trekking	10/12-		306 401 900 113	3496	60	✂	20	7,5	90	1200	electrical kit 13 pins in the kit: 306 397 300 113	S FRE --	E	D1	L1	V	120	
Fiat 500 L inc. Trekking	10/12-		306 400 600 001	3497	60	✂	21	7,5	90	1200	306 397 300 107 306 397 300 113	S FRE -- S FRE --	E E	-- D1	-- L1	V V	120 120	
Fiat 500 L KIT = towbar inc. electrical kit 13 pins inc. Trekking	10/12-		306 400 900 113	3497	60	✂	23	7,5	90	1200	electrical kit 13 pins in the kit: 306 397 300 113	S FRE --	E	D1	L1	V	120	
Fiat Bravo Monoflex	04/07-		306 366 600 001	3591	60	✂	18	7,9	60	1350	306 550 300 107 306 550 300 113	S FRE -- S FRE --	E E	-- D1	-- L1	V V	105 105	L L
Fiat Bravo	04/07-		306 286 600 001	2485	60	✂	21	7,9	60	1350	306 550 300 107 306 550 300 113	S FRE -- S FRE --	E E	-- D1	-- L1	V V	105 105	L L
Fiat Bravo KIT = towbar inc. electrical kit 13 pins	04/07-		306 286 900 113	2485	60	✂	23	7,9	60	1350	electrical kit 13 pins in the kit: 306 550 300 113	S FRE --	E	D1	L1	V	105	L
Fiat Croma	06/05-		306 265 600 001	1962	120	✂	24	9,5	100	1700	306 265 300 107 306 265 300 113	S FRE -- S FRE --	E E	-- D1	-- L1	V V	90 90	B B
Fiat Doblo inc. Doblo Cargo	11/00- 02/10		306 278 600 001	0847	120	✂	20	8,4	90	1300	discontinued model -09/05 306 215 300 107 -09/05 306 215 300 113 09/05- 306 221 300 107 09/05- 306 221 300 113	S FRE -- S FRE -- S FRE -- S FRE --	E E E E	-- D1 -- D1	-- L1 -- L1	V V V V	90 90 105 105	L L L L




Fiat

Fiat Doblo KIT = towbar inc. electrical kit 13 pins inc. Doblo Cargo	09/05- 02/10		306 278 900 113	0847	120	✂	22	8,4	90	1300	electrical kit 13 pins in the kit: 306 221 300 113	S FRE --	E	D1	L1	V	105	L
Fiat Doblo inc. Doblo Cargo	11/00- 02/10		306 279 600 001	0745	120	✂	22	8,4	90	1300	discontinued model -09/05 306 215 300 107 -09/05 306 215 300 113 09/05- 306 221 300 107 09/05- 306 221 300 113	S FRE -- S FRE -- S FRE -- S FRE -- S FRE --	E	--	V	90	L	
Fiat Doblo KIT = towbar inc. electrical kit 13 pins inc. Doblo Cargo	09/05- 02/10		306 279 900 113	0745	120	✂	24	8,4	90	1300	electrical kit 13 pins in the kit: 306 221 300 113	S FRE --	E	D1	L1	V	105	L
Fiat Doblo + Doblo Cargo exc. vehicles with gas drive (CNG)	02/10-		306 368 600 001	3048	60	✂	23	9,2	100	1500	306 605 300 107 306 605 300 113	S FRE -- S FRE --	E	--	V	90	B	
Fiat Doblo + Doblo Cargo KIT = towbar inc. electrical kit 13 pins exc. vehicles with gas drive (CNG)	02/10-		306 368 900 113	3048	60	✂	25	9,2	100	1500	electrical kit 13 pins in the kit: 306 605 300 113	S FRE --	E	D1	L1	V	90	B
Fiat Doblo + Doblo Cargo exc. vehicles with gas drive (CNG)	02/10-		306 370 600 001	3049	60	✂	25	9,2	100	1500	306 605 300 107 306 605 300 113	S FRE -- S FRE --	E	--	V	90	B	
Fiat Doblo + Doblo Cargo for vehicles with gas drive (CNG)	02/10-		306 382 600 001	3305	60	✂	25	7	75	1000	306 605 300 107 306 605 300 113	S FRE -- S FRE --	E	--	V	90	B	
Fiat Doblo + Doblo Cargo KIT = towbar inc. electrical kit 13 pins for vehicles with gas drive (CNG)	02/10-		306 382 900 113	3305	60	✂	27	7	75	1000	electrical kit 13 pins in the kit: 306 605 300 113	S FRE --	E	D1	L1	V	90	B
Fiat Doblo + Doblo Cargo exc. vehicles with gas drive (CNG)	02/10-		306 369 600 001	3050	60	✂	25	9,2	100	1500	306 605 300 107 306 605 300 113	S FRE -- S FRE --	E	--	V	90	B	
Fiat Doblo + Doblo Cargo KIT = towbar inc. electrical kit 13 pins exc. vehicles with gas drive (CNG)	02/10-		306 369 900 113	3050	60	✂	27	9,2	100	1500	electrical kit 13 pins in the kit: 306 605 300 113	S FRE --	E	D1	L1	V	90	B





Fiat Doblo + Doblo Cargo for vehicles with gas drive (CNG)	02/10-		306 381 600 001	3304	60	✂	25	7	75	1000		306 605 300 107 306 605 300 113	S FRE -- S FRE --	E -- E D1	-- L1	V V	90 90	B B
Fiat Doblo + Doblo Cargo KIT = towbar inc. electrical kit 13 pins for vehicles with gas drive (CNG)	02/10-		306 381 900 113	3304	60	✂	27	7	75	1000		electrical kit 13 pins in the kit. 306 605 300 113	S FRE --	E D1	L1	V	90	B
Fiat Doblo Cargo WorkUP Pick up	08/11-		306 393 600 001	3428	90		31	9,3	100	1500		306 392 300 113	S FRE --	--	D1	V	75	B
Fiat Ducato van/minibus inc. 4 WD exc. vehicles with gas bottle instead of the spare wheel 4 WD: bolt kit (order no. 906216650002) must be ordered separately, for vehicles until 10/95: body reinforcement kit minibus/van 306142650002 must be ordered separately. Towball for vehicles with standard chassis: 329089600001(not included), Towball for vehicles with 16" wheels and reinforced springs: 329062600001 (not included). When mounting swap system to vehicles with standard chassis we recommend towball 329059600001 (not included) exc. vehicles with gas bottles under the tail floor.	04/94- 06/06		306 216 600 001	0827	60		32,7	13,3	150	2500		discontinued model -03/02 306 142 300 107 -03/02 306 142 300 113 03/02- 306 216 300 107 03/02- 306 216 300 113	S C2 -- S C2 -- S FRE -- S FRE --	-- -- E -- E D1	-- L1 -- L1	H H V V	45 45 75 75	L L B B
Fiat Ducato flatbed inc. 4 WD exc. vehicles with gas bottle instead of the spare wheel 4 WD: bolt kit (order no. 906216650002) must be ordered separately Towball for vehicles with standard chassis: 329089600001 (not included), Towball for vehicles with 16" wheels and reinforced springs: 329062600001 (not included). When mounting swap system to vehicles with standard chassis we recommend towball 329059600001 (not included)	04/94- 06/06		306 216 600 001	0827	60		32,7	13,3	150	2500		03/02- 300 052 300 107 03/02- 300 052 300 113 -03/02 300 060 300 113 -03/02 306 150 300 107	-- FRE -- -- FRE -- -- C2 -- S C2 --	-- -- -- --	-- -- D1 --	V V H H	B B 45 45	B B B L








Fiat

Fiat Ducato van / minibus / flatbed inc. towball S.I.A.R.R. SIARR	08/99- 06/06		306 329 600 001	1078	29	12,5 130 2000	flatbed-03/02- 300 052 300 107 flatbed-03/02- 300 052 300 113 flatbed-03/02 300 060 300 113 discontinued model van/minibus -03/02 306 142 300 107 van/minibus-03/02 306 142 300 113 flatbed-03/02 306 150 300 107 van/minibus03/02- 306 216 300 107 van/minibus03/02- 306 216 300 113	-- FRE -- -- FRE -- -- C2 -- S C2 -- S C2 -- S C2 -- S C2 -- S FRE -- S FRE --	-- -- -- -- -- -- -- -- E -- E --	-- D1 D1 -- D1 -- -- D1 D1	V V H 45 H 45 H 45 H 45 V 75 V 75	B B B L L L B B
Fiat Ducato van / minibus inc. towball For vehicles with long superstructure L4/XL please order separately a set distance tubes to strengthen the framework. Some vehicles 03/08- do not have chassis bores. In this case it is necessary to bore them subsequent. For the mounting time will last 60 min. longer. SIARR	06/06-		306 357 600 001	0067	21 15,84 150 3000		02/11- from chassis no. 1948841 306 271 300 107 02/11- from chassis no. 1948841 306 271 300 113 -02/11 chassis no. 1948840 306 510 300 107 -02/11 chassis no. 1948840 306 510 300 113	S FRE -- S FRE -- S FRE -- S FRE -- S FRE --	E -- E -- E D1 E -- E D1	V V V 105 V 105 V 105	B B B B B B	




















<p>Fiat Ducato van / minibus inc. towball 329059600001 For vehicles with long superstructure L4/XL please order separately a set distance tubes to strengthen the framework. Some vehicles 03/08- do not have chassis bores. In this case it is necessary to bore them subsequent. For the mounting time will last 60 min. longer.</p>	<p>06/06-</p> 	<p>306 330 600 001</p>	<p>2215</p>	<p>60</p>	<p>32</p>	<p>16,9 150 3000</p>	<p>02/11- from chassis no. 1948841 306 271 300 107 02/11- from chassis no. 1948841 306 271 300 113 -02/11 chassis no. 1948840 306 510 300 107 -02/11 chassis no. 1948840 306 510 300 113</p>	<p>S FRE --</p>	<p>E --</p>	<p>--</p>	<p>V 105</p>	<p>B</p>
<p>Fiat Ducato KIT = towbar inc. electrical kit 13 pins van / minibus inc. towball 329059600001 For vehicles with long superstructure L4/XL please order separately a set distance tubes to strengthen the framework. Some vehicles 03/08- do not have chassis bores. In this case it is necessary to bore them subsequent. For the mounting time will last 60 min. longer.</p>	<p>06/06- 02/11</p> 	<p>306 330 900 113</p>	<p>2215</p>	<p>60</p>	<p>34</p>	<p>16,9 150 3000</p>	<p>electrical kit 13 pins in the kit: 306 510 300 113</p>	<p>S FRE --</p>	<p>E D1</p>	<p>L1 V</p>	<p>105</p>	<p>B</p>
<p>Fiat Ducato KIT = towbar inc. electrical kit 13 pins van / minibus inc. towball 329059600001 For vehicles with long superstructure L4/XL please order separately a set distance tubes to strengthen the framework. Some vehicles 03/08- do not have chassis bores. In this case it is necessary to bore them subsequent. For the mounting time will last 60 min. longer. SIARR</p>	<p>02/11-</p> 	<p>306 357 900 113</p>	<p>2215</p>	<p>60</p>	<p>34</p>	<p>16,9 150 3000</p>	<p>electrical kit 13 pins in the kit: 306 271 300 113</p>	<p>S FRE --</p>	<p>E D1</p>	<p>L1 V</p>	<p>105</p>	<p>B</p>







Fiat

<p>Fiat Ducato van / minibus For vehicles with long superstructure L4/XL please order separately a set distance tubes to strengthen the framework. Some vehicles 03/08- do not have chassis bores. In this case it is necessary to bore them subsequent. For the mounting time will last 60 min. longer.</p>	06/06-		<p>306 271 600 001 2476 60</p>	<p>32</p>	<p>16,9 150 3000</p>	<p>02/11- from chassis no. 1948841 306 271 300 107 02/11- from chassis no. 1948841 306 271 300 113 -02/11 chassis no. 1948840 306 510 300 107 -02/11 chassis no. 1948840 306 510 300 113</p>	<p>S FRE -- E -- V 105 B</p>	<p>S FRE -- E D1 L1 V 105 B</p>	<p>S FRE -- E -- V 105 B</p>
<p>Fiat Ducato KIT = towbar inc. electrical kit 13 pins van / minibus For vehicles with long superstructure L4/XL please order separately a set distance tubes to strengthen the framework. Some vehicles 03/08- do not have chassis bores. In this case it is necessary to bore them subsequent. For the mounting time will last 60 min. longer.</p>	06/06- 02/11		<p>306 271 900 113 2476 60</p>	<p>34</p>	<p>16,9 150 3000</p>	<p>electrical kit 13 pins in the kit: 306 510 300 113</p>	<p>S FRE -- E D1 L1 V 105 B</p>	<p>S FRE -- E D1 L1 V 105 B</p>	<p>S FRE -- E -- V 105 B</p>
<p>Fiat Ducato KIT = towbar inc. electrical kit 13 pins van / minibus For vehicles with long superstructure L4/XL please order separately a set distance tubes to strengthen the framework. Some vehicles 03/08- do not have chassis bores. In this case it is necessary to bore them subsequent. For the mounting time will last 60 min. longer.</p>	02/11-		<p>306 272 900 113 2476 60</p>	<p>34</p>	<p>16,9 150 3000</p>	<p>electrical kit 13 pins in the kit: 306 271 300 113</p>	<p>S FRE -- E D1 L1 V 105 B</p>	<p>S FRE -- E D1 L1 V 105 B</p>	<p>S FRE -- E -- V 90 L</p>
<p>Fiat Ducato flatbed inc. towball For vehicles with long superstructure L4/XL please order separately a set distance tubes to strengthen the framework. SIARR</p>	06/06-		<p>306 357 600 001 0067 60</p>	<p>21 15,84 150 3000</p>	<p>S FRE -- E D1 L1 V 105 B</p>	<p>S FRE -- E D1 L1 V 105 B</p>	<p>S FRE -- E -- V 90 L</p>	<p>S FRE -- E -- V 90 L</p>	<p>S FRE -- E -- V 90 L</p>





















Fiat Ducato flatbed inc. towball 329059600001 For vehicles with long superstructure L4/XL please order separately a set distance tubes to strengthen the framework.	06/06-		306 318 600 001	2390	60	30,5	15,9	150	3000		306 531 300 107 306 531 300 113	S FRE -- S FRE --	-- --	-- D	V V	90 90	L L	
Fiat Ducato KIT = towbar inc. electrical kit 13 pins flatbed inc. towball 329059600001 For vehicles with long superstructure L4/XL please order separately a set distance tubes to strengthen the framework.	06/06-		306 318 900 113	2390	60	32,5	15,9	150	3000		electrical kit 13 pins in the kit: 306 531 300 113	S FRE --	--	D	V	90	L	
Fiat Ducato flatbed combined universal HGV towbar for towballs and coupling bolt inc. towball 329059600001 For vehicles with long superstructure L4/XL please order separately a set distance tubes to strengthen the framework, order no. 9062706500003. Please order separately coupling bolt 342090600001 After mounting the towbar license plate must be dislocated.	06/06-		306 359 600 001	2997	90	40	12,5	150	2000		306 531 300 107 306 531 300 113	S FRE -- S FRE --	-- --	D D	V V	90 90	L L	
Fiat Ducato Motor homes no towbar in our sales program	06/06-										306 531 300 183	S FRE --	--	D	L1	V	120	B
Fiat Fiorino Van exc. pick-up discontinued model	01/94- 01/08		306 156 600 001	0085	150	15,6	6,9	75	1200		300 060 300 113 306 150 300 107	-- C2 -- S C2 --	-- --	D1 --	H H	45 45	B L	
Fiat Fiorino Van / Qubo exc. vehicles with gas drive	02/08-		306 349 600 001	2568	150	16,5	7,5	75	1300		306 580 300 107 306 580 300 113	S FRE -- S FRE --	E E	-- D1	V L1	120 120	B B	
Fiat Fiorino Van / Qubo KIT = towbar inc. electrical kit 13 pins exc. vehicles with gas drive	02/08-		306 349 900 113	2568	150	18,5	7,5	75	1300		electrical kit 13 pins in the kit: 306 580 300 113	S FRE --	E	D1	L1	V	120	B
Fiat Fiorino Van / Qubo exc. vehicles with gas drive	02/08-		306 351 600 001	2568	150	17	7,5	75	1300		306 580 300 107 306 580 300 113	S FRE -- S FRE --	E E	-- D1	V L1	120 120	B B	









Fiat











Fiat Fiorino Van / Qubo exc. vehicles with gas drive	02/08-		306 350 600 001	2569	150		17	7,5	75	1300		306 580 300 107 306 580 300 113	S FRE -- S FRE --	E -- E D1	-- L1	V V	120 120	B B
Fiat Fiorino Van / Qubo KIT = towbar inc. electrical kit 13 pins exc. vehicles with gas drive	02/08-		306 350 900 113	2569	150		18	7,5	75	1300		electrical kit 13 pins in the kit: 306 580 300 113	S FRE --	E D1	L1	V	120	B
Fiat Freemont	09/11-		342 135 600 001	2635	75		13,3	9,6	80	1600		300 078 300 113	-- FRE --	E1 D1	L1	V		B
Fiat Freemont	09/11-		342 136 600 001	2645	75		15,8	9,6	80	1600		300 078 300 113	-- FRE --	E1 D1	L1	V		B
Fiat Grande Punto	10/05- 10/09		306 375 600 001	3136	90		19	6,7	75	1100		306 252 300 107 306 252 300 113	S FRE -- S FRE --	E -- E D1	-- L1	V V	105 105	B B
Fiat Grande Punto	10/05- 10/09		306 374 600 001	3141	90		19	6,7	75	1100		306 252 300 107 306 252 300 113	S FRE -- S FRE --	E -- E D1	-- L1	V V	105 105	B B
Fiat Idea	01/04- 08		306 253 600 001	1659	180		18	6,8	80	1200		discontinued model: 306 240 300 107 discontinued model: 306 240 300 113	S FRE -- S FRE --	E -- E D1	-- L1	H H	45 45	B B
Fiat Idea SIARR discontinued model	01/04- 08		306 325 600 001	5577			19	6,8	60	1100		discontinued model: 306 240 300 107 discontinued model: 306 240 300 113	S FRE -- S FRE --	E -- E D1	-- L1	H H	45 45	B B
Fiat Idea	01/04- 08		306 353 600 001	2646	180		18	6,8	80	1200		discontinued model: 306 240 300 107 discontinued model: 306 240 300 113	S FRE -- S FRE --	E -- E D1	-- L1	H H	45 45	B B
Fiat Linea	06/07-		306 323 600 001	2410	120		22,5	6,9	70	1200		306 570 300 113	S FRE --	E D1	L1	V	120	B

Fiat Marea Weekend (estate) discontinued model	09/96-		306 217 600 001	0698	>150	28,2	9,3	70	1800	-11/99, chassis no. 2032671 300 060 300 107 -11/99, chassis no. 2032671 300 060 300 113	-- C2 -- -- C2 --	-- -- -- D1	-- -- L1 H	H	45	B
Fiat Multipla inc. vehicles with gas drive	11/98-		306 227 600 001	0648	>150	22,7	8,4	90	1500	-08/04 300 072 300 107 -08/04 300 072 300 113 09/04- 306 227 300 107 09/04- 306 227 300 113	-- FRE -- -- FRE -- S FRE -- S FRE --	E1 -- E1 D1 E -- E D1	-- -- L1 V -- -- L1 V	V		B
Fiat Multipla inc. vehicles with LPG discontinued model	11/98-		306 226 600 001	0449	>150	28,1	8,4	90	1500	-08/04 300 072 300 107 -08/04 300 072 300 113 09/04- 306 227 300 107 09/04- 306 227 300 113	-- FRE -- -- FRE -- S FRE -- S FRE --	E1 -- E1 D1 E -- E D1	-- -- L1 V -- -- L1 V	V		B
Fiat Panda front wheel drive inc. Panda Sporting Vehicles with gas drive are not permitted to tow by manufacturer.	09/03-		306 248 600 001	1615	180	17	6,9	75	1300	306 249 300 107 306 249 300 113	S FRE -- S FRE --	E -- E D1	-- -- -- --	V	90	B
Fiat Panda KIT = towbar inc. electrical kit 13 pins front wheel drive inc. Panda Sporting Vehicles with gas drive are not permitted to tow by manufacturer.	09/03-		306 248 900 113	1615	180	19	6,9	75	1300	electrical kit 13 pins in the kit: 306 249 300 113	S FRE --	E D1	-- --	V	90	B
Fiat Panda front wheel drive angular position of the towball inc. Panda Sporting Vehicles with gas drive are not permitted to tow by manufacturer.	09/03-		306 249 600 001	1249	180	19	6,9	75	1300	306 249 300 107 306 249 300 113	S FRE -- S FRE --	E -- E D1	-- -- -- --	V	90	B





Fiat













Fiat Panda KIT = towbar inc. electrical kit 13 pins front wheel drive angular position of the towball inc. Panda Sporting Vehicles with gas drive are not permitted to tow by manufacturer.	09/03-		306 249 900 113	1249	180		21	6,9	75	1300	electrical kit 13 pins in the kit: 306 249 300 113	S FRE --	E D1 --	V 90	B
Fiat Panda front wheel drive inc. vehicles with gas drive (LPG)	02/12-		306 385 600 001	3394	60		19	6,1	70	1000	306 394 300 107 306 394 300 113	S FRE -- S FRE --	E D1 -- E D1 --	V 105 V 105	
Fiat Panda KIT = towbar inc. electrical kit 13 pins front wheel drive inc. vehicles with gas drive (LPG)	02/12-		306 385 900 113	3394	60		21	6,1	70	1000	electrical kit 13 pins in the kit: 306 394 300 113	S FRE --	E D1 --	V 105	
Fiat Panda front wheel drive inc. vehicles with gas drive (LPG)	02/12-		306 394 600 001	3395	60		19,5	6,1	70	1000	306 394 300 107 306 394 300 113	S FRE -- S FRE --	E D1 -- E D1 --	V 105 V 105	
Fiat Panda KIT = towbar inc. electrical kit 13 pins front wheel drive inc. vehicles with gas drive (LPG)	02/12-		306 394 900 113	3395	60		21,5	6,1	70	1000	electrical kit 13 pins in the kit: 306 394 300 113	S FRE --	E D1 --	V 105	
Fiat Panda 4x4 Vehicles with gas drive are not permitted to tow by manufacturer.	09/04-		306 255 600 001	1738	90		13,1	6,9	75	1300	306 249 300 107 306 249 300 113	S FRE -- S FRE --	E D1 -- E D1 --	V 90 V 90	B B
Fiat Panda 4x4 Vehicles with gas drive are not permitted to tow by manufacturer.	09/04-		306 254 600 001	1654	90		15	6,9	75	1300	306 249 300 113	S FRE --	E D1 --	V 90	B
Fiat Panda 4x4 + 4x2 CNG	10/12-		306 388 600 001		60			5,8	60	900	306 394 300 107 306 394 300 113	S FRE -- S FRE --	E D1 -- E D1 --	V 105 V 105	
Fiat Panda 4x4 + 4x2 CNG	10/12-		306 389 600 001		60			5,8	60	900	306 394 300 107 306 394 300 113	S FRE -- S FRE --	E D1 -- E D1 --	V 105 V 105	
Fiat Panda Cross Vehicles with gas drive are not permitted to tow by manufacturer.	01/06-		306 255 600 001	1738	90		13,1	6,9	75	1300	306 254 300 113	S FRE --	E D1 --	V 90	B

Fiat Panda Cross Vehicles with gas drive are not permitted to tow by manufacturer.	01/06-		306 254 600 001	1654	90	✂	15	6,9	75	1300	306 254 300 113	S FRE --	E --	D1 --	V --	90	B
Fiat Punto inc. convertible discontinued model	11/93-09/99		306 164 600 001	0167	>150	✂	15,8	6,8	75	1200	300 060 300 113 306 150 300 107	-- C2 -- S C2 --	-- --	D1 --	L1 --	H 45 H 45	B L
Fiat Punto discontinued model	09/99-06/03		306 187 600 001	0684	>150	✂	16	7,2	75	1300	300 210 300 113	-- A --	E1 --	D1 --	L1 --	V 90	B
Fiat Punto inc. Sporting-HGT and Sound exc. vehicles with gas drive Punto Classic all years of construction discontinued model	06/03-09/05		306 250 600 001	1401	180	✂	18,8	7,1	75	1300	300 210 300 113	-- A --	E1 --	D1 --	L1 --	V 90	B
Fiat Punto EVO	10/09-		306 375 600 001	3136	90	✂	19	6,7	75	1100	discontinued model: -10/11 306 374 300 107 discontinued model: -10/11 306 374 300 113 306 375 300 107 306 375 300 113	S FRE -- S FRE -- S CAN -- S CAN --	E --	--	--	V 105 V 105 V 105 V 105	B B B B
Fiat Punto EVO KIT = towbar inc. electrical kit 13 pins	10/09-		306 375 900 113	3136	90	✂	21	6,7	75	1100	electrical kit 13 pins in the kit: 306 375 300 113	S CAN --	E --	D --	--	V 105	B
Fiat Punto EVO	10/09-		306 374 600 001	3141	90	✂	19	6,7	75	1100	discontinued model: -10/11 306 374 300 107 discontinued model: -10/11 306 374 300 113 306 375 300 107 306 375 300 113	S FRE -- S FRE -- S CAN -- S CAN --	E --	--	--	V 105 V 105 V 105 V 105	B B B B
Fiat Punto EVO KIT = towbar inc. electrical kit 13 pins	10/09-		306 374 900 113	3141	90	✂	21	6,7	75	1100	electrical kit 13 pins in the kit: 306 375 300 113	S CAN --	E --	D --	--	V 105	B















Fiat Seicento exc. vehicles with airconditioning discontinued model	98-		306 197 600 001	0415	>150	17,2	3,3	35	450		306 197 300 107	S	C2	--	--	--	H	45	L	
Fiat Stilo 3 doors Hatchback	10/01-		306 233 600 001	1102	120	22,4	8,1	85	1500		300 078 300 113	--	FRE	--	E1	D1	L1	V	B	
Fiat Stilo 3 doors Hatchback discontinued model	10/01-		306 231 600 001	0960	120	18	8,1	85	1500		300 078 300 113	--	FRE	--	E1	D1	L1	V	B	
Fiat Stilo 5 doors Hatchback	10/01-		306 233 600 001	1102	120	22,4	8,1	85	1500		300 078 300 113 discontinued model: 01/04-	--	FRE	--	E1	D1	L1	V	B	
Fiat Stilo 5 doors Hatchback discontinued model	10/01-		306 231 600 001	0960	120	18	8,1	85	1500		306 224 300 113	S	FRE	--	E	D1	L1	H	60	B
Fiat Stilo Multi Wagon	01/03-		306 242 600 001	1248	120	21,5	8,1	85	1500		300 078 300 113 discontinued model: 01/04-	--	FRE	--	E1	D1	L1	V	B	
Fiat Stilo Multi Wagon discontinued model	01/03-		306 241 600 001	1173	120	23	8,1	85	1500		306 238 300 107	S	FRE	--	E	--	--	H	75	L
Fiat Strada inc. vehicles from 2012-	06/89-		306 319 600 001	2376	>150	13	7,3	75	1300		306 204 300 107 306 204 300 113	S	FRE	--	--	--	V	120	B	
Fiat Ulysse	09/94- 08/02		315 072 600 001	0010	60	15,5	10,9	100	2000		300 060 300 107 300 060 300 113	--	C2	--	--	--	H	45	B	
Fiat Ulysse SIARR	09/02-		315 098 600 001	0986	75	19,8	10,8	100	1900		306 238 300 107 10/05- 304 400 300 107 10/05- 304 400 300 113 -09/05 315 097 300 107 -09/05 315 097 300 113	S	CAN	C1	E	--	--	V	B	
												S	CAN	C1	E	D	L1	V	B	
												S	FRE	--	E	--	H	45	B	
												S	FRE	--	E	D1	L1	H	45	B






















Fiat

Fiat Ulysse KIT = towbar inc. electrical kit 13 pins SIARR	10/05-		315 098 900 113	0986	75	✂ 21,8	10,8 100	10,8 100	1900	electrical kit 13 pins in the kit: 304 400 300 113	S CAN C1	E	D	L1	V	B
Fiat Ulysse discontinued model	09/02-		315 117 600 001	0991	75	✂ 23	10,8 100	10,8 100	1900	10/05- 304 400 300 107 10/05- 304 400 300 113 -09/05 315 097 300 107 -09/05 315 097 300 113	S CAN C1 S CAN C1 S CAN C1 S FRE -- S FRE -- S FRE --	E E E E E	-- D D -- D1	-- L1 L1 -- L1	V V V H H	B B B 45 45
Fiat Ulysse	09/02-		315 097 600 001	0989	75	✂ 22,2	10,8 100	10,8 100	1900	10/05- 304 400 300 107 10/05- 304 400 300 113 -09/05 315 097 300 107 -09/05 315 097 300 113	S CAN C1 S CAN C1 S CAN C1 S FRE -- S FRE --	E E E E E	-- D D -- D1	-- L1 L1 -- L1	V V V H H	B B B 45 45
Fiat Ulysse KIT = towbar inc. electrical kit 13 pins	10/05-		315 097 900 113	0989	75	✂ 24,2	10,8 100	10,8 100	1900	electrical kit 13 pins in the kit: 304 400 300 113	S CAN C1	E	D	L1	V	B



Ford B-Max	09/12-		307 397 600 001	3424	60		18,5	6,8	50	900	307 397 300 107 307 397 300 113	S S									
Ford B-Max KIT = towbar inc. electrical kit 13 pins	09/12-		307 397 900 113	3424	60		20,5	6,8	50	900	electrical kit 13 pins in the kit: 307 397 300 113	S									
Ford B-Max	09/12-		307 333 600 001	3425	60		19,5	6,8	50	900	307 397 300 107 307 397 300 113	S S									
Ford B-Max KIT = towbar inc. electrical kit 13 pins	09/12-		307 333 900 113	3425	60		21,5	6,8	50	900	electrical kit 13 pins in the kit: 307 397 300 113	S									
Ford C-Max	09/10-		307 402 600 001	3107	60		19	10	75	1800	307 442 300 107 307 442 300 113 06/12-: For vehicles without REC and/or preparation please order additionally: 307 442 300 183	S CAN S CAN	E	--	H	45	H	45	B	B	
Ford C-Max KIT = towbar inc. electrical kit 13 pins	09/10-		307 402 900 113	3107	60		21	10	75	1800	electrical kit 13 pins in the kit: 307 442 300 113 06/12-: For vehicles without REC and/or preparation please order additionally: 307 442 300 183	S CAN	E	D	L1	H	45	H	45	B	B
Ford C-Max	09/10-		307 441 600 001	3264	60		21	10	75	1800	307 442 300 107 307 442 300 113 06/12-: For vehicles without REC and/or preparation please order additionally: 307 442 300 183	S CAN S CAN	E	--	H	45	H	45	B	B	






Ford

Ford C-Max KIT = towbar inc. electrical kit 13 pins	09/10-		307 441 900 113	3264	60		23	10	75	1800		electrical kit 13 pins in the kit: 307 442 300 113 06/12-: For vehicles without REC and/or preparation please order additionally: 307 442 300 183	S	CAN	E	D	L1	H	45	B
Ford Fiesta exc. ST / 150 HP Please check if there is a towing capacity in the car documents.	04/02- 10/08		307 283 600 001	1411	75		13,7	6,3	75	1050		300 072 300 107 300 072 300 113 11/05- 307 120 300 107 11/05- 307 120 300 113	FRE -- FRE -- S FRE -- S FRE --	E1 -- E1 D1 E -- E D1	-- L1 -- --	V V V V				B B B B
Ford Fiesta KIT = towbar inc. electrical kit 13 pins exc. ST / 150 HP Please check if there is a towing capacity in the car documents.	11/05- 10/08		307 283 900 113	1411	75		15,7	6,3	75	1050		electrical kit 13 pins in the kit: 307 120 300 113	S	FRE --	E	D1	--	V	75	B
Ford Fiesta exc. ST / 150 HP fits Zetec, not Zetec S Please check if there is a towing capacity in the car documents.	04/02- 10/08		307 286 600 001	2111	75		17,5	6,3	75	1050		300 072 300 107 300 072 300 113 11/05- 307 120 300 107 11/05- 307 120 300 113	FRE -- FRE -- S FRE -- S FRE --	E1 -- E1 D1 E -- E D1	-- L1 -- --	V V V V				B B B B
Ford Fiesta exc. Titanium / Sport / Zetec S inc. Fiesta Van 2011-	10/08-		307 363 600 001	2848	90		14	6,5	50	1100		307 121 300 107 307 121 300 113 307 121 300 157	S	FRE -- FRE -- S --	E -- E D1 --	-- L1 --	H H H	45 45 45	B B L	
Ford Fiesta KIT = towbar inc. electrical kit 13 pins exc. Titanium / Sport / Zetec S inc. Fiesta Van 2011-	10/08-		307 363 900 113	2848	90		16	6,5	50	1100		electrical kit 13 pins in the kit: 307 121 300 113	S	FRE --	E	D1	L1	H	45	B
Ford Fiesta exc. Titanium / Sport / Zetec S inc. Fiesta Van 2011-	10/08-		307 452 600 001	2848	90		14	6,5	50	1800		307 121 300 107 307 121 300 113	S	FRE -- FRE --	E -- E D1	-- L1	H H	45 45	B B	









Ford Fiesta exc. Titanium / Sport / Zetec S inc. Fiesta Van 2011-	10/08-		307 330 600 001	2622	90		17	6,5	50	1100	307 121 300 107 307 121 300 113 307 121 300 157	S FRE -- S FRE -- S -- --	E -- -- E D1 -- -- --	-- -- L1 -- -- --	H -- -- H L1 -- H -- --	45 -- -- 45 L1 -- 45 -- --	B -- -- B L1 -- L -- --
Ford Fiesta KIT = towbar inc. electrical kit 13 pins exc. Titanium / Sport / Zetec S inc. Fiesta Van 2011-	10/08-		307 330 900 113	2622	90		19	6,5	50	1100	electrical kit 13 pins in the kit: 307 121 300 113	S FRE --	E D1 --	L1 --	H --	45 --	B --
Ford Fiesta Van exc. ST / 150 HP	07-		307 283 600 001	1411	75		13,7	6,3	75	1050	307 120 300 107 307 120 300 113	S FRE -- S FRE --	E -- -- E D1 --	-- -- D1 --	V -- -- V -- --	75 -- -- 75 -- --	B -- -- B -- --
Ford Fiesta Van KIT = towbar inc. electrical kit 13 pins exc. ST / 150 HP	07-		307 283 900 113	1411	75		15,7	6,3	75	1050	electrical kit 13 pins in the kit: 307 120 300 113	S FRE --	E D1 --	-- --	V --	75 --	B --
Ford Fiesta Van exc. ST / 150 HP	07-		307 286 600 001	2111	75		17,5	6,3	75	1050	307 120 300 107 307 120 300 113	S FRE -- S FRE --	E -- -- E D1 --	-- -- D1 --	V -- -- V -- --	75 -- -- 75 -- --	B -- -- B -- --
Ford Focus C-Max (van)	10/03- 11/10		307 264 600 001	1804	120		21	8,7	75	1590	307 264 300 107 307 264 300 113 307 264 300 157	S FRE -- S FRE -- S -- --	E -- -- E D1 -- -- --	-- -- D1 -- -- --	H -- -- H -- -- H -- --	45 -- -- 45 -- -- 45 -- --	B -- -- B -- -- L -- --
Ford Focus C-Max KIT = towbar inc. electrical kit 13 pins (van)	10/03- 11/10		307 438 900 113	1804	120		23	8,7	75	1590	electrical kit 13 pins in the kit: 307 264 300 113	S FRE --	E D1 --	-- --	H --	45 --	B --
Ford Focus C-Max (van) discontinued model	10/03- 11/10		307 348 600 001	2323			21,4	8,7	75	1590	307 264 300 107 307 264 300 113 307 264 300 157	S FRE -- S FRE -- S -- --	E -- -- E D1 -- -- --	-- -- D1 -- -- --	H -- -- H -- -- H -- --	45 -- -- 45 -- -- 45 -- --	B -- -- B -- -- L -- --
Ford Focus C-Max (van)	10/03- 11/10		343 038 600 001	1783	90		21,5	8,7	75	1590	307 264 300 107 307 264 300 113 307 264 300 157	S FRE -- S FRE -- S -- --	E -- -- E D1 -- -- --	-- -- D1 -- -- --	H -- -- H -- -- H -- --	45 -- -- 45 -- -- 45 -- --	B -- -- B -- -- L -- --
Ford Focus C-Max KIT = towbar inc. electrical kit 13 pins (van)	10/03- 11/10		307 407 900 113	1783			22,5	8,7	75	1590	electrical kit 13 pins in the kit: 307 264 300 113	S FRE --	E D1 --	-- --	H --	45 --	B --
Ford Focus Coupé-Convertible exc. MPS - 260HP fits CC-3 and CC-3D turbo models	04/07-		343 038 600 001	1783	90		21,5	8,7	75	1590	300 072 300 107 300 072 300 113	-- FRE -- -- FRE --	E1 -- -- E1 D1 --	-- -- L1 --	V -- -- V -- --		B -- -- B -- --





Ford

Ford Focus Estate For vehicles from April 2002 a new inner part of the bumper must be ordered from Ford dealer, no. 1 110 935.		01/99- 03/05	307 238 600 001	0728	90	20,4	7,4	90	1300	for vehicles without central plug connection	---	FRE	---	E1	---	V	B		
										300 072 300 107	---	FRE	---	E1	D1	V	B		
										for vehicles with central plug connection	---	FRE	---	E	---	V	60	B	
										307 234 300 107	S	FRE	---	E	---	V	60	B	
										for vehicles with central plug connection	S	FRE	---	E	D1	---	V	60	B
										307 234 300 113	S	FRE	---	E	---	H	15	B	
Ford Focus Estate For vehicles from April 2002 a new inner part of the bumper must be ordered from Ford dealer, no. 1 110 935.		01/99- 03/05	307 239 600 001	0733	90	20,4	7,4	90	1300	for vehicles without central plug connection	---	FRE	---	E1	---	V	B		
										300 072 300 107	---	FRE	---	E1	---	V	B		
										for vehicles without central plug connection	---	FRE	---	E1	D1	L1	V	B	
										300 072 300 113	S	FRE	---	E	---	V	60	B	
										for vehicles with central plug connection	S	FRE	---	E	D1	---	V	60	B
										307 234 300 113	S	FRE	---	E	---	H	15	B	





Ford Focus Estate For vehicles from April 2002 a new inner part of the bumper must be ordered from Ford dealer, no. 1 110 935. discontinued model		01/99-03/05		22	7,8 90 1300	307 269 600 001	0895	90	20,5	8,5 75 1500	307 240 300 107 for vehicles without central plug connection 307 072 300 107 for vehicles without central plug connection 300 072 300 113 for vehicles with central plug connection 307 234 300 107 for vehicles with central plug connection 307 234 300 113 for vehicles with additional kit for 307234300107 / 113 from 08/03 307 235 300 155	S S S S S	FRE -- FRE -- FRE -- FRE -- FRE --	E1 -- E1 D1 E -- E D1 E --	-- L1 -- -- --	V V V V H	B B B B B																																							
																		Ford Focus Estate exc. ST / 225 HP, inc. vehicles 01/08-		03/05-04/11	307 337 600 001	2140	20,5	8,5 75 1500	S S S	FRE -- FRE -- FRE --	E -- E D1 E --	-- -- --	H H H	L L L																										
																															Ford Focus Estate KIT = towbar inc. electrical kit 13 pins exc. ST / 225 HP, inc. vehicles 01/08-		03/05-04/11	307 337 900 113	2140	22,5	8,5 75 1500	S S S	FRE -- FRE -- FRE --	E D1 E -- E --	-- -- --	H H H	L L L													
																																												Ford Focus Estate exc. ST / 225 HP, inc. vehicles 01/08-		03/05-04/11	307 338 600 001	2202	26	8,5 75 1500	S S S	FRE -- FRE -- FRE --	E -- E D1 E --	-- -- --	H H H	L L L


Ford

<p>Ford Focus Estate exc. ST / 225 HP Please order separately: foam carrier for antenna for vehicles with keyless entry, order no. 907456630001. 06/12-: With vehicles with 1,0 GTDi motor it could be possible that an additional water pump is necessary. Please find details in TSB 35/2012 and contact your Ford dealer.</p>	04/11-		307 456 600 001	3264	60		23	10	75	1500	<p>307 442 300 107 307 442 300 113 06/12-: For vehicles without REC and/or preparation please order additionally: 307 442 300 183</p>	S CAN S CAN	C C	E E	-- L1	H H	45 45	B B
<p>Ford Focus Estate KIT = towbar inc. electrical kit 13 pins exc. ST / 225 HP Please order separately: foam carrier for antenna for vehicles with keyless entry, order no. 907456630001. 06/12-: With vehicles with 1,0 GTDi motor it could be possible that an additional water pump is necessary. Please find details in TSB 35/2012 and contact your Ford dealer.</p>	04/11-		307 456 900 113	3264	60		25	10	75	1500	<p>electrical kit 13 pins in the kit: 307 442 300 113 06/12-: For vehicles without REC and/or preparation please order additionally: 307 442 300 183</p>	S CAN	C C	E E	D L1	H H	45 45	B B
<p>Ford Focus Estate exc. ST / 225 HP Please order separately: foam carrier for antenna for vehicles with keyless entry, order no. 907456630001. 06/12-: With vehicles with 1,0 GTDi motor it could be possible that an additional water pump is necessary. Please find details in TSB 35/2012 and contact your Ford dealer.</p>	04/11-		307 458 600 001	3275	60		24	10	75	1500	<p>307 442 300 107 307 442 300 113 06/12-: For vehicles without REC and/or preparation please order additionally: 307 442 300 183</p>	S CAN S CAN	C C	E E	-- L1	H H	45 45	B B
<p>Ford Focus Estate KIT = towbar inc. electrical kit 13 pins exc. ST / 225 HP Please order separately: foam carrier for antenna for vehicles with keyless entry, order no. 907456630001. 06/12-: With vehicles with 1,0 GTDi motor it could be possible that an additional water pump is necessary. Please find details in TSB 35/2012 and contact your Ford dealer.</p>	04/11-		307 458 900 113	3275	60		26	10	75	1500	<p>electrical kit 13 pins in the kit: 307 442 300 113 06/12-: For vehicles without REC and/or preparation please order additionally: 307 442 300 183</p>	S CAN	C C	E E	D L1	H H	45 45	B B






Ford Focus Hatchback 3/5 doors, exc. special model Edition, inc. ST170		307 234 600 001	0669	90	 14,4	7,3	85	1320	for vehicles without central plug connection 300 072 300 107	FRE --	E1 --	--	V	B
									for vehicles without central plug connection 300 072 300 113	FRE --	E1 D1	L1	B	
									for vehicles with central plug connection 307 234 300 107	S FRE --	E --	--	V	B
									for vehicles with central plug connection 307 234 300 113	S FRE --	E D1	--	V	B
									additional kit for 307234300107 / 113 from 08/03 307 235 300 155	S -- --	--	--	H	B
									for vehicles without central plug connection 300 072 300 107	FRE --	E1 --	--	V	B
Ford Focus Hatchback 3/5 doors, exc. special model Edition, inc. ST170		307 235 600 001	0729	90	 16,6	7,3	85	1320	for vehicles without central plug connection 300 072 300 107	FRE --	E1 --	--	V	B
									for vehicles without central plug connection 300 072 300 113	FRE --	E1 D1	L1	B	
									for vehicles with central plug connection 307 234 300 107	S FRE --	E --	--	V	B
									for vehicles with central plug connection 307 234 300 113	S FRE --	E D1	--	V	B
									additional kit for 307234300107 / 113 from 08/03 307 235 300 155	S -- --	--	--	H	B
									for vehicles without central plug connection 300 072 300 107	FRE --	E1 --	--	V	B













Ford

Ford Focus Hatchback exc. ST / 225 HP, exc. RS / 300 HP, inc. vehicles 01/08-	10/04- 03/11		307 264 600 001	1804	120	✂	21	8,7	75	1590		-01/08 307 231 300 107 -01/08 307 231 300 113 discontinued model -01/08 307 231 300 147 01/08- 307 232 300 107 01/08- 307 232 300 113	S FRE -- S FRE -- S FRE -- S FRE -- S FRE --	E -- E D1 -- E -- E -- E D1 --	-- -- -- -- L1	V H H H H	60 60 60 45 45	L L R B B
Ford Focus Hatchback KIT = towbar inc. electrical kit 13 pins exc. ST / 225 HP, exc. RS / 300 HP	10/04- 01/08		307 454 900 113	1804	120	✂	23	8,7	75	1590		electrical kit 13 pins in the kit: 307 231 300 113	S FRE --	E D1 --	--	H	60	L
Ford Focus Hatchback KIT = towbar inc. electrical kit 13 pins exc. ST / 225 HP, exc. RS / 300 HP	01/08- 03/11		307 264 900 113	1804	120	✂	23	8,7	75	1590		electrical kit 13 pins in the kit: 307 232 300 113	S FRE --	E D1 --	L1	H	45	B
Ford Focus Hatchback exc. ST / 225 HP, exc. RS / 300 HP, inc. vehicles 01/08- discontinued model	10/04- 03/11		307 348 600 001	2323			21,4	8,7	75	1590		-01/08 307 231 300 107 -01/08 307 231 300 113 discontinued model -01/08 307 231 300 147 01/08- 307 232 300 107 01/08- 307 232 300 113	S FRE -- S FRE -- S FRE -- S FRE -- S FRE -- S FRE -- S FRE --	E -- E D1 -- E -- E -- E -- E -- E D1 --	-- -- -- -- -- -- L1	V H H H H H H	60 60 60 45 45 45	L L R B B B















Ford Focus Hatchback exc. ST / 225 HP, exc. RS / 300 HP, inc. vehicles 01/08-		10/04-03/11	343 038 600 001	1783	90	∞	21,5	8,7	75	1590	-01/08 307 231 300 107 -01/08 307 231 300 113 discontinued model -01/08 307 231 300 147 01/08- 307 232 300 107 01/08- 307 232 300 113	S FRE -- S FRE -- S FRE -- S FRE -- S FRE --	E -- E D1 -- E -- E -- E D1 --	-- -- -- -- L1	V H H H H	60 60 60 45 45	L L R B B								
											307 453 900 113	1783	90	∞	23,5	8,7	75	1590	electrical kit 13 pins in the kit: 307 231 300 113	S FRE --	E D1 --	--	H	60	L
											307 436 900 113	1783	90	∞	23,5	8,7	75	1590	electrical kit 13 pins in the kit: 307 232 300 113	S FRE --	E D1 --	L1	H	45	B
											307 459 600 001	3230	60	21	10	75	1500	307 442 300 107 307 442 300 113 06/12-: For vehicles without REC and/or preparation please order additionally: 307 442 300 183	S CAN C S CAN C	E -- E D	-- L1	H H	45 45	B B	
											307 459 900 113	3230	60	23	10	75	1500	electrical kit 13 pins in the kit: 307 442 300 113 06/12-: For vehicles without REC and/or preparation please order additionally: 307 442 300 183	S CAN C	E D	L1	H	45	B	

Ford























Ford Focus Hatchback 06/12-: With vehicles with 1,0 GTDI motor it could be possible that an additional water pump is necessary. Please find details in TSB 35/2012 and contact your Ford dealer.	03/11-		307 461 600 001	3264	60	✂	21	10	75	1500	307 442 300 107	S	CAN	C	E	--	H	45	B	
											307 442 300 113 06/12-: For vehicles without REC and/or preparation please order additionally: 307 442 300 183	S	CAN	C	E	D	L1	H	45	B
Ford Focus Hatchback KIT = towbar inc. electrical kit 13 pins 06/12-: With vehicles with 1,0 GTDI motor it could be possible that an additional water pump is necessary. Please find details in TSB 35/2012 and contact your Ford dealer.	03/11-		307 461 900 113	3264	60	✂	23	10	75	1500	electrical kit 13 pins in the kit: 307 442 300 113	S	CAN	C	E	D	L1	H	45	B
											06/12-: For vehicles without REC and/or preparation please order additionally: 307 442 300 183	S	CAN	C	E	D	L1	H	45	B
Ford Focus Saloon 4 doors discontinued model	10/98- 03/05		307 236 600 001	0836	90	✂	20	8,1	95	1300	for vehicles without central plug connection	--	FRE	--	E1	--	V			B
											300 072 300 107 for vehicles without central plug connection	--	FRE	--	E1	D1	L1	V		B
											300 072 300 113 for vehicles with central plug connection	S	FRE	--	E	--	V	60	B	
											307 234 300 107 for vehicles with central plug connection	S	FRE	--	E	D1	--	V	60	B
Ford Focus Saloon	04/05- 04/11		307 342 600 001	2034	150		20	8,8	75	1590	307 234 300 113 additional kit for 307234300107 / 113 from 08/03	S	--	--	--	H	15	B		
											307 235 300 155	S	FRE	--	E	--	H	45	B	
Ford Focus Saloon	04/05- 04/11		307 343 600 001	2035	150	✂	20	8,8	75	1590	307 200 300 107	S	FRE	--	E	--	H	45	B	
											307 200 300 113	S	FRE	--	E	D1	L1	H	45	B

Ford Focus Saloon 06/12-: With vehicles with 1,0 GTDI motor it could be possible that an additional water pump is necessary. Please find details in TSB 35/2012 and contact your Ford dealer.	04/11-		307 462 600 001	3227	60		21	10	75	1500	307 442 300 107 307 442 300 113 06/12-: For vehicles without REC and/or preparation please order additionally: 307 442 300 183	S CAN S CAN	C C	E E	-- D L1	-- H H	45 45	B B	
Ford Focus Saloon 06/12-: With vehicles with 1,0 GTDI motor it could be possible that an additional water pump is necessary. Please find details in TSB 35/2012 and contact your Ford dealer.	04/11-		307 463 600 001	3277	60		23	10	75	1500	307 442 300 107 307 442 300 113 06/12-: For vehicles without REC and/or preparation please order additionally: 307 442 300 183	S CAN S CAN	C C	E E	-- D L1	H H	45 45	B B	
Ford Fusion exc. vehicles with park distance control exc. Calero	04/02-		307 289 600 001	1411	75		15,8	6,3	75	1050	300 072 300 107 300 072 300 113 11/05- 307 120 300 107 11/05- 307 120 300 113	-- FRE -- FRE S FRE S FRE	-- -- -- --	E1 E1 E E	-- D1 -- --	V V V V		B B B B	
Ford Fusion KIT = towbar inc. electrical kit 13 pins exc. vehicles with park distance control exc. Calero	11/05-		307 289 900 113	1411	75		17,8	6,3	75	1050	electrical kit 13 pins in the kit: 307 120 300 113	S FRE	--	E	D1	--	V	75	B
Ford Fusion exc. vehicles with park distance control exc. Calero	04/02-		307 290 600 001	2111	75		18	6,3	75	1050	300 072 300 107 300 072 300 113 11/05- 307 120 300 107 11/05- 307 120 300 113	-- FRE -- FRE S FRE S FRE	-- -- -- --	E1 E1 E E	-- D1 -- --	V V V V		B B B B	
Ford Galaxy thermal-insulation plate inc. Please order separately: bumper carrier (321330616001) exc. vehicles with park distance control!	06/95- 05/00		321 329 600 001	0003	120		17	12,2	85	2400	321 458 300 107 321 458 300 113	S FRE S FRE	-- --	E E	-- D1 L1	H H	60 60	B B	






















Ford













Ford Galaxy thermal-insulation plate inc. Please order separately: bumper carrier (321330616001). Please order cover for bumper cutout from Ford dealer. exc. vehicles with park distance control! discontinued model	06/95- 05/00		321 330 600 001	0007	120		22,2	12,2	85	2400	321 458 300 107 321 458 300 113	S FRE -- S FRE --	E -- E D1	-- L1	H -- H	60 60	B B
Ford Galaxy thermal-insulation plate inc. inc. 4WD bumper bracket is not necessary	05/00- 06		321 665 600 001	2138	90		24	12,5	100	2500	321 458 300 107 321 458 300 113	S FRE -- S FRE --	E -- E D1	-- L1	H -- H	60 60	B B
Ford Galaxy KIT = towbar inc. electrical kit 13 pins thermal-insulation plate inc. inc. 4WD bumper bracket is not necessary	05/00- 06		321 665 900 113	2138	90		26	14,5	100	2500	electrical kit 13 pins in the kit: 321 458 300 113	S FRE --	E D1	L1	H	60	B
Ford Galaxy thermal-insulation plate inc. inc. 4WD bumper bracket is not necessary	05/00- 06		321 775 600 001	0681	90		26	12,5	100	2500	321 458 300 107 321 458 300 113	S FRE -- S FRE --	E -- E D1	-- L1	H -- H	60 60	B B
Ford Galaxy KIT = towbar inc. electrical kit 13 pins thermal-insulation plate inc. inc. 4WD bumper bracket is not necessary	05/00- 06		321 775 900 113	0681	90		28	12,5	100	2500	electrical kit 13 pins in the kit: 321 458 300 113	S FRE --	E D1	L1	H	60	B
Ford Galaxy SIARR	05/06- 08/10		307 381 600 001	0091	90		22	11,6	80	2120	307 400 300 107 307 400 300 113	S CAN C S CAN C	E -- E D	-- L1	H -- H	45 45	B B
Ford Galaxy 7 seater without height control	05/06-		307 306 600 001	1920	90		17	11,1	90	2000	307 400 300 107 307 400 300 113	S CAN C S CAN C	E -- E D	-- L1	H -- H	45 45	B B
Ford Galaxy 7 seater KIT = towbar inc. electrical kit 13 pins without height control	05/06-		307 306 900 113	1920	90		19	11,1	90	2000	electrical kit 13 pins in the kit: 307 400 300 113	S CAN C	E D	L1	H	45	B
Ford Galaxy 7 seater without height control	05/06-		307 355 600 001	2142	90		19,5	11,1	90	2000	307 400 300 107 307 400 300 113	S CAN C S CAN C	E -- E D	-- L1	H -- H	45 45	B B

Ford Galaxy 7 seater KIT = towbar inc. electrical kit 13 pins without height control	05/06-		307 355 900 113	2142	90	✂	21,5	11,1	90	2000		electrical kit 13 pins in the kit: 307 400 300 113	S CAN	C	E	D	L1	H	45	B
Ford Galaxy 7 seater with height control	05/06-		307 356 600 001	2143	90	✂	19,5	11,1	90	2000		307 400 300 107 307 400 300 113	S CAN S CAN	C C	E E	D D	-- L1	H H	45 45	B B
Ford Grand C-Max	09/10-		307 402 600 001	3107	60		19	10	75	1800		307 442 300 107 307 442 300 113 06/12-: For vehicles without REC and/or preparation please order additionally: 307 442 300 183	S CAN S CAN	C C	E E	D D	-- L1	H H	45 45	B B
Ford Grand C-Max KIT = towbar inc. electrical kit 13 pins	09/10-		307 402 900 113	3107	60		21	10	75	1800		electrical kit 13 pins in the kit: 307 442 300 113 06/12-: For vehicles without REC and/or preparation please order additionally: 307 442 300 183	S CAN	C	E	D	L1	H	45	B
Ford Grand C-Max	09/10-		307 441 600 001	3264	60	✂	21	10	75	1800		307 442 300 107 307 442 300 113 06/12-: For vehicles without REC and/or preparation please order additionally: 307 442 300 183	S CAN S CAN	C C	E E	-- D	-- L1	H H	45 45	B B
Ford Grand C-Max KIT = towbar inc. electrical kit 13 pins	09/10-		307 441 900 113	3264	60	✂	23	10	75	1800		electrical kit 13 pins in the kit: 307 442 300 113 06/12-: For vehicles without REC and/or preparation please order additionally: 307 442 300 183	S CAN	C	E	D	L1	H	45	B









Ford Maverick year of construction: 2005	03/04-		307 339 600 001	1848			20	10	80	2000			300 072 300 107 300 072 300 113	-- --	FRE -- FRE --	E1 -- E1 D1	-- L1	V V	B B		
Ford Maverick year of construction: 2005 discontinued model	03/04-		307 340 600 001	1975			21	10	75	2000			300 072 300 107 300 072 300 113	-- --	FRE -- FRE --	E1 -- E1 D1	-- L1	V V	B B		
Ford Mondeo 4 doors models 10/10 - = visible cutout exc. Titanium X Sport	06/07-		307 331 600 001	2228	90		17,5	11,6	90	2120			307 400 300 107 307 400 300 113	S CAN S CAN	C C	E E	-- D	H L1	45 45	B B	
Ford Mondeo 4 doors models 10/10 - = visible cutout exc. Titanium X Sport SIARR	06/07-		307 381 600 001	0091	90		22	11,6	90	2120			307 400 300 107 307 400 300 113	S CAN S CAN	C C	E E	-- D	H L1	45 45	B B	
Ford Mondeo 4 doors models 10/10 - = visible cutout exc. Titanium X Sport	06/07-		307 332 600 001	2229	90		17,5	11,6	90	2120			307 400 300 107 307 400 300 113	S CAN S CAN	C C	E E	-- D	H L1	45 45	B B	
Ford Mondeo 5 doors	06/07-		307 328 600 001	2154	90		17	11,6	90	2120			307 400 300 107 307 400 300 113	S CAN S CAN	C C	E E	-- D	H L1	45 45	B B	
Ford Mondeo 5 doors SIARR	06/07-		307 381 600 001	0091	90		22	11,6	90	2120			307 400 300 107 307 400 300 113	S CAN S CAN	C C	E E	-- D	H L1	45 45	B B	
Ford Mondeo 5 doors	06/07-		307 329 600 001	2155	90		17	11,6	90	2120			307 400 300 107 307 400 300 113	S CAN S CAN	C C	E E	-- D	H L1	45 45	B B	
Ford Mondeo 5 doors KIT = towbar inc. electrical kit 13 pins	06/07-		307 329 900 113	2155	90		19	11,6	90	2120			electrical kit 13 pins in the kit: 307 400 300 113	S CAN	C	E	D	L1	H	45	B
Ford Mondeo Estate inc. 4 WD, exc. RS, inc. models from '96	05/93- 10/00		307 194 600 001	0049	90		18	9	75	1600			discontinued model: 307 194 300 107	S	C2	--	--	H	60	B	B
Ford Mondeo Estate inc. vehicles with height control exc. ST220 Monoflex	11/00- 06/07		307 431 600 001	1828	120		19	11	85	2000			307 244 300 107 307 244 300 113	S FRE S FRE	-- --	E E	-- D1	V V	75 75	L L	
Ford Mondeo Estate for vehicles with height control exc. ST220	11/00- 06/07		307 247 600 001	1021	60		22,1	11	120	2000			307 244 300 107 307 244 300 113	S FRE S FRE	-- --	E E	-- D1	V V	75 75	L L	

Ford


Ford Mondeo Estate exc. vehicles with height control, exc. ST220	11/00- 06/07		307 245 600 001	1021	60		22	11 120 2000	307 244 300 107 307 244 300 113	S FRE -- S FRE --	E -- E D1	-- --	V V	75 75	L L
Ford Mondeo Estate Ghia / Titanium / Platinum exc. ST220 Monoflex	05/05- 06/07		307 429 600 001	3324	120		19	11 80 2000	307 244 300 107 307 244 300 113	S FRE -- S FRE --	E -- E D1	-- --	V V	75 75	L L
Ford Mondeo Estate Ghia / Titanium / Platinum exc. ST220 Monoflex	05/05- 06/07		307 430 600 001	3324	120		19	11 80 2000	307 244 300 107 307 244 300 113	S FRE -- S FRE --	E -- E D1	-- --	V V	75 75	L L
Ford Mondeo Estate replaced by 307403600001 discontinued model	06/07- 09/10		307 334 600 001	2230	90		17,5	11,6 80 2120	307 400 300 107 307 400 300 113	S CAN C S CAN C	E -- E D	-- L1	H H	45 45	B B
Ford Mondeo Estate exc. vehicles with height control	06/07-		307 403 600 001	2230	150		17,5	11,6 90 2120	307 400 300 107 307 400 300 113	S CAN C S CAN C	E -- E D	-- L1	H H	45 45	B B
Ford Mondeo Estate KIT = towbar inc. electrical kit 13 pins exc. vehicles with height control	06/07-		307 403 900 113	2230	90		19,5	11,6 90 2120	electrical kit 13 pins in the kit: 307 400 300 113	S CAN C	E D	L1	H	45	B
Ford Mondeo Estate exc. vehicles with height control	06/07-		307 455 600 001	2231	150		19,5	11,6 90 2120	307 400 300 107 307 400 300 113	S CAN C S CAN C	E -- E D	-- L1	H H	45 45	B B
Ford Mondeo Estate KIT = towbar inc. electrical kit 13 pins exc. vehicles with height control	06/07-		307 455 900 113	2231	90		21,5	11,6 90 2120	electrical kit 13 pins in the kit: 307 400 300 113	S CAN C	E D	L1	H	45	B
Ford Mondeo Estate for vehicles with height control	06/07-		307 336 600 001	2232	150		19,2	11,6 90 2120	307 400 300 107 307 400 300 113	S CAN C S CAN C	E -- E D	-- L1	H H	45 45	B B
Ford Mondeo Saloon/Hatchback hatchback, inc. 4x4, exc. RS	03/93- 09/96		307 186 600 001	0164	120		15	9 75 1600	300 060 300 107 300 060 300 113	-- --	-- --	-- D1	H H	45 45	B B
Ford Mondeo Saloon/Hatchback liftback and notchback	10/96- 10/00		307 219 600 001	0234	120		17,2	9 75 1600	300 060 300 107 300 060 300 113	-- --	-- --	-- D1	H H	45 45	B B













Ford Mondeo Saloon/Hatchback exc. ST 220 With models Ghia/Titanium/Platinum starting from year of construction 2005 we recommend to exchange the spoiler for optical reasons into the standard spoiler.	11/00-06/07		307 241 600 001	1077	60	 18,3	11 120 2000	307 242 300 107 307 242 300 113 307 242 300 157	S S S	FRE -- FRE -- S --	E -- E D1 E --	-- -- --	V V H	75 75 45	B B L
Ford Mondeo Saloon/Hatchback exc. ST 220 With models Ghia/Titanium/Platinum starting from year of construction 2005 we recommend to exchange the spoiler for optical reasons into the standard spoiler.	11/00-06/07		307 242 600 001	1078	60	 19,5	11 120 2000	307 242 300 107 307 242 300 113 307 242 300 157	S S S	FRE -- FRE -- S --	E -- E D1 E --	-- -- --	V V H	75 75 45	B B L
Ford Puma is not permitted to tow by manufacturer.															L
Ford Ranger I SIARR	-12/06		307 372 600 001	2531	60	32 14,11 100 2800		300 052 300 107 300 052 300 113	-- --	FRE -- FRE --	-- D1	-- --	V V	B B	
Ford Ranger II 4 WD SIARR	12/06-03/12		307 376 600 001	0071	60	32 14,88 150 3000		307 376 300 113	S	C2 --	--	--	V	B	
Ford Ranger III for vehicles with bumper with integrated step Monoflex	03/12-		307 443 600 001	0260	90	41 17,17 200 3500		343 069 300 113	S	CAN	E D	--	V	60	
Ford Ranger III KIT = towbar inc. electrical kit 13 pins for vehicles with bumper with integrated step Monoflex	03/12-		307 443 900 113	0260	90	43 17,17 200 3500		electrical kit 13 pins in the kit: 343 069 300 113	S	CAN	E D	--	V	60	
Ford S-Max without height control with styling package by Ford Individual + for S-Max Titanium S = visible cutout	05/06-		307 304 600 001	1918	90	 17,7	11,1 90 2000	307 400 300 107 307 400 300 113	S S	CAN C CAN C	E -- E D	-- L1	H H	45 45	B B
Ford S-Max KIT = towbar inc. electrical kit 13 pins without height control with styling package by Ford Individual + for S-Max Titanium S = visible cutout	05/06-		307 304 900 113	1918	90	 19,7	11,1 90 2000	electrical kit 13 pins in the kit: 307 400 300 113	S	CAN C	E D	L1	H	45	B

Ford













Ford S-Max without height control with styling package by Ford Individual + for S- Max Titanium S = visible cutout SIARR	05/06-		307 380 600 001	0075	90	✂	20	12,11	100	2350		307 400 300 107 307 400 300 113	S CAN S CAN	C C	E E	-- L1	H H	45 45	B B	
Ford S-Max without height control with styling package by Ford Individual + for S- Max Titanium S = visible cutout	05/06-		307 305 600 001	1919	90	✂	19,5	11,1	90	2000		307 400 300 107 307 400 300 113	S CAN S CAN	C C	E E	-- L1	H H	45 45	B B	
Ford S-Max KIT = towbar inc. electrical kit 13 pins without height control with styling package by Ford Individual + for S- Max Titanium S = visible cutout	05/06-		307 305 900 113	1919	90	✂	21,5	11,1	90	2000		electrical kit 13 pins in the kit: 307 400 300 113	S CAN	C	E	D	L1	H	45	B
Ford S-Max with height control with styling package by Ford Individual + for S- Max Titanium S = visible cutout	05/06-		307 308 600 001	1988	90	✂	19,5	11,1	90	2000		307 400 300 107 307 400 300 113	S CAN S CAN	C C	E E	-- L1	H H	45 45	B B	
Ford Tourneo Custom Van	11/12-		307 382 600 001									307 385 300 107 307 385 300 113	S S							
Ford Transit all types towing bracket fixed ball included (except for long flatbed) (exc. EM/EML/ENL/EME/ENE) (name of model starts with "E") assembly kit for automatic bolt coupling (907202650002), towball for swap system (32906260001)	10/91- 00		307 284 600 001	1013	90		19,5	14,47	100	2500		300 060 300 107 300 060 300 113	-- --	C2 C2	-- --	D1 L1	H H	45 45	B B	
Ford Transit Chassis Cab V184/185 name of the type begins with "F" towing bracket inc. towball 329076600001,towball for swap system: 329059600001, mounting kit for automatic bolt coupling: 907202650002	04/00- 07/06		307 258 600 001	0795	30		17,4	15,3	112	2800		300 201 300 113	--	A	--	D1	--	V	B	
Ford Transit Chassis Cab V347/348 name of the type begins with "F" towing bracket inc. towball 329076600001,towball for swap system: 329059600001, mounting kit for automatic bolt coupling: 907202650002	07/06-		307 378 600 001	2247	60		22	15,3	112	2800		300 201 300 113	--	A	--	D1	--	V	B	









Ford

<p>Ford Transit Van KIT = towbar inc. electrical kit 13 pins name of the type begins with "F", towing bracket inc. towball (329076600001), exc. vehicles with step suitable step: 307267600001 For vehicles from 08/2004 please order separately at Ford dealers: reinforcement for longitudinal beam 1 x FINIS 4583024 nut 2 x FINIS 4105891 screw 2 x FINIS 4046120</p>	04/00- 	307 260 900 113 0864	60	21,8 15,26 112 2800	electrical kit 13 pins in the kit: 307 260 300 113	-- FRE --	-- D1 --	-- H --	60	B
<p>Ford Transit Van 4,6 t max. total weight Only available at Ford dealers.</p>	10/07-									L

Honda Accord Saloon exc. estate Monoflex	02/03-08		338 074 600 001	2494	90	✂	21	8,33	75	1500		300 072 300 107 300 072 300 113	-- --	FRE-- FRE--	E1 -- E1 D1	-- L1	V V	B B
Honda Accord Saloon (CU) exc. type S Monoflex	08-		338 065 600 001	3902	90	✂	20	9,5	75	1700		300 072 300 107 300 072 300 113	-- --	FRE-- FRE--	E1 -- E1 D1	-- L1	V V	B B
Honda Accord Saloon (CU) exc. type S Monoflex discontinued model	08-		338 069 600 001	3902	90	✂	20	9,5	75	1700		300 072 300 107 300 072 300 113	-- --	FRE-- FRE--	E1 -- E1 D1	-- L1	V V	B B
Honda Accord Saloon (CU) exc. type S Monoflex	08-		338 066 600 001	3901	90	✂	21	9,5	75	1700		300 072 300 107 300 072 300 113	-- --	FRE-- FRE--	E1 -- E1 D1	-- L1	V V	B B
Honda Accord Tourer (CL) Monoflex	04/03-08		338 086 600 001	2500	120	✂	21	8,75	75	1500		300 072 300 107 300 072 300 113	-- --	FRE-- FRE--	E1 -- E1 D1	-- L1	V V	B B
Honda Accord Tourer (CL) Monoflex	04/03-08		338 087 600 001	2500	120	✂	21	8,75	75	1500		300 072 300 107 300 072 300 113	-- --	FRE-- FRE--	E1 -- E1 D1	-- L1	V V	B B
Honda Accord Tourer (CW) Monoflex	08-		338 065 600 001	3902	90	✂	20	9,5	75	1700		300 072 300 107 300 072 300 113	-- --	FRE-- FRE--	E1 -- E1 D1	-- L1	V V	B B
Honda Accord Tourer (CW) Monoflex discontinued model	08-		338 069 600 001	3902	90	✂	20	9,5	75	1700		300 072 300 107 300 072 300 113	-- --	FRE-- FRE--	E1 -- E1 D1	-- L1	V V	B B
Honda Accord Tourer (CW) Monoflex	08-		338 066 600 001	3901	90	✂	21	9,5	75	1700		300 072 300 107 300 072 300 113	-- --	FRE-- FRE--	E1 -- E1 D1	-- L1	V V	B B
Honda Civic 3 / 5 doors exc. Civic "R"	01/06-		338 091 600 001	0001	60	✂	22	8,3	75	1500		300 072 300 107 300 072 300 113	-- --	FRE-- FRE--	E1 -- E1 D1	-- L1	V V	B B
Honda Civic 3 / 5 doors exc. Civic "R"	01/06-		338 092 600 001	0002	60	✂	23	8,3	75	1500		300 072 300 107 300 072 300 113	-- --	FRE-- FRE--	E1 -- E1 D1	-- L1	V V	B B
Honda Civic 4 doors notchback, exc. Hybrid discontinued model	04/06-08/11		338 058 600 001	1906	60	✂	20,5	6,95	85	1200		300 072 300 107 300 072 300 113	-- --	FRE-- FRE--	E1 -- E1 D1	-- L1	V V	B B













Honda

Honda Civic 5 doors	01/12-		338 103 600 001	3402		✂	8,32	75	1500				--	A --	E1 --	--	V	90	B
Honda Civic 5 doors	01/12-		338 104 600 001	3401		✂	8,32	75	1500				--	A --	E1 --	--	V	90	B
Honda CRV (RD8/RD9) (RV + RD inc. facelift from 02/05-) discontinued model	03/02- 01/07		338 038 600 001	1285	120	✂	33,5	9,25	100	1690			--	FRE --	E1 --	--	V		B
Honda CRV SIARR	01/07- 11/12		338 053 600 001	0089	60		20	10,43	100	2000			S	FRE --	E2 D1	--	H	60	B
Honda CRV KIT = towbar inc. electrical kit 13 pins SIARR	01/07- 11/12		338 053 900 113	0089	60		22	10,43	100	2000			S	FRE --	E2 D1	--	H	60	B
Honda CRV inc. vehicles with sport equipment Monoflex	01/07- 11/12		338 094 600 001	3461	90	✂	27	10,52	80	2000			S	FRE --	E2 D1	--	H	60	B
Honda CRV KIT = towbar inc. electrical kit 13 pins inc. vehicles with sport equipment Monoflex	01/07- 11/12		338 094 900 113	3461	90	✂	29	10,52	80	2000			S	FRE --	E2 D1	--	H	60	B
Honda CRV Monoflex	11/12-		338 107 600 001																
Honda CRV KIT = towbar inc. electrical kit 13 pins Monoflex	11/12-		338 107 900 113																
Honda CRV Monoflex	11/12-		338 108 600 001																
Honda CRV KIT = towbar inc. electrical kit 13 pins Monoflex	11/12-		338 108 900 113																
Honda FRV Monoflex	05-		338 075 600 001	3512	100	✂	24	8,7	90	1500			--	FRE --	E1 D1	L1	V	90	B













Honda FRV Monoflex	05-		338 073 600 001	3512	100	✂	24	8,7	90	1500		300 073 300 113	--	FRE --	E1 --	D1	L1	V	90	B
Honda HRV discontinued model	10/01-		338 039 600 001	1284	105		22	6,9	60	1200		300 072 300 107 300 072 300 113	--	FRE --	E1 --	D1	L1	V		B
Honda Jazz	-11/08		338 060 600 001	1963	60	✂	17,5	5,9	70	1000		300 072 300 107 300 072 300 113	--	FRE --	E1 --	D1	L1	V		B
Honda Jazz	-11/08		338 059 600 001	1964	60	✂	18,5	5,9	70	1000		300 072 300 107 300 072 300 113	--	FRE --	E1 --	D1	L1	V		B
Honda Jazz Monoflex	11/08- 12/11		338 080 600 001	3975	90	✂	17	6,56	80	1100		300 210 300 107 300 210 300 113	--	A --	E1 --	D1	L1	V	90	B
Honda Jazz Monoflex	11/08- 12/11		338 081 600 001	3760	90	✂	18	6,56	80	1100		300 210 300 107 300 210 300 113	--	A --	E1 --	D1	L1	V	90	B
Honda Jazz Monoflex	01/12-		338 115 600 001																	
Honda Jazz Monoflex	01/12-		338 116 600 001																	













Hummer

Hummer II Monoflex	02-		342 160 600 001	2539	150	✂	29	18,31	140	3500	300 210 300 113	--	A	--	E1	D1	L1	V	90	B
------------------------------	-----	---	------------------------	------	-----	---	----	-------	-----	------	------------------------	----	---	----	----	----	----	---	----	---








Hyundai Accent Hatch- and Notchback Monoflex	06/06-		346 068 600 001	3317	90		20	6,63	50	1100		300 072 300 107 300 072 300 113	-- --	FRE -- FRE --	E1 -- E1 D1	-- L1 V	V	B	
Hyundai Accent Hatch- and Notchback Monoflex discontinued model	06/06-		346 026 600 001	2441	90		20	6,1	50	1100		300 072 300 107 300 072 300 113	-- --	FRE -- FRE --	E1 -- E1 D1	-- L1 V	V	B	
Hyundai Getz	10/05-		346 024 600 001	2263	60	✂	20,8	7,1	85	1350		300 072 300 107 300 072 300 113	-- --	FRE -- FRE --	E1 -- E1 D1	-- L1 V	V	B	
Hyundai H1 / H300 / iLoad Van Monoflex	08-		346 056 600 001	3746	60	✂	28	13,51	100	2400		346 057 300 113	S	C2	--	D1	L1 V	60	L
Hyundai H1 / H300 / iLoad Van Monoflex	08-		346 057 600 001	3745	60	✂	28	13,51	100	2400		346 057 300 113	S	C2	--	D1	L1 V	60	L
Hyundai i 10 Monoflex	01/08-		346 047 600 001	3921	90	✂	19	5,25	32	800		300 210 300 107 300 210 300 113	-- --	A -- A --	E1 -- E1 D1	-- L1 V	V	90	B
Hyundai i 20 3/5 doors replaced by: 346084600001 Monoflex discontinued model	01/09- 07/12		346 061 600 001	3911	90		19	7,06	50	1200		300 210 300 107 300 210 300 113	-- --	A -- A --	E1 -- E1 D1	-- L1 V	V	90	B
Hyundai i 20 3/5 doors Monoflex	01/09-		346 084 600 001	0255	90	✂	20	6,65	50	1200		300 210 300 107 300 210 300 113	-- --	A -- A --	E1 -- E1 D1	-- L1 V	V	90	B
Hyundai i 30 cw Stationwagon Monoflex	06/12-		346 073 600 001	0244	90	✂	20	8,53	75	1500		346 071 300 113	S	A	--	D1	--	V	B
Hyundai i 30 cw Stationwagon KIT = towbar inc. electrical kit 13 pins Monoflex	06/12-		346 073 900 113	0244	90	✂	22	8,53	75	1500		electrical kit 13 pins in the kit: 346 071 300 113	S	A	--	D1	--	V	B
Hyundai i 30 cw Stationwagon Monoflex	06/12-		346 074 600 001	0242	90		23	8,53	75	1500		346 071 300 113	S	A	--	D1	--	V	B
Hyundai i 30 cw Stationwagon KIT = towbar inc. electrical kit 13 pins Monoflex	06/12-		346 074 900 113	0242	90	✂	25	8,53	75	1500		electrical kit 13 pins in the kit: 346 071 300 113	S	A	--	D1	--	V	B























Hyundai

Hyundai i 30 Hatchback	09/07-		345 028 600 001	2596	90	17,5	8,6	75	1500		300 210 300 107 300 210 300 113	--	A --	E1 --	--	V	90	B
Hyundai i 30 Hatchback replaced by: 345086600001 Monoflex discontinued model	03/12-		346 071 600 001	0205	60	19	8,3	75	1500		346 071 300 113	S	A --	--	D1	--	V	B
Hyundai i 30 Hatchback Monoflex	03/12-		345 086 600 001	0236	60	✂	8,3	75	1500		346 071 300 113	S	A --	--	D1	--	V	B
Hyundai i 30 Hatchback KIT = towbar inc. electrical kit 13 pins replaced by: 345086900113 Monoflex discontinued model	03/12-		346 071 900 113	0205	60	22	8,3	75	1500		electrical kit 13 pins in the kit: 346 071 300 113	S	A --	--	D1	--	V	B
Hyundai i 30 Hatchback KIT = towbar inc. electrical kit 13 pins Monoflex	03/12-		345 086 900 113	0236	60	✂	8,3	75	1500		electrical kit 13 pins in the kit: 346 071 300 113	S	A --	--	D1	--	V	B
Hyundai I 30 Stationwagon exc. vehicles with park distance control Monoflex	03/08-		346 053 600 001	4102	90	23	8,7	80	1500		300 210 300 107 300 210 300 113	--	A --	E1 --	--	V	90	B
Hyundai I 30 Stationwagon Monoflex	03/08-		346 060 600 001	4099	90	✂	8,7	80	1500		300 210 300 107 300 210 300 113	--	A --	E1 --	--	V	90	B
Hyundai I 40 cw Estate replaced by: 346082600001 Monoflex	07/11-		346 065 600 001	4352	90	18	9,91	80	1800		346 066 300 113 346 066 300 157	S FRE --	S --	--	--	H	60	B
Hyundai I 40 cw Estate Monoflex	07/11-		346 082 600 001	4352	90	18	9,91	80	1800		346 066 300 113	S	FRE --	--	D1	L1	H	60
Hyundai I 40 cw Estate KIT = towbar inc. electrical kit 13 pins Monoflex	07/11-		346 082 900 113	4352	90	20	9,91	80	1800		electrical kit 13 pins in the kit: 346 066 300 113	S	FRE --	--	D1	L1	H	60
Hyundai I 40 cw Estate replaced by: 346083600001 Monoflex	07/11-		346 066 600 001	4353	90	✂	9,91	80	1800		346 066 300 113 346 066 300 157	S	FRE --	--	--	H	60	B
Hyundai I 40 cw Estate Monoflex	07/11-		346 083 600 001	4353	90	✂	9,91	80	1800		346 066 300 113	S	FRE --	--	D1	L1	H	60





Hyundai I 40 cw Estate KIT = towbar inc. electrical kit 13 pins Monoflex	07/11-		346 083 900 113	4353	90	✂	23	9,91	80	1800	electrical kit 13 pins in the kit: 346 066 300 113	S	FRE	--	D1	L1	H	60	B	
Hyundai I 40 Saloon Monoflex	02/12-		346 070 600 001	0209	90	✂	19	9,81	75	1800	346 066 300 113	S	FRE	--	D1	L1	H	60	B	
Hyundai I 40 Saloon KIT = towbar inc. electrical kit 13 pins Monoflex	02/12-		346 070 900 113	0209	90	✂	21	9,81	75	1800	electrical kit 13 pins in the kit: 346 066 300 113	S	FRE	--	D1	L1	H	60	B	
Hyundai I 40 Saloon Monoflex	02/12-		346 072 600 001	0200	90	✂	21	9,81	75	1800	346 066 300 113	S	FRE	--	D1	L1	H	60	B	
Hyundai I 40 Saloon KIT = towbar inc. electrical kit 13 pins Monoflex	02/12-		346 072 900 113	0200	90	✂	23	9,81	75	1800	electrical kit 13 pins in the kit: 346 066 300 113	S	FRE	--	D1	L1	H	60	B	
Hyundai IX 20 Monoflex	11/10-		346 063 600 001	4280	90	✂	20	7,65	75	1300	346 046 300 107 346 064 300 113	S	A	--	--	--	V	75	B	
Hyundai IX 20 KIT = towbar inc. electrical kit 13 pins Monoflex	11/10-		346 063 900 113	4280	90	✂	22	7,65	75	1300	electrical kit 13 pins in the kit: 346 064 300 113	S	A	--	D1	--	V	75	B	
Hyundai IX 20 Monoflex	11/10-		346 064 600 001	4281	90	✂	21	7,65	75	1300	346 046 300 107 346 064 300 113	S	A	--	--	--	V	75	B	
Hyundai IX 20 KIT = towbar inc. electrical kit 13 pins Monoflex	11/10-		346 064 900 113	4281	90	✂	23	7,65	75	1300	electrical kit 13 pins in the kit: 346 064 300 113	S	A	--	D1	--	V	75	B	
Hyundai IX 35 Monoflex	03/10-		346 048 600 001	4143	90	✂	23	11,1	96	2400	346 049 300 107 346 049 300 113	S	A	--	E2	--	V	90	B	
Hyundai IX 35 KIT = towbar inc. electrical kit 13 pins Monoflex	03/10-		346 048 900 113	4143	90	✂	25	11,1	96	2400	electrical kit 13 pins in the kit: 346 049 300 113	S	A	--	E2	D1	L1	V	90	B
Hyundai IX 35 Monoflex	03/10-		346 049 600 001	4144	90	✂	25	11,1	96	2400	346 049 300 107 346 049 300 113	S	A	--	E2	--	V	90	B	



Hyundai

Hyundai IX 35 KIT = towbar inc. electrical kit 13 pins Monoflex	03/10-		346 049 900 113	4144	90	27	11,1	96	2400	electrical kit 13 pins in the kit: 346 049 300 113	S	A	--	E2	D1	L1	V	90	B
Hyundai Matrix inc. facelift 08- Monoflex	01-		346 050 600 001	1985	90	19	8,08	60	1400	300 072 300 107 300 072 300 113	--	FRE	--	E1	--	--	V		B
Hyundai Matrix inc. facelift 08- Monoflex	01-		346 051 600 001	1985	90	19	8,08	60	1400	300 072 300 107 300 072 300 113	--	FRE	--	E1	--	--	V		B
Hyundai Santa Fe type SM exc. vehicles with 3. seat row	00- 03/06		346 011 600 001	1552	90	26	12	100	2300	300 061 300 107 300 061 300 113	--	C2	--	--	--	--	H		B
Hyundai Santa Fe type CM inc. vehicles with self-levelling suspension 5 & 7 seat models	03/06-		346 020 600 001	2314	90	26	13,6	100	3000	-09/09 346 800 300 107 discontinued model -09/09 346 800 300 113 09/09- 346 810 300 107 03/06- 346 810 300 113	S	FRE	--	E1	--	--	H	75	L
Hyundai Santa Fe KIT = towbar inc. electrical kit 13 pins type CM inc. vehicles with self-levelling suspension 5 & 7 seat models	03/06-		346 810 900 113	2314	90	28	13,6	100	3000	electrical kit 13 pins in the kit: 346 810 300 113	S	FRE	--	--	D1	L1	H	75	B
Hyundai Santa Fe type CM inc. vehicles with self-levelling suspension 5 & 7 seat models	03/06-		346 062 600 001	3282	90	28	13,6	100	3000	-09/09 346 800 300 107 discontinued model -09/09 346 800 300 113 09/09- 346 810 300 107 03/06- 346 810 300 113	S	FRE	--	E1	--	--	H	75	L



Hyundai Santa Fe type CM inc. vehicles with self-leveling suspension 5 & 7 seat models	03/06- 09/09		346 021 600 001	2315	90		29	13,6	100	3000	346 810 300 107 346 810 300 113	S FRE -- S FRE --	-- --	D1	-- L1	H H	75 75	B B
Hyundai Santa Fe KIT = towbar inc. electrical kit 13 pins type CM inc. vehicles with self-leveling suspension 5 & 7 seat models	03/06-		346 811 900 113	2315	90		29	13,6	100	3000	electrical kit 13 pins in the kit: 346 810 300 113	S FRE --	--	D1	L1	H	75	B
Hyundai Santa Fe Monoflex	09/12-		346 075 600 001	0283	90		23	12,5	100	2500	346 076 300 107 346 076 300 113	S S						
Hyundai Santa Fe KIT = towbar inc. electrical kit 13 pins Monoflex	09/12-		346 075 900 113	0283	90		25	12,5	100	2500	electrical kit 13 pins in the kit: 346 076 300 113	S						
Hyundai Santa Fe Monoflex	09/12-		346 076 600 001	0282	90		25	12,5	100	2500	346 076 300 107 346 076 300 113	S S						
Hyundai Santa Fe KIT = towbar inc. electrical kit 13 pins Monoflex	09/12-		346 076 900 113	0282	90		27	12,5	100	2500	electrical kit 13 pins in the kit: 346 076 300 113	S						
Hyundai Sonata exc. vehicles with 2 l motor Monoflex	05-		346 058 600 001	2886	90		20	9,66	75	1800	300 210 300 107 300 210 300 113	-- --	A -- A --	E1 E1	-- L1	V V	90 90	B B
Hyundai Sonata exc. vehicles with 2 l motor Monoflex	05-		346 059 600 001	3757	90		20	9,66	75	1800	300 210 300 107 300 210 300 113	-- --	A -- A --	E1 E1	-- L1	V V	90 90	B B
Hyundai Terracan towball for swap system: 32905960001	10/01-		346 015 600 001	1163	60		25,8	15,3	140	3500	300 072 300 107 300 072 300 113	-- --	FRE -- FRE --	E1 E1	-- L1	V V		B B
Hyundai Terracan discontinued model	10/01-		346 016 600 001	1599	60		25,8	15,3	140	3500	300 072 300 107 300 072 300 113	-- --	FRE -- FRE --	E1 E1	-- L1	V V		B B
Hyundai Trajet Monoflex	01-		346 014 600 001	1943	60		20,6	10,75	80	1950	300 061 300 107 300 061 300 113	-- --	C2 -- C2 --	-- --	-- L1	H H		B B
Hyundai Tucson	09/04-		346 018 600 001	1860	90		20,6	10,9	90	2200	346 018 300 113	S FRE --	E	D1	L1	H	45	B










Hyundai

Hyundai Tucson KIT = towbar inc. electrical kit 13 pins	09/04-		346 018 900 113	1860	90		22,6	10,9	90	2200		electrical kit 13 pins in the kit: 346 018 300 113	S	FRE --	E	D1	L1	H	45	B
Hyundai Tucson	09/04-		346 019 600 001	1972	90		23,5	10,9	90	2200		346 018 300 113	S	FRE --	E	D1	L1	H	45	B
Hyundai Tucson KIT = towbar inc. electrical kit 13 pins	09/04-		346 019 900 113	1972	90		25,5	10,9	90	2200		electrical kit 13 pins in the kit: 346 018 300 113	S	FRE --	E	D1	L1	H	45	B












Isuzu D-Max Monoflex	01/07-		342 170 600 001	3526	100	33	14,96	120	3000	300 052 300 107	--	FRE --	--	--	--	--	V	B
Isuzu D-Max 4x4 exc. 4x2 exc. vehicles with double tube exhaust system Monoflex	06/12-		342 195 600 001	0229	90	29	14,96	120	3000									






Iveco-Magirus

Iveco Daily van / minibus / flatbed 29 - 70 C inc. towball, hole pattern: 90x50 mm For models 65/70 C please order parts to strengthen the framework, Iveco no. 299 4054 at Iveco dealers. Monoflex	05/99-		342 168 600 001	2662	60	36	25,43	150	3500	300 056 300 107	--	FRE --	E --	--	V	L
										300 056 300 113	--	FRE --	E D1	--	V	L
Iveco Daily van / minibus / flatbed 29 - 65 inc. towball, hole pattern: 90x50 mm for vehicles with step For models 65C please order parts to strengthen the framework, Iveco no. 299 4054 at Iveco dealers. Monoflex	05/99-		342 176 600 001	3879	60	36	20,52	140	3500	300 056 300 107	--	FRE --	E --	--	V	L
										300 056 300 113	--	FRE --	E D1	--	V	L












Jeep Cherokee SIARR	10/96- 03/01		342 119 600 001	0456	120	29	13,38	130	3250		300 072 300 107 300 072 300 113	-- --	FRE FRE	E1 E1	-- D1	-- L1	V V		B B
Jeep Cherokee SIARR	09/01- 03/08		342 118 600 001	4261	180	35	14,42	80	2720		for vehicles with earth switched rear fog lights please order separately: 300 065 300 005 300 210 300 107 300 210 300 113	-- -- --	A A A	E1 E1 E1	-- -- L1	H V V	15 90 90	B B B	
Jeep Cherokee KJ	09/01- 03/08		342 094 600 001	1989	90	24	14,5	140	3500		for vehicles with earth switched rear fog lights please order separately: 300 065 300 005 300 210 300 107 300 210 300 113	-- -- --	A A A	E1 E1 E1	-- -- L1	H V V	15 90 90	B B B	
Jeep Cherokee KJ	09/01- 03/08		342 093 600 001	1705	90	25	14,5	140	3500		for vehicles with earth switched rear fog lights please order separately: 300 065 300 005 300 210 300 107 300 210 300 113	-- -- --	A A A	E1 E1 E1	-- -- L1	H V V	15 90 90	B B B	
Jeep Cherokee Monoflex	03/08-		342 142 600 001	3590	45	35	15,26	140	3500		300 210 300 107 300 210 300 113	-- --	A A	E1 E1	-- L1	V V	90 90	B B	
Jeep Cherokee Monoflex	03/08-		342 131 600 001	3847	90	30	15,26	140	3500		300 210 300 107 300 210 300 113	-- --	A A	E1 E1	-- L1	V V	90 90	B B	
Jeep Commander	05/06-		342 102 600 001	2313	30	9	15,6	150	3500		342 103 300 113	S	A	E1	D	L1	H	90	B
Jeep Commander KIT = towbar inc. electrical kit 13 pins	05/06-		342 102 900 113	2313	30	11	15,6	150	3500		electrical kit 13 pins in the kit: 342 103 300 113	S	A	E1	D	L1	H	90	B
Jeep Commander	05/06-		342 103 600 001	2309	30	11,5	15,6	150	3500		342 103 300 113	S	A	E1	D	L1	H	90	B











Jeep













Jeep Commander KIT = towbar inc. electrical kit 13 pins	05/06-		342 103 900 113	2309	30	13,5	15,6	150	3500	electrical kit 13 pins in the kit: 342 103 300 113	S	A	--	E1	D	L1	H	90	B	
Jeep Compass SIARR	11/06-		342 112 600 001	0080	90	✂	9,94	105	2000	300 210 300 107 300 210 300 113	--	A	--	E1	--	--	V	90	B	
Jeep Compass SIARR	11/06-		342 113 600 001	5118	90	✂	9,94	105	2000	300 210 300 107 300 210 300 113	--	A	--	E1	--	--	V	90	B	
Jeep Grand Cherokee	04/99- 06/05		342 085 600 001	0846	90	✂	23,9	14,3	140	3500	--	FRE	--	E1	--	--	V		B	
Jeep Grand Cherokee exc. SRT8, 6.1 HEMI	06/05- 03/11		342 102 600 001	2313	30	✂	9	15,6	150	3500	-03/06 S	A	--	E1	D	L1	H	75	B	
Jeep Grand Cherokee KIT = towbar inc. electrical kit 13 pins exc. SRT8, 6.1 HEMI	03/06- 03/11		342 102 900 113	2313	30	✂	11	15,6	150	3500	electrical kit 13 pins in the kit: 342 103 300 113	S	A	--	E1	D	L1	H	90	B
Jeep Grand Cherokee exc. SRT8, 6.1 HEMI	06/05- 03/11		342 103 600 001	2309	30	✂	11,5	15,6	150	3500	-03/06 S	A	--	E1	D	L1	H	75	B	
Jeep Grand Cherokee KIT = towbar inc. electrical kit 13 pins exc. SRT8, 6.1 HEMI	03/06- 03/11		342 103 900 113	2309	30	✂	13,5	15,6	150	3500	electrical kit 13 pins in the kit: 342 103 300 113	S	A	--	E1	D	L1	H	90	B
Jeep Grand Cherokee Monoflex	04/11-		342 184 600 001	4354	90	✂	21	15,56	140	3500	S	A	C	E1	D	L1	V	120		
Jeep Grand Cherokee Monoflex	04/11-		342 185 600 001	4343	90	✂	21	15,56	140	3500	S	A	C	E1	D	L1	V	120		
Jeep Grand Cherokee KIT = towbar inc. electrical kit 13 pins Monoflex	04/11-		342 185 900 113	4343	90	✂	23	15,56	140	3500	electrical kit 13 pins in the kit: 342 184 300 113 342 184 300 157	S	A	C	E1	D	L1	V	120	

Jeep Patriot SIARR		08/07-	342 112 600 001	0080	90	✂	18	9,94	105	2000	300 210 300 107	--	A --	E1 --	--	--	V	90	B
											300 210 300 113	--	A --	E1 D1	--	L1	V	90	B
Jeep Patriot SIARR		08/07-	342 113 600 001	5118	90	✂	19,5	9,94	105	2000	300 210 300 107	--	A --	E1 --	--	--	V	90	B
											300 210 300 113	--	A --	E1 D1	--	L1	V	90	B
Jeep Wrangler SIARR		10/96- 04/07	342 120 600 001	0536	60		28	10,05	80	1975	300 072 300 107	--	FRE --	E1 --	--	--	V		B
											300 072 300 113	--	FRE --	E1 D1	--	L1	V		B
Jeep Wrangler SIARR		04/07-	342 104 600 001	0083	60		12	15,04	170	3500	300 072 300 107	--	FRE --	E1 --	--	--	V		B
											300 072 300 113	--	FRE --	E1 D1	--	L1	V		B
Jeep Wrangler SIARR		04/07-	342 105 600 001	0102	60		12	15,04	170	3500	300 072 300 107	--	FRE --	E1 --	--	--	V		B
											300 072 300 113	--	FRE --	E1 D1	--	L1	V		B









Kia

















Kia Carens SIARR discontinued model	10/02- 10/06		345 040 600 001	4246		23	7,51	50	1250		300 061 300 107 300 061 300 113	-- --	C2 C2	-- --	D1 L1	-- L1	H H		B B
Kia Carens Monoflex	10/06-		345 075 600 001	4003		24	9,1	75	1500		300 061 300 107 300 061 300 113	-- --	C2 C2	-- --	D1 L1	-- L1	H H		B B
Kia Carens	10/06-		345 036 600 001	2477		19,5	8,9	75	1500		300 061 300 107 300 061 300 113	-- --	C2 C2	-- --	D1 L1	-- L1	H H		B B
Kia Carens Monoflex	03/12-		345 091 600 001								345 091 300 107 345 091 300 113	S S							
Kia Carens KIT = towbar inc. electrical kit 13 pins Monoflex	03/13-		345 091 900 113								electrical kit 13 pins in the kit: 345 091 300 113	S							
Kia Carens Monoflex	03/12-		345 092 600 001								345 091 300 107 345 091 300 113	S S							
Kia Carens KIT = towbar inc. electrical kit 13 pins Monoflex	03/13-		345 092 900 113								electrical kit 13 pins in the kit: 345 091 300 113	S							
Kia Cee'd 4/5 doors	01/07-		345 027 600 001	2600		16	8,6	75	1500		09/09- 345 028 300 113 -09/09 345 220 300 113	S S S	A -- FRE	-- -- --	D1 -- D	-- L1 L1	V -- V	75 -- 90	B -- L
Kia Cee'd 4/5 doors	01/07-		345 028 600 001	2596		17,5	8,6	75	1500		09/09- 345 028 300 113 -09/09 345 220 300 113	S S S	A -- FRE	-- -- --	D1 -- D	-- L1 L1	V -- V	75 -- 90	B -- L
Kia Cee'd 5 doors Monoflex	06/12-		345 086 600 001	0236		20	8,3	75	1500		345 086 300 107 345 086 300 113	S S	A -- A	-- -- --	E2 D1 D1	-- -- --	V -- V	90 -- 90	B -- B
Kia Cee'd 5 doors KIT = towbar inc. electrical kit 13 pins Monoflex	06/12-		345 086 900 113	0236		22	8,3	75	1500		electrical kit 13 pins in the kit: 345 086 300 113	S	A	--	E2	--	V	90	B

Kia Cee'd Sporty Wagon		07/07-	345 027 600 001	2600	90	✂	16	8,6	75	1500	-09/09	300 073 300 113	--	FRE --	E1 D1	L1	V	90	B				
												09/09-	345 059 300 107	S	A --	E1 --	--	V	75	L			
													09/09-	345 059 300 113	S	A --	E1 D1	L1	V	75	L		
														electrical kit 13 pins in the kit: 345 059 300 113	S	A --	E1 D1	L1	V	75	L		
Kia Cee'd Sporty Wagon KIT = towbar inc. electrical kit 13 pins		09/09-	345 027 900 113	2600	90	✂	18	8,6	75	1500													
												-09/09	300 073 300 113	--	FRE --	E1 D1	L1	V	90	B			
													09/09-	345 059 300 107	S	A --	E1 --	--	V	75	L		
													09/09-	345 059 300 113	S	A --	E1 D1	L1	V	75	L		
Kia Cee'd Sporty Wagon		07/07-	345 059 600 001	2596	90	✂	17,5	8,6	75	1500													
Kia Cee'd Sporty Wagon KIT = towbar inc. electrical kit 13 pins		09/09-	345 059 900 113	2596	90	✂	19,5	8,6	75	1500													
Kia Cee'd sw/Sportswagon Monoflex		10/12-	345 088 600 001	0274	90	✂	20	8,53	75	1500													
Kia Cee'd sw/Sportswagon KIT = towbar inc. electrical kit 13 pins Monoflex		10/12-	345 088 900 113	0274	90	✂	22	8,53	75	1500													
Kia Cee'd sw/Sportswagon Monoflex		10/12-	345 089 600 001	0271	90	✂	23	8,53	75	1500													
Kia Cee'd sw/Sportswagon KIT = towbar inc. electrical kit 13 pins Monoflex		10/12-	345 089 900 113	0271	90	✂	25	8,53	75	1500													
Kia Cerato Hatch- and Notchback Monoflex		04-	345 057 600 001	2849	90	✂	18	8	58	1450													
Kia Magentis Monoflex		02/06-07/09	345 056 600 001	3277	60	✂	19	9,43	75	1700													





















Kia Rio Hatchback	08/05-09/09		345 026 600 001	2120	90	16,5	7,65	50	1100		300 061 300 107 300 061 300 113	--	C2	--	--	--	--	H	B
Kia Rio Hatchback Monoflex	09/09-08/11		345 076 600 001	4175	90	22	6,63	50	1100	✂	300 072 300 107 300 072 300 113	--	FRE	--	E1	--	--	V	B
Kia Rio Hatchback Monoflex	09/09-08/11		345 077 600 001	4174	90	25	6,63	50	1100	✂	300 072 300 107 300 072 300 113	--	FRE	--	E1	--	--	V	B
Kia Rio Hatchback replaced by: 345090600001 Monoflex discontinued model	08/11-08/12		345 084 600 001	4390	45	19	6,75	50	1100		345 084 300 113	S	A	--	--	D1	--	V	75
Kia Rio Hatchback Monoflex	08/11-		345 090 600 001	0264	45	19	6,75	50	1100		345 084 300 113	S	A	--	--	D1	--	V	75
Kia Rio Hatchback KIT = towbar inc. electrical kit 13 pins replaced by: 345090900113 Monoflex discontinued model	08/11-08/12		345 084 900 113	4390	45	21	6,75	50	1100		electrical kit 13 pins in the kit: 345 084 300 113	S	A	--	--	D1	--	V	75
Kia Rio Hatchback KIT = towbar inc. electrical kit 13 pins Monoflex	08/11-		345 090 900 113	0264	45	21	6,75	50	1100		electrical kit 13 pins in the kit: 345 084 300 113	S	A	--	--	D1	--	V	75
Kia Sedona	99-07/06		345 015 600 001	1025	90	19	11,46	80	2000	✂	300 210 300 113	--	A	--	E1	D1	L1	V	90
Kia Sedona Monoflex	05/06-		345 054 600 001	3334	90	30	11,93	80	2000	✂	345 760 300 113	S	FRE	--	E	D1	--	H	60
Kia Sedona Monoflex	05/06-		345 055 600 001	3334	120	29	11,93	80	2000	✂	345 760 300 113	S	FRE	--	E	D1	--	H	60
Kia Sorento	06/02-07/06		345 020 600 001	1579	90	24	14,11	150	2800	✂	300 061 300 107 300 061 300 113	--	C2	--	--	--	--	H	B
Kia Sorento	06/02-07/06		345 021 600 001	1622	90	26	14,9	150	2800	✂	300 061 300 107 300 061 300 113	--	C2	--	--	--	--	H	B








Kia

Kia Sorento Monoflex	07/06- 10/09		345 060 600 001	3350	120	✂	21	14,79	140	3500	345 880 300 113	S	FRE --	E	D1	--	H	60	B
Kia Sorento KIT = towbar inc. electrical kit 13 pins Monoflex	07/06- 10/09		345 060 900 113	3350	120	✂	23	14,79	140	3500	electrical kit 13 pins in the kit: 345 880 300 113	S	FRE --	E	D1	--	H	60	B
Kia Sorento	07/06- 10/09		345 041 600 001	2400	90	✂	24	14,85	140	3500	345 880 300 113	S	FRE --	E	D1	--	H	60	B
Kia Sorento	07/06- 10/09		345 039 600 001	2424	90	✂	25	14,8	150	3500	345 880 300 113	S	FRE --	E	D1	--	H	60	B
Kia Sorento KIT = towbar inc. electrical kit 13 pins	07/06- 10/09		345 039 900 113	2424	90	✂	26	14,8	150	3500	electrical kit 13 pins in the kit: 345 880 300 113	S	FRE --	E	D1	--	H	60	B
Kia Sorento Monoflex	10/09- 10/12		345 066 600 001	4123	90	✂	31	12,64	100	2500	for LED rear lights 345 066 300 113 for standard rear lights 345 068 300 107 for standard rear lights 345 068 300 113	S	A --	E	D	L1	V	90	B
Kia Sorento KIT = towbar inc. electrical kit 13 pins Monoflex	10/09- 10/12		345 066 900 113	4123	90	✂	33	12,64	100	2500	electrical kit 13 pins in the kit:for LED rear lights 345 066 300 113	S	A --	E	D	L1	V	90	B
Kia Sorento KIT = towbar inc. electrical kit 13 pins Monoflex	10/09- 10/12		345 400 900 113	4123	90	✂	33	12,64	100	2500	electrical kit 13 pins in the kit:for standard rear lights 345 068 300 113	S	A --	E	D	L1	V	90	B












Kia Sorento Monoflex discontinued model	10/09- 10/12		345 067 600 001	4123	90		29	12,64	100	2500	for LED rear lights 345 066 300 113 for standard rear lights 345 068 300 107 for standard rear lights 345 068 300 113	S	A	--	E	D	L1	V	90	B	
												S	A	--	E	--	--	V	90	B	
												S	A	--	E	D	L1	V	90	B	
Kia Sorento Monoflex	10/09- 10/12		345 068 600 001	4122	90		32	12,64	100	2500	for LED rear lights 345 066 300 113 for standard rear lights 345 068 300 107 for standard rear lights 345 068 300 113	S	A	--	E	D	L1	V	90	B	
												S	A	--	E	--	--	V	90	B	
												S	A	--	E	D	L1	V	90	B	
Kia Sorento KIT = towbar inc. electrical kit 13 pins Monoflex	10/09- 10/12		345 068 900 113	4122	90		34	12,64	100	2500	electrical kit 13 pins in the kit:for LED rear lights 345 066 300 113	S	A	--	E	D	L1	V	90	B	
												S	A	--	E	D	L1	V	90	B	
Kia Sorento KIT = towbar inc. electrical kit 13 pins Monoflex	10/09- 10/12		345 401 900 113	4122	90		34	12,64	100	2500	electrical kit 13 pins in the kit:for standard rear lights 345 068 300 113	S	A	--	E	D	L1	V	90	B	
												S	A	--	E	D	L1	V	90	B	
Kia Sorento	10/12-		345..2600001								345 069 300 113	S									
Kia Sorento	10/12-		345..3600001								345 069 300 113	S									
Kia Soul and Soul II Monoflex	02/09-		345 065 600 001	3936	90		24	7,99	60	1400	300 210 300 107 300 210 300 113	--	A	--	E1	--	--	V	90	B	
												--	A	--	E1	D1	L1	V	90	B	
Kia Sportage	12/04- 08/10		346 018 600 001	1860	90		20,6	10,9	90	2200	345 480 300 113	S	FRE	--	E1	D1	L1	H	60	L	
Kia Sportage KIT = towbar inc. electrical kit 13 pins	12/04- 08/10		345 073 900 113	1860	90		22,6	10,9	90	2200	electrical kit 13 pins in the kit: 345 480 300 113	S	FRE	--	E1	D1	L1	H	60	L	
												S	FRE	--	E1	D1	L1	H	60	L	







Kia

Kia Sportage	12/04-08/10		346 019 600 001	1972	90		23,5	10,9	90	2200		345 480 300 113	S	FRE --	E1	D1	L1	H	60	L
Kia Sportage KIT = towbar inc. electrical kit 13 pins	12/04-08/10		345 074 900 113	1972	90		25,5	10,9	90	2200		electrical kit 13 pins in the kit: 345 480 300 113	S	FRE --	E1	D1	L1	H	60	L
Kia Sportage replaced by: 345087600001 Monoflex discontinued model	08/10-		346 048 600 001	4143	90		23	10,96	80	2400		345 079 300 113	S	A --	E	D1	L1	V	90	B
Kia Sportage Monoflex	08/10-		345 087 600 001	4143	90		23	10,96	80	2400		345 079 300 113	S	A --	E	D1	L1	V	90	B
Kia Sportage KIT = towbar inc. electrical kit 13 pins replaced by: 345087900113 Monoflex discontinued model	08/10-		345 078 900 113	4143	90		25	10,96	80	2400		electrical kit 13 pins in the kit: 345 079 300 113	S	A --	E	D1	L1	V	90	B
Kia Sportage KIT = towbar inc. electrical kit 13 pins Monoflex	08/10-		345 087 900 113	4143	90		25	10,96	80	2400		345 079 300 113	S	A --	E	D1	L1	V	90	B
Kia Sportage Monoflex	08/10-		345 079 600 001	4297	60		25	10,65	80	2300		345 079 300 113	S	A --	E	D1	L1	V	90	B
Kia Sportage KIT = towbar inc. electrical kit 13 pins Monoflex	08/10-		345 079 900 113	4297	60		27	10,65	80	2300		electrical kit 13 pins in the kit: 345 079 300 113	S	A --	E	D1	L1	V	90	B
Kia Venga Monoflex	03/10-		345 069 600 001	4125	90		20	7,65	60	1300		346 046 300 107 346 064 300 113	S	A --	--	--	--	V	75	B
Kia Venga Monoflex	03/10-		345 070 600 001	4114	90		21	7,65	60	1300		346 046 300 107 346 064 300 113	S	A --	--	--	--	V	75	B











Lancia Delta For vehicles 1,4 Turbojet 120 and 140 HP please order separately supports for the exhaust at Lancia dealers, ref. 51809585 and 51823864.	09/08-		306 274 600 001	2851	60	✂	22	7,7	90	1300		306 640 300 113	S	FRE --	E	D1	L1	V	120	L
Lancia Delta For vehicles 1,4 Turbojet 120 and 140 HP please order separately supports for the exhaust at Lancia dealers, ref. 51809585 and 51823864.	09/08-		306 275 600 001	2852	60	✂	23	7,7	90	1300		306 640 300 113	S	FRE --	E	D1	L1	V	120	L
Lancia Musa SIARR discontinued model	10/04- 10/07		306 325 600 001	5577			19	6,8	60	1100		discontinued model: 306 240 300 107 306 240 300 113	S S	FRE -- FRE --	E E	-- D1	-- L1	H H	45 45	B B
Lancia Musa	10/04-		306 353 600 001	2646	180	✂	18	6,8	80	1200		discontinued model -09/07 306 240 300 107 -09/07 306 240 300 113 10/07- 306 353 300 113	S S S	FRE -- FRE -- FRE --	E E E	-- D1 D	-- L1 --	H H V	45 45 120	B B B
Lancia Phedra SIARR	09/02-		315 098 600 001	0986	75	✂	19,8	10,8	100	1900		10/05- 304 400 300 107 10/05- 304 400 300 113 -09/05 315 097 300 107 -09/05 315 097 300 113	S S S S	CAN C1 CAN C1 FRE -- FRE --	E E E E	-- D -- D1	-- L1 -- L1	V V H H		B B B B
Lancia Phedra KIT = towbar inc. electrical kit 13 pins SIARR	10/05-		315 098 900 113	0986	75	✂	21,8	10,8	100	1900		electrical kit 13 pins in the kit: 304 400 300 113	S	CAN C1	E	D	L1	V		B
Lancia Phedra discontinued model	09/02-		315 117 600 001	0991	75	✂	23	10,8	100	1900		10/05- 304 400 300 107 10/05- 304 400 300 113 -09/05 315 097 300 107 -09/05 315 097 300 113	S S S S	CAN C1 CAN C1 FRE -- FRE --	E E E E	-- D -- D1	-- L1 -- L1	V V H H		B B B B











Lancia

Lancia Phedra	09/02-		315 097 600 001	0989	75	✂	22	10,8	100	1900		10/05- 304 400 300 107 10/05- 304 400 300 113 -09/05 315 097 300 107 -09/05 315 097 300 113	S CAN C1 S CAN C1 S FRE -- S FRE --	E -- E D L1 E -- E D1 L1 H 45	-- L1 V -- L1 H 45	B B B B
Lancia Phedra KIT = towbar inc. electrical kit 13 pins	10/05-		315 097 900 113	0989	75	✂	24	10,8	100	1900		electrical kit 13 pins in the kit: 304 400 300 113	S CAN C1	E D L1 V		B
Lancia Thema Monoflex	11/11-		306 390 600 001	4473	90	✂	18	11,85	80	2000		300 078 300 113	-- FRE --	E1 D1 L1 V		B
Lancia Thema KIT = towbar inc. electrical kit 13 pins Monoflex	11/11-		306 390 900 113	4473	90	✂	20	11,85	80	2000		electrical kit 13 pins in the kit: 300 078 300 113	-- FRE --	E1 D1 L1 V		B
Lancia Thema Monoflex	11/11-		306 391 600 001	4452	90	✂	18	11,85	80	2000		300 078 300 113	-- FRE --	E1 D1 L1 V		B
Lancia Thema KIT = towbar inc. electrical kit 13 pins Monoflex	11/11-		306 391 900 113	4452	90	✂	20	11,85	80	2000		electrical kit 13 pins in the kit: 300 078 300 113	-- FRE --	E1 D1 L1 V		B
Lancia Voyager Monoflex	11/11-		342 124 600 001	3744	120	✂	31	10,38	85	1700		300 078 300 113	-- FRE --	E1 D1 L1 V		B
Lancia Voyager Monoflex	11/11-		342 125 600 001	3744	120	✂	31	10,38	85	1700		300 078 300 113	-- FRE --	E1 D1 L1 V		B
Lancia Y discontinued model	02/96- 09/03		306 164 600 001	0167	>150	✂	15,8	6,8	75	1200		300 060 300 107 300 060 300 113	-- C2 -- -- C2 --	-- -- D1 L1 H 45 D1 L1 H 45		B B
Lancia Ypsilon	10/03- 12/06		306 246 600 001	1230	180	✂	18	6,63	75	1200		306 540 300 113	S FRE --	E D -- V 105		L
Lancia Ypsilon	01/07- 07/11		306 321 600 001	2617	180	✂	18	6,9	75	1200		306 540 300 113	S FRE --	E D -- V 105		L

















Lancia Ypsilon	07/11-		3394	60		19	6,1	70	1000	306 383 300 113	S	FRE --	D1	--	V	105	
Lancia Ypsilon	07/11-		3395	60		19,5	6,1	70	1000	306 383 300 113	S	FRE --	D1	--	V	105	
Lancia Zeta	09/94- 08/02		0010	60		15,5	10,9	100	2000	300 060 300 107	--	C2	--	--	H	45	B
										300 060 300 113	--	C2	--	--	L1	45	B









Land Rover



















Land Rover Defender 110/131 Towing bracket for towball or automatic bolt coupling, suitable towball 329062600001(not included), or 20 mm lower: 329042600001(not included)	09/98-		323 049 600 001	0637	90		10,3	17,2	150	3500		323 048 300 107 323 048 300 113	S S	C2 C2	-- --	-- D	-- --	H H	45 45	B B	
Land Rover Defender 90 Towing bracket for towball or automatic bolt coupling, suitable towball 329062600001(not included), or 20 mm lower: 329042600001(not included)	09/98-		323 048 600 001	0637	90		10,3	17,2	150	3500		323 048 300 107 323 048 300 113	S S	C2 C2	-- --	-- D	-- --	H H	45 45	B B	
Land Rover Discovery The vehicle already has a built in towball receptor. Please order additional equipment with Land Rover dealers.	11/04-																			L	
Land Rover Freelander	98-05/07		323 040 600 001	0553	90		17,4	11,8	140	2500		300 096 300 157 300 096 300 163 discontinued model: 323 040 300 113	-- -- S	-- -- C2	-- -- --	-- D1 D1	-- L1 L1	V V H	30 30 45	B B B	
Land Rover Freelander	98-05/07		323 085 600 001	2298	90		17,8	11,8	140	2500		300 096 300 157 300 096 300 163 discontinued model: 323 040 300 113	-- -- S	-- -- C2	-- -- --	-- D1 D1	-- L1 L1	V V H	30 30 45	B B B	
Land Rover Freelander 2	05/07-		323 078 600 001	2587	105		18,5	11	150	2000		-10/12 323 410 300 113	S	FRE	--	E2	D	L1	H	60	B
Land Rover Freelander 2 discontinued model	05/07-		323 091 600 001	2594	105		19	11	150	2000		-10/12 323 410 300 113	S	FRE	--	E2	D	L1	H	60	B
Land Rover Freelander 2	05/07-		323 079 600 001	2595	105		20	11	150	2000		-10/12 323 410 300 113	S	FRE	--	E2	D	L1	H	60	B
Range Rover L322 (with BMW-motor) cross bar only Please use in conjunction with 323062600001 or 323063600001.	02/02-05/05		323 064 600 001	0888	150		32,5	16,4	150	3500		323 064 300 113	S	FRE	--	E	D	L	H	30	B

Range Rover L322 (with Jaguar-motor) cross bar only Please use in conjunction with 323062600001 or 323063600001. Vogue = visible cut	05/05-				0888	150	✂	33	16,4	150	3500	-09/09 323 064 300 113 09/09-chassis no. AA ... 323 074 300 113	S	FRE --	E	D	L	H	30	B	
Range Rover L322 Mounting tube inc. detachable towball, storage bowl and fitting material (only in connection with 323064600001 or 323074600001)	02/02-				0887	150		15	16,4	150	3500	-09/09 323 064 300 113 09/09-chassis no. AA ... 323 074 300 113	S	FRE --	E	D	L	H	30	B	
Range Rover L322 Mounting tube inc. towball and fitting material (only in connection with 323064600001 or 323074600001)	02/02-				0888	150		15	16,4	150	3500	-09/09 323 064 300 113 09/09-chassis no. AA ... 323 074 300 113	S	FRE --	E	D	L	H	30	B	
Range Rover Sport The vehicle already has a built in towball receptor. Please order additional equipment with Land Rover dealers.	03/05-																				L
Range-Rover Evoque Monoflex	09/11-				0233	90		18	10	100	1800	323 102 300 113	S	C2 --	--	D	L	H	30	B	
Range-Rover Evoque KIT = towbar inc. electrical kit 13 pins Monoflex	09/11-				0233	90		20	10	100	1800	323 102 300 113	S	C2 --	--	D	L	H	30	B	
Range-Rover Evoque Monoflex	09/11-				0198	90	✂	20	10	100	1800	323 102 300 113	S	C2 --	--	D	L	H	30	B	
Range-Rover Evoque KIT = towbar inc. electrical kit 13 pins Monoflex	09/11-				0198	90	✂	22	10	100	1800	electrical kit 13 pins in the kit: 323 102 300 113	S	C2 --	--	D	L	H	30	B	
Range-Rover L405	01/13-				3561	120			16,6	200	3500	323 107 300 113	S								





















Lexus














Lexus IS 250/220d	06-		335 355 600 001	2439	90		26,4	9	75	1500		300 210 300 113	--	A --	E1 --	D1 --	L1 --	V --	90	B
Lexus RX 300	03/03-09		335 305 600 001	1564	120		45	11,8	80	2000		335 357 300 107 335 357 300 113	S FRE -- S FRE --	E2 -- E2 D	-- L1	-- L1	V -- V	90 90	B B	
Lexus RX 300 / 400	03/03-09		335 305 600 001	1564	120		45	11,8	80	2000		335 357 300 107 335 357 300 113	S FRE -- S FRE --	E2 -- E2 D	-- L1	-- L1	V -- V	90 90	B B	
Lexus RX 350 / 450 h exc. vehicles with height control Monoflex	05/09-		335 357 600 001	4162	90		38	11,8	85	2100		335 357 300 107 335 357 300 113	S FRE -- S FRE --	E2 -- E2 D	-- L1	-- L1	V -- V	90 90	B B	
Lexus RX 350 / 450 h KIT = towbar inc. electrical kit 13 pins exc. vehicles with height control Monoflex	05/09-		335 357 900 113	4162	90		40	11,8	85	2100		electrical kit 13 pins in the kit: 335 357 300 113	S FRE --	E2 D	L1	V	90	B		
Lexus RX 350 / 450 h for vehicles with height control Monoflex	05/09-		335 358 600 001	3405	90		38	11,86	85	2100		335 357 300 107 335 357 300 113	S FRE -- S FRE --	E2 -- E2 D	-- L1	-- L1	V -- V	90 90	B B	
Lexus RX 350 / 450 h KIT = towbar inc. electrical kit 13 pins for vehicles with height control Monoflex	05/09-		335 358 900 113	3405	90		40	11,86	85	2100		electrical kit 13 pins in the kit: 335 357 300 113	S FRE --	E2 D	L1	V	90	B		
Lexus RX 400 h	03/05-09		335 305 600 001	1564	120		45	11,8	80	2000		335 357 300 107 335 357 300 113	S FRE -- S FRE --	E2 -- E2 D	-- L1	-- L1	V -- V	90 90	B B	

Mazda 2	10/07-		343 045 600 001	2825	60	✂	17	7	50	1100		343 060 300 113	S	FRE --	E	D1	--	H	45	L
Mazda 2 inc. vehicles with sport optics package	10/07-		343 047 600 001	2307	60	✂	18,5	7	50	1100		343 060 300 113	S	FRE --	E	D1	--	H	45	L
Mazda 3 Hatchback inc. 06/09 - hatchback exc. MPS-260HP, MKS & 09 - Saloon	10/03-		343 038 600 001	1783	60	✂	21,5	8,7	75	1590		-03/09 300 072 300 107 -03/09 300 072 300 113 03/09- 343 066 300 107 03/09- 343 066 300 113	-- FRE -- -- S S	E1 -- E1 -- S S	E1 -- E1 -- A -- A --	-- D1 -- D1 --	-- L1 -- L1 --	V V V V	B B B B	
Mazda 3 Hatchback KIT = towbar inc. electrical kit 13 pins inc. 06/09 - hatchback exc. MPS-260HP, MKS & 09 - Saloon	03/09-		343 038 900 113	1783	60	✂	23,5	8,7	75	1590		electrical kit 13 pins in the kit: 343 066 300 113	S	A --	E1	D1	--	V	75	B
Mazda 3 Notchback inc. 06/09 - hatchback exc. MPS-260HP, MKS & 09 - Saloon	10/03- 03/09		343 038 600 001	1783	60	✂	21,5	8,7	75	1590		300 072 300 107 300 072 300 113	-- --	FRE -- FRE --	E1 -- E1 --	-- D1	-- L1	V V	B B	
Mazda 5 -12/07: The fog tail light must be moved. Please order separately reversion kit, order no. CC29-V7-250 at Mazda dealers. inc. facelift 01/08- Monoflex	06/05- 10/10		343 060 600 001	1992	90	✂	21	9,3	75	1600		343 660 300 113	S	FRE --	E1	D1	L1	V	105	B
Mazda 5 -12/07: The fog tail light must be moved. Please order separately reversion kit, order no. CC29-V7-250 at Mazda dealers. inc. facelift 01/08-	06/05- 10/10		343 040 600 001	2016	90	✂	22	9,3	75	1600		343 660 300 113	S	FRE --	E1	D1	L1	V	105	B
Mazda 5 KIT = towbar inc. electrical kit 13 pins -12/07: The fog tail light must be moved. Please order separately reversion kit, order no. CC29-V7-250 at Mazda dealers. inc. facelift 01/08-	06/05- 10/10		343 040 900 113	2016	90	✂	24	9,3	75	1600		electrical kit 13 pins in the kit: 343 660 300 113	S	FRE --	E1	D1	L1	V	105	B















Mazda 6 Estate	02/13-		343 071 600 001																	S	343 071 300 107 343 071 300 113													
Mazda 6 Estate KIT = towbar inc. electrical kit 13 pins	02/13-		343 071 900 113																	S	electrical kit 13 pins in the kit: 343 071 300 113													
Mazda 6 Hatchback/Saloon Monoflex	03/08- 02/13		343 048 600 001	3787	120		22	9,83	75	1800										S	343 400 300 107 343 400 300 113												V 90 L1 V 90 B B	
Mazda 6 Hatchback/Saloon KIT = towbar inc. electrical kit 13 pins Monoflex	03/08- 02/13		343 048 900 113	3787	120		24	9,83	75	1800										S	electrical kit 13 pins in the kit: 343 400 300 113												E2 D1 L1 V 90 E2 D1 L1 V 90 B B	
Mazda 6 Hatchback/Saloon Monoflex discontinued model	03/08- 02/13		343 059 600 001	3787	120		22	9,83	75	1800										S	343 400 300 107 343 400 300 113												V 90 L1 V 90 B B	
Mazda 6 Hatchback/Saloon Monoflex	03/08- 02/13		343 058 600 001	3912	120		26	9,83	75	1800										S	343 400 300 107 343 400 300 113												V 90 L1 V 90 B B	
Mazda 6 Hatchback/Saloon KIT = towbar inc. electrical kit 13 pins Monoflex	03/08- 02/13		343 058 900 113	3912	120		28	9,83	75	1800										S	electrical kit 13 pins in the kit: 343 400 300 113												E2 D1 L1 V 90 E2 D1 L1 V 90 B B	
Mazda 6 Hatchback/Saloon	02/13-		343 070 600 001																	S	343 071 300 107 343 071 300 113													
Mazda 6 Hatchback/Saloon KIT = towbar inc. electrical kit 13 pins	02/13-		343 070 900 113																	S	electrical kit 13 pins in the kit: 343 071 300 113													
Mazda 6 Hatchback/Saloon	02/13-		343 071 600 001																	S	343 071 300 113 343 071 300 113													
Mazda 6 Hatchback/Saloon KIT = towbar inc. electrical kit 13 pins	02/13-		343 071 900 113																	S	electrical kit 13 pins in the kit: 343 071 300 113													
Mazda 6 Saloon exc. MPS - 260 HP	06/02- 03/08		343 034 600 001	1613	150		20,3	9,4	75	1800										S	discontinued model: 343 037 300 113 343 400 300 107 343 400 300 113												D1 H 60 E2 V 90 E2 D1 L1 V 90 B B	









Mazda

Mazda 6 Saloon exc. MPS - 260 HP For facelift (from approx. middle of 2006) a larger cutout is necessary.	06/02- 03/08		343 043 600 001	2137	150		20	9,4	75	1800	discontinued model: 343 037 300 113 343 400 300 107 343 400 300 113	S S S	FRE A A	-- E2 E2	-- D1 D1	L1 -- L1	H V V	60 90 90	B B B	
Mazda 626 Estate type GW discontinued model	03/98- 06/02		343 021 600 001	0507	90		21,1	8,9	75	1800		-- --	FRE FRE	E1 E1	-- D1	V L1	V V	B B		
Mazda 626 Saloon type GF, saloon and hatchback discontinued model	97- 05/02		343 020 600 001	0761	90		20,3	8,9	75	1800		-- --	FRE FRE	E1 E1	-- D1	V L1	V V	B B		
Mazda CX5 Monoflex	04/12-		343 053 600 001	0239	90		22	10,8	100	2100		S S	A A	-- E2	-- D	V L1	V V	90 90	B B	
Mazda CX5 KIT = towbar inc. electrical kit 13 pins Monoflex	04/12-		343 053 900 113	0239	90		24	10,8	100	2100	electrical kit 13 pins in the kit: 343 056 300 113	S	A	--	E2	D	L1	V	90	B
Mazda CX5 Monoflex	04/12-		343 056 600 001	0234	90		25	10,8	100	2100		S S	A A	-- E2	-- D	V L1	V V	90 90	B B	
Mazda CX5 KIT = towbar inc. electrical kit 13 pins Monoflex	04/12-		343 056 900 113	0234	90		27	10,8	100	2100	electrical kit 13 pins in the kit: 343 056 300 113	S	A	--	E2	D	L1	V	90	B
Mazda CX7 Monoflex	10/07-		343 066 600 001	4158	90		22	10,8	85	2000	discontinued model: 343 067 300 113 343 400 300 107 343 400 300 113	S S S	FRE A A	-- E2 E2	D1 -- D1	L1 -- L1	V V V	90 90 90	B B B	
Mazda CX7 KIT = towbar inc. electrical kit 13 pins Monoflex	10/07-		343 066 900 113	4158	90		24	10,8	85	2000	electrical kit 13 pins in the kit: 343 400 300 113	S	A	--	E2	D1	L1	V	90	B
Mazda CX7 Monoflex	10/07-		343 067 600 001	4157	90		25	10,8	85	2000	discontinued model: 343 067 300 113 343 400 300 107 343 400 300 113	S S S	FRE A A	-- E2 E2	D1 -- D1	L1 -- L1	V V V	90 90 90	B B B	









Mazda CX7 KIT = towbar inc. electrical kit 13 pins Monoflex	10/07-		343 067 900 113	4157	90		27	10,8	85	2000	electrical kit 13 pins in the kit: 343 400 300 113	S A --	E2 D1	L1 V	90	B
Mazda Pickup BT50 4 WD SIARR	12/06-		307 376 600 001	0071	60		32	14,88	150	3000	307 376 300 113	S C2 --	-- D	-- V		B
Mazda Pickup BT50 Monoflex	06/12-		307 443 600 001	0260	90		41	17,17	200	3500	343 069 300 113	S CAN	E D	-- V	60	
Mazda Pickup BT50 KIT = towbar inc. electrical kit 13 pins Monoflex	06/12-		307 443 900 113	0260	90		43	17,17	200	3500	electrical kit 13 pins in the kit: 343 069 300 113	S CAN	E D	-- V	60	
Mazda Premacy	99- 06/05		343 033 600 001	0880	120		16	8,4	80	1600	300 072 300 107 300 072 300 113	-- FRE -- -- FRE --	E1 -- E1 D1	-- V L1 V		B B
Mazda Serie B SIARR	-12/06		307 372 600 001	2531	60		32	14,11	100	2800	300 052 300 107 300 052 300 113	-- FRE -- -- FRE --	-- D1	-- V		B B
Mazda Tribute (same construction as Ford Maverick) exc. vehicles with spare wheel under the vehicle's floor discontinued model	03/01- 04		307 276 600 001	1079	>150		20	9,5	75	1700	300 072 300 107 300 072 300 113	-- FRE -- -- FRE --	E1 -- E1 D1	-- V L1 V		B B
Mazda Tribute year of construction: 2005	03/04-		307 339 600 001	1848	150		20	10	80	2000	300 072 300 107 300 072 300 113	-- FRE -- -- FRE --	E1 -- E1 D1	-- V L1 V		B B
Mazda Tribute year of construction: 2005 discontinued model	03/04-		307 340 600 001	1975	150		21	10	80	2000	300 072 300 107 300 072 300 113	-- FRE -- -- FRE --	E1 -- E1 D1	-- V L1 V		B B









Mercedes-Benz

Mercedes 190 all models W201 exc. 16-V and Sportline	10/88-		313 072 600 001	0075	>150		21,1	8,1	75	1500		300 072 300 107 discontinued model: 313 072 300 107	-- S	FRE -- FRE --	E1 -- --	-- --	-- --	V V	90 90	B L
Mercedes A Class W168 inc. vehicles with facelift and vehicles with long wheelbase from approx. 04/01, exc. AMG (former no. 313128600001) Please check the operating instructions of the vehicle before fitting the towbar.	97-09/04		313 185 600 001	0227	120		13	6,2	50	1000		313 120 300 107 313 120 300 113	S S	FRE -- FRE --	E -- E	-- D	H L1	H H	45 45	L L
Mercedes A Class KIT = towbar inc. electrical kit 13 pins W168 inc. vehicles with facelift and vehicles with long wheelbase from approx. 04/01, exc. AMG Please check the operating instructions of the vehicle before fitting the towbar.	97-09/04		313 185 900 113	0227	120		15	6,2	50	1000		electrical kit 13 pins in the kit: 313 120 300 113	S	FRE --	E	D	L1	H	45	L
Mercedes A Class W168 inc. vehicles with facelift and vehicles with long wheelbase from approx. 04/01, exc. AMG (former no. 313129600001) Please check the operating instructions of the vehicle before fitting the towbar.	97-09/04		313 183 600 001	0242	120		14,5	6,2	50	1000		313 120 300 107 313 120 300 113	S S	FRE -- FRE --	E -- E	-- D	H L1	H H	45 45	L L
Mercedes A Class W169 Please check the operating instructions of the vehicle before fitting the towbar.	09/04-		313 171 600 001	1707	120		18	8,5	80	1500		discontinued model: 313 122 300 107 313 122 300 113 313 231 300 107	S S S	CAN C CAN C CAN C	E -- E D1 E --	-- -- --	V V V	90 90 90	L L B	
Mercedes A Class KIT = towbar inc. electrical kit 13 pins W169 Please check the operating instructions of the vehicle before fitting the towbar.	09/04-		313 171 900 113	1704	120		19	8,5	80	1500		electrical kit 13 pins in the kit: 313 231 300 113	S	CAN C	E	D1	L1	V	90	B
Mercedes A Class W169 Please check the operating instructions of the vehicle before fitting the towbar.	09/04-		313 231 600 001	1708	120		18	8,5	80	1500		discontinued model: 313 122 300 107 313 122 300 113 313 231 300 107	S S S	CAN C CAN C CAN C	E -- E D1 E --	-- -- --	V V V	90 90 90	L L B	






Mercedes A Class KIT = towbar inc. electrical kit 13 pins W169 Please check the operating instructions of the vehicle before fitting the towbar.	09/04-		313 231 900 113	1708	120	∞	19,5	8,5	80	1500		electrical kit 13 pins in the kit: 313 231 300 113	S	CAN	C	E	D1	L1	V	90	B
Mercedes A Class W176 Please check the operating instructions of the vehicle before fitting the towbar.	09/12-		313 396 600 001	3437	60		23	9,2	80	1500		313 398 300 107 313 398 300 113	S	CAN	C	E	--	--	V		
Mercedes A Class KIT = towbar inc. electrical kit 13 pins W176 Please check the operating instructions of the vehicle before fitting the towbar.	09/12-		313 396 900 113	3437	60		25	9,2	80	1500		electrical kit 13 pins in the kit: 313 398 300 113	S	CAN	C	E	D	L	V		
Mercedes A Class W176 Please check the operating instructions of the vehicle before fitting the towbar.	09/12-		313 398 600 001	3438	60		25	9,2	80	1500		313 398 300 107 313 398 300 113	S	CAN	C	E	--	--	V		
Mercedes A Class KIT = towbar inc. electrical kit 13 pins W176 Please check the operating instructions of the vehicle before fitting the towbar.	09/12-		313 398 900 113	3438	60		27	9,2	80	1500		electrical kit 13 pins in the kit: 313 398 300 113	S	CAN	C	E	D	L	V		
Mercedes A Class KIT = towbar inc. electrical kit 13 pins W176 Please check the operating instructions of the vehicle before fitting the towbar.	09/12-		313 386 600 001	3485	60	∞	29,5	9,2	80	1500		electrical kit 13 pins in the kit: 313 386 300 143	S							90	L
Mercedes Atego towing bracket with integral underrun guard (supply in pairs only: 31340460002 + 31340460003) Please check tolerances when mounting (measures see "Universal HGV towing brackets"). swap system or automatic bolt coupling permitted suitable towball: 32906060001	97-		313 404 600 001	0534	90		61	25,1	150	3500		for 12V vehicles: 300 201 300 113	--	A	--	--	D1	--	V		B
Mercedes B Class W245 Please check the operating instructions of the vehicle before fitting the towbar.	06/05-		313 171 600 001	1707	120	∞	18	8,5	80	1500		discontinued model: 313 122 300 107 313 122 300 113 313 231 300 107	S	CAN	C	E	--	--	V	90	L
													S	CAN	C	E	D1	--	V	90	L
													S	CAN	C	E	--	--	V	90	L







Mercedes-Benz

Mercedes B Class KIT = towbar inc. electrical kit 13 pins W245 Please check the operating instructions of the vehicle before fitting the towbar.	06/05-		313 171 900 113	1707	120	✂	19	8,5	80	1500	electrical kit 13 pins in the kit: 313 231 300 113	S CAN C	E D1	L1	V	90	B
Mercedes B Class W245 Please check the operating instructions of the vehicle before fitting the towbar.	06/05-		313 231 600 001	1708	120	✂	18	8,5	80	1500	discontinued model: 313 122 300 107 313 122 300 113 313 231 300 107	S CAN C S CAN C S CAN C	E -- E D1 E --	-- -- --	V V V	90 90 90	L L B
Mercedes B Class KIT = towbar inc. electrical kit 13 pins W245 Please check the operating instructions of the vehicle before fitting the towbar.	06/05-		313 231 900 113	1708	120	✂	19,5	8,5	80	1500	electrical kit 13 pins in the kit: 313 231 300 113	S CAN C	E D1	L1	V	90	B
Mercedes B Class W246 Please check the operating instructions of the vehicle before fitting the towbar.	11/11-		313 396 600 001	3437	60		23	9,2	80	1500	313 398 300 107 313 398 300 113	S CAN C S CAN C	E -- E D	-- L	V V		
Mercedes B Class KIT = towbar inc. electrical kit 13 pins W246 Please check the operating instructions of the vehicle before fitting the towbar.	11/11-		313 396 900 113	3437	60		25	9,2	80	1500	electrical kit 13 pins in the kit: 313 398 300 113	S CAN C	E D	L	V		
Mercedes B Class W246 Please check the operating instructions of the vehicle before fitting the towbar.	11/11-		313 398 600 001	3438	60		25	9,2	80	1500	313 398 300 107 313 398 300 113	S CAN C S CAN C	E -- E D	-- L	V V		
Mercedes B Class KIT = towbar inc. electrical kit 13 pins W246 Please check the operating instructions of the vehicle before fitting the towbar.	11/11-		313 398 900 113	3438	60		27	9,2	80	1500	electrical kit 13 pins in the kit: 313 398 300 113	S CAN C	E D	L	V		
Mercedes B Class KIT = towbar inc. electrical kit 13 pins W246 Please check the operating instructions of the vehicle before fitting the towbar.	11/11-		313 386 600 001	3485	60	✂	29,5	9,2	80	1500	electrical kit 13 pins in the kit: 313 386 300 143	S				90	L






Mercedes C Class Coupé C204 + C204 AMG style	06/11-		313 214 600 001	2642	>150	✂	21	10,2	75	1900		discontinued model: 313 212 300 107 313 212 300 113 313 361 300 107	S CAN S CAN S CAN	C C C	E D E	-- L --	H H H	30 30 60	B B B	
Mercedes C Class Coupé KIT = towbar inc. electrical kit 13 pins C204 + C204 AMG style	06/11-		313 389 900 113	2642	>150	✂	23	10,2	75	1900		electrical kit 13 pins in the kit: 313 361 300 113	S CAN	C	E	D1	L1	H	60	B
Mercedes C Class Coupé C204 + C204 AMG style	06/11-		313 438 600 001	3420	120	✂	23	10,2	75	1900		discontinued model: 313 212 300 107 313 212 300 113 313 361 300 107	S CAN S CAN S CAN	C C C	E D E	-- L --	H H H	30 30 60	B B B	
Mercedes C Class Coupé KIT = towbar inc. electrical kit 13 pins C204 + C204 AMG style	06/11-		313 211 900 113	2488	>150	✂	25	10,2	75	1900		electrical kit 13 pins in the kit: 313 361 300 113	S CAN	C	E	D1	L1	H	60	B
Mercedes C Class Estate S202 Monoflex	05/96- 05/01		313 420 600 001	4161	120		20	9,59	75	1700		313 082 300 107 313 082 300 113	S FRE S FRE	-- --	E D	-- --	H H	90 90	L B	
Mercedes C Class Estate S202	05/96- 05/01		313 082 600 001	0019	>150		17,2	9,1	75	1700		313 082 300 107 313 082 300 113	S FRE S FRE	-- --	E D	-- --	H H	90 90	L B	
Mercedes C Class Estate S203 with steel springs, exc. Sport Coupé, exc. CLK from 05/02, exc. AMG Please check the operating instructions of the vehicle before fitting the towbar.	06/01- 09/07		313 166 600 001	0892	>150		22	9,1	75	1600		313 168 300 107 313 168 300 113	S CAN S CAN	C C	E D	-- --	H H	60 60	B B	
Mercedes C Class Estate KIT = towbar inc. electrical kit 13 pins S203 with steel springs, exc. Sport Coupé, exc. CLK from 05/02, exc. AMG exc. 4x4 Please check the operating instructions of the vehicle before fitting the towbar.	06/01- 09/07		313 166 900 113	0892	>150		24	9,1	75	1600		electrical kit 13 pins in the kit: 313 168 300 113	S CAN	C	E	D	--	H	60	B



Mercedes-Benz

Mercedes C Class Estate S203 with steel springs, exc. Sport Coupé, exc. CLK from 05/02, exc. AMG exc. 4x4 Please check the operating instructions of the vehicle before fitting the towbar.		313 167 600 001	0891	>150	23,8	9,1	75	1600	313 168 300 107 313 168 300 113	S CAN S CAN	C C	E E	-- --	H H	60 60	B B
Mercedes C Class Estate KIT = towbar inc. electrical kit 13 pins S203 with steel springs, exc. Sport Coupé, exc. CLK from 05/02, exc. AMG exc. 4x4 Please check the operating instructions of the vehicle before fitting the towbar.		313 167 900 113	0891	>150	25,5	9,1	75	1600	electrical kit 13 pins in the kit: 313 168 300 113	S CAN S CAN	C C	E E	-- --	H H	60 60	B B
Mercedes C Class Estate S203 with pneumatic springs, exc. Sport Coupé, exc. CLK from 05/02, exc. AMG exc. 4x4 Please check the operating instructions of the vehicle before fitting the towbar. discontinued model		313 168 600 001	0892	>150	22	9,1	75	1600	313 168 300 107 313 168 300 113	S CAN S CAN	C C	E E	-- --	H H	60 60	B B
Mercedes C Class Estate S204 exc. vehicles with height control, exc. AMG & sport bumpers Please check the operating instructions of the vehicle before fitting the towbar.		313 214 600 001	2642	>150	21	10,2	75	1900	-07/09 313 210 300 107 -07/09 313 210 300 113 discontinued model 07/09- 313 212 300 107 07/09- 313 212 300 113 07/09- 313 361 300 107	S CAN S CAN S CAN S CAN S CAN	C C C C C	E E E E E	-- -- L -- L --	H H H H H	60 60 60 30 30 60	B B B B B
Mercedes C Class Estate KIT = towbar inc. electrical kit 13 pins S204 exc. vehicles with height control, exc. AMG & sport bumpers Please check the operating instructions of the vehicle before fitting the towbar.		313 214 900 113	2642	>150	23	10,2	75	1900	electrical kit 13 pins in the kit: 313 210 300 113	S CAN S CAN	C C	E E	-- --	L L	60 60	B B









<p>Mercedes C Class Estate KIT = towbar inc. electrical kit 13 pins S204 exc. vehicles with height control, exc. AMG & sport bumpers Please check the operating instructions of the vehicle before fitting the towbar.</p>		<p>07/09-</p>	<p>313 389 900 113</p>	<p>2642</p>	<p>>150</p>		<p>23</p>	<p>10,2</p>	<p>75</p>	<p>1900</p>	<p>electrical kit 13 pins in the kit: 313 361 300 113</p>	S	CAN	C	E	D1	L1	H	60	B	
												-07/09	S	CAN	C	E	--	H	60	B	
												<p>313 210 300 107 -07/09</p> <p>313 210 300 113 discontinued model 07/09-</p>	S	CAN	C	E	D	L	H	60	B
												<p>313 212 300 107 07/09-</p> <p>313 212 300 113 07/09-</p> <p>313 361 300 107</p>	S	CAN	C	E	--	H	30	B	
<p>Mercedes C Class Estate KIT = towbar inc. electrical kit 13 pins S204 exc. vehicles with height control, exc. AMG & sport bumpers Please check the operating instructions of the vehicle before fitting the towbar.</p>		<p>09/07- 07/09</p>	<p>313 315 900 113</p>	<p>2488</p>	<p>>150</p>		<p>25</p>	<p>10,2</p>	<p>75</p>	<p>1900</p>	<p>electrical kit 13 pins in the kit: 313 210 300 113</p>	S	CAN	C	E	D	L	H	60	B	
												-07/09	S	CAN	C	E	D	L	H	60	B
													S	CAN	C	E	D	L	H	60	B
													S	CAN	C	E	--	H	60	B	
<p>Mercedes C Class Estate KIT = towbar inc. electrical kit 13 pins S204 exc. vehicles with height control, exc. AMG & sport bumpers Please check the operating instructions of the vehicle before fitting the towbar.</p>		<p>07/09-</p>	<p>313 211 900 113</p>	<p>2488</p>	<p>>150</p>		<p>25</p>	<p>10,2</p>	<p>75</p>	<p>1900</p>	<p>electrical kit 13 pins in the kit: 313 361 300 113</p>	S	CAN	C	E	D1	L1	H	60	B	
													S	CAN	C	E	D	L	H	60	B









Mercedes-Benz

<p>Mercedes C Class Estate S204 inc. vehicles with height control, exc. AMG & sport bumpers Please check the operating instructions of the vehicle before fitting the towbar. replaced by: 313439600001 discontinued model</p>		<p>313 276 600 001</p>	<p>2488</p>	<p>>150</p>	<p>23</p>	<p>10,2</p>	<p>75</p>	<p>1900</p>	<p>-07/09 313 210 300 107 -07/09 313 210 300 113 discontinued model 07/09- 313 212 300 107 07/09- 313 212 300 113 07/09- 313 361 300 107</p>	<p>S CAN C S CAN C S CAN C S CAN C S CAN C</p>	<p>E E E E E</p>	<p>-- D -- D --</p>	<p>H L H L H</p>	<p>60 60 30 30 60</p>	<p>B B B B B</p>
<p>Mercedes C Class Estate S204 for vehicles with height control, exc. AMG & sport bumpers Please check the operating instructions of the vehicle before fitting the towbar.</p>		<p>313 439 600 001</p>	<p>3430</p>	<p>120</p>	<p>23</p>	<p>10,2</p>	<p>75</p>	<p>1900</p>	<p>-07/09 313 210 300 107 -07/09 313 210 300 113 discontinued model 07/09- 313 212 300 107 07/09- 313 212 300 113 07/09- 313 361 300 107</p>	<p>S CAN C S CAN C S CAN C S CAN C S CAN C</p>	<p>E E E E E</p>	<p>-- D -- D --</p>	<p>H L H L H</p>	<p>60 60 30 30 60</p>	<p>B B B B B</p>
<p>Mercedes C Class Saloon W202 for vehicles until veh.ident no. 1A032469 and 1F020797 (approx. end of 93); A set of supports 913082650002 must be ordered. Monoflex</p>		<p>313 420 600 001</p>	<p>4161</p>	<p>120</p>	<p>20</p>	<p>9,59</p>	<p>75</p>	<p>1700</p>	<p>313 082 300 107 313 082 300 113</p>	<p>S FRE -- S FRE --</p>	<p>E E</p>	<p>-- D</p>	<p>H H</p>	<p>90 90</p>	<p>L B</p>
<p>Mercedes C Class Saloon W202, for vehicles until veh.ident no. 1A032469 and 1F020797 (approx. end of 93); A set of supports 913082650002 must be ordered.</p>		<p>313 082 600 001</p>	<p>0019</p>	<p>>150</p>	<p>17,2</p>	<p>9,1</p>	<p>75</p>	<p>1700</p>	<p>313 082 300 107 313 082 300 113</p>	<p>S FRE -- S FRE --</p>	<p>E E</p>	<p>-- D</p>	<p>H H</p>	<p>90 90</p>	<p>L B</p>
<p>Mercedes C Class Saloon W203 with steel springs, exc. Sport Coupé, exc. CLK from 05/02, exc. AMG Please check the operating instructions of the vehicle before fitting the towbar.</p>		<p>313 166 600 001</p>	<p>0892</p>	<p>>150</p>	<p>22</p>	<p>9,1</p>	<p>75</p>	<p>1600</p>	<p>313 168 300 107 313 168 300 113</p>	<p>S CAN C S CAN C</p>	<p>E E</p>	<p>-- D</p>	<p>H H</p>	<p>60 60</p>	<p>B B</p>











<p>Mercedes C Class Saloon KIT = towbar inc. electrical kit 13 pins W203 with steel springs, exc. Sport Coupé, exc. CLK from 05/02, exc. AMG Please check the operating instructions of the vehicle before fitting the towbar.</p>		<p>313 166 900 113</p>	<p>0892 >150</p>	<p>24</p>	<p>9,1 75 1600</p>	<p>electrical kit 13 pins in the kit: 313 168 300 113</p>	<p>S CAN C</p>	<p>E D -- H 60 B</p>
<p>Mercedes C Class Saloon W203 with steel springs, exc. Sport Coupé, exc. CLK from 05/02, exc. AMG Please check the operating instructions of the vehicle before fitting the towbar.</p>		<p>313 167 600 001</p>	<p>0891 >150</p>	<p>23,8</p>	<p>9,1 75 1600</p>	<p>313 168 300 107 313 168 300 113</p>	<p>S CAN C S CAN C</p>	<p>E D -- H 60 B E D -- H 60 B</p>
<p>Mercedes C Class Saloon KIT = towbar inc. electrical kit 13 pins W203 with steel springs, exc. Sport Coupé, exc. CLK from 05/02, exc. AMG Please check the operating instructions of the vehicle before fitting the towbar.</p>		<p>313 167 900 113</p>	<p>0891 >150</p>	<p>25,5</p>	<p>9,1 75 1600</p>	<p>electrical kit 13 pins in the kit: 313 168 300 113</p>	<p>S CAN C</p>	<p>E D -- H 60 B</p>
<p>Mercedes C Class Saloon W204 exc. vehicles with height control, exc. AMG & sport bumpers, exc. vehicles with AMG look Please check the operating instructions of the vehicle before fitting the towbar.</p>		<p>313 214 600 001</p>	<p>2642 >150</p>	<p>21</p>	<p>10,2 75 1900</p>	<p>-07/09 313 210 300 107 -07/09 313 210 300 113 discontinued model 07/09- 313 212 300 107 07/09- 313 212 300 113 07/09- 313 361 300 107</p>	<p>S CAN C S CAN C S CAN C S CAN C S CAN C</p>	<p>E D -- H 60 B E D L H 60 B E -- H 30 B E D L H 30 B E -- H 60 B</p>
<p>Mercedes C Class Saloon KIT = towbar inc. electrical kit 13 pins W204 exc. vehicles with height control, exc. AMG & sport bumpers, exc. vehicles with AMG look Please check the operating instructions of the vehicle before fitting the towbar.</p>		<p>313 214 900 113</p>	<p>2642 >150</p>	<p>23</p>	<p>10,2 75 1900</p>	<p>electrical kit 13 pins in the kit: 313 210 300 113</p>	<p>S CAN C</p>	<p>E D L H 60 B</p>









Mercedes-Benz

Mercedes C Class Saloon KIT = towbar inc. electrical kit 13 pins W204 exc. vehicles with height control, exc. AMG & sport bumpers, exc. vehicles with AMG look Please check the operating instructions of the vehicle before fitting the towbar.	07/09-		313 389 900 113	2642	>150		23	10,2	75	1900		electrical kit 13 pins in the kit: 313 361 300 113	S CAN C	E D1	L1 H	60	B
Mercedes C Class Saloon W204 exc. vehicles with height control, exc. AMG & sport bumpers, exc. vehicles with AMG look Please check the operating instructions of the vehicle before fitting the towbar.	03/07-		313 438 600 001	3420	120		23	10,2	75	1900		-07/09 313 210 300 107 -07/09 313 210 300 113 discontinued model 07/09- 313 212 300 107 07/09- 313 212 300 113 07/09- 313 361 300 107	S CAN C S CAN C S CAN C S CAN C S CAN C	E -- E D E -- E D E --	-- H L H -- H L H -- H	60 60 30 30 60	B B B B B
Mercedes C Class Saloon KIT = towbar inc. electrical kit 13 pins W204 exc. vehicles with height control, exc. AMG & sport bumpers, exc. vehicles with AMG look Please check the operating instructions of the vehicle before fitting the towbar.	03/07- 07/09		313 315 900 113	2488	>150		24,5	10,2	75	1900		electrical kit 13 pins in the kit: 313 210 300 113	S CAN C	E D	L H	60	B
Mercedes C Class Saloon KIT = towbar inc. electrical kit 13 pins W204 exc. vehicles with height control, exc. AMG & sport bumpers, exc. vehicles with AMG look Please check the operating instructions of the vehicle before fitting the towbar.	07/09-		313 211 900 113	2488	>150		25	10,2	75	1900		electrical kit 13 pins in the kit: 313 361 300 113	S CAN C	E D1	L1 H	60	B








Mercedes C Class Saloon WZ04 inc. vehicles with height control, exc. AMG & sport bumpers Please check the operating instructions of the vehicle before fitting the towbar. replaced by: 313439600001 discontinued model		313 276 600 001	2488	>150		23	10,2	75	1900	-07/09 313 210 300 107 -07/09 313 210 300 113 discontinued model 07/09- 313 212 300 107 07/09- 313 212 300 113 07/09- 313 361 300 107	S CAN S CAN S CAN S CAN S CAN	C C C C C	E E E E E	-- D -- D --	H L H L H	60 60 30 30 60	B B B B B																																																			
																		Mercedes C Class Saloon WZ04 for vehicles with height control, exc. AMG & sport bumpers Please check the operating instructions of the vehicle before fitting the towbar.		313 439 600 001	3430	120		23	10,2	75	1900 -07/09 313 210 300 107 -07/09 313 210 300 113 discontinued model 07/09- 313 212 300 107 07/09- 313 212 300 113 07/09- 313 361 300 107	S CAN S CAN S CAN S CAN S CAN	C C C C C	E E E E E	-- D -- D --	H L H L H	60 60 30 30 60	B B B B B																																		
																																			Mercedes C Class Sport Coupé CL203 exc. AMG-vehicles and AMG bodykit, exc. CLC 05/08- Cover for cutout offered by Mercedes is not suitable.		313 189 600 001	1328	>150		23	8,8	100	1500	S CAN S CAN	C C	E E	-- D	H H	60 60	B B																	
																																																				Mercedes C Class Sport Coupé CL203 exc. AMG-vehicles and AMG bodykit, exc. CLC 05/08- Cover for cutout offered by Mercedes is not suitable. SIARR discontinued model		313 319 600 001	4959	60		23	8,58	75	1500	S CAN S CAN	C C	E E	-- D	H H	60 60	B B







Mercedes-Benz

Mercedes Citan KIT = towbar inc. electrical kit 13 pins length = 4321 + 4705 mm SIARR	10/12-		316 352 900 113	0103	60		25	8,2	75	1350	electrical kit 13 pins in the kit: 316 353 300 113	S						
Mercedes Citan length = 4321 + 4705 mm	10/12-		316 270 600 001	0103	60		23	8,2	75	1350	316 353 300 107 316 353 300 113	S S						
Mercedes Citan length = 4321 + 4705 mm SIARR	10/12-		316 269 600 001	0112	60		23	8,2	75	1350	316 353 300 107 316 353 300 113	S S						
Mercedes Citan KIT = towbar inc. electrical kit 13 pins length = 4321 + 4705 mm SIARR	10/12-		316 353 900 113	0112	60		25	8,2	75	1350	electrical kit 13 pins in the kit: 316 353 300 113	S						
Mercedes Citan length = 3937 mm SIARR	10/12-		316 316 600 001	0834	90		20	7,19	75	1100	316 353 300 107 316 353 300 113	S S						
Mercedes CLA C117	04/13-		313 399 600 001								313 400 300 107 313 400 300 113	S S						
Mercedes CLA C117	04/13-		313 400 600 001								313 400 300 107 313 400 300 113	S S						
Mercedes CLA C117	04/13-		313 387 600 001								electrical kit 13 pins in the kit: 313 400 300 113	S						
Mercedes CLC is not permitted to tow by manufacturer.																		L
Mercedes CLK CL209 exc. convertible, exc. AMG	05/02-		313 200 600 001	1436	>150		23	10,3	75	1500	313 168 300 107 313 168 300 113	S CAN S CAN	C C	E E	-- D	-- --	H H	60 60
Mercedes CLK Coupé/Convertible C208 and convertible CLK, exc. 430 CLK, exc. AMG-vehicles Monoflex	06/97- 05/02		313 420 600 001	4161	120		20	9,59	75	1700	313 116 300 107 313 116 300 113	S FRE S FRE	-- --	E E	-- D	-- --	V V	120 120






Mercedes CLK Coupé/Convertible C208 and convertible CLK, exc. 430 CLK, exc. AMG-vehicles Monoflex	06/97-05/02		313 082 600 001	0019	>150	17,2	9,1	75	1700		313 116 300 107 313 116 300 113	S FRE -- S FRE --	E -- E D	-- --	V -- V --	120 120	L L
Mercedes CLS Coupé is not permitted to tow by manufacturer.																	L
Mercedes E Class 200-400 E W/C 124 saloon, Coupé and convertible, exc. 500 E and Sportline, exc. AMG-vehicles	01/85-05/95		313 061 600 001	0031	>150	22,4	10,3	75	1900		313 061 300 107 313 061 300 113	S C2 -- S C2 --	-- --	-- L1	V -- V --	90 90	L L
Mercedes E Class 200T-320TE S124	01/86-04/96		313 066 600 001	0257	150	16,9	10,8	75	2100		313 067 300 107 313 067 300 113	S C2 -- S C2 --	-- --	-- L1	V -- V --	90 90	L L
Mercedes E Class Convertible C207 exc. AMG vehicles, exc. vehicles with AMG look Please check the operating instructions of the vehicle before fitting the towbar.	03/10-		313 214 600 001	2642	>150	21	10,2	75	1900		discontinued model: 313 212 300 107 313 212 300 113 313 361 300 107	S CAN C S CAN C S CAN C	E -- E D E --	-- L --	H -- H -- H --	30 30 60	B B B
Mercedes E Class Convertible KIT = towbar inc. electrical kit 13 pins C207 exc. AMG vehicles, exc. vehicles with AMG look Please check the operating instructions of the vehicle before fitting the towbar.	03/10-		313 389 900 113	2642	>150	23	10,2	75	1900		electrical kit 13 pins in the kit: 313 361 300 113	S CAN C	E D1	L1	H	60	B
Mercedes E Class Convertible C207 exc. AMG vehicles, exc. vehicles with AMG look Please check the operating instructions of the vehicle before fitting the towbar.	03/10-		313 438 600 001	3420	120	23	10,2	75	1900		discontinued model: 313 212 300 107 313 212 300 113 313 361 300 107	S CAN C S CAN C S CAN C	E -- E D E --	-- L --	H -- H -- H --	30 30 60	B B B
Mercedes E Class Convertible KIT = towbar inc. electrical kit 13 pins C207 exc. AMG vehicles, exc. vehicles with AMG look Please check the operating instructions of the vehicle before fitting the towbar.	03/10-		313 211 900 113	2488	>150	25	10,2	75	1900		electrical kit 13 pins in the kit: 313 361 300 113	S CAN C	E D1	L1	H	60	B
Mercedes E Class Coupé C207 exc. AMG vehicles, exc. vehicles with AMG look Please check the operating instructions of the vehicle before fitting the towbar.	05/09-		313 214 600 001	2642	>150	21	10,2	75	1900		discontinued model: 313 212 300 107 313 212 300 113 313 361 300 107	S CAN C S CAN C S CAN C	E -- E D E --	-- L --	H -- H -- H --	30 30 60	B B B





Mercedes-Benz

Mercedes E Class Coupé KIT = towbar inc. electrical kit 13 pins C207 exc. AMG vehicles, exc. vehicles with AMG look Please check the operating instructions of the vehicle before fitting the towbar.	05/09-		313 389 900 113	2642	<150	✂	23	10,2	75	1900	electrical kit 13 pins in the kit: 313 361 300 113	S CAN	C	E	D1	L1	H	60	B
Mercedes E Class Coupé C207 exc. AMG vehicles, exc. vehicles with AMG look Please check the operating instructions of the vehicle before fitting the towbar.	05/09-		313 438 600 001	3420	120	✂	23	10,2	75	1900	discontinued model: 313 212 300 107 313 212 300 113 313 361 300 107	S CAN S CAN S CAN	C C C	E E E	-- D --	-- L --	H H H	30 30 60	B B B
Mercedes E Class Coupé KIT = towbar inc. electrical kit 13 pins C207 exc. AMG vehicles, exc. vehicles with AMG look Please check the operating instructions of the vehicle before fitting the towbar.	05/09-		313 211 900 113	2488	>150	✂	25	10,2	75	1900	electrical kit 13 pins in the kit: 313 361 300 113	S CAN	C	E	D1	L1	H	60	B
Mercedes E Class Estate S210 exc. AMG-vehicles. Vehicles with 300 TD motor and air conditioning: Please check the operating instructions of the vehicle before fitting the towbar.	05/96- 03		313 121 600 001	0106	150		17,1	11,5	84	2200	313 116 300 107 313 116 300 113	S FRE S FRE	-- --	E E	-- D	-- --	V V	120 120	L L
Mercedes E Class Estate S210 exc. AMG-vehicles. Vehicles with 300 TD motor and air conditioning: Please check the operating instructions of the vehicle before fitting the towbar.	05/96- 03		313 241 600 001	0123	150		19	11,5	84	2200	313 116 300 107 313 116 300 113	S FRE S FRE	-- --	E E	-- D	-- --	V V	120 120	L L
Mercedes E Class Estate S211 exc. AMG, inc. 4-Matic Please check the operating instructions of the vehicle before fitting the towbar.	03- 09/09		313 203 600 001	1501	150		23,5	11,5	130	2200	313 196 300 107 313 196 300 113	S CAN S CAN	C C	E E	-- D	-- --	H H	60 60	B B
Mercedes E Class Estate KIT = towbar inc. electrical kit 13 pins S211 exc. AMG, inc. 4-Matic Please check the operating instructions of the vehicle before fitting the towbar.	03- 09/09		313 203 900 113	1501	150		25,5	11,5	130	2200	electrical kit 13 pins in the kit: 313 196 300 113	S CAN	C	E	D	--	H	60	B









Mercedes E Class Estate S211 exc. AMG, inc. 4-Matic Please check the operating instructions of the vehicle before fitting the towbar.	03-09/09		313 204 600 001	1502	150	23	11,5	130	2200		313 196 300 107 313 196 300 113	S CAN S CAN	C C	E E	-- --	H H	60 60	B B	
Mercedes E Class Estate KIT = towbar inc. electrical kit 13 pins S211 exc. AMG, inc. 4-Matic Please check the operating instructions of the vehicle before fitting the towbar.	03-09/09		313 204 900 113	1502	150	25	11,5	130	2200		electrical kit 13 pins in the kit: 313 196 300 113	S CAN	C	E	--	H	60	B	
Mercedes E Class Estate S212 inc. sports & AMG styling package, not AMG engines. Please check the operating instructions of the vehicle before fitting the towbar! Monoflex	09/09-		313 371 600 001	4130	150	26	11,49	84	2100		discontinued model: 313 212 300 107 313 212 300 113 313 361 300 107	S CAN S CAN S CAN	C C C	E E E	-- L --	H H H	30 30 60	B B B	
Mercedes E Class Estate KIT = towbar inc. electrical kit 13 pins S212 inc. sports & AMG styling package, not AMG engines. Please check the operating instructions of the vehicle before fitting the towbar! Monoflex	09/09-		313 371 900 113	4130	150	28	11,49	84	2100		electrical kit 13 pins in the kit: 313 361 300 113	S CAN	C	E	D1	L1	H	60	B
Mercedes E Class Estate S212 inc. sports & AMG styling package, not AMG engines. Please check the operating instructions of the vehicle before fitting the towbar! Monoflex discontinued model	09/09-		313 372 600 001	4130	150	26	11,49	84	2100		discontinued model: 313 212 300 107 313 212 300 113 313 361 300 107	S CAN S CAN S CAN	C C C	E E E	-- L --	H H H	30 30 60	B B B	
Mercedes E Class Estate S212 inc. sports & AMG styling package, not AMG engines. Please check the operating instructions of the vehicle before fitting the towbar! Monoflex	09/09-		313 373 600 001	4129	150	27	11,49	84	2100		discontinued model: 313 212 300 107 313 212 300 113 313 361 300 107	S CAN S CAN S CAN	C C C	E E E	-- L --	H H H	30 30 60	B B B	








Mercedes-Benz

<p>Mercedes E Class Estate KIT = towbar inc. electrical kit 13 pins S212 inc. sports & AMG styling package, not AMG engines. Please check the operating instructions of the vehicle before fitting the towbar!</p>	<p>09/09-</p> 	<p>313 373 900 113</p>	<p>4129 150</p>	<p>29 11,49 84 2100</p>	<p>electrical kit 13 pins in the kit: 313 361 300 113</p>	<p>S CAN C</p>	<p>E D1 L1 H</p>	<p>60 B</p>
<p>Mercedes E Class Saloon W210 exc. AMG Vehicles with 300 TD motor and air conditioning: Please check the operating instructions of the vehicle before fitting the towbar.</p>	<p>06/95-03/02</p> 	<p>313 161 600 001</p>	<p>0015 150</p>	<p>18,5 10,8 75 2000</p>	<p>313 116 300 107 313 116 300 113</p>	<p>S FRE -- S FRE --</p>	<p>E -- V 120 L E D -- V 120 L</p>	<p></p>
<p>Mercedes E Class Saloon W210 exc. AMG Vehicles with 300 TD motor and air conditioning: Please check the operating instructions of the vehicle before fitting the towbar.</p>	<p>06/95-03/02</p> 	<p>313 160 600 001</p>	<p>0024 150</p>	<p>20,4 10,8 75 2000</p>	<p>313 116 300 107 313 116 300 113</p>	<p>S FRE -- S FRE --</p>	<p>E -- V 120 L E D -- V 120 L</p>	<p></p>
<p>Mercedes E Class Saloon KIT = towbar inc. electrical kit 13 pins W210 exc. AMG Vehicles with 300 TD motor and air conditioning: Please check the operating instructions of the vehicle before fitting the towbar.</p>	<p>06/95-03/02</p> 	<p>313 160 900 113</p>	<p>0024 150</p>	<p>23 10,8 75 2000</p>	<p>electrical kit 13 pins in the kit: 313 116 300 113</p>	<p>S FRE --</p>	<p>E D -- V 120 L</p>	<p></p>
<p>Mercedes E Class Saloon W211 exc. AMG, inc. 4-Matic If there are no reinforcements right and left in the boot, it is necessary to mount them. You can buy them at the DC dealer, DC no. A 211 639 0143 and A 211 639 0443. With this reinforcements the coverings of the sides don't fit anymore. You could buy others at the DC dealer, e.g. A 211 690 9425 / 9825. The supercharger of the cooling must have a power of 600 W. The superchargers A 001 500 4493 and A 211 500 0693 fulfil this requirement.</p>	<p>03/02-09</p> 	<p>313 194 600 001</p>	<p>1100 150</p>	<p>23,5 11 80 2000</p>	<p>313 196 300 107 313 196 300 113</p>	<p>S CAN C S CAN C</p>	<p>E -- H 60 B E D -- H 60 B</p>	<p></p>













<p>Mercedes E Class Saloon KIT = towbar inc. electrical kit 13 pins W211 exc. AMG, inc. 4-Matic if there are no reinforcements right and left in the boot, it is necessary to mount them. You can buy them at the DC dealer. DC no. A 211 639 0143 and A 211 639 0443. With this reinforcements the coverings of the sides don't fit anymore. You could buy others at the DC dealer, e.g. A 211 690 9425 / 9825. The supercharger of the cooling must have a power of 600 W. The superchargers A 001 500 4493 and A 211 500 0693 fulfil this requirement.</p>		<p>313 194 900 113</p>	<p>1100 150 25,5 11 80 2000</p>	<p>electrical kit 13 pins in the kit: 313 196 300 113</p>	<p>S CAN C E D -- H 60 B</p>
<p>Mercedes E Class Saloon W211 exc. AMG, inc. 4-Matic if there are no reinforcements right and left in the boot, it is necessary to mount them. You can buy them at the DC dealer, DC no. A 211 639 0143 and A 211 639 0443. With this reinforcements the coverings of the sides don't fit anymore. You could buy others at the DC dealer, e.g. A 211 690 9425 / 9825. The supercharger of the cooling must have a power of 600 W. The superchargers A 001 500 4493 and A 211 500 0693 fulfil this requirement.</p>		<p>313 195 600 001</p>	<p>1101 150 24,5 11 80 2000</p>	<p>313 196 300 107 313 196 300 113</p>	<p>S CAN C E -- H 60 B S CAN C E D -- H 60 B</p>
<p>Mercedes E Class Saloon KIT = towbar inc. electrical kit 13 pins W211 exc. AMG, inc. 4-Matic if there are no reinforcements right and left in the boot, it is necessary to mount them. You can buy them at the DC dealer. DC no. A 211 639 0143 and A 211 639 0443. With this reinforcements the coverings of the sides don't fit anymore. You could buy others at the DC dealer, e.g. A 211 690 9425 / 9825. The supercharger of the cooling must have a power of 600 W. The superchargers A 001 500 4493 and A 211 500 0693 fulfil this requirement.</p>		<p>313 195 900 113</p>	<p>1101 150 25 11 80 2000</p>	<p>electrical kit 13 pins in the kit: 313 196 300 113</p>	<p>S CAN C E D -- H 60 B</p>
<p>Mercedes E Class Saloon W212 Please check the operating instructions of the vehicle before fitting the towbar! Monoflex</p>		<p>313 360 600 001</p>	<p>3998 90 26 11,4 84 2100</p>	<p>discontinued model: 313 212 300 107 313 212 300 113 313 361 300 107</p>	<p>S CAN C E -- H 30 B S CAN C E D L H 30 B S CAN C E -- H 60 B</p>





Mercedes-Benz

Mercedes E Class Saloon KIT = towbar inc. electrical kit 13 pins W212 Please check the operating instructions of the vehicle before fitting the towbar!	03/09-		313 360 900 113	3998	90	28	11,4	84	2100	electrical kit 13 pins in the kit: 313 361 300 113	S CAN C	E D1	L1 H	60	B
Mercedes E Class Saloon W212 Please check the operating instructions of the vehicle before fitting the towbar! Monoflex discontinued model	03/09-		313 363 600 001	3998	90	26	11,4	84	2100	discontinued model: 313 212 300 107 313 212 300 113 313 361 300 107	S CAN C S CAN C S CAN C	E -- E D E --	-- H L H -- H	30 30 60	B B B
Mercedes E Class Saloon W212 Please check the operating instructions of the vehicle before fitting the towbar! Monoflex	03/09-		313 361 600 001	3971	90	26	11,4	84	2100	discontinued model: 313 212 300 107 313 212 300 113 313 361 300 107	S CAN C S CAN C S CAN C	E -- E D E --	-- H L H -- H	30 30 60	B B B
Mercedes E Class Saloon KIT = towbar inc. electrical kit 13 pins W212 Please check the operating instructions of the vehicle before fitting the towbar! Monoflex	03/09-		313 361 900 113	3971	90	28	11,4	84	2100	electrical kit 13 pins in the kit: 313 361 300 113	S CAN C	E D1	L1 H	60	B
Mercedes G Class only for vehicles with 2-parts rear bumper Monoflex	02/90-		313 320 600 001	2291	60	12	17,17	140	3500	300 210 300 107 300 210 300 113	-- A -- -- A --	E1 -- E1 D1	-- V L1 V	90 90	B B
Mercedes GL Class X164 exc. 8 cylinder diesel Please check the operating instructions of the vehicle before fitting the towbar!	09/06-		313 346 600 001	2311	120	38	16	135	3500	Please order separately control unit + relay at DC dealers. 313 138 300 113	S CAN C	E D	L H	45	
Mercedes GL Class X164 inc. 8 cylinder diesel Please check the operating instructions of the vehicle before fitting the towbar!	09/06-		313 421 600 001	2312	120	38	16,54	135	3500	Please order separately control unit + relay at DC dealers. 313 138 300 113	S CAN C	E D	L H	45	
Mercedes GL Class X166	11/12-		313 430 600 001						3500						






Mercedes GLK X204 replaced by: 313433600001 discontinued model		10/08- 06/12	313 281 600 001	3073	90		22	11,2	80	2100	-07/09	S	CAN	C	E	--	H	60	B	
											313 210 300 107	S	CAN	C	E	D	L	H	60	B
											-07/09	S	CAN	C	E	--	H	30	B	
											313 210 300 113 discontinued model 07/09-	S	CAN	C	E	D	L	H	30	B
											313 212 300 107 07/09-	S	CAN	C	E	--	H	60	B	
Mercedes GLK X204		10/08-	313 433 600 001	90	22	12,8	100	2500	-07/09	S	CAN	C	E	--	H	60	B			
									313 210 300 107	S	CAN	C	E	D	L	H	60	B		
									-07/09	S	CAN	C	E	D	L	H	30	B		
									313 210 300 113 07/09-	S	CAN	C	E	D	L	H	30	B		
									313 212 300 113 07/09-	S	CAN	C	E	--	H	60	B			
Mercedes GLK KIT = towbar inc. electrical kit 13 pins X204		07/09-	313 433 900 113	90	24		12,8	100	2500	electrical kit 13 pins in the kit:	S	CAN	C	E	D1	L1	H	60	B	
										313 361 300 113	S	CAN	C	E	D	L	H	60	B	
Mercedes GLK X204 replaced by: 313434600001 discontinued model		10/08- 06/12	313 252 600 001	2973	90		23	11,2	80	2100	-07/09	S	CAN	C	E	--	H	60	B	
											313 210 300 107	S	CAN	C	E	D	L	H	60	B
											-07/09	S	CAN	C	E	--	H	30	B	
											313 210 300 113 discontinued model 07/09-	S	CAN	C	E	D	L	H	30	B
											313 212 300 107 07/09-	S	CAN	C	E	--	H	60	B	






Mercedes-Benz







Mercedes GLK X204	10/08-		313 434 600 001	3522	90		23	12,8	100	2500	-07/09 313 210 300 107 -07/09 313 210 300 113 07/09- 313 212 300 113 07/09- 313 361 300 107	S CAN S CAN S CAN S CAN	C C C C	E E E E	-- D D --	H L L H	60 60 30 60	B B B B	
Mercedes GLK KIT = towbar inc. electrical kit 13 pins X204 replaced by: 313434900113 discontinued model	07/09-		313 252 900 113	2973	90		24,5	11,2	80	2100	electrical kit 13 pins in the kit: 313 361 300 113	S CAN	C	E	D1	L1	H	60	B
Mercedes GLK KIT = towbar inc. electrical kit 13 pins X204	07/09-		313 434 900 113	2973	90		25	12,8	100	2500	electrical kit 13 pins in the kit: 313 361 300 113	S CAN	C	E	D1	L1	H	60	B
Mercedes M Class W163 exc. vehicles with spare wheel on the tailgate Please check the operating instructions of the vehicle before fitting the towbar!	98- 07/05		313 134 600 001	0508	90		13,6	16	150	3500	313 134 300 113	S FRE	--	E	D	--	H	45	B
Mercedes M Class W163 for vehicles with spare wheel on the tailgate Please check the operating instructions of the vehicle before fitting the towbar! discontinued model	98- 07/05		313 135 600 001	0509	90		6,6	16	150	3500	313 134 300 113	S FRE	--	E	D	--	H	45	B
Mercedes M Class W163 exc. vehicles with spare wheel on the tailgate For vehicles -2000 we recommend to order bumper with cutout and cover of the vehicles 2000-2002 at Mercedes- Benz dealers. For vehicles 2000- the bumper must be cut out. Please order cover for bumper cutout at Mercedes-Benz dealers. Please check the operating instructions of the vehicle before fitting the towbar!	98- 07/05		313 179 600 001	1279	90		15	16	150	3500	313 134 300 113	S FRE	--	E	D	--	H	45	B

Mercedes M Class W164 inc. sport and AMG (bumpers only) Please check the operating instructions of the vehicle before fitting the towbar!	07/05-		313 341 600 001	2117	120	38	16	135	3500	Please order separately control unit + relay at DC dealers. 313 138 300 113	S	CAN	C	E	D	L	H	45
Mercedes M Class W164 inc. sport and AMG (bumpers only) Please check the operating instructions of the vehicle before fitting the towbar!	07/05-		313 340 600 001	2141	120	39	16	135	3500	Please order separately control unit + relay at DC dealers. 313 138 300 113	S	CAN	C	E	D	L	H	45
Mercedes M Class W166 Please check the operating instructions of the vehicle before fitting the towbar.	11/11-		313 405 600 001	3526	90	39	16,8	140	3500	313 406 300 113	S	CAN	C	E	D	L1	H	
Mercedes M Class W166 Please check the operating instructions of the vehicle before fitting the towbar.	11/11-		313 406 600 001	3527	90	40	16,8	140	3500	313 406 300 113	S	CAN	C	E	D	L1	H	
Mercedes M Class KIT = towbar inc. electrical kit 13 pins W166 Please check the operating instructions of the vehicle before fitting the towbar.	11/11-		313 406 900 113	3527	90	42	16,8	140	3500	electrical kit 13 pins in the kit: 313 406 300 113	S	CAN	C	E	D	L1	H	
Mercedes R Class W251	02/06-		313 222 600 001	2173	>150	34	12,5	85	2100	Please order separately control unit + relay at DC dealers. 313 138 300 113	S	CAN	C	E	D	L	H	45
Mercedes SLK is not permitted to tow by manufacturer.																		L
Mercedes Sprinter The program can be found in the appendix: "Mercedes-Benz Sprinter / Volkswagen LT 2".	03/96- 03/06																	L

Mercedes-Benz













<p>Mercedes Sprinter Chassis Cab types 209-224 and 309-324 Vehicles with 3,0 and 3,5 t max. total weight, increase to 3,8 t max. total weight is possible exc. vehicles with underrun guard towball: 329059600001 (order seperately)</p>	04/06-		313 377 600 001	2201	90	20	18,1 150 3500	<p>313 105 300 107 313 105 300 113 vehicles with electrical preparation: 321 106 300 113</p>	S CAN S CAN S CAN	C C C	E E E	-- D1 D	V V V	90 90 45	B B B
<p>Mercedes Sprinter Chassis Cab KIT = towbar inc. electrical kit 13 pins types 209-224 and 309-324 Vehicles with 3,0 and 3,5 t max. total weight, charging up to 3,8 t max. total weight possible, exc. vehicles with underrun guard towball: 329059600001 included</p>	04/06-		313 377 900 113	2201	90	22	18,1 150 3500	<p>electrical kit 13 pins in the kit. for vehicles without preparation: 313 105 300 113</p>	S CAN S CAN	C C	E E	-- D1	V V	90 90	B B
<p>Mercedes Sprinter Chassis Cab types 411-424 and 509-524 Vehicles with 5,0 t max. total weight, reduction to 4,6 t max. total weight is possible wheelbase: 3665 + 4325 mm towball: 329059600001 (order seperately)</p>	04/06-		313 275 600 001	2253	90	18	20,2 150 3500	<p>313 105 300 107 313 105 300 113 vehicles with electrical preparation: 321 106 300 113</p>	S CAN S CAN S CAN	C C C	E E E	-- D1 D	V V V	90 90 45	B B B
<p>Mercedes Sprinter Chassis Cab KIT = towbar inc. electrical kit 13 pins types 411-424 and 509-524 Vehicles with 5,0 t max. total weight, reduction to 4,6 t max. total weight is possible wheelbase: 3665 + 4325 mm inc. towball: 329059600001</p>	04/06-		313 275 900 113	2253	90	20	20,2 150 3500	<p>electrical kit 13 pins in the kit. for vehicles without preparation: 313 105 300 113</p>	S CAN S CAN	C C	E E	-- D1	V V	90 90	B B
<p>Mercedes Sprinter Van types 209-224 and 309-324 Vehicles with 3,0 and 3,5 t max. total weight, increase to 3,8 t max. total weight is possible For vehicles with integrated step device in the bumper the middle part of the outer bumper must be exchanged (Please order separately at Mercedes dealers.) towball: 329059600001 (order seperately) Step DC-IR A906 520 0531 is not utilisable. Utilisable step: 313285600001</p>	04/06-		313 376 600 001	2200	120	20	18,1 150 3500	<p>313 105 300 107 313 105 300 113 vehicles with electrical preparation: 321 106 300 113</p>	S CAN S CAN S CAN	C C C	E E E	-- D1 D	V V V	90 90 45	B B B

<p>Mercedes Sprinter Van KIT = towbar inc. electrical kit 13 pins types 209-224 and 309-324 Vehicles with 3,0 and 3,5 t max. total weight, increase to 3,8 t max. total weight is possible For vehicles with integrated step device in the bumper the middle part of the outer bumper must be exchanged (Please order separately at Mercedes dealers.) towball: 329059600001 (order seperately) Step DC-IR A906 520 0531 is not utilisable. Utilisable step: 313285600001</p>	<p>04/06-</p> 	<p>313 376 900 113</p>	<p>2200</p>	<p>120</p>	<p>22</p>	<p>18,1 150 3500</p>	<p>electrical kit 13 pins in the kit: for vehicles without preparation: 313 105 300 113</p>	<p>S CAN C</p>	<p>E D1 -- V 90 B</p>	
<p>Mercedes Sprinter Van types 411-424 and 509-524 Vehicles with 5,0 t max. total weight, reduction to 4,6 t max. total weight is possible wheelbase: 3665 mm For vehicles with integrated step device in the bumper the middle part of the outer bumper must be exchanged (Please order separately at Mercedes dealers.) towball: 329059600001 (order seperately) Step DC-IR A906 520 0531 is not utilisable. Utilisable step: 313285600001</p>	<p>04/06-</p> 	<p>313 272 600 001</p>	<p>2235</p>	<p>120</p>	<p>21</p>	<p>20,2 150 3500</p>	<p>313 105 300 107 313 105 300 113 vehicles with electrical preparation: 321 106 300 113</p>	<p>S CAN C S CAN C S CAN C</p>	<p>E -- V 90 B E D1 -- V 90 B E D -- V 45 B</p>	
<p>Mercedes Sprinter Van types 411-424 and 509-524 Vehicles with 5,0 t max. total weight, reduction to 4,6 t max. total weight is possible wheelbase: 4325 mm For vehicles with integrated step device in the bumper the middle part of the outer bumper must be exchanged (Please order separately at Mercedes dealers.) towball: 329059600001 (order seperately) Step DC-IR A906 520 0531 is not utilisable. Utilisable step: 313285600001</p>	<p>04/06-</p> 	<p>313 273 600 001</p>	<p>2236</p>	<p>120</p>	<p>21</p>	<p>20,2 150 3500</p>	<p>313 105 300 107 313 105 300 113 vehicles with electrical preparation: 321 106 300 113</p>	<p>S CAN C S CAN C S CAN C</p>	<p>E -- V 90 B E D1 -- V 90 B E D -- V 45 B</p>	
<p>Mercedes Vaneo exc. vehicles with dual fuel engine and automatic transmission -10/02 (- chassis-no. 414.700 1N219 022)</p>	<p>02/02-</p> 	<p>313 188 600 001</p>	<p>0993</p>	<p>120</p>	<p>15</p>	<p>7,4 75 1200</p>	<p>discontinued model: 313 174 300 107 313 174 300 113</p>	<p>S FRE -- S FRE --</p>	<p>E -- H 60 L E D1 L1 H 60 L</p>	
<p>Mercedes Vaneo exc. vehicles with dual fuel engine and automatic transmission -10/02 (- chassis-no. 414.700 1N219 022) discontinued model</p>	<p>02/02-</p> 	<p>313 174 600 001</p>	<p>0834</p>	<p>120</p>	<p>16,6</p>	<p>7,4 75 1200</p>	<p>discontinued model: 313 174 300 107 313 174 300 113</p>	<p>S FRE -- S FRE --</p>	<p>E -- H 60 L E D1 L1 H 60 L</p>	











Mini R50 Mini Cooper, exc. Mini Cooper S, R53, inc. convertible 06/01-08/08, inc. Mini One	06/01- 11/06		323 052 600 001	0803	120	22	6	75	1000	323 045 300 113	S FRE --	E D --	V	120	L
Mini R55 Clubman, (estate), inc. Cooper S, inc. Clubvan Please check if there is a towing capacity in the car documents.	11/07- 09/10		323 084 600 001	2306	40	20,5	6	50	1000	323 084 300 113	S FRE --	-- D --	V	90	B
Mini R55 Clubman, (estate), inc. Cooper S, inc. Clubvan Please check if there is a towing capacity in the car documents.	09/10-		323 100 600 001	3290	40	20,5	6	50	1000	323 097 300 113	S CAN --	E D L1	V	120	B
Mini R56 angular position of the towball inc. Mini One, exc. Cooper S Please check if there is a towing capacity in the car documents.	07-		323 080 600 001	2481	>150	19	6	50	1000	-08/10 323 080 300 113 08/10- 323 097 300 113	S FRE -- S CAN --	-- D -- E D L1	V V	90 120	B B
Mini Mini Cooper "WORKS" is not permitted to tow by manufacturer.															L
Mini R60 Countryman exc. vehicles with factory provided bicycle carriers preparation. Please check the operating instructions of the vehicle before fitting the towbar. Please check if there is a towing capacity in the car documents.	09/10-		323 097 600 001	3278	60	21	7,35	75	1200	323 097 300 113	S CAN --	E D L1	V	120	B
Mini KIT = towbar inc. electrical kit 13 pins R60 Countryman exc. vehicles with factory provided bicycle carriers preparation. Please check the operating instructions of the vehicle before fitting the towbar. Please check if there is a towing capacity in the car documents.	09/10-		323 097 900 113	3278	60	23	7,35	75	1200	electrical kit 13 pins in the kit. 323 097 300 113	S CAN --	E D L1	V	120	B




















Mini

<p>Mini Convertible R57 is not permitted to tow by manufacturer.</p>									L
<p>Mini Coupé is not permitted to tow by manufacturer.</p>	09/11 -								

Mitsubishi Carisma Saloon and Hatchback discontinued model	08/95-		340 030 600 001	0090	150	∞	17,4	8,4	75	1600		300 061 300 107 300 061 300 113	--	C2	--	--	--	--	H	B
Mitsubishi Colt 3 doors, CZ3 and CZ2 inc. Black Hawk model. exc. CZC Cabriolet	06/05-		340 068 600 001	2299	90		19	5	50	750		300 072 300 107 300 072 300 113	--	FRE	--	E1	--	--	V	B
Mitsubishi Colt 5 doors	06/04-		340 074 600 001	2176	90	∞	20	6,4	50	1000		300 072 300 107 300 072 300 113	--	FRE	--	E1	--	--	V	B
Mitsubishi Colt / Mirage Monoflex	03/13-		340 077 600 001									340 078 300 107 340 078 300 113	S							
Mitsubishi Colt / Mirage Monoflex	03/13-		340 078 600 001									340 078 300 107 340 078 300 113	S							
Mitsubishi Crossover ASX Monoflex	06/10-		340 092 600 001	4251	90	∞	22	8,51	70	1400		340 093 300 113 340 093 300 157	S	A	--	E1	D	L	H	60
Mitsubishi Crossover ASX KIT = towbar inc. electrical kit 13 pins Monoflex	06/10-		340 092 900 113	4251	90	∞	24	8,51	70	1400		electrical kit 13 pins in the kit: 340 093 300 113	S	A	--	E1	D	L	H	60
Mitsubishi Crossover ASX Monoflex	06/10-		340 093 600 001	4249	90	∞	24	8,51	70	1400		340 093 300 113 340 093 300 157	S	A	--	E1	D	L	H	60
Mitsubishi Crossover ASX KIT = towbar inc. electrical kit 13 pins Monoflex	06/10-		340 093 900 113	4249	90	∞	26	8,51	70	1400		electrical kit 13 pins in the kit: 340 093 300 113	S	A	--	E1	D	L	H	60
Mitsubishi Galant Estate	03/97-		340 038 600 001	0237	150	∞	16,2	8,8	75	1500		300 061 300 107 300 061 300 113 300 210 300 107 300 210 300 113	--	C2	--	--	--	H	B	
Mitsubishi Grandis	04-		340 080 600 001	2598	90		22	10,8	132	2000		300 210 300 113	--	A	--	E1	D1	L1	V	90
Mitsubishi Grandis	04-		340 081 600 001	2599	90		22	10,8	132	2000		300 210 300 113	--	A	--	E1	D1	L1	V	90











Mitsubishi

Mitsubishi L200 pick-up, 4 WD, towball inc. exc. 2 WD Monoflex	09/96- 01/06		340 087 600 001	2112	28	14,7	80	3000		300 061 300 107 300 061 300 113	-- --	C2 C2	-- --	-- --	D1 L1	-- --	H H	B B
Mitsubishi L200 Double-, Club-Cab, Single-Cab exc. Double-Cab Longbed 08/09- exc. "Animal" Monoflex	01/06-		340 089 600 001	3216	35	14,72	120	3000		300 052 300 107 300 052 300 113	-- --	FRE FRE	-- --	D1 --	-- --	V V	B B	
Mitsubishi L200 Double-Cab Longbed Monoflex	08/09-		340 091 600 001	4027	35	14,72	120	3000		300 052 300 107 300 052 300 113	-- --	FRE FRE	-- --	D1 --	-- --	V V	B B	
Mitsubishi Lancer Estate discontinued model	09/03-		340 066 600 001	1916	16	7,21	75	1200		300 072 300 107 300 072 300 113	-- --	FRE FRE	E1 E1	-- --	L1 L1	V V	B B	
Mitsubishi Lancer Saloon JT41 discontinued model	09/03- 12/07		340 066 600 001	1916	16	7,21	75	1200		300 072 300 107 300 072 300 113	-- --	FRE FRE	E1 E1	-- --	L1 L1	V V	B B	
Mitsubishi Lancer Saloon inc. Sportback, exc. Ralliart replaced by: 340096600001 Monoflex discontinued model	12/07-		340 088 600 001	3683	23	8,35	75	1400		300 210 300 107 300 210 300 113	-- --	A A	E1 E1	-- --	L1 L1	V V	B B	
Mitsubishi Lancer Saloon inc. Sportback, exc. Ralliart Monoflex	12/07-		340 096 600 001	3683	21	8,35	75	1400	✂	300 210 300 107 300 210 300 113	-- --	A A	E1 E1	-- --	L1 L1	V V	B B	
Mitsubishi Lancer Saloon inc. Sportback, exc. Ralliart discontinued model	12/07-		340 095 600 001	4164	24	8,35	75	1400	✂	300 210 300 107 300 210 300 113	-- --	A A	E1 E1	-- --	L1 L1	V V	B B	
Mitsubishi Lancer Saloon inc. Sportback, exc. Ralliart Monoflex	12/07-		340 097 600 001	4164	21	8,35	75	1400	✂	300 210 300 107 300 210 300 113	-- --	A A	E1 E1	-- --	L1 L1	V V	B B	
Mitsubishi Outlander Monoflex	05/03- 04/07		340 090 600 001	2283	25	9,09	80	1600		300 072 300 107 300 072 300 113	-- --	FRE FRE	E1 E1	-- --	L1 L1	V V	B B	














Mitsubishi Outlander Monoflex	04/07- 09/12		340 094 600 001	4337	90		27	10,92	100	2000	340 075 300 113	S	FRE --	E	D	L	H	75	B
Mitsubishi Outlander KIT = towbar inc. electrical kit 13 pins Monoflex	04/07- 09/12		340 094 900 113	4337	90		29	10,92	100	2000	electrical kit 13 pins in the kit: 340 075 300 113	S	FRE --	E	D	L	H	75	B
Mitsubishi Outlander Monoflex	09/12-		340 098 600 001	0270	90		25	11	100	2000	340 099 300 113	S							
Mitsubishi Outlander KIT = towbar inc. electrical kit 13 pins Monoflex	09/12-		340 098 900 113	0270	90		27	11	100	2000	electrical kit 13 pins in the kit: 340 099 300 113	S							
Mitsubishi Outlander Monoflex	09/12-		340 099 600 001	0269	90		25	11	100	2000	340 099 300 113	S							
Mitsubishi Outlander KIT = towbar inc. electrical kit 13 pins Monoflex	09/12-		340 099 900 113	0269	90		27	11	100	2000	electrical kit 13 pins in the kit: 340 099 300 113	S							
Mitsubishi Shogun SIARR	03/07-		340 071 600 001	0092	120		18	15,89	132	3180	340 072 300 113	S	A --	--	D1	L1	V	60	L
Mitsubishi Shogun SIARR	03/07-		340 072 600 001	0097	120		19	15,89	132	3180	340 072 300 113	S	A --	--	D1	L1	V	60	L
Mitsubishi Shogun Pinin	99-		340 056 600 001	0835		20,2	8	75	1500		300 072 300 107 300 072 300 113	--	FRE -- FRE --	E1 -- E1 --	-- D1	-- L1	V V		B B
Mitsubishi Shogun V20 all wheelbases discontinued model	08/91- 04/00		340 032 600 001	0116		19,8	15,4	135	3500		300 072 300 107 300 072 300 113	--	FRE -- FRE --	E1 -- E1 --	-- D1	-- L1	V V		B B
Mitsubishi Shogun V20 Classic discontinued model	07/02- 12/05		340 032 600 001	0116		19,8	15,4	135	3500		300 072 300 107 300 072 300 113	--	FRE -- FRE --	E1 -- E1 --	-- D1	-- L1	V V		B B
Mitsubishi Shogun V60 short wheel base inc. Classic 01/06- discontinued model	05/00-		340 055 600 001	0876			27,6	15,6	135	3000	300 072 300 107 300 072 300 113	--	FRE -- FRE --	E1 -- E1 --	-- D1	-- L1	V V		B B



















Mitsubishi










Mitsubishi Space Star	98-		340 054 600 001	0903	∞ 14,1	7,7	75	1400	300 072 300 107	--	FRE --	E1 --	--	V	B
									300 072 300 113	--	FRE --	E1 D1	L1	V	B

Nissan Almera 3 and 5 doors N15	09/95- 02/00		332 107 600 001	0102	>150	 18,7	8	75	1560			300 061 300 107 300 061 300 113	-- --	C2 C2	-- --	D1 L1	H H	B B	
Nissan Almera 3 and 5 doors, Hatchback N16	03/00-		332 168 600 001	0869	60	 13,7	8	75	1560			300 072 300 107 300 072 300 113	-- --	FRE FRE	E1 E1	-- L1	V V	B B	
Nissan Almera 4 doors, Saloon N16 Monoflex	07/00-		332 286 600 001	2414	60	20	8,13	75	1500			300 072 300 107 300 072 300 113	-- --	FRE FRE	E1 E1	-- L1	V V	B B	
Nissan Almera Tino	08/00-		332 162 600 001	0939	>150	 17	8,4	75	1650			300 072 300 107 300 072 300 113	-- --	FRE FRE	E1 E1	-- L1	V V	B B	
Nissan Cabstar Chassis Cab type 406 inc. towball 329059600001	10/06-		332 273 600 001	3036	60	22,5	19,4	150	3500			300 201 300 113	--	A	--	D1	--	V	B
Nissan Interstar Chassis Cab inc. towball 329057600001. When mounting the swap system please order towball order no. 329059600001.	01/98-		316 126 600 001	0390	60	29,8	15,3	80	2800			-10/03 300 052 300 107 -10/03 300 052 300 113 08/06- 314 860 300 157 11/03- 316 135 300 113	-- -- -- S S	FRE FRE FRE A	-- -- -- --	D1 D1 D1 D1	-- V V H H	B B L L	
Nissan Interstar Van	01/98-		316 124 600 001	0334	60	28,5	13,7	85	2300			-11/03 300 052 300 107 -11/03 300 052 300 113 08/06- 314 860 300 157 11/03- 316 130 300 113	-- -- -- S S	FRE FRE FRE A	-- -- -- --	D1 D1 D1 D1	-- V V H H	B B L L	














Nissan














Nissan Interstar Van SIARR discontinued model	01/98-		316 257 600 001	0743	60		26	13,61	80	2300		-11/03 300 052 300 107 -11/03 300 052 300 113 08/06- 314 860 300 157 11/03- 316 130 300 113	-- FRE -- -- FRE -- S -- -- S FRE --	-- -- -- D1 -- -- -- E1 D1	-- -- -- -- -- -- L1 H	V V H 45 L 45	B B L L
Nissan Interstar Van inc. towball 329057600001. When mounting the swap system please order towball order no. 329059600001.	01/98-		316 126 600 001	0390	60		29,8	15,3	80	2800		-11/03 300 052 300 107 -11/03 300 052 300 113 08/06- 314 860 300 157 11/03- 316 130 300 113	-- FRE -- -- FRE -- S -- -- S FRE --	-- -- -- D1 -- -- -- E1 D1	-- -- -- -- -- -- L1 H	V V H 45 L 45	B B L L
Nissan Juke 2 WD	10/10-		332 304 600 001	3281	60		25	8,5	75	1500		332 305 300 113	S A --	-- D1	L1 V	60	B
Nissan Juke KIT = towbar inc. electrical kit 13 pins 2 WD	10/10-		332 304 900 113	3281	60		27	8,5	75	1500		electrical kit 13 pins in the kit: 332 305 300 113	S A --	-- D1	L1 V	60	B
Nissan Juke 4 WD	10/10-		332 305 600 001	3280	60		27	8,5	75	1500		332 305 300 113	S A --	-- D1	L1 V	60	B
Nissan Juke KIT = towbar inc. electrical kit 13 pins 4 WD	10/10-		332 305 900 113	3280	60		29	8,5	75	1500		electrical kit 13 pins in the kit: 332 305 300 113	S A --	-- D1	L1 V	60	B
Nissan Kubistar SIARR	02-		316 201 600 001	1322	60		12	7,6	75	1320		316 123 300 107 316 123 300 113	S FRE -- S FRE --	E1 -- E1 D1	-- V -- V	60 L 60 L	L L
Nissan Kubistar 4x4 SIARR	02-		316 205 600 001	1323	60		12	7,6	75	1320		316 123 300 107 316 123 300 113	S FRE -- S FRE --	E1 -- E1 D1	-- V -- V	60 L 60 L	L L
Nissan Micra K12 Monoflex	03-10		332 295 600 001	3882	90		20	6,04	50	1000		300 060 300 107 300 060 300 113	-- C2 -- -- C2 --	-- -- -- --	-- H L1 H	45 B 45 B	B B

Nissan Micra K12 Monoflex	03-10		332 296 600 001	3881	90		23	6,04	50	1000		300 060 300 107 300 060 300 113	-- --	C2 C2	-- --	D1 D1	-- --	H H	45 45	B B
Nissan Murano Z50 discontinued model	04/05- 10/08		332 235 600 001	2139	120		22,5	9,1	110	1500		300 072 300 107 300 072 300 113	-- --	FRE FRE	E1 E1	-- D1	-- L1	V V		B B
Nissan Note	03/06-		332 239 600 001	2062	90		16,5	6,9	50	1200		300 072 300 107 300 072 300 113	-- --	FRE FRE	E1 E1	-- D1	-- L1	V V		B B
Nissan Note	03/06-		332 241 600 001	2063	90		17,5	6,9	50	1200		300 072 300 107 300 072 300 113	-- --	FRE FRE	E1 E1	-- D1	-- L1	V V		B B
Nissan NV 200 / Evalia SIARR	10/09-		332 264 600 001	878	120		18	7,5	75	1100		332 265 300 107 332 265 300 113	S S	FRE FRE	E1 E1	-- D1	-- L1	V V	60 60	L B
Nissan NV 200 / Evalia KIT = towbar inc. electrical kit 13 pins SIARR	10/09-		332 264 900 113	878	120		20	7,5	75	1100		electrical kit 13 pins in the kit: 332 265 300 113	S	FRE	E1	D1	L1	V	60	B
Nissan NV 200 / Evalia SIARR	10/09-		332 267 600 001	867	120		22	7,5	75	1100		332 265 300 107 332 265 300 113	S S	FRE FRE	E1 E1	-- D1	-- L1	V V	60 60	L B
Nissan NV 200 / Evalia SIARR	10/09-		332 265 600 001	876	120		20	7,5	75	1100		332 265 300 107 332 265 300 113	S S	FRE FRE	E1 E1	-- D1	-- L1	V V	60 60	L B
Nissan NV 200 / Evalia KIT = towbar inc. electrical kit 13 pins SIARR	10/09-		332 265 900 113	876	120		22	7,5	75	1100		electrical kit 13 pins in the kit: 332 265 300 113	S	FRE	E1	D1	L1	V	60	B
Nissan NV 400 box/estate front wheel drive SIARR	03/10-		316 318 600 001	0158	60		19,3	14,3	100	2500		for vehicles without central plug connection 316 300 300 107 for vehicles without central plug connection 316 300 300 113 for vehicles with central plug connection 316 318 300 113 316 318 300 157	S S S S	FRE FRE FRE FRE	E2 E2 E2 E2	-- -- D1 D1	-- -- L1 L1	H H H H	45 45 45 45	B B B B

Nissan Pathfinder KIT = towbar inc. electrical kit 13 pins	03/05-		332 301 900 113	3133	60	✂	17	16,4	140	3500	electrical kit 13 pins in the kit: 332 303 300 113	S							B
Nissan Pathfinder	03/05-		332 302 600 001	3134	60	✂	15	16,4	140	3500	332 303 300 113	S							B
Nissan Pathfinder	03/05-		332 303 600 001	3135	60	✂	16	16,4	140	3500	332 303 300 113	S							B
Nissan Pathfinder KIT = towbar inc. electrical kit 13 pins	03/05-		332 303 900 113	3135	>150	✂	18	16,4	140	3500	electrical kit 13 pins in the kit: 332 303 300 113	S							B
Nissan Pick-up D40 Navarra for vehicles with bumper with integrated step inc. towball 329076600001 if using a swap system (bolt coupling or 4-whole- towball) an additional plate is necessary, order no. 932245605002	07/05-		332 312 600 001	3311	60		18	15,5	120	3000	300 052 300 107 300 052 300 113	-- --	FRE -- FRE --	-- --	D1 D1	-- --	V V		B B
Nissan Pick-up MD22 Navarra SingleCab, KingCab and DoubleCab 4x4, for vehicles with chrome bumper and integrated step	03/00- 07/05		332 207 600 001	1332	150		33	15	120	3000	300 061 300 107 300 061 300 113	-- --	C2 C2	-- --	D1 L1	H H			B B
Nissan Pick-up NP300 SingleCab, KingCab and DoubleCab 4x4, for vehicles with chrome bumper and integrated step	03/00-		332 207 600 001	1332	150		33	15	120	3000	300 061 300 107 300 061 300 113	-- --	C2 C2	-- --	D1 L1	H H			B B
Nissan Pixo Monoflex	09-		332 306 600 001	4066	90	✂	15	4,2	50	650	332 306 300 113 332 306 300 157	S S	FRE -- --	E1 --	D1 --	-- --	H H	60 45	L L
Nissan Pixo KIT = towbar inc. electrical kit 13 pins Monoflex	09-		332 306 900 113	4066	90	✂	17	4,2	50	650	electrical kit 13 pins in the kit: 332 306 300 113	S	FRE --	E1	D1	--	H	60	L

















Nissan

Nissan Primastar Monoflex		03-	314 364 600 001	2042	60		21	12,3	85	2100	discontinued model -08/06	S	FRE	--	E1	--	H	60	L	
											314 263 300 107	S	FRE	--	E1	D1	L1	H	60	L
											314 263 300 113 08/06-03/10	S	FRE	--	E1	--	--	H	60	B
											314 860 300 107 08/06-03/10	S	FRE	--	E1	D1	L1	H	60	B
											314 860 300 113 03/10-	S	FRE	--	E1	--	--	H	60	B
											314 870 300 107 03/10-	S	FRE	--	E1	D1	L1	H	60	B
											314 870 300 113	S	FRE	--	E1	D1	L1	H	60	B
Nissan Primastar KIT = towbar inc. electrical kit 13 pins Monoflex		08/06- 03/10	314 364 900 113	2042	60		23	12,3	85	2100	electrical kit 13 pins in the kit:	S	FRE	--	E1	D1	L1	H	60	B
											314 860 300 113	S	FRE	--	E1	D1	L1	H	60	B
Nissan Primastar KIT = towbar inc. electrical kit 13 pins Monoflex		03/10-	314 870 900 113	2042	60		23	12,3	85	2100	electrical kit 13 pins in the kit:	S	FRE	--	E1	D1	L1	H	60	B
											314 870 300 113	S	FRE	--	E1	D1	L1	H	60	B
Nissan Primera Estate WP11/W11 Traveller		98- 03/02	332 133 600 001	0269	>150		25,5	8,8	75	1700	-08/99	--	C2	--	--	--	H		B	
											300 061 300 107	--	C2	--	--	D1	L1	H	B	
											300 061 300 113 09/99-	--	FRE	--	E1	--	--	V	B	
											300 072 300 107 09/99-	--	FRE	--	E1	D1	L1	V	B	
											300 072 300 113	--	FRE	--	E1	D1	L1	V	B	
Nissan Primera Estate WP12		03/02-	332 205 600 001	1397	120		17	9,6	75	1800	--	FRE	--	E1	--	V	B			
											300 072 300 107	--	FRE	--	E1	D1	L1	V	B	
Nissan Primera Hatchback/Saloon P12		03/02-	332 197 600 001	1277	150		17	9,6	75	1800	--	FRE	--	E1	--	V	B			
											300 072 300 107	--	FRE	--	E1	D1	L1	V	B	
Nissan Primera Hatchback/Saloon P12		07/02-	332 197 600 001	1277	150		17	9,6	75	1800	--	FRE	--	E1	--	V	B			
											300 072 300 107	--	FRE	--	E1	D1	L1	V	B	









Nissan Qashqai, Qashqai +2	02/07-		332 246 600 001	2585	120	✂	22	8,6	70	1400		332 262 300 107 332 262 300 113	S S	A A	-- --	E1 E1	-- D1	-- L1	V V	75 75	B B
Nissan Qashqai, Qashqai +2 KIT = towbar inc. electrical kit 13 pins	02/07-		332 246 900 113	2585	120	✂	24	8,6	70	1400		electrical kit 13 pins in the kit: 332 262 300 113	S	A	--	E1	D1	L1	V	75	B
Nissan Qashqai, Qashqai +2	02/07-		332 266 600 001	2586	120	✂	22,6	8,6	70	1400		332 262 300 107 332 262 300 113	S S	A A	-- --	E1 E1	-- D1	-- L1	V V	75 75	B B
Nissan Qashqai, Qashqai +2	02/07-		332 247 600 001	2584	120	✂	25	8,6	70	1400		332 262 300 107 332 262 300 113	S S	A A	-- --	E1 E1	-- D1	-- L1	V V	75 75	B B
Nissan Qashqai, Qashqai +2 KIT = towbar inc. electrical kit 13 pins	02/07-		332 247 900 113	2584	120	✂	27	8,6	70	1400		electrical kit 13 pins in the kit: 332 262 300 113	S	A	--	E1	D1	L1	V	75	B
Nissan Serena C23 discontinued model	02/93-		332 130 600 001	0321	150		20,8	9,5	100	1700		300 061 300 107 300 061 300 113	-- --	C2 C2	-- --	-- D1	-- L1	H H			B B
Nissan Terrano II discontinued model	06/93-		332 091 600 001	0192	30		17,4	13,7	115	3000		300 072 300 107 300 072 300 113	-- --	FRE FRE	-- --	E1 E1	-- D1	-- L1	V V		B B
Nissan X-Trail	09/01- 06/07		332 237 600 001	1840	150	✂	17,4	11,8	100	2500		300 061 300 107 300 061 300 113	-- --	C2 C2	-- --	-- D1	-- L1	H H			B B
Nissan X-Trail	09/01- 06/07		332 223 600 001	1533	150	✂	21	11,1	100	2250		300 061 300 107 300 061 300 113	-- --	C2 C2	-- --	-- D1	-- L1	H H			B B
Nissan X-Trail	06/07-		332 261 600 001	2417	90		26	10,8	100	2200		332 262 300 107 332 262 300 113	S S	A A	-- --	E1 E1	-- D1	-- L1	V V	75 75	B B
Nissan X-Trail KIT = towbar inc. electrical kit 13 pins	06/07-		332 261 900 113	2417	90		28	10,8	100	2200		electrical kit 13 pins in the kit: 332 262 300 113	S	A	--	E1	D1	L1	V	75	B
Nissan X-Trail	06/07-		332 263 600 001	2419	90		27	10,8	100	2200		332 262 300 107 332 262 300 113	S S	A A	-- --	E1 E1	-- D1	-- L1	V V	75 75	B B
Nissan X-Trail	06/07-		332 262 600 001	2418	90		27,5	10,8	100	2200		332 262 300 107 332 262 300 113	S S	A A	-- --	E1 E1	-- D1	-- L1	V V	75 75	B B







Nissan





Nissan X-Trail KIT = towbar inc. electrical kit 13 pins	06/07-		332 262 900 113	2418	90	29,5	10,8	100	2200		electrical kit 13 pins in the kit: 332 262 300 113	S	A	--	E1	D1	L1	V	75	B
---	--------	---	------------------------	------	----	------	------	-----	------	--	---	---	---	----	----	----	----	---	----	---









Opel Agila Monoflex	03-04/08		314 347 600 001	2246	120		20	6,04	80	1000		300 072 300 107 300 072 300 113	-- --	FRE -- FRE --	E1 -- E1 D1	-- L1 V	V	B
Opel Agila 5 doors SIARR	03-04/08		314 332 600 001	5522	120		20	5,3	50	900		300 072 300 107 300 072 300 113	-- --	FRE -- FRE --	E1 -- E1 D1	-- L1 V	V	B
Opel Agila Monoflex	03-04/08		314 348 600 001	2246	120		20	6,04	80	1000		300 072 300 107 300 072 300 113	-- --	FRE -- FRE --	E1 -- E1 D1	-- L1 V	V	B
Opel Agila only for 1,2 l gas engine	04/08-		314 308 600 001	3838	90		16	4,23	50	600		332 306 300 113 332 306 300 157	S -- S --	FRE -- --	E1 D1 --	-- --	H H	60 45
Opel Agila KIT = towbar inc. electrical kit 13 pins only for 1,2 l gas engine Monoflex	04/08-		314 308 900 113	3838	90		18	4,23	50	600		electrical kit 13 pins in the kit: 332 306 300 113	S FRE --	S FRE --	E1 D1	--	H	60
Opel Agila only for 1,2 l gas engine Monoflex	04/08-		314 309 600 001	3838	90		16	4,23	50	600		332 306 300 113 332 306 300 157	S FRE -- S --	S FRE -- --	E1 D1 --	-- --	H H	60 45
Opel Agila KIT = towbar inc. electrical kit 13 pins only for 1,2 l gas engine Monoflex	04/08-		314 309 900 113	3838	90		18	4,23	50	600		electrical kit 13 pins in the kit: 332 306 300 113	S FRE --	S FRE --	E1 D1	--	H	60
Opel Antara exc. vehicles with bike carrier system Flex-Fix exc. vehicles with height control	02/07-		314 304 600 001	2508	150		24	12,3	150	2500		05/11-, chassis no. H5BB034034 - 314 422 300 113 -05/11-, - chassis no. H5BB034033 349 025 300 113	S A -- S C2 --	S A -- S C2 --	E D E D1	L1 V L1 V	V	90
Opel Antara KIT = towbar inc. electrical kit 13 pins exc. vehicles with bike carrier system Flex-Fix exc. vehicles with height control discontinued model	02/07-05/11		314 304 900 113	2508	150		26	12,3	150	2500		electrical kit 13 pins in the kit: 349 025 300 113	S C2 --	S C2 --	E D1	L1 V	V	90
Opel Antara KIT = towbar inc. electrical kit 13 pins exc. vehicles with bike carrier system Flex-Fix exc. vehicles with height control	05/11-		314 421 900 113	2508	150		26	12,3	150	2500		electrical kit 13 pins in the kit: 314 422 300 113	S A --	S A --	E D	L1 V	V	90




















Opel





















Opel Antara exc. vehicles with bike carrier system Flex-Fix exc. vehicles with height control discontinued model	02/07-		314 338 600 001	2523	150	24	11	130	2200		05/11-, chassis no. H5BB034034 - 314 422 300 113 -05/11-, - chassis no. H5BB034033 349 025 300 113	S S	A C2	-- --	E E	D D1	L1 L1	V V	90 90	L B
Opel Antara exc. vehicles with bike carrier system Flex-Fix exc. vehicles with height control	02/07-		314 305 600 001	2509	150	24	12,3	150	2500		05/11-, chassis no. H5BB034034 - 314 422 300 113 -05/11-, - chassis no. H5BB034033 349 025 300 113	S S	A C2	-- --	E E	D D1	L1 L1	V V	90 90	L B
Opel Antara KIT = towbar inc. electrical kit 13 pins exc. vehicles with bike carrier system Flex-Fix exc. vehicles with height control	02/07- 05/11		314 305 900 113	2509	150	26	12,3	150	2500		electrical kit 13 pins in the kit: 349 025 300 113	S	C2	--	E	D1	L1	V	90	B
Opel Antara KIT = towbar inc. electrical kit 13 pins exc. vehicles with bike carrier system Flex-Fix exc. vehicles with height control	05/11-		314 422 900 113	2509	150	26	12,3	150	2500		electrical kit 13 pins in the kit: 314 422 300 113	S	A	--	E	D	L1	V	90	L
Opel Astra Convertible - Twin Top	05/06-		314 310 600 001	2257	100	20	8	75	1400		314 300 300 107 314 300 300 113	S S	FRE FRE	-- --	E2 E2	-- D	-- L1	H V	45 45	B B
Opel Astra Coupé	00- 03/04		314 236 600 001	0432	>150	23,1	8,6	75	1500		300 072 300 107 300 210 300 107 300 210 300 113 discontinued model: 314 237 300 107 314 237 300 113	-- -- -- S S	FRE A A FRE FRE	-- -- -- -- --	E1 E1 E1 E E	-- -- D1 -- D1	V V L1 V V	60 90 90 60 60	L B B L L	
Opel Astra Coupé KIT = towbar inc. electrical kit 13 pins	00- 03/04		314 236 900 113	0432	>150	25,1	8,6	75	1500		electrical kit 13 pins in the kit: 314 237 300 113	S	FRE	--	E	D1	--	V	60	L
Opel Astra G Estate exc. vehicles with gas drive (CNG)	03/98- 10/04		314 275 600 001	1283	120	22	8,6	75	1500		300 210 300 107 300 210 300 113 314 244 300 107 314 244 300 113	-- -- S S	A A FRE FRE	-- -- -- --	E1 E1 E E	-- D1 -- D1	V L1 V L1	90 90 60 60	B B L L	

Opel Astra G Estate KIT = towbar inc. electrical kit 13 pins exc. vehicles with gas drive (CNG)	03/98- 10/04		314 275 900 113	1283	120	24	8,6	75	1500	electrical kit 13 pins in the kit: 314 244 300 113	S FRE --	E	D1	L1	V	60	L
Opel Astra G Hatchback and Saloon	03/98- 03/04		314 236 600 001	0432	>150	23,1	8,6	75	1500	300 072 300 107 300 210 300 107 300 210 300 113 discontinued model: 314 237 300 107 314 237 300 113	-- FRE -- -- A -- -- A -- S FRE -- S FRE --	E1 -- E1 -- E1 D1 E -- E	-- -- -- -- D1 -- -- D1	-- -- -- -- L1 -- -- --	V V V V V	60 90 90 60 60	B B B L L
Opel Astra G Hatchback and Saloon KIT = towbar inc. electrical kit 13 pins	03/98- 03/04		314 236 900 113	0432	>150	25,1	8,6	75	1500	electrical kit 13 pins in the kit: 314 237 300 113	S FRE --	E	D1	--	V	60	L
Opel Astra G Hatchback and Saloon SIARR discontinued model	03/98- 03/04		314 333 600 001	0975	150	21	7,33	75	1300	300 072 300 107 300 210 300 107 300 210 300 113 discontinued model: 314 237 300 107 314 237 300 113	-- FRE -- -- A -- -- A -- S FRE -- S FRE --	E1 -- E1 -- E1 D1 E -- E	-- -- -- -- D1 -- -- D1	-- -- -- -- L1 -- -- --	V V V V V	60 90 90 60 60	B B B L L
Opel Astra H Estate To guarantee an optimal fit of the bumper it is necessary to mount a support, please order from Opel-dealer, order no. 1313 8158 and 1316 8808.	10/04-		314 285 600 001	1889	60	17	9,1	75	1650	for vehicles without rear central electronic (REC) 300 210 300 113 for vehicles with rear central electronic (REC) 314 300 300 107 for vehicles with rear central electronic (REC) 314 300 300 113	-- A -- S FRE -- S FRE --	E1 D1 E2 -- E2	D1 -- -- D	L1 -- -- L1	V H V	90 45 45	B B B
Opel Astra H Estate KIT = towbar inc. electrical kit 13 pins To guarantee an optimal fit of the bumper it is necessary to mount a support, please order from Opel-dealer, order no. 1313 8158 and 1316 8808.	10/04-		314 285 900 113	1889	60	19	9,1	75	1650	electrical kit 13 pins in the kit:for vehicles with rear central electronic (REC) 314 300 300 113	S FRE --	E2	D	L1	V	45	B























<p>Opel Astra H Estate To guarantee an optimal fit of the bumper it is necessary to mount a support, please order from Opel-dealer, order no. 1313 8158 and 1316 8808. discontinued model</p>	10/04-		<p>314 320 600 001 2324 60 18,3 9,1 75 1650</p>	<p>for vehicles without rear central electronic (REC) 300 210 300 113 for vehicles with rear central electronic (REC) 314 300 300 107 for vehicles with rear central electronic (REC) 314 300 300 113</p>	<p>-- A -- E1 D1 L1 V 90 B</p> <p>S FRE -- E2 -- -- H 45 B</p> <p>S FRE -- E2 D L1 V 45 B</p>
<p>Opel Astra H Estate To guarantee an optimal fit of the bumper it is necessary to mount a support, please order from Opel-dealer, order no. 1313 8158 and 1316 8808.</p>	10/04-		<p>314 287 600 001 1890 60 18,5 9,1 75 1650</p>	<p>for vehicles without rear central electronic (REC) 300 210 300 113 for vehicles with rear central electronic (REC) 314 300 300 107 for vehicles with rear central electronic (REC) 314 300 300 113</p>	<p>-- A -- E1 D1 L1 V 90 B</p> <p>S FRE -- E2 -- -- H 45 B</p> <p>S FRE -- E2 D L1 V 45 B</p>
<p>Opel Astra H Estate KIT = towbar inc. electrical kit 13 pins To guarantee an optimal fit of the bumper it is necessary to mount a support, please order from Opel-dealer, order no. 1313 8158 and 1316 8808.</p>	10/04-		<p>314 287 900 113 1890 60 19,5 9,1 75 1650</p>	<p>electrical kit 13 pins in the kit: 314 300 300 113</p>	<p>S FRE -- E2 D L1 V 45 B</p>
<p>Opel Astra H Hatchback inc. GTC exc. VXR / 240 HP</p>	03/04-		<p>314 299 600 001 1830 60 21,5 9 75 1650</p>	<p>for vehicles without rear central electronic (REC) 300 210 300 113 for vehicles with rear central electronic (REC) 314 300 300 107 for vehicles with rear central electronic (REC) 314 300 300 113</p>	<p>-- A -- E1 D1 L1 V 90 B</p> <p>S FRE -- E2 -- -- H 45 B</p> <p>S FRE -- E2 D L1 V 45 B</p>

Opel Astra H Hatchback KIT = towbar inc. electrical kit 13 pins inc. GTC exc. VXR / 240 HP	03/04-		314 299 900 113	1830	60	23,5	9	75	1650	electrical kit 13 pins in the kit:for vehicles with rear central electronic (REC) 314 300 300 113	S FRE --	E2	D	L1	V	45	B
Opel Astra H Hatchback inc. GTC exc. VXR / 240 HP	03/04-		314 281 600 001	1754	60	21,5	9	75	1650	for vehicles without rear central electronic (REC) 300 210 300 113 for vehicles with rear central electronic (REC) 314 300 300 107 for vehicles with rear central electronic (REC) 314 300 300 113	-- A --	E1	D1	L1	V	90	B
Opel Astra H Hatchback KIT = towbar inc. electrical kit 13 pins inc. GTC exc. VXR / 240 HP	03/04-		314 281 900 113	1754	60	23,5	9	75	1650	electrical kit 13 pins in the kit:for vehicles with rear central electronic (REC) 314 300 300 113	S FRE --	E2	D	L1	V	45	B
Opel Astra J 4 doors Saloon	10/12-		314 412 600 001	3432	60	22,5	9,6	75	1500	314 386 300 107 314 386 300 113	S CAN -- S CAN --	E -- E D	-- L1	V V	75 75	B B	
Opel Astra J 4 doors Saloon KIT = towbar inc. electrical kit 13 pins	10/12-		314 412 900 113	3432	60	24,5	9,6	75	1500	electrical kit 13 pins in the kit: 314 386 300 113	S CAN --	E D	L1	V	75	B	
Opel Astra J 4 doors Saloon	10/12-		314 414 600 001	3292	60	21	9,6	75	1500	314 386 300 107 314 386 300 113	S CAN -- S CAN --	E -- E D	-- L1	V V	75 75	B B	
Opel Astra J 4 doors Saloon KIT = towbar inc. electrical kit 13 pins	10/12-		314 414 900 113	3292	60	23	9,6	75	1500	electrical kit 13 pins in the kit: 314 386 300 113	S CAN --	E D	L1	V	75	B	
Opel Astra J GTC	01/12-		314 441 600 001	3297	60	22	9,6	75	1800	314 386 300 107 314 386 300 113	S CAN -- S CAN --	E -- E D	-- L1	V V	75 75	B B	

Opel Astra J GTC KIT = towbar inc. electrical kit 13 pins	01/12-		314 441 900 113	3297	60		24	9,6	75	1800	electrical kit 13 pins in the kit: 314 386 300 113	S CAN --	E	D	L1	V	75	B
Opel Astra J GTC	01/12-		314 440 600 001	3293	60		22	9,6	75	1800	314 386 300 107 314 386 300 113	S CAN -- S CAN --	E	--	--	V	75	B
Opel Astra J GTC KIT = towbar inc. electrical kit 13 pins	01/12-		314 440 900 113	3293	60		24	9,6	75	1800	electrical kit 13 pins in the kit: 314 386 300 113	S CAN --	E	D	L1	V	75	B
Opel Astra J Hatchback 5 doors exc. vehicles with bike carrier system Flex-Fix	12/09- 10/12		314 387 600 001	2988	60		23	9,6	75	1800	314 386 300 107 314 386 300 113	S CAN -- S CAN --	E	--	--	V	75	B
Opel Astra J Hatchback KIT = towbar inc. electrical kit 13 pins 5 doors exc. vehicles with bike carrier system Flex-Fix	12/09- 10/12		314 387 900 113	2988	60		25	9,6	75	1800	electrical kit 13 pins in the kit: 314 386 300 113	S CAN --	E	D	L1	V	75	B
Opel Astra J Hatchback 5 doors exc. vehicles with bike carrier system Flex-Fix discontinued model	12/09- 10/12		314 405 600 001	3171	60		23	9,6	75	1800	314 386 300 107 314 386 300 113	S CAN -- S CAN --	E	--	--	V	75	B
Opel Astra J Hatchback 5 doors exc. vehicles with bike carrier system Flex-Fix replaced by: 314473600001 discontinued model	12/09- 10/12		314 386 600 001	2961	60		23	9,6	75	1800	314 386 300 107 314 386 300 113	S CAN -- S CAN --	E	--	--	V	75	B
Opel Astra J Hatchback exc. vehicles with bike carrier system Flex-Fix	12/09-		314 473 600 001	3445	60		23	9,6	75	1800	314 386 300 107 314 386 300 113	S CAN -- S CAN --	E	--	--	V	75	B
Opel Astra J Hatchback KIT = towbar inc. electrical kit 13 pins 5 doors exc. vehicles with bike carrier system Flex-Fix replaced by: 314473900113 discontinued model	12/09- 10/12		314 386 900 113	2961	60		25	9,6	75	1800	electrical kit 13 pins in the kit: 314 386 300 113	S CAN --	E	D	L1	V	75	B
Opel Astra J Hatchback KIT = towbar inc. electrical kit 13 pins exc. vehicles with bike carrier system Flex-Fix	12/09-		314 473 900 113	3445	60		25	9,6	75	1800	electrical kit 13 pins in the kit: 314 386 300 113	S CAN --	E	D	L1	V	75	B




Opel Astra J Hatchback exc. vehicles with bike carrier system Flex-Fix	10/12-		314 474 600 001	3447	60		23	9,6	75	1800	314 386 300 107	S CAN --	E --	--	V	75	B
Opel Astra J Hatchback KIT = towbar inc. electrical kit 13 pins exc. vehicles with bike carrier system Flex-Fix	10/12-		314 474 900 113	3447	60		25	9,6	75	1800	electrical kit 13 pins in the kit: 314 386 300 113	S CAN --	E D	L1	V	75	B
Opel Astra J Sports Tourer exc. vehicles with bike carrier system Flex-Fix	11/10-		314 407 600 001	3156	60		24,5	9,6	75	1800	314 386 300 107 314 386 300 113	S CAN -- S CAN --	E -- E D	-- L1	V V	75 75	B B
Opel Astra J Sports Tourer KIT = towbar inc. electrical kit 13 pins exc. vehicles with bike carrier system Flex-Fix	11/10-		314 407 900 113	3156	60		26,5	9,6	75	1800	electrical kit 13 pins in the kit: 314 386 300 113	S CAN --	E D	L1	V	75	B
Opel Astra J Sports Tourer exc. vehicles with bike carrier system Flex-Fix	11/10-		314 411 600 001	3283	60		25	9,6	75	1800	314 386 300 107 314 386 300 113	S CAN -- S CAN --	E -- E D	-- L1	V V	75 75	B B
Opel Astra J Sports Tourer exc. vehicles with bike carrier system Flex-Fix	11/10-		314 406 600 001	3080	60		25	9,6	75	1800	314 386 300 107 314 386 300 113	S CAN -- S CAN --	E -- E D	-- L1	V V	75 75	B B
Opel Astra J Sports Tourer KIT = towbar inc. electrical kit 13 pins exc. vehicles with bike carrier system Flex-Fix	11/10-		314 406 900 113	3080	60		27	9,6	75	1800	electrical kit 13 pins in the kit: 314 386 300 113	S CAN --	E D	L1	V	75	B
Opel Cascada Convertible	05/13-		314 472 600 001	3534	60			9,6	75	1300							
Opel Combo	02/12-		306 368 600 001	3048	60		23	9,2	100	1500	306 605 300 107 306 605 300 113	S FRE -- S FRE --	E -- E D1	-- L1	V V	90 90	B B
Opel Combo KIT = towbar inc. electrical kit 13 pins	02/12-		306 368 900 113	3048	60		25	9,2	100	1500	electrical kit 13 pins in the kit: 306 605 300 113	S FRE --	E D1	L1	V	90	B
Opel Combo	02/12-		306 370 600 001	3049	60		25	9,2	100	1500	306 605 300 107 306 605 300 113	S FRE -- S FRE --	E -- E D1	-- L1	V V	90 90	B B
Opel Combo	02/12-		306 369 600 001	3050	60		25	9,2	100	1500	306 605 300 107 306 605 300 113	S FRE -- S FRE --	E -- E D1	-- L1	V V	90 90	B B
Opel Combo KIT = towbar inc. electrical kit 13 pins	02/12-		306 369 900 113	3050	60		27	9,2	100	1500	electrical kit 13 pins in the kit: 306 605 300 113	S FRE --	E D1	L1	V	90	B




Opel

Opel Combo for vehicles with gas drive (CNG)	02/12-		306 382 600 001	3305	60		25	7	75	1000		306 605 300 107 306 605 300 113	S FRE -- S FRE --	E -- E D1	-- L1 V	V 90	B 90	
Opel Combo KIT = towbar inc. electrical kit 13 pins for vehicles with gas drive (CNG)	02/12-		306 382 900 113	3305	60		27	7	75	1000		electrical kit 13 pins in the kit: 306 605 300 113	S FRE --	E D1	L1 V	V	90	B
Opel Combo for vehicles with gas drive (CNG)	02/12-		306 381 600 001	3304	60		25	7	75	1000		306 605 300 107 306 605 300 113	S FRE -- S FRE --	E -- E D1	-- L1 V	V 90	B 90	
Opel Combo KIT = towbar inc. electrical kit 13 pins for vehicles with gas drive (CNG)	02/12-		306 381 900 113	3304	60		27	7	75	1000		electrical kit 13 pins in the kit: 306 605 300 113	S FRE --	E D1	L1 V	V	90	B
Opel Corsa	93- 09/00		314 231 600 001	0016	>150		13,7	5,9	50	1000		300 060 300 113	-- C2 --	--	D1 L1	H	45	B
Opel Corsa inc. Corsa Van	10/00- 10/06		314 267 600 001	1329	150		23	7,1	50	1200		300 072 300 107 300 072 300 113	-- FRE -- -- FRE --	E1 -- E1 D1	-- L1 V	V V	B B	
Opel Corsa Combo Van exc. vehicles with gas drive (CNG)	03/02-		314 282 600 001	1200	150		16,4	7,5	75	1200		300 072 300 107 314 335 300 113 314 335 300 157	-- FRE -- S FRE -- S --	E1 -- -- --	-- D1 -- --	V H H	45 45	B L L
Opel Corsa Combo Van KIT = towbar inc. electrical kit 13 pins exc. vehicles with gas drive (CNG)	03/02-		314 282 900 113	1200	150		18	7,5	75	1200		electrical kit 13 pins in the kit: 314 335 300 113	S FRE --	--	D1 --	H	45	L
Opel Corsa Combo Van exc. vehicles with gas drive (CNG) SIARR	03/02-		314 335 600 001	4347	120		23	6,3	50	1000		300 072 300 107 314 335 300 113 314 335 300 157	-- FRE -- S FRE -- S --	E1 -- -- --	-- D1 -- --	V H H	45 45	B L L
Opel Corsa D exc. vehicles with bike carrier system Flex-Fix, exc. VXR / 192 HP, exc. Gsi	10/06-		314 306 600 001	2031	60		17	7,7	55	1200		314 307 300 107 314 307 300 113	S A -- S A --	E1 -- E1 D1	-- --	V V	90 90	B B
Opel Corsa D KIT = towbar inc. electrical kit 13 pins exc. vehicles with bike carrier system Flex-Fix, exc. VXR / 192 HP, exc. Gsi	10/06-		314 306 900 113	2031	60		19	7,7	55	1200		electrical kit 13 pins in the kit: 314 307 300 113	S A --	E1 D1	--	V	90	B








Opel Corsa D exc. vehicles with bike carrier system Flex-Fix, exc. VXR / 192 HP, exc. Gsi	10/06-		314 307 600 001	2489	60	18,5	7,7	55	1200	314 307 300 107 314 307 300 113	S A -- S A --	E1 -- E1 D1	-- --	V V	90 90	B B
Opel Corsa D KIT = towbar inc. electrical kit 13 pins exc. vehicles with bike carrier system Flex-Fix, exc. VXR / 192 HP, exc. Gsi	10/06-		314 307 900 113	2489	60	20,5	7,7	55	1200	electrical kit 13 pins in the kit: 314 307 300 113	S A --	E1 D1	--	V	90	B
Opel Estate/Van	09/91- 02/98		314 219 600 001	0047	>150	10,6	8	75	1500	300 072 300 113 314 253 300 107	-- FRE -- S C2 --	E1 D1 --	L1 --	V H	45 L	B
Opel Insignia Saloon exc. VXR, inc. 4x4 Monoflex	11/08-		314 389 600 001	3945	90	23	11,3	85	2100	314 386 300 107 314 386 300 113	S CAN -- S CAN --	E -- E D	-- L1	V V	75 75	B B
Opel Insignia Saloon KIT = towbar inc. electrical kit 13 pins exc. VXR, inc. 4x4 Monoflex	11/08-		314 389 900 113	3945	90	25	11,3	85	2100	electrical kit 13 pins in the kit: 314 386 300 113	S CAN --	E D	L1	V	75	B
Opel Insignia Saloon exc. VXR, inc. 4x4 Monoflex discontinued model	11/08-		314 403 600 001	3945	90	23	11,3	85	2100	314 386 300 107 314 386 300 113	S CAN -- S CAN --	E -- E D	-- L1	V V	75 75	B B
Opel Insignia Saloon exc. VXR, inc. 4x4 Monoflex	11/08-		314 341 600 001	3935	90	24	11,3	85	2100	314 386 300 107 314 386 300 113	S CAN -- S CAN --	E -- E D	-- L1	V V	75 75	B B
Opel Insignia Saloon KIT = towbar inc. electrical kit 13 pins exc. VXR, inc. 4x4 Monoflex	11/08-		314 341 900 113	3935	90	25,5	11,6	85	2100	electrical kit 13 pins in the kit: 314 386 300 113	S CAN --	E D	L1	V	75	B















Opel

Opel Insignia Sports Tourer 2 WD, front wheel drive exc. VXR Monoflex		08/09-	314 390 600 001	4000	90	✂	23	11,3	85	2100	S CAN --	E2 --	--	H	45	B	08/09- 314 342 300 107
																	08/09- 314 342 300 113 -08/09Opel control units with code letter AE(from chassis no. GM87C891067386) have to be replaced by control units with trailer specification, Opel no. 12 379 96. 314 402 300 113
Opel Insignia Sports Tourer KIT = towbar inc. electrical kit 13 pins 2 WD, front wheel drive exc. VXR Monoflex		08/09-	314 390 900 113	4000	90	✂	23	11,3	85	2100	S CAN --	E2 D1	L1	H	45	B	electrical kit 13 pins in the kit. 314 342 300 113
Opel Insignia Sports Tourer 2 WD, front wheel drive exc. VXR Monoflex discontinued model		03/09-	314 404 600 001	4000	90	✂	23	11,3	85	2100	S CAN --	E2 --	--	H	45	B	08/09- 314 342 300 107
																	08/09- 314 342 300 113 -08/09Opel control units with code letter AE(from chassis no. GM87C891067386) have to be replaced by control units with trailer specification, Opel no. 12 379 96. 314 402 300 113





Opel Insignia Sports Tourer 2 WD, front wheel drive exc. VXR Monoflex		03/09-	314 342 600 001	3978	90	26,5	11,3	85	2100	08/09- 314 342 300 107 08/09- 314 342 300 113 -08/09Opel control units with code letter AE(from chassis no. GM87C891067386) have to be replaced by control units with trailer specification, Opel no. 12 379 96. 314 402 300 113	S CAN --	E2	--	H	45	B	
											S CAN --	E2 D1	L1	H	45	B	
Opel Insignia Sports Tourer KIT = towbar inc. electrical kit 13 pins 2 WD, front wheel drive exc. VXR Monoflex		08/09-	314 342 900 113	3978	90	28	11,3	85	2100	electrical kit 13 pins in the kit. 314 342 300 113	S CAN --	E2 D1	L1	H	45	B	
											S CAN --	E2 D1	L1	H	45	B	
Opel Insignia Sports Tourer 4 WD exc. VXR Monoflex		03/09-	314 408 600 001	4056	90	25	11,3	85	2100	08/09- 314 342 300 107 08/09- 314 342 300 113 -08/09Opel control units with code letter AE(from chassis no. GM87C891067386) have to be replaced by control units with trailer specification, Opel no. 12 379 96. 314 402 300 113	S CAN --	E2	--	H	45	B	
											S CAN --	E2 D1	L1	H	45	B	
											S CAN C	E	D1	L1	H	60	B
											S CAN C	E	D1	L1	H	60	B






Opel

Opel Insignia Sports Tourer 4 WD exc. VXR Monoflex	03/09-		314 409 600 001	4051	90	29	11,3	85	2100	08/09- 314 342 300 107 08/09- 314 342 300 113 -08/09 Opel control units with code letter AE (from chassis no. GM87C891067386) have to be replaced by control units with trailer specification, Opel no. 12 379 96. 314 402 300 113	S CAN -- S CAN --	E2 -- E2 D1	-- L1	H H	45 45	B B
Opel Meriva exc. VXR thermal-insulation plate is necessary (see instruction manual of the vehicle)	05/03-		314 289 600 001	1577	60	23	8,3	60	1300	discontinued model: 314 289 300 107 314 289 300 113 314 289 300 157	S FRE -- S FRE -- S -- --	E -- -- E D1 -- --	-- L1 --	H H H	60 60 45	B B L
Opel Meriva KIT = towbar inc. electrical kit 13 pins exc. VXR thermal-insulation plate is necessary (see instruction manual of the vehicle)	05/03-		314 289 900 113	1577	60	24	8,3	60	1300	electrical kit 13 pins in the kit: 314 289 300 113	S FRE --	E D1	L1	H	60	B
Opel Meriva exc. vehicles with bike carrier system Flex-Fix Please check if there is a towing capacity in the car documents.	06/10-		314 394 600 001	3086	60	19	8,3	75	1300	314 386 300 107 314 386 300 113	S CAN -- S CAN --	E -- -- E D	-- L1	V V	75 75	B B
Opel Meriva KIT = towbar inc. electrical kit 13 pins exc. vehicles with bike carrier system Flex-Fix Please check if there is a towing capacity in the car documents.	06/10-		314 394 900 113	3086	60	21	8,3	75	1300	electrical kit 13 pins in the kit: 314 386 300 113	S CAN --	E D	L1	V	75	B
Opel Meriva exc. vehicles with bike carrier system Flex-Fix Please check if there is a towing capacity in the car documents.	06/10-		314 410 600 001	3175	60	20	8,3	75	1300	314 386 300 107 314 386 300 113	S CAN -- S CAN --	E -- -- E D	-- L1	V V	75 75	B B
Opel Meriva exc. vehicles with bike carrier system Flex-Fix Please check if there is a towing capacity in the car documents.	06/10-		314 392 600 001	3082	60	20	8,3	75	1300	314 386 300 107 314 386 300 113	S CAN -- S CAN --	E -- -- E D	-- L1	V V	75 75	B B











Opel Meriva KIT = towbar inc. electrical kit 13 pins exc. vehicles with bike carrier system Flex-Fix Please check if there is a towing capacity in the car documents.	06/10-		314 392 900 113	3082	60		22	8,3	75	1300	electrical kit 13 pins in the kit: 314 386 300 113	S CAN --	E	D	L1	V	75	B
Opel Mokka exc. vehicles with bike carrier system Flex-Fix	10/12-		314 450 600 001	3439	60		21	7,5	75	1200	314 451 300 107 314 451 300 113	S A -- S A --	E2 -- E2 D	--	L1	V	90	B
Opel Mokka KIT = towbar inc. electrical kit 13 pins exc. vehicles with bike carrier system Flex-Fix	10/12-		314 450 900 113	3439	60		23	7,5	75	1200	electrical kit 13 pins in the kit: 314 451 300 113	S A --	E2 D	L1	V	90	B	
Opel Mokka exc. vehicles with bike carrier system Flex-Fix	10/12-		314 451 600 001	3295	60		23	7,5	75	1200	314 451 300 107 314 451 300 113	S A -- S A --	E2 -- E2 D	--	L1	V	90	B
Opel Mokka KIT = towbar inc. electrical kit 13 pins exc. vehicles with bike carrier system Flex-Fix	10/12-		314 451 900 113	3295	60		25	7,5	75	1200	electrical kit 13 pins in the kit: 314 451 300 113	S A --	E2 D	L1	V	90	B	
Opel Movano Chassis Cab Towing bracket inc. towball no. 329057600001 Assembly of automatic bolt coupling or swap system is possible, when using the swap system please order the towball no. 329059600001.	01/98-		316 126 600 001	0390	60		29,8	15,3	80	2800	-10/03 300 052 300 107 -10/03 300 052 300 113 11/03- 316 135 300 113	-- FRE -- -- FRE -- S A --	-- -- -- D1 -- -- D1 --	--	--	V	45	B
Opel Movano Chassis Cab SIARR discontinued model	01/98-		316 257 600 001	0743	60		26	13,61	80	2300	-10/03 300 052 300 107 -10/03 300 052 300 113 11/03- 316 135 300 113	-- FRE -- -- FRE -- S A --	-- -- -- D1 -- -- D1 --	--	--	V	45	B
Opel Movano Chassis Cab front + rear wheel drive SIARR	07/10-		316 319 600 001	0010	60		16	14,3	100	2500	316 319 300 113	S FRE --	--	D1	--	H	30	
Opel Movano Chassis Cab rear wheel drive with twin wheels SIARR	07/10-		316 329 600 001	0163	60		15	15,8	100	3000	316 319 300 113	S FRE --	--	D1	--	H	30	











Opel






Opel Movano Van		01/98-	316 124 600 001	0334	60	28,5	13,7	85	2300	-11/03	300 052 300 107	--	FRE --	--	--	--	--	V	B
										-11/03	300 052 300 113	--	FRE --	--	D1	--	--	V	B
										11/03-	316 130 300 113	S	FRE --	E1	D1	L1	H	45	L
										-11/03	300 052 300 107	--	FRE --	--	--	--	V	B	
Opel Movano Van Towing bracket inc. towball no. 329057600001 Assembly of automatic bolt coupling or swap system is possible, when using the swap system please order the towball no. 329059600001.		01/98-	316 126 600 001	0390	60	29,8	15,3	80	2800	-11/03	300 052 300 107	--	FRE --	--	--	--	V	B	
										-11/03	300 052 300 113	--	FRE --	--	D1	--	--	V	B
										11/03-	316 130 300 113	S	FRE --	E1	D1	L1	H	45	L
Opel Movano Van SIARR discontinued model		01/98-	316 257 600 001	0743	60	26	13,61	80	2300	-11/03	300 052 300 107	--	FRE --	--	--	--	V	B	
										-11/03	300 052 300 113	--	FRE --	--	D1	--	--	V	B
										11/03-	316 130 300 113	S	FRE --	E1	D1	L1	H	45	L
										for vehicles without central plug connection	316 300 300 107	S	FRE --	E2	--	--	H	45	B
Opel Movano Van front wheel drive SIARR		03/10-	316 318 600 001	0158	60	19,3	14,3	100	2500	for vehicles without central plug connection	316 300 300 107	S	FRE --	E2	--	--	H	45	B
										for vehicles without central plug connection	316 300 300 113	S	FRE --	E2	D1	L1	H	45	B
										for vehicles with central plug connection	316 318 300 113	S	FRE --	E2	D1	L1	V	30	B
										for vehicles with central plug connection	316 318 300 157	S	C2	--	--	--	H	45	L








Opel Movano Van rear wheel drive SIARR	03/10-		316 327 600 001	0159	60	19,7	14,3	100	2500	for vehicles without central plug connection	S	FRE	--	E2	--	H	45	B								
										316 300 300 107	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--
										for vehicles without central plug connection	S	FRE	--	E2	D1	L1	H	45	B							
										316 300 300 113	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--
Opel Movano Van rear wheel drive with twin wheels SIARR	03/10-		316 328 600 001	0157	60	19,7	15,8	100	3000	for vehicles without central plug connection	S	FRE	--	E2	--	H	45	B								
										316 300 300 107	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	
										for vehicles without central plug connection	S	FRE	--	E2	D1	L1	H	45	B							
										316 300 300 113	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--
Opel Omega B Estate exc. vehicles with height control	03/94-		314 205 600 001	0068	150	22,5	11	75	2100	additional kit for checkcontrol	--	--	--	--	--	V	30	B								
										300 025 300 173	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--
										for vehicles without central plug connection	S	FRE	--	E2	D1	L1	V	30	B							
										316 318 300 113	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--
Opel Omega B Saloon	03/94-		314 265 600 001	0779	150	18	11	75	2100	for vehicles without central plug connection	S	FRE	--	E	--	V	75	B								
										300 210 300 107	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--
										for vehicles with central plug connection	S	FRE	--	E2	D1	L1	V	30	B							
										316 318 300 157	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--
Opel Signum	05/03-		314 284 600 001	1233	120	26	10,7	80	2000	for vehicles without central plug connection	S	FRE	--	E	D	L1	H	30	B							
										314 295 300 113	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

Opel

Opel Signum	05/03-		314 283 600 001	1097	120	26	10,7	80	2000	314 295 300 113	S FRE --	E	D	L1	H	30	B
Opel Tigra is not permitted to tow by manufacturer.																	L
Opel Vectra A Saloon (type A-X), exc. 4 WD, exc. A2000	10/88- 09/95		314 170 600 001	0173	>150	24,2	8,6	75	1700	300 210 300 107 300 210 300 113	A -- A --	E1 -- E1 D1	-- D1	-- L1	V V	90 90	B B
Opel Vectra B Estate	11/96- 09/03		314 253 600 001	0720	>150	25,8	9,3	75	1700	300 210 300 107 300 210 300 113 discontinued model: 314 265 300 107 discontinued model: 314 265 300 113	A -- A -- S FRE -- S FRE --	E1 -- E1 D1 E -- E D1	-- D1 -- D1	-- L1 -- --	V V V V	90 90 75 75	B B L L
Opel Vectra B Saloon	10/95- 03/02		314 250 600 001	0472	150	22	9,3	75	1700	300 210 300 107 300 210 300 113 314 264 300 107 314 264 300 113	A -- A -- S FRE -- S FRE --	E1 -- E1 D1 E -- E D1	-- D1 -- D1	-- L1 -- --	V V V V	90 90 75 75	B B L L
Opel Vectra B Saloon	10/95- 03/02		314 251 600 001	0906	150	23,2	9,3	75	1700	300 210 300 107 300 210 300 113 314 264 300 107 314 264 300 113	A -- A -- S FRE -- S FRE --	E1 -- E1 D1 E -- E D1	-- D1 -- D1	-- L1 -- --	V V V V	90 90 75 75	B B L L
Opel Vectra C Estate	10/03-		314 297 600 001	1539	60	33	10,7	80	2000	314 295 300 113	S FRE --	E	D	L1	H	30	B
Opel Vectra C Estate discontinued model	10/03-		314 331 600 001	2423	60	24,5	10,7	80	2000	314 295 300 113	S FRE --	E	D	L1	H	30	B
Opel Vectra C Estate	10/03-		314 295 600 001	1538	60	33,5	10,7	80	2000	314 295 300 113	S FRE --	E	D	L1	H	30	B
Opel Vectra C Saloon inc. GTS	04/02-		314 280 600 001	1005	150	24	10,5	75	2000	314 295 300 113	S FRE --	E	D	L1	H	30	B
Opel Vectra C Saloon inc. GTS	04/02-		314 317 600 001	2291	150	24,5	10,5	75	2000	314 295 300 113	S FRE --	E	D	L1	H	30	B

Opel Vectra C Saloon inc. GTS	04/02-		314 257 600 001	1317	150		26	10,5	75	2000		314 295 300 113	S	FRE --	E	D	L1	H	30	B
Opel Vivaro Van Monoflex	05/01-		314 364 600 001	2042	60		21	12,3	85	2100		discontinued model -08/06 314 263 300 107 -08/06 314 263 300 113 08/06-03/10 314 860 300 107 08/06-03/10 314 860 300 113 08/06-03/10 314 860 300 157 03/10- 314 870 300 107 03/10- 314 870 300 113 03/10- 314 870 300 157	S	FRE --	E1	--	--	H	60	L
Opel Vivaro Van KIT = towbar inc. electrical kit 13 pins Monoflex	08/06- 03/10		314 364 900 113	2042	60		23	12,3	85	2100		electrical kit 13 pins in the kit. 314 860 300 113	S	FRE --	E1	D1	L1	H	60	B
Opel Vivaro Van KIT = towbar inc. electrical kit 13 pins Monoflex	03/10-		314 870 900 113	2042	60		23	12,3	85	2100		electrical kit 13 pins in the kit. 314 870 300 113	S	FRE --	E1	D1	L1	H	60	B
Opel Zafira Will fit GSI with visible cut & GSR model - No info on cut for GSR Monoflex	04/99- 07/05		314 362 600 001	1790	120		17	9,3	80	1600		additional kit for checkcontrol 300 025 300 173 314 245 300 107 314 245 300 113	--	--	--	--	--	V	30	B
Opel Zafira KIT = towbar inc. electrical kit 13 pins Monoflex	04/99- 07/05		314 362 900 113	1790	120		19	9,3	80	1600		electrical kit 13 pins in the kit. 314 245 300 113	S	FRE --	E	D1	--	V	90	L











Opel Zafira inc. GSI with non-visible cut GSR - no info on cut	04/99- 07/05		314 270 600 001	0987	150		22,8	8,9	75	1500	additional kit for checkcontrol 300 025 300 173 314 245 300 107 314 245 300 113	-- -- S FRE -- S FRE --	-- -- E -- E D1 --	-- -- -- -- -- --	V V V	30 90 90	B L L
Opel Zafira Tourer exc. CNG exc. vehicles with bike carrier system Flex-Fix To guarantee an optimal fit of the bumper it is necessary to mount a polystyrene carrier, please order from Opel-dealer.	01/12-		314 438 600 001	3294	60	✂	27	9,9	75	1500	314 386 300 107 314 386 300 113	S CAN -- S CAN --	E -- E D	-- -- L1 V	V V	75 75	B B
Opel Zafira Tourer KIT = towbar inc. electrical kit 13 pins exc. CNG exc. vehicles with bike carrier system Flex-Fix To guarantee an optimal fit of the bumper it is necessary to mount a polystyrene carrier, please order from Opel-dealer.	01/12-		314 438 900 113	3294	60	✂	29	9,9	75	1500	electrical kit 13 pins in the kit: 314 386 300 113	S CAN --	E D	L1 V	V	75	B
Opel Zafira Tourer exc. CNG exc. vehicles with bike carrier system Flex-Fix To guarantee an optimal fit of the bumper it is necessary to mount a polystyrene carrier, please order from Opel-dealer.	01/12-		314 437 600 001	3283	60	✂	27	9,9	75	1500	314 386 300 107 314 386 300 113	S CAN -- S CAN --	E -- E D	-- -- L1 V	V V	75 75	B B
Opel Zafira Tourer KIT = towbar inc. electrical kit 13 pins exc. CNG exc. vehicles with bike carrier system Flex-Fix To guarantee an optimal fit of the bumper it is necessary to mount a polystyrene carrier, please order from Opel-dealer.	01/12-		314 437 900 113	3283	60	✂	29	9,9	75	1500	electrical kit 13 pins in the kit: 314 386 300 113	S CAN --	E D	L1 V	V	75	B











Opel Zafira, Zafira Family exc. CNG Monoflex		07/05-	314 361 600 001	3076	90		19	9,59	75	1650	for vehicles without rear central electronic (REC) 300 210 300 113	--	A --	E1 D1	L1	V	90	B
											for vehicles with rear central electronic (REC) 314 300 300 107	S	FRE --	E2 --	--	H	45	B
											for vehicles with rear central electronic (REC) 314 300 300 113	S	FRE --	E2 D	L1	V	45	B
											electrical kit 13 pins in the kit: for vehicles with rear central electronic (REC) 314 300 300 113	S	FRE --	E2 D	L1	V	45	B
Opel Zafira, Zafira Family KIT = towbar inc. electrical kit 13 pins exc. CNG Monoflex		07/05-	314 361 900 113	3076	90		21	9,59	75	1650	for vehicles without rear central electronic (REC) 300 210 300 113	--	A --	E1 D1	L1	V	90	B
											for vehicles with rear central electronic (REC) 314 300 300 107	S	FRE --	E2 --	--	H	45	B
											for vehicles with rear central electronic (REC) 314 300 300 113	S	FRE --	E2 D	L1	V	45	B
											electrical kit 13 pins in the kit: for vehicles with rear central electronic (REC) 314 300 300 113	S	FRE --	E2 D	L1	V	45	B
Opel Zafira, Zafira Family exc. CNG SIARR discontinued model		07/05-	314 396 600 001	0038	120		19	9,59	75	1650	for vehicles without rear central electronic (REC) 300 210 300 113	--	A --	E1 D1	L1	V	90	B
											for vehicles with rear central electronic (REC) 314 300 300 107	S	FRE --	E2 --	--	H	45	B
											for vehicles with rear central electronic (REC) 314 300 300 113	S	FRE --	E2 D	L1	V	45	B
											for vehicles with rear central electronic (REC) 314 300 300 113	S	FRE --	E2 D	L1	V	45	B
Opel Zafira, Zafira Family inc. facelift 01/08-. inc. 2008 Zafira with body kit exc. CNG VXR version and vehicles with sport bumper: in addition to the visible cutout a cutout is necessary. Cover for bumper cutout not available.		07/05-	314 293 600 001	2073	75		17,5	9,6	75	1650	for vehicles without rear central electronic (REC) 300 210 300 113	--	A --	E1 D1	L1	V	90	B
											for vehicles with rear central electronic (REC) 314 300 300 107	S	FRE --	E2 --	--	H	45	B
											for vehicles with rear central electronic (REC) 314 300 300 113	S	FRE --	E2 D	L1	V	45	B
											for vehicles with rear central electronic (REC) 314 300 300 113	S	FRE --	E2 D	L1	V	45	B

Opel











<p>Opel Zafira, Zafira Family KIT = towbar inc. electrical kit 13 pins inc. facelift 01/08-, inc. 2008 Zafira with body kit exc. CNG VXR version and vehicles with sport bumper: in addition to the visible cutout a cutout is necessary. Cover for bumper cutout not available.</p>	07/05- 	314 293 900 113	2073	75	 18,5	9,6	75	1650	electrical kit 13 pins in the kit: 314 300 300 113	S FRE --	E2 D	L1 V	45	B
--	---	------------------------	------	----	--	-----	----	------	---	----------	------	------	----	---












Peugeot

Peugeot 207 KIT = towbar inc. electrical kit 13 pins inc. 207 cc convertible, inc. 207 RC - 175 HP, inc. 207 van type WG, inc. Sport SIARR	04/06-		315 113 900 113	2022	75	∞	18,5	6,7	60	1200		electrical kit 13 pins in the kit: 304 402 300 113	S	CAN	C1	E	D	L1	V	105	B
Peugeot 207 inc. 207 cc convertible, inc. 207 RC - 175 HP, inc. 207 van type WG, inc. Sport	04/06-		315 114 600 001	2023	75	∞	17,5	6,7	60	1200		304 402 300 107 304 402 300 113	S	CAN	C1	E	--	V	105	B	B
Peugeot 207 KIT = towbar inc. electrical kit 13 pins inc. 207 cc convertible, inc. 207 RC - 175 HP, inc. 207 van type WG, inc. Sport	04/06-		315 114 900 113	2023	75	∞	19,5	6,7	60	1200		electrical kit 13 pins in the kit: 304 402 300 113	S	CAN	C1	E	D	L1	V	105	B
Peugeot 207 SW / Estate exc. Outdoor exc. RC (double tube exhaust) SIARR	06/07-		315 118 600 001	0084	120		17,5	6,42	46	1150		304 402 300 107 304 402 300 113	S	CAN	C1	E	--	V	105	B	B
Peugeot 207 SW / Estate KIT = towbar inc. electrical kit 13 pins exc. Outdoor exc. RC (double tube exhaust) SIARR	06/07-		315 118 900 113	0084	120		19,5	6,42	46	1150		electrical kit 13 pins in the kit: 304 402 300 113	S	CAN	C1	E	D	L1	V	105	B
Peugeot 207 SW / Estate exc. Outdoor exc. RC (double tube exhaust) SIARR	06/07-		315 119 600 001	0095	120		21	6,82	46	1150		304 402 300 107 304 402 300 113	S	CAN	C1	E	--	V	105	B	B
Peugeot 207 SW / Estate KIT = towbar inc. electrical kit 13 pins exc. Outdoor exc. RC (double tube exhaust) SIARR	06/07-		315 119 900 113	0095	120		23	6,82	46	1150		electrical kit 13 pins in the kit: 304 402 300 113	S	CAN	C1	E	D	L1	V	105	B
Peugeot 208 SIARR	04/12-		315 184 600 001	0261	60		12	7,19	53	1300		315 185 300 113	S								
Peugeot 208 KIT = towbar inc. electrical kit 13 pins SIARR	04/12-		315 184 900 113	0261	60		14	7,19	53	1300		electrical kit 13 pins in the kit: 315 185 300 113	S								
Peugeot 208 SIARR	04/12-		315 185 600 001	0262	60		12	7,19	53	1300		315 185 300 113	S								










Peugeot 208 KIT = towbar inc. electrical kit 13 pins SIARR	04/12-		315 185 900 113	0262	60		14	7,19	53	1300	electrical kit 13 pins in the kit: 315 185 300 113	S							
Peugeot 3008 exc. Hybrid Monoflex	06/09-		315 157 600 001	4050	90		22	9,2	70	1600	315 109 300 107 315 109 300 113	S CAN C S CAN C	E -- E D	-- L1 V	V 105				
Peugeot 3008 KIT = towbar inc. electrical kit 13 pins exc. Hybrid Monoflex	06/09-		315 157 900 113	4050	90		24	9,2	70	1600	electrical kit 13 pins in the kit: 315 109 300 113	S CAN C	E D	L1 V	105				
Peugeot 3008 exc. Hybrid Monoflex	06/09-		315 159 600 001	4050	90		22	9,2	70	1600	315 109 300 107 315 109 300 113	S CAN C S CAN C	E -- E D	-- L1 V	V 105				
Peugeot 3008 exc. Hybrid Monoflex	06/09-		315 158 600 001	4029	90		24	9,2	70	1600	315 109 300 107 315 109 300 113	S CAN C S CAN C	E -- E D	-- L1 V	V 105				
Peugeot 3008 KIT = towbar inc. electrical kit 13 pins exc. Hybrid Monoflex	06/09-		315 158 900 113	4029	90		26	9,2	70	1600	electrical kit 13 pins in the kit: 315 109 300 113	S CAN C	E D	L1 V	105				
Peugeot 306 Estate	05/97-		315 083 600 001	0414	60		19,1	7,6	80	1400	300 060 300 107 300 060 300 113	-- C2 -- C2	-- --	-- D1	H 45				
Peugeot 307 Convertible / CC Monoflex	10/03-		315 167 600 001	2475	120		19	8,44	80	1500	300 210 300 107 300 210 300 113	-- A -- A	E1 -- E1 D1	-- L1 V	V 90				
Peugeot 307 Hatchback	06/01-		315 108 600 001	1903	60		19	9,1	80	1700	-07/05 300 072 300 107 -07/05 300 072 300 113 07/05- 304 401 300 107 07/05- 304 401 300 113	-- FRE -- FRE S CAN C1 S CAN C1	E1 -- E1 D1 E -- E D	-- L1 V -- L1 V	V B B 105				
Peugeot 307 Hatchback KIT = towbar inc. electrical kit 13 pins	07/05-		315 108 900 113	1903	60		21	9,1	80	1700	electrical kit 13 pins in the kit: 304 401 300 113	S CAN C1	E D	L1 V	105				





















Peugeot

Peugeot 307 Hatchback	06/01-		315 109 600 001	1888	60		21	9,1	80	1700	-07/05 300 072 300 107 -07/05 300 072 300 113 07/05- 304 401 300 107 07/05- 304 401 300 113	-- FRE -- -- FRE -- S CAN C1 S CAN C1	E1 -- E1 D1 E -- E D	-- L1 -- D L1	V V V V	B B B B
Peugeot 307 Hatchback KIT = towbar inc. electrical kit 13 pins	07/05-		315 109 900 113	1888	60		23	9,1	80	1700	electrical kit 13 pins in the kit: 304 401 300 113	S CAN C1	E D	L1 V	V 105	B
Peugeot 307 SW 7 seats and minibus	06/02-		315 099 600 001	1435	45		19	9,1	60	1700	-07/05 300 072 300 107 -07/05 300 072 300 113 07/05- 304 401 300 107 07/05- 304 401 300 113	-- FRE -- -- FRE -- S CAN C1 S CAN C1	E1 -- E1 D1 E -- E D	-- L1 -- L1 V	V V V V	B B B B
Peugeot 307 SW KIT = towbar inc. electrical kit 13 pins 7 seats and minibus	07/05-		315 099 900 113	1435	45		21	9,1	60	1700	electrical kit 13 pins in the kit: 304 401 300 113	S CAN C1	E D	L1 V	V 105	B
Peugeot 307 SW 7 seats and minibus	06/02-		315 103 600 001	1683	45		21	9,1	60	1700	-07/05 300 072 300 107 -07/05 300 072 300 113 07/05- 304 401 300 107 07/05- 304 401 300 113	-- FRE -- -- FRE -- S CAN C1 S CAN C1	E1 -- E1 D1 E -- E D	-- L1 -- L1 V	V V V V	B B B B
Peugeot 307 SW KIT = towbar inc. electrical kit 13 pins 7 seats and minibus	07/05-		315 103 900 113	1683	45		23	9,1	60	1700	electrical kit 13 pins in the kit: 304 401 300 113	S CAN C1	E D	L1 V	V 105	B
Peugeot 308 cc, Convertible SIARR	03/09-		315 150 600 001	0825	120		22,6	8,44	80	1500	315 109 300 107 315 109 300 113	S CAN C S CAN C	E -- E D	-- L1 V	V 105 V 105	B B











Peugeot 308 Hatchback exc. GTi / 200 HP	10/07- 05/11		315 109 600 001	1888	60	✂	21	9,1	80	1700		315 109 300 107 315 109 300 113	S CAN S CAN	C C	E E	-- L1	V V	105 105	B B	
Peugeot 308 Hatchback KIT = towbar inc. electrical kit 13 pins exc. GTi / 200 HP	10/07- 05/11		315 401 900 113	1888	60	✂	23	9,1	80	1700		electrical kit 13 pins in the kit: 315 109 300 113	S CAN	C	E	D	L1	V	105	B
Peugeot 308 Hatchback exc. Gti / 200 HP, exc. Premium, exc. vehicles with sport rear bumper Monoflex	05/11-		315 188 600 001	4436	60	✂	22	9,12	80	1700		315 109 300 107 315 109 300 113	S CAN S CAN	C C	E E	-- L1	V V	105 105	B B	
Peugeot 308 Hatchback KIT = towbar inc. electrical kit 13 pins exc. Gti / 200 HP, exc. Premium, exc. vehicles with sport rear bumper Monoflex	05/11-		315 188 900 113	4436	60	✂	24	9,12	80	1700		electrical kit 13 pins in the kit: 315 109 300 113	S CAN	C	E	D	L1	V	105	B
Peugeot 308 SW SIARR	05/08-		315 151 600 001	0113	120		17,6	9,52	74	1700		315 109 300 107 315 109 300 113	S CAN S CAN	C C	E E	-- L1	V V	105 105	B B	
Peugeot 308 SW KIT = towbar inc. electrical kit 13 pins SIARR	05/08-		315 151 900 113	0113	120		19,6	9,52	74	1700		electrical kit 13 pins in the kit: 315 109 300 113	S CAN	C	E	D	L1	V	105	B
Peugeot 308 SW SIARR discontinued model	05/08-		315 153 600 001	0113	120		20	9,52	74	1700		315 109 300 107 315 109 300 113	S CAN S CAN	C C	E E	-- L1	V V	105 105	B B	
Peugeot 308 SW SIARR	05/08-		315 152 600 001	0123	120		22	9,52	74	1700		315 109 300 107 315 109 300 113	S CAN S CAN	C C	E E	-- L1	V V	105 105	B B	
Peugeot 308 SW KIT = towbar inc. electrical kit 13 pins SIARR	05/08-		315 152 900 113	0123	120		24	9,52	74	1700		electrical kit 13 pins in the kit: 315 109 300 113	S CAN	C	E	D	L1	V	105	B
Peugeot 4007 Monoflex	09/07-		340 094 600 001	4337	90	✂	27	10,92	100	2000		340 075 300 113	S FRE	--	E	D	L	H	75	B
Peugeot 4007 KIT = towbar inc. electrical kit 13 pins Monoflex	09/07-		340 094 900 113	4337	90	✂	29	10,29	100	2000		electrical kit 13 pins in the kit: 340 075 300 113	S FRE	--	E	D	L	H	75	B

















Peugeot

Peugeot 4008 Monoflex	03/12-		340 092 600 001	4251	90	✂	22	8,51	70	1400	340 093 300 113	S	A	--	E1	D	L	H	60	B
Peugeot 4008 KIT = towbar inc. electrical kit 13 pins Monoflex	03/12-		340 092 900 113	4251	90	✂	24	8,51	70	1400	electrical kit 13 pins in the kit: 340 093 300 113	S	A	--	E1	D	L	H	60	B
Peugeot 4008 Monoflex	03/12-		340 093 600 001	4249	90	✂	24	8,51	70	1400	340 093 300 113	S	A	--	E1	D	L	H	60	B
Peugeot 4008 KIT = towbar inc. electrical kit 13 pins Monoflex	03/12-		340 093 900 113	4249	90	✂	26	8,51	70	1400	electrical kit 13 pins in the kit: 340 093 300 113	S	A	--	E1	D	L	H	60	B
Peugeot 407 Coupé Monoflex	06-		315 168 600 001	3225	120		27	9,22	85	1600	304 401 300 107 304 401 300 113	S	CAN	C1	E	--	--	V	105	B
Peugeot 407 Estate / SW Monoflex	01/05-		304 146 600 001	4300	120	✂	22	10,4	80	1900	-07/08 < OPR 11557 304 401 300 107 -07/08 < OPR 11557 304 401 300 113	S	CAN	C1	E	--	--	V	105	B
Peugeot 407 Estate / SW KIT = towbar inc. electrical kit 13 pins Monoflex	01/05- 07/08		315 104 900 113	4300	120	✂	24	10,4	80	1900	electrical kit 13 pins in the kit: 304 401 300 113	S	CAN	C1	E	D	L1	V	105	B
Peugeot 407 Estate / SW Monoflex	01/05-		304 145 600 001	4255	120	✂	24,5	10,4	80	1900	-07/08 < OPR 11557 304 401 300 107 -07/08 < OPR 11557 304 401 300 113	S	CAN	C1	E	--	--	V	105	B
Peugeot 407 Estate / SW KIT = towbar inc. electrical kit 13 pins Monoflex	01/05- 07/08		315 105 900 113	4255	120	✂	26,5	10,4	80	1900	electrical kit 13 pins in the kit: 304 401 300 113	S	CAN	C1	E	D	L1	V	105	B



Peugeot 407 Saloon exc. vehicles with park distance control Monoflex	05/04-		304 146 600 001	4300	120		22	10,4	80	1900		-07/08 < OPR 11557 304 401 300 107 -07/08 < OPR 11557 304 401 300 113	S CAN C1 S CAN C1	E E	-- D	-- L1	V V	105 105	B B
Peugeot 407 Saloon KIT = towbar inc. electrical kit 13 pins exc. vehicles with park distance control Monoflex	05/04- 07/08		315 104 900 113	4300	120		24	10,4	80	1900		electrical kit 13 pins in the kit: 304 401 300 113	S CAN C1	E	D	L1	V	105	B
Peugeot 407 Saloon Monoflex	05/04-		304 145 600 001	4255	120		24,5	10,4	80	1900		-07/08 < OPR 11557 304 401 300 107 -07/08 < OPR 11557 304 401 300 113	S CAN C1 S CAN C1	E E	-- D	-- L1	V V	105 105	B B
Peugeot 407 Saloon KIT = towbar inc. electrical kit 13 pins Monoflex	05/04- 07/08		315 105 900 113	4255	120		26,5	10,4	80	1900		electrical kit 13 pins in the kit: 304 401 300 113	S CAN C1	E	D	L1	V	105	B
Peugeot 5008 SIARR	09/09-		315 177 600 001	0074	120		21	10	75	1550		304 400 300 107 304 400 300 113	S CAN C1 S CAN C1	E E	-- D	-- L1	V V		B B
Peugeot 5008 KIT = towbar inc. electrical kit 13 pins SIARR	09/09-		315 177 900 113	0074	120		23	10	75	1550		electrical kit 13 pins in the kit: 304 400 300 113	S CAN C1	E	D	L1	V		B
Peugeot 5008 SIARR	09/09-		315 179 600 001	0074	90		21	10	75	1550		304 400 300 107 304 400 300 113	S CAN C1 S CAN C1	E E	-- D	-- L1	V V		B B
Peugeot 5008 Monoflex	09/09-		315 178 600 001	4147	90		22,5	9,71	80	1700		304 400 300 107 304 400 300 113	S CAN C1 S CAN C1	E E	-- D	-- L1	V V		B B
Peugeot 5008 KIT = towbar inc. electrical kit 13 pins Monoflex	09/09-		315 178 900 113	4147	90		24,5	9,71	80	1700		electrical kit 13 pins in the kit: 304 400 300 113	S CAN C1	E	D	L1	V		B
Peugeot 508 Estate exc. GT SIARR	03/11-		315 180 600 001	0172	90		20,5	10,19	75	1900		315 182 300 113	S CAN C	E	D	L1	V		





Peugeot

Peugeot 508 Estate KIT = towbar inc. electrical kit 13 pins exc. GT SIARR	03/11-		315 180 900 113	0172	90	✂	22,5	10,19	75	1900		electrical kit 13 pins in the kit: 315 182 300 113	S CAN	C	E	D	L1	V		
Peugeot 508 Estate exc. GT SIARR	03/11-		315 182 600 001	0173	90	✂	20,5	10,19	75	1900		315 182 300 113	S CAN	C	E	D	L1	V		
Peugeot 508 Estate KIT = towbar inc. electrical kit 13 pins exc. GT SIARR	03/11-		315 182 900 113	0173	90	✂	22,5	10,19	75	1900		electrical kit 13 pins in the kit: 315 182 300 113	S CAN	C	E	D	L1	V		
Peugeot 508 Saloon exc. GT SIARR	03/11-		315 175 600 001	0173	90	✂	20,5	10,19	75	1900		315 182 300 113	S CAN	C	E	D	L1	V		
Peugeot 508 Saloon KIT = towbar inc. electrical kit 13 pins exc. GT SIARR	03/11-		315 175 900 113	0173	90	✂	22,5	10,19	75	1900		electrical kit 13 pins in the kit: 315 182 300 113	S CAN	C	E	D	L1	V		
Peugeot 607	00-		315 090 600 001	1234	180	✂	23,2	9,8	72	1800		300 210 300 107 300 210 300 113	-- A -- -- A --	E1 -- E1 --	-- D1	-- L1	V V	90 90	B B	
Peugeot 607 Monoflex	11/00-		315 169 600 001	1735	120	✂	25	9,89	80	1800		300 210 300 107 300 210 300 113	-- A -- -- A --	E1 -- E1 --	-- D1	-- L1	V V	90 90	B B	
Peugeot 806	09/94- 08/02		315 072 600 001	0010	60	✂	15,5	10,9	100	2000		300 060 300 107 300 060 300 113	-- C2 -- -- C2 --	-- --	-- D1	-- L1	H H	45 45	B B	
Peugeot 807 SIARR	09/02-		315 098 600 001	0986	75	✂	19,8	10,8	100	1900		10/05- 304 400 300 107 10/05- 304 400 300 113 -09/05 315 097 300 107 -09/05 315 097 300 113	S CAN S CAN S FRE S FRE	C1 C1 -- --	E E -- E	-- D -- D1	-- L1 -- L1	V V H H	B B 45 45	B B B B
Peugeot 807 KIT = towbar inc. electrical kit 13 pins SIARR	10/05-		315 098 900 113	0986	75	✂	21,8	10,8	100	1900		electrical kit 13 pins in the kit: 304 400 300 113	S CAN	C1	E	D	L1	V		B



Peugeot 807 discontinued model		09/02-	315 117 600 001	0991	75		23	10,8	100	1900	10/05- 304 400 300 107	S CAN C1	E --	--	V	B
											10/05- 304 400 300 113	S CAN C1	E D	L1	V	B
											-09/05 315 097 300 107	S FRE --	E --	--	H 45	B
											-09/05 315 097 300 113	S FRE --	E D1	L1	H 45	B
Peugeot 807		09/02-	315 097 600 001	0989	75		22,2	10,8	100	1900	10/05- 304 400 300 107	S CAN C1	E --	--	V	B
											10/05- 304 400 300 113	S CAN C1	E D	L1	V	B
											-09/05 315 097 300 107	S FRE --	E --	--	H 45	B
											-09/05 315 097 300 113	S FRE --	E D1	L1	H 45	B
Peugeot 807 KIT = towbar inc. electrical kit 13 pins		10/05-	315 097 900 113	0989	75		24,2	10,8	100	1900	electrical kit 13 pins in the kit: 304 400 300 113	S CAN C1	E D	L1	V	B
											306 580 300 107	S FRE --	E --	--	V 120	B
Peugeot Bipper + Teepee exc. vehicles with gas drive		02/08-	306 349 600 001	2568	150		16,5	7,5	75	1300	306 580 300 107	S FRE --	E D1	L1	V 120	B
											306 580 300 113	S FRE --	E D1	L1	V 120	B
Peugeot Bipper + Teepee KIT = towbar inc. electrical kit 13 pins exc. vehicles with gas drive		02/08-	306 349 900 113	2568	150		18,5	7,5	75	1300	electrical kit 13 pins in the kit: 306 580 300 113	S FRE --	E D1	L1	V 120	B
											306 580 300 107	S FRE --	E D1	L1	V 120	B
Peugeot Bipper + Teepee exc. vehicles with gas drive		02/08-	306 351 600 001	2568	150		17	7,5	75	1300	306 580 300 107	S FRE --	E --	--	V 120	B
											306 580 300 113	S FRE --	E D1	L1	V 120	B
Peugeot Bipper + Teepee exc. vehicles with gas drive		02/08-	306 350 600 001	2569	150		17	7,5	75	1300	306 580 300 107	S FRE --	E --	--	V 120	B
											306 580 300 113	S FRE --	E D1	L1	V 120	B
Peugeot Bipper + Teepee KIT = towbar inc. electrical kit 13 pins exc. vehicles with gas drive		02/08-	306 350 900 113	2569	150		18	7,5	75	1300	electrical kit 13 pins in the kit: 306 580 300 113	S FRE --	E D1	L1	V 120	B
											306 580 300 107	S FRE --	E D1	L1	V 120	B




Peugeot

<p>Peugeot Boxer van/minibus inc. 4 WD exc. vehicles with gas bottle instead of the spare wheel 4 WD: bolt kit (order no. 906216650002) must be ordered separately, for vehicles until 10/95: body reinforcement kit minibus/van 306142650002 must be ordered separately. Towball for vehicles with standard chassis: 329089600001 (not included). Towball for vehicles with 16" wheels and reinforced springs: 329062600001 (not included). When mounting swap system to vehicles with standard chassis we recommend towball 329059600001 (not included) exc. vehicles with gas bottles under the tail floor.</p>	03/94-06/06		306 216 600 001	0827	60	32,7	13,3	150	2500	discontinued model -03/02 306 142 300 107 -03/02 306 142 300 113 03/02- 306 216 300 107 03/02- 306 216 300 113	S	C2	--	--	H	45	L	
<p>Peugeot Boxer flatbed inc. 4 WD exc. vehicles with gas bottle instead of the spare wheel 4 WD: bolt kit (order no. 906216650002) must be ordered separately Towball for vehicles with standard chassis: 329089600001 (not included). Towball for vehicles with 16" wheels and reinforced springs: 329062600001 (not included). When mounting swap system to vehicles with standard chassis we recommend towball 329059600001 (not included). exc. vehicles with gas bottles under the tail floor.</p>	03/94-06/06		306 216 600 001	0827	60	32,7	13,3	150	2500	03/02- 300 052 300 107 03/02- 300 052 300 113 -03/02 300 060 300 113 -03/02 306 150 300 107	--	FRE	--	--	V	B	B	
											--	FRE	--	--	V	B	B	
											--	C2	--	--	L1	H	45	B
											S	C2	--	--	H	45	L	B





Peugeot Boxer van / minibus / flatbed inc. towball S.I.A.R.R. SIARR	08/99- 06/06		306 329 600 001	1078	29	12,5 130 2000	flatbed-03/02- 300 052 300 107 flatbed-03/02- 300 052 300 113 flatbed-03/02 300 060 300 113 discontinued model van/minibus -03/02 306 142 300 107 van/minibus-03/02 306 142 300 113 flatbed-03/02 306 150 300 107 van/minibus03/02- 306 216 300 107 van/minibus03/02- 306 216 300 113	-- FRE -- -- FRE -- -- C2 -- S C2 -- S C2 -- S C2 -- S C2 -- S FRE -- S FRE --	-- -- D1 -- -- D1 -- -- D1 -- -- D1 -- -- E -- E	-- -- -- -- -- -- -- -- -- -- -- --	-- -- -- -- -- -- -- -- -- -- -- --	V V H H H H H H V V	B B B L L L L B B																																				
														Peugeot Boxer Chassis Cab inc. towball For vehicles with long superstructure L4/XL please order separately a set distance tubes to strengthen the framework. S.I.A.R.R. SIARR	06/06-		306 357 600 001	0067	21	15,84 150 3000	S FRE -- S FRE --	-- -- D	-- -- --	V V	L L																								
																										Peugeot Boxer Chassis Cab inc. towball 329059600001 For vehicles with long superstructure L4/XL please order separately a set distance tubes to strengthen the framework.	06/06-		306 318 600 001	2390	30,5	15,9 150 3000	S FRE -- S FRE --	-- -- D	-- -- --	V V	L L												
																																						Peugeot Boxer Chassis Cab KIT = towbar inc. electrical kit 13 pins inc. towball 329059600001 For vehicles with long superstructure L4/XL please order separately a set distance tubes to strengthen the framework.	06/06-		306 318 900 113	2390	32,5	15,9 150 3000	S FRE -- S FRE --	-- -- D	-- -- --	V V	L L























Peugeot

<p>Peugeot Boxer Chassis Cab combined universal HGV towbar for towballs and coupling bolt inc. towball 329059600001 For vehicles with long superstructure L4/XL please order separately a set distance tubes to strengthen the framework, order no. 906270650003. Please order separately coupling bolt 342090600001</p>	06/06-		306 359 600 001	2997	90	40	12,5	150	2000	<p>306 531 300 107 306 531 300 113</p>	S FRE -- S FRE --	-- --	-- D	-- --	V V V V	L L L L
<p>Peugeot Boxer Motor homes no towbar in our sales program</p>	06/06-									306 531 300 183	S FRE --	--	D L1	V 120	B	
<p>Peugeot Boxer Van inc. towball For vehicles with long superstructure L4/XL please order separately a set distance tubes to strengthen the framework. Some vehicles 03/08- do not have chassis bores. In this case it is necessary to bore them subsequent. For the mounting time will last 60 min. longer. SIARR</p>	06/06-		306 357 600 001	0067	60	21	15,84	150	3000	<p>02/11- from chassis no. 1948841 306 271 300 107 02/11- from chassis no. 1948841 306 271 300 113 -02/11 chassis no. 1948840 306 510 300 107 -02/11 chassis no. 1948840 306 510 300 113</p>	S FRE -- S FRE -- S FRE -- S FRE -- S FRE --	E --	E D1	V 105 V 105 V 105 V 105 V 105	B B B B B	




<p>Peugeot Boxer Van inc. towball 329059600001 For vehicles with long superstructure L4/XL please order separately a set distance tubes to strengthen the framework. Some vehicles 03/08- do not have chassis bores. In this case it is necessary to bore them subsequent. For the mounting time will last 60 min. longer.</p>	<p>06/06-</p> 	<p>306 330 600 001</p>	<p>2215</p>	<p>60</p>	<p>32</p>	<p>16,9 150 3000</p>	<p>02/11- from chassis no. 1948841 306 271 300 107 02/11- from chassis no. 1948841 306 271 300 113 -02/11 chassis no. 1948840 306 510 300 107 -02/11 chassis no. 1948840 306 510 300 113</p>	<p>S FRE --</p>	<p>E --</p>	<p>--</p>	<p>V 105</p>	<p>B</p>
<p>Peugeot Boxer Van KIT = towbar inc. electrical kit 13 pins inc. towball 329059600001 For vehicles with long superstructure L4/XL please order separately a set distance tubes to strengthen the framework. Some vehicles 03/08- do not have chassis bores. In this case it is necessary to bore them subsequent. For the mounting time will last 60 min. longer.</p>	<p>06/06- 02/11</p> 	<p>306 330 900 113</p>	<p>2215</p>	<p>60</p>	<p>34</p>	<p>16,9 150 3000</p>	<p>electrical kit 13 pins in the kit: 306 510 300 113</p>	<p>S FRE --</p>	<p>E D1</p>	<p>L1 V</p>	<p>105</p>	<p>B</p>
<p>Peugeot Boxer Van KIT = towbar inc. electrical kit 13 pins inc. towball 329059600001 For vehicles with long superstructure L4/XL please order separately a set distance tubes to strengthen the framework. Some vehicles 03/08- do not have chassis bores. In this case it is necessary to bore them subsequent. For the mounting time will last 60 min. longer. SIARR</p>	<p>02/11-</p> 	<p>306 357 900 113</p>	<p>2215</p>	<p>60</p>	<p>34</p>	<p>16,9 150 3000</p>	<p>electrical kit 13 pins in the kit: 306 271 300 113</p>	<p>S FRE --</p>	<p>E D1</p>	<p>L1 V</p>	<p>105</p>	<p>B</p>





Peugeot

<p>Peugeot Boxer Van For vehicles with long superstructure L4/XL please order separately a set distance tubes to strengthen the framework. Some vehicles 03/08- do not have chassis bores. In this case it is necessary to bore them subsequent. For the mounting time will last 60 min. longer.</p>		<p>306 271 600 001</p>	<p>2476</p>	<p>60</p>	<p>32</p>	<p>16,9 150 3000</p>	<p>02/11- from chassis no. 1948841 306 271 300 107 02/11- from chassis no. 1948841 306 271 300 113 -02/11 chassis no. 1948840 306 510 300 107 -02/11 chassis no. 1948840 306 510 300 113</p>	<p>S FRE --</p>	<p>E --</p>	<p>--</p>	<p>V 105</p>	<p>B</p>
<p>Peugeot Boxer Van KIT = towbar inc. electrical kit 13 pins For vehicles with long superstructure L4/XL please order separately a set distance tubes to strengthen the framework. Some vehicles 03/08- do not have chassis bores. In this case it is necessary to bore them subsequent. For the mounting time will last 60 min. longer.</p>		<p>306 271 900 113</p>	<p>2476</p>	<p>60</p>	<p>34</p>	<p>16,9 150 3000</p>	<p>electrical kit 13 pins in the kit. 306 510 300 113</p>	<p>S FRE --</p>	<p>E D1</p>	<p>L1</p>	<p>V 105</p>	<p>B</p>
<p>Peugeot Boxer Van KIT = towbar inc. electrical kit 13 pins For vehicles with long superstructure L4/XL please order separately a set distance tubes to strengthen the framework. Some vehicles 03/08- do not have chassis bores. In this case it is necessary to bore them subsequent. For the mounting time will last 60 min. longer.</p>		<p>306 272 900 113</p>	<p>2476</p>	<p>60</p>	<p>34</p>	<p>16,9 150 3000</p>	<p>electrical kit 13 pins in the kit. 306 271 300 113</p>	<p>S FRE --</p>	<p>E D1</p>	<p>L1</p>	<p>V 105</p>	<p>B</p>
<p>Peugeot Expert</p>		<p>315 072 600 001</p>	<p>0010</p>	<p>60</p>	<p>15,5</p>	<p>10,9 100 2000</p>	<p>-07/97 300 060 300 107 -07/97 300 060 300 113 08/97- 306 155 300 107 08/97- 306 155 300 113</p>	<p>-- C2 --</p>	<p>--</p>	<p>--</p>	<p>H 45</p>	<p>B</p>
								<p>-- C2 --</p>	<p>--</p>	<p>D1</p>	<p>H 45</p>	<p>B</p>
								<p>S C2 --</p>	<p>--</p>	<p>--</p>	<p>H 45</p>	<p>L</p>
								<p>S C2 --</p>	<p>D</p>	<p>--</p>	<p>H 45</p>	<p>L</p>

Peugeot Expert	01/07-		306 331 600 001	2411	75		22,5	12,2 122	2200		304 400 300 107 304 400 300 113	S CAN C1 S CAN C1	E -- D L1	V -- L1 V	B B
Peugeot Expert KIT = towbar inc. electrical kit 13 pins	01/07-		306 331 900 113	2411	75		24,5	12,2 122	2200		electrical kit 13 pins in the kit: 304 400 300 113	S CAN C1	E D	L1 V	B
Peugeot Expert discontinued model	01/07-		306 332 600 001	2486	75		22,5	12,2 122	2200		304 400 300 107 304 400 300 113	S CAN C1 S CAN C1	E -- D L1	V -- L1 V	B B
Peugeot Expert	01/07-		306 333 600 001	2487	75		22,5	12,2 122	2200		304 400 300 107 304 400 300 113	S CAN C1 S CAN C1	E -- D L1	V -- L1 V	B B
Peugeot Expert KIT = towbar inc. electrical kit 13 pins	01/07-		306 333 900 113	2487	75		24,5	12,2 122	2200		electrical kit 13 pins in the kit: 304 400 300 113	S CAN C1	E D	L1 V	B
Peugeot Partner Origin	04/08-		304 054 600 001	0191	90		14,8	7,8 70	1350		304 054 300 107 304 054 300 113	S FRE -- S FRE --	-- D1	V -- V	L L
Peugeot Partner Origin KIT = towbar inc. electrical kit 13 pins	04/08-		304 054 900 113	0191	90		16,8	7,8 70	1350		electrical kit 13 pins in the kit: 304 054 300 113	S FRE --	-- D1	-- V	L
Peugeot Partner Origin discontinued model	04/08-		304 057 600 001	0222	90		17,5	7,8 70	1350		304 054 300 107 304 054 300 113	S FRE -- S FRE --	-- D1	V -- V	L L
Peugeot Partner Van	11/96- 04/08		304 054 600 001	0191	90		14,8	7,8 70	1350		304 054 300 107 304 054 300 113	S FRE -- S FRE --	-- D1	V -- V	L L
Peugeot Partner Van KIT = towbar inc. electrical kit 13 pins	11/96- 04/08		304 054 900 113	0191	90		16,8	7,8 70	1350		electrical kit 13 pins in the kit: 304 054 300 113	S FRE --	-- D1	-- V	L
Peugeot Partner Van discontinued model	11/96- 04/08		304 057 600 001	0222	90		17,5	7,8 70	1350		304 054 300 107 304 054 300 113	S FRE -- S FRE --	-- D1	V -- V	L L





Peugeot








Peugeot Partner Van short superstructure + Tepee, vehicle length = 4380 mm SIARR	04/08- 11/11		304 091 600 001	0122	90	15	8,69	64	1600	-11/11 < OPR 12776 304 400 300 107 -11/11 < OPR 12776 304 400 300 113 11/11- > OPR 12775 304 402 300 107 11/11- > OPR 12775 304 402 300 113	S CAN C1	E	--	--	V	B
Peugeot Partner Van KIT = towbar inc. electrical kit 13 pins short superstructure + Tepee, vehicle length = 4380 mm SIARR	04/08- 11/11		304 091 900 113	0122	90	17	8,69	64	1600	electrical kit 13 pins in the kit: 304 400 300 113	S CAN C1	E	D	L1	V	B
Peugeot Partner Van short superstructure + Tepee, vehicle length = 4380 mm SIARR	04/08-		304 092 600 001	0124	90	19	8,69	64	1600	-11/11 < OPR 12776 304 400 300 107 -11/11 < OPR 12776 304 400 300 113 11/11- > OPR 12775 304 402 300 107 11/11- > OPR 12775 304 402 300 113	S CAN C1	E	--	--	V	B
Peugeot Partner Van KIT = towbar inc. electrical kit 13 pins short superstructure + Tepee, vehicle length = 4380 mm SIARR	04/08- 11/11		304 092 900 113	0124	90	21	8,69	64	1600	electrical kit 13 pins in the kit: 304 400 300 113	S CAN C1	E	D	L1	V	B











Peugeot Partner Van long superstructure + Tepee, vehicle length = 4628 mm SIARR		304 129 600 001	0134	90	16,3	8,69	64	1600	-11/11 < OPR 12776 304 400 300 107 -11/11 < OPR 12776 304 400 300 113 11/11- > OPR 12775 304 402 300 107 11/11- > OPR 12775 304 402 300 113	S CAN C1	E	--	--	V	B
									S CAN C1	E	D	L1	V	B	
									S CAN C1	E	--	--	V	105	
									S CAN C1	E	D	L1	V	105	
Peugeot Partner Van KIT = towbar inc. electrical kit 13 pins long superstructure + Tepee, vehicle length = 4628 mm SIARR		304 129 900 113	0134	90	18,3	8,69	64	1600	electrical kit 13 pins in the kit: 304 400 300 113	S CAN C1	E	D	L1	V	B
									S CAN C1	E	D	L1	V	B	
Peugeot Partner Van long superstructure + Tepee, vehicle length = 4628 mm SIARR		304 130 600 001	0134	90	17,7	8,69	64	1600	-11/11 < OPR 12776 304 400 300 107 -11/11 < OPR 12776 304 400 300 113 11/11- > OPR 12775 304 402 300 107 11/11- > OPR 12775 304 402 300 113	S CAN C1	E	--	--	V	B
									S CAN C1	E	D	L1	V	B	
									S CAN C1	E	--	--	V	105	
									S CAN C1	E	D	L1	V	105	
Peugeot Partner Van long superstructure + Tepee, vehicle length = 4628 mm SIARR		304 131 600 001	0139	90	19	8,69	64	1600	-11/11 < OPR 12776 304 400 300 107 -11/11 < OPR 12776 304 400 300 113 11/11- > OPR 12775 304 402 300 107 11/11- > OPR 12775 304 402 300 113	S CAN C1	E	--	--	V	B
									S CAN C1	E	D	L1	V	B	
									S CAN C1	E	--	--	V	105	
									S CAN C1	E	D	L1	V	105	

Peugeot






Peugeot Partner Van KIT = towbar inc. electrical kit 13 pins long supersstructure + Tepee, vehicle length = 4628 mm SIARR	08- 11/11		304 131 900 113	0139	90	21	8,69	64	1600	electrical kit 13 pins in the kit: 304 400 300 113	S CAN C1 E	D L1	V	B
--	--------------	---	------------------------	------	----	----	------	----	------	---	------------	------	---	---






Porsche Cayenne		12/02-	321 735 600 001	0723	150	✂	33,5	16,4	140	3500	-04/10 321 500 300 113 04/10-	S CAN --	E	D	L1	H	45	B		
												321 765 300 107 04/10-	S CAN C	E				180	B	
													321 765 300 113 04/10-	S CAN C	E				180	B
Porsche Cayenne models 12/02-04/10: Please order separately cover for bumper cutout at Porsche dealer' s.		12/02-	321 736 600 001	0904	150	✂	34	16,4	140	3500	-04/10 321 500 300 113 04/10-	S CAN --	E	D	L1	H	45	B		
												321 765 300 107 04/10-	S CAN C	E				180	B	
													321 765 300 113 04/10-	S CAN C	E				180	B
Porsche Cayenne KIT = towbar inc. electrical kit 13 pins models 12/02-04/10: Please order separately cover for bumper cutout at Porsche dealer' s.		12/02- 04/10	321 500 900 113	0904	150	✂	36	16,4	140	3500	electrical kit 13 pins in the kit: 321 500 300 113	S CAN --	E	D	L1	H	45	B		
Porsche Cayenne KIT = towbar inc. electrical kit 13 pins		04/10-	321 736 900 113	0904	150	✂	36	16,4	140	3500	electrical kit 13 pins in the kit: 321 765 300 113	S CAN C	E				180	B		

Renault Avantime SIARR discontinued model			316 254 600 001	2069	60	20	9,22	75	1590			300 210 300 107 300 210 300 113	-- --	A -- A --	E1 -- E1 D1	-- L1	V V	90 90	B B
Renault Clio II Phase I + II, exc. Phase IV, exc. Clio Sport V6 SIARR	09/98- 10/05		316 187 600 001	0470	90	14,5	6,2	75	1200			-05/01 (Phase I) 300 072 300 113 discontinued model 06/01- (Phase II) 316 187 300 107 06/01- (Phase II) 316 187 300 113	-- S FRE -- S FRE -- S FRE --	FRE -- FRE -- FRE -- FRE --	E1 D1 E1 -- E1 -- E1 D1	L1 -- -- L1	V V V V		B L L
Renault Clio II Phase I + II, exc. Phase IV, exc. Clio Sport V6 discontinued model	09/98- 10/05		316 186 600 001	0433	90	17,5	6,2	75	1200			-05/01 (Phase I) 300 072 300 113 discontinued model 06/01- (Phase II) 316 187 300 107 06/01- (Phase II) 316 187 300 113	-- S FRE -- S FRE -- S FRE --	FRE -- FRE -- FRE -- FRE --	E1 D1 E1 -- E1 -- E1 D1	L1 -- -- L1	V V V V		B L L
Renault Clio III Phase I exc. Clio Sport 197 HP SIARR	10/05- 05/09		316 213 600 001	1796	60	14	6,94	75	1200			discontinued model: 316 252 300 107 316 252 300 113	S FRE -- S FRE --	FRE -- FRE --	E1 -- E1 D1	-- L1	H H	45 45	B B
Renault Clio III Phase II exc. Clio Sport 197/201 HP exc. RS-Cup and GT SIARR	05/09-		316 251 600 001	2571	60	14	6,94	75	1200			discontinued model: 316 252 300 107 316 252 300 113	S FRE -- S FRE --	FRE -- FRE --	E1 -- E1 D1	-- L1	H H	45 45	B B
Renault Clio III KIT = towbar inc. electrical kit 13 pins Phase II exc. Clio Sport 197/201 HP exc. RS-Cup and GT SIARR	05/09-		316 251 900 113	2571	60	16	6,94	75	1200			electrical kit 13 pins in the kit: 316 252 300 113	S FRE --	FRE --	E1 D1	L1	H	45	B
Renault Clio III Phase I 10/05- Phase II 05/09- exc. Clio Sport 197/201HP exc. RS-Cup and GT	10/05-		316 252 600 001	2572	60	17,5	6,94	75	1200			discontinued model: 316 252 300 107 316 252 300 113 316 252 300 157	S FRE -- S FRE -- S --	FRE -- FRE -- --	E1 -- E1 D1 --	-- L1 --	H H H	45 45 45	B B L










Renault Clio III KIT = towbar inc. electrical kit 13 pins Phase I 10/05- Phase II 05/09- exc. Clio Sport 197/201HP exc. RS-Cup and GT	10/05-		316 252 900 113	2572	60	19,5	6,94	75	1200		electrical kit 13 pins in the kit: 316 252 300 113	S	FRE --	E1 D1	L1	H	45	B
Renault Clio III Grandtour SIARR	01/08-		316 277 600 001	0068	90	18	6,97	75	1200		discontinued model: 316 252 300 107 316 252 300 113 316 252 300 157	S S S	FRE -- FRE -- -- --	E1 -- E1 D1 -- --	-- L1 --	H H H	45 45 45	B B L
Renault Clio III Grandtour KIT = towbar inc. electrical kit 13 pins SIARR	01/08-		316 277 900 113	0068	90	20	6,97	75	1200		electrical kit 13 pins in the kit: 316 252 300 113	S	FRE --	E1 D1	L1	H	45	B
Renault Clio III Grandtour SIARR	01/08-		316 278 600 001	0070	90	21	6,97	75	1200		discontinued model: 316 252 300 107 316 252 300 113 316 252 300 157	S S S	FRE -- FRE -- -- --	E1 -- E1 D1 -- --	-- L1 --	H H H	45 45 45	B B L
Renault Clio III Grandtour KIT = towbar inc. electrical kit 13 pins SIARR	01/08-		316 278 900 113	0070	90	23	6,97	75	1200		electrical kit 13 pins in the kit: 316 252 300 113	S	FRE --	E1 D1	L1	H	45	B
Renault Clio IV SIARR	11/12-		316 335 600 001				7,06	75	1200		316 337 300 107 316 337 300 113	S S						
Renault Clio IV KIT = towbar inc. electrical kit 13 pins SIARR	11/12-		316 335 900 113				7,06	75	1200		electrical kit 13 pins in the kit: 316 337 300 113	S						
Renault Clio IV Grandtour SIARR	03/13-		316 336 600 001				7,06	75	1200		316 337 300 107 316 337 300 113	S S						
Renault Clio IV Grandtour KIT = towbar inc. electrical kit 13 pins SIARR	03/13-		316 336 900 113				7,06	75	1200		electrical kit 13 pins in the kit: 316 337 300 113	S						
Renault Clio IV Grandtour SIARR	03/13-		316 337 600 001				7,06	75	1200		316 337 300 107 316 337 300 113	S S						







Renault

Renault Clio IV Grandtour KIT = towbar inc. electrical kit 13 pins SIARR	03/13-		316 337 900 113	1124	55	31	7,06	75	1200	electrical kit 13 pins in the kit: 316 337 300 113	S						
Renault Espace short wheelbase SIARR	09/02-		316 195 600 001	1124	55	31	11,3	80	2000	300 078 300 113 discontinued model without bordcomputer 316 192 300 107 discontinued model without bordcomputer 316 192 300 113	FR -- S FR -- S	E1 D1 -- E1 -- E1 D1	L1 -- L1	V H H			B 45 45
Renault Espace short wheelbase	09/02-		316 194 600 001	1109	55	31	11,3	80	2000	300 078 300 113 discontinued model without bordcomputer 316 192 300 107 discontinued model without bordcomputer 316 192 300 113	FR -- S FR -- S	E1 D1 -- E1 -- E1 D1	L1 -- L1	V H H			B 45 45
Renault Espace / Grand Espace exc. vehicles with automatic height control	01/97- 09/02		316 102 600 001	0266	90	12	11,8	85	2300	300 078 300 113 discontinued model: 316 118 300 113 discontinued model additional kit for vehicles from 09/98 with CAN-control unit 316 118 300 155	FR -- S FR -- S	E1 D1 -- E1 D1 --	L1 L1 L1	V V L			B 90
Renault Espace / Grand Espace long wheel base SIARR	09/02-		316 191 600 001	1125	55	31	11,3	80	2000	300 078 300 113 discontinued model without bordcomputer 316 192 300 107 discontinued model without bordcomputer 316 192 300 113	FR -- S FR -- S	E1 D1 -- E1 -- E1 D1	L1 -- L1	V H H			B 45 45










Renault Espace / Grand Espace long wheel base		09/02-	316 192 600 001	1110	55	31	11,3	80	2000		300 078 300 113 discontinued model without bordcomputer	--	FRE --	E1	D1	L1	V	B			
												316 192 300 107 discontinued model without bordcomputer	S	FRE --	E1	--	--	H	45	B	
													316 192 300 113 discontinued model without bordcomputer	S	FRE --	E1	D1	L1	H	45	B
Renault Fluence SIARR		03/10-	316 308 600 001	0816	120	22,5	7,5	75	1300			--	A --	E1	--	--	V	90	B		
			316 322 600 001	0909	120	23,7	7,5	75	1300				--	A --	E1	D1	L1	V	90	B	
Renault Grand Kangoo 7 seats S.I.A.R.R. SIARR		02/08-	316 268 600 001	0103	60	23	8,2	75	1350												
												exc. vehicles with start-/stop automatic	S	FRE --	E2	--	--	H	45	L	
													exc. vehicles with start-/stop automatic	S	FRE --	E2	D1	L1	H	45	L
													exc. vehicles with start-/stop automatic	S	--	--	--	H	45	L	
Renault Grand Kangoo KIT = towbar inc. electrical kit 13 pins 7 seats S.I.A.R.R. SIARR		02/08-	316 268 900 113	0103	60	25	8,2	75	1350												
												electrical kit 13 pins in the kit: exc. vehicles with start-/stop automatic	S	FRE --	E2	D1	L1	H	45	L	
Renault Grand Kangoo 7 seats S.I.A.R.R. SIARR		02/08-	316 269 600 001	0112	60	23	8,2	75	1300												
												exc. vehicles with start-/stop automatic	S	FRE --	E2	--	--	H	45	L	
													exc. vehicles with start-/stop automatic	S	FRE --	E2	D1	L1	H	45	L
													exc. vehicles with start-/stop automatic	S	--	--	--	H	45	L	








Renault






Renault Grand Kangoo KIT = towbar inc. electrical kit 13 pins 7 seats S.I.A.R.R. SIARR	02/08		316 269 900 113	0112	60	25	8,2	75	1350	electrical kit 13 pins in the kit: exc. vehicles with start-/stop automatic 316 440 300 113	S FRE --	E2 D1	L1 H	45	L
Renault Grand Modus exc. vehicles with rear end carrier system Velofix SIARR	01/08-		316 251 600 001	2571	60	14	6,94	75	1200	300 210 300 113 316 249 300 107 discontinued model: 316 249 300 113	-- A -- S FRE -- S FRE --	E1 D1 -- E1 -- E1 D1	L1 V -- -- H L1 H	90 45 45	B L L
Renault Grand Modus exc. vehicles with rear end carrier system Velofix	01/08-		316 252 600 001	2572	60	17,5	6,94	75	1200	300 210 300 113 316 249 300 107 discontinued model: 316 249 300 113	-- A -- S FRE -- S FRE --	E1 D1 -- E1 -- E1 D1	L1 V -- -- H L1 H	90 45 45	B L L
Renault Grand Scenic SIARR	04/09-		316 295 600 001	0826	90	18,5	8,22	75	1300	316 297 300 107 316 297 300 113	S A -- S A --	E1 -- E1 D1	-- H L1 H	60 60	B B
Renault Grand Scenic KIT = towbar inc. electrical kit 13 pins SIARR	04/09-		316 295 900 113	0826	90	20,5	8,22	75	1300	electrical kit 13 pins in the kit: 316 297 300 113	S A --	E1 D1	L1 H	60	B
Renault Grand Scenic SIARR	04/09-		316 297 600 001	0175	90	21,4	8,22	75	1300	316 297 300 107 316 297 300 113	S A -- S A --	E1 -- E1 D1	-- H L1 H	60 60	B B
Renault Grand Scenic KIT = towbar inc. electrical kit 13 pins SIARR	04/09-		316 297 900 113	0175	90	23,4	8,22	75	1300	electrical kit 13 pins in the kit: 316 297 300 113	S A --	E1 D1	L1 H	60	B
Renault Kangoo exc. Kangoo-Rapid-Maxi Campus without limitation of year of construction SIARR	05/97- 02/08		316 201 600 001	1322	60	12	7,6	75	1320	-04/02 316 120 300 107 all years of construction 316 123 300 107 all years of construction 316 123 300 113	S C2 -- S FRE -- S FRE --	-- -- E1 -- E1 D1	-- H -- V -- V	45 60 60	L L L
Renault Kangoo KIT = towbar inc. electrical kit 13 pins exc. Kangoo-Rapid-Maxi Campus without limitation of year of construction SIARR	05/97- 02/08		316 201 900 113	1322	60	14	7,6	75	1320	electrical kit 13 pins in the kit: 316 123 300 113	S FRE --	E1 D1	-- V	60	L

Renault Kangoo RX4, 4x4/Pampa/Freeworld exc. Kangoo Rapid SIARR		06/01- 02/08	316 205 600 001	1323	60	12	7,63	75	1320	-04/02	S	C2	--	--	--	H	45	L	
										316 120 300 107 all years of construction	S	FRE	--	E1	--	V	60	L	
										316 123 300 107 all years of construction	S	FRE	--	E1	D1	--	V	60	L
										316 123 300 113	S	FRE	--	E1	D1	--	V	60	L
Renault Kangoo + Kangoo Rapid exc. BeBop SIARR		02/08-	316 268 600 001	0103	60	23	8,2	75	1350	exc. vehicles with start-/stop automatic	S	FRE	--	E2	--	H	45	L	
										316 440 300 107 exc. vehicles with start-/stop automatic	S	FRE	--	E2	D1	L1	H	45	L
										316 440 300 113 exc. vehicles with start-/stop automatic	S	FRE	--	E2	D1	--	H	45	L
										316 440 300 157	S	FRE	--	E2	D1	--	H	45	L
Renault Kangoo + Kangoo Rapid KIT = towbar inc. electrical kit 13 pins exc. BeBop SIARR		02/08-	316 268 900 113	0103	60	25	8,2	75	1350	electrical kit 13 pins in the kit:	S	FRE	--	E2	D1	L1	H	45	L
										exc. vehicles with start-/stop automatic	S	FRE	--	E2	D1	L1	H	45	L
Renault Kangoo + Kangoo Rapid exc. BeBop SIARR		02/08-	316 269 600 001	0112	60	23	8,2	75	1350	exc. vehicles with start-/stop automatic	S	FRE	--	E2	--	H	45	L	
										316 440 300 107 exc. vehicles with start-/stop automatic	S	FRE	--	E2	D1	L1	H	45	L
										316 440 300 113 exc. vehicles with start-/stop automatic	S	FRE	--	E2	D1	--	H	45	L
										316 440 300 157	S	FRE	--	E2	D1	--	H	45	L
Renault Kangoo + Kangoo Rapid KIT = towbar inc. electrical kit 13 pins exc. BeBop SIARR		02/08-	316 269 900 113	0112	60	25	8,2	75	1350	electrical kit 13 pins in the kit:	S	FRE	--	E2	D1	L1	H	45	L
										exc. vehicles with start-/stop automatic	S	FRE	--	E2	D1	L1	H	45	L
Renault Kangoo BeBop SIARR		02/09-	316 316 600 001	0834	90	20	7,19	75	1100	316 440 300 107	S	FRE	--	E2	--	H	45	L	
										316 440 300 113	S	FRE	--	E2	D1	L1	H	45	L








Renault












Renault Koleos inc. Phase I + II 09/11-	09/08-		316 226 600 001	2648	90	23	10,5	100	2000		316 410 300 113 316 410 300 157	S FRE -- S -- --	E1 -- -- -- -- --	D1 -- -- -- -- --	L1 -- -- -- -- --	H -- -- -- -- --	60 45	L L
Renault Koleos KIT = towbar inc. electrical kit 13 pins inc. Phase I + II 09/11-	09/08-		316 226 900 113	2648	90	25	10,5	100	2000		electrical kit 13 pins in the kit: 316 410 300 113	S FRE --	E1 --	D1	L1	H	60	L
Renault Koleos inc. Phase I + II 09/11-	09/08-		316 227 600 001	2649	90	25	10,5	100	2000		316 410 300 113 316 410 300 157	S FRE -- S -- --	E1 -- -- -- -- --	D1 -- -- -- -- --	L1 -- -- -- -- --	H -- -- -- -- --	60 45	L L
Renault Koleos KIT = towbar inc. electrical kit 13 pins inc. Phase I + II 09/11-	09/08-		316 227 900 113	2649	90	27	10,5	100	2000		electrical kit 13 pins in the kit: 316 410 300 113	S FRE --	E1 --	D1	L1	H	60	L
Renault Laguna Coupé exc. GT 4 control SIARR	01/09-		316 267 600 001	0143	60	20,5	9,76	75	1700		300 210 300 113	-- A --	E1 --	D1	L1	V	90	B
Renault Laguna Grandtour exc. vehicles with automatic height control	09/95- 03/01		316 127 600 001	0204	90	19,6	9,1	75	2100		300 210 300 107 300 210 300 113	-- A -- -- A --	E1 -- -- E1 -- --	D1 -- -- D1 -- --	L1 -- -- L1 -- --	V -- -- V -- --	90 90	B B
Renault Laguna Grandtour estate	03/01- 01/08		316 155 600 001	1026	40	19	8,5	75	1500		with bordcomputer 300 210 300 107 with bordcomputer 300 210 300 113 discontinued model without bordcomputer 316 156 300 113	-- A -- -- A -- -- A -- S FRE --	E1 -- -- E1 -- -- E1 -- -- E1 -- --	D1 -- -- D1 -- -- D1 -- -- D1 -- --	L1 -- -- L1 -- -- L1 -- -- L1 -- --	V -- -- V -- -- V -- -- H -- --	90 90 90 60	B B B B
Renault Laguna Grandtour estate	03/01- 01/08		316 156 600 001	1064	40	18,8	8,5	75	1500		with bordcomputer 300 210 300 107 with bordcomputer 300 210 300 113 discontinued model without bordcomputer 316 156 300 113	-- A -- -- A -- -- A -- S FRE --	E1 -- -- E1 -- -- E1 -- -- E1 -- --	D1 -- -- D1 -- -- D1 -- -- D1 -- --	L1 -- -- L1 -- -- L1 -- -- L1 -- --	V -- -- V -- -- V -- -- H -- --	90 90 90 60	B B B B
Renault Laguna Grandtour exc. GT 4 control SIARR	01/08-		316 264 600 001	0108	60	19	9,76	75	1700		316 430 300 107 316 430 300 113	S FRE -- S FRE --	E -- -- E -- --	D1 -- -- D1 -- --	L1 -- -- L1 -- --	H -- -- H -- --	45 45	L L

Renault Laguna Grandtour KIT = towbar inc. electrical kit 13 pins exc. GT 4 control SIARR	01/08-		316 264 900 113	0108	60	21	9,76	75	1700		electrical kit 13 pins in the kit: 316 430 300 113	S	FRE --	E	D1	L1	H	45	L
Renault Laguna Grandtour exc. GT 4 control SIARR	01/08-		316 265 600 001	0126	60	20	9,76	75	1700		316 430 300 107 316 430 300 113	S	FRE --	E	--	--	H	45	L
Renault Laguna Grandtour KIT = towbar inc. electrical kit 13 pins exc. GT 4 control SIARR	01/08-		316 265 900 113	0126	60	22	9,76	75	1700		electrical kit 13 pins in the kit: 316 430 300 113	S	FRE --	E	D1	L1	H	45	L
Renault Laguna I Hatchback discontinued model	04/94- 02/01		316 106 600 001	0195	90	17,6	8,9	75	1650		300 072 300 107 300 072 300 113 300 210 300 107 300 210 300 113	--	FRE --	E1	--	--	V		B
Renault Laguna II Saloon	03/01- 09/07		316 178 600 001	1282	40	21	8,51	75	1500		without bordcomputer 300 072 300 107 without bordcomputer 300 072 300 113 with bordcomputer 300 210 300 107 with bordcomputer 300 210 300 113	--	FRE --	E1	--	--	V		B
Renault Laguna II Saloon discontinued model	03/01- 09/07		316 166 600 001	1247	40	21	8,51	75	1500		without bordcomputer 300 072 300 107 without bordcomputer 300 072 300 113 with bordcomputer 300 210 300 107 with bordcomputer 300 210 300 113	--	FRE --	E1	--	--	V		B
Renault Laguna III Hatchback exc. GT 4 control SIARR	09/07-		316 261 600 001	0093	60	19	8,8	75	1500		300 210 300 107 300 210 300 113	--	A --	E1	--	--	V	90	B










Renault Master Van exc. Master Maxi		01/98-	316 124 600 001	0334	60	28,5	13,7	85	2300	-11/03	300 052 300 107	--	FRE --	--	--	--	--	V	B
										-11/03	300 052 300 113	--	FRE --	--	D1	--	--	V	B
										11/03-	316 130 300 113	S	FRE --	E1	D1	L1	H	45	L
Renault Master Van inc. towball 329057600001 When mounting the swap system please order towball order no. 329059600001. exc. Master Maxi		01/98-	316 126 600 001	0390	60	29,8	15,3	80	2800	-11/03	300 052 300 107	--	FRE --	--	--	--	V	B	
										-11/03	300 052 300 113	--	FRE --	--	D1	--	--	V	B
										11/03-	316 130 300 113	S	FRE --	E1	D1	L1	H	45	L
Renault Master Van exc. Master Maxi SIARR discontinued model		01/98-	316 257 600 001	0743	60	26	13,61	80	2300	-11/03	300 052 300 107	--	FRE --	--	--	--	V	B	
										-11/03	300 052 300 113	--	FRE --	--	D1	--	--	V	B
										11/03-	316 130 300 113	S	FRE --	E1	D1	L1	H	45	L
Renault Master Van front wheel drive SIARR		03/10-	316 318 600 001	0158	60	19,3	14,3	100	2500	for vehicles without central plug connection									
										316 300 300 107	S	FRE --	E2	--	--	H	45	B	
										for vehicles without central plug connection									
										316 300 300 113	S	FRE --	E2	D1	L1	H	45	B	
Renault Master Van front wheel drive SIARR		03/10-	316 318 600 001	0158	60	19,3	14,3	100	2500	for vehicles with central plug connection									
										316 318 300 113	S	FRE --	E2	D1	L1	V	30	B	
										for vehicles with central plug connection									
										316 318 300 157	S	C2 --	--	--	H	45	L		

Renault

Renault Master Van rear wheel drive SIARR	03/10-		316 327 600 001	0159	60	19,7	14,3	100	2500	for vehicles without central plug connection	S	FRE	--	E2	--	H	45	B									
										316 300 300 107																	
										for vehicles without central plug connection	S	FRE	--	E2	D1	L1	H	45	B								
										316 300 300 113																	
Renault Master Van rear wheel drive with twin wheels SIARR	03/10-		316 328 600 001	0157	60	19,7	15,8	100	3000	for vehicles without central plug connection	S	FRE	--	E2	--	H	45	B									
										316 300 300 107																	
										for vehicles without central plug connection	S	FRE	--	E2	D1	L1	V	30	B								
										316 300 300 113																	
Renault Maxity towball 329059600001 inc.	07-		332 273 600 001	3036	60	22,5	19,4	150	3500									L									
Renault Mégane 5 doors SIARR	11/08-		316 272 600 001	0140	120	19,1	8,1	75	1350	for vehicles without central plug connection	S	A	--	E1	--	H	60	B									
										for vehicles with central plug connection	S	A	--	E1	D1	L1	H	60	B								
Renault Mégane 5 doors KIT = towbar inc. electrical kit 13 pins SIARR	11/08-		316 272 900 113	0140	120	21	8,1	75	1350	electrical kit 13 pins in the kit.	S	A	--	E1	D1	L1	H	60	B								
										316 273 300 113																	
Renault Mégane 5 doors SIARR discontinued model	11/08-		316 274 600 001	0140	120	20,1	8,1	75	1350		S	A	--	E1	--	H	60	B									
											S	A	--	E1	D1	L1	H	60	B								
Renault Mégane 5 doors SIARR	11/08-		316 273 600 001	0141	120	21,5	8,1	75	1350		S	A	--	E1	--	H	60	B									
											S	A	--	E1	D1	L1	H	60	B								















Renault Mégane 5 doors KIT = towbar inc. electrical kit 13 pins SIARR	11/08-		316 273 900 113	0141	120	∞	23,5	8,1	75	1350		electrical kit 13 pins in the kit: 316 273 300 113	S	A	--	E1	D1	L1	H	60	B
Renault Mégane cc Convertible SIARR	04/10-		316 320 600 001	0156	120		22,1	6,1	75	750		300 210 300 107 300 210 300 113	--	A	--	E1	--	--	V	90	B
Renault Mégane Coupé exc. Sport 250 HP SIARR	11/08-		316 272 600 001	0140	120	∞	19,1	8,1	75	1350		300 210 300 107 300 210 300 113	--	A	--	E1	--	--	V	90	B
Renault Mégane Coupé exc. Sport 250 HP SIARR discontinued model	11/08-		316 274 600 001	0140	120	∞	20,1	8,1	75	1350		300 210 300 107 300 210 300 113	--	A	--	E1	--	--	V	90	B
Renault Mégane Coupé exc. Sport 250 HP SIARR	11/08-		316 273 600 001	0141	120	∞	21,5	8,1	75	1350		300 210 300 107 300 210 300 113	--	A	--	E1	--	--	V	90	B
Renault Mégane Grandtourer	03/99- 07/03		316 138 600 001	0662	90		15,2	7,5	75	1350		300 072 300 107 300 072 300 113	--	FRE	--	E1	--	--	V		B
Renault Mégane Grandtourer	07/03- 06/09		316 208 600 001	1653	90		21,5	7,7	75	1350		discontinued model: 316 174 300 107 316 174 300 113	S	FRE	--	E1	--	--	H	45	L
Renault Mégane Grandtourer KIT = towbar inc. electrical kit 13 pins	07/03- 06/09		316 208 900 113	1653	90		23,5	7,7	75	1350		electrical kit 13 pins in the kit: 316 174 300 113	S	FRE	--	E1	D1	L1	H	45	L
Renault Mégane Grandtourer	07/03- 06/09		316 209 600 001	1716	90		22	7,7	75	1350		discontinued model: 316 174 300 107 316 174 300 113	S	FRE	--	E1	--	--	H	45	L
Renault Mégane Grandtourer KIT = towbar inc. electrical kit 13 pins	07/03- 06/09		316 209 900 113	1716	90		24	7,7	75	1350		electrical kit 13 pins in the kit: 316 174 300 113	S	FRE	--	E1	D1	L1	H	45	L
Renault Mégane Grandtourer SIARR	06/09-		316 289 600 001	0849	90		20,5	7,72	75	1300		316 290 300 113	S	A	--	E1	D1	L1	V	60	B









Renault





Renault Mégane Grandtourer KIT = towbar inc. electrical kit 13 pins SIARR	06/09-		316 289 900 113	0849	90	22,5	7,72	75	1300	electrical kit 13 pins in the kit: 316 290 300 113	S	A	--	E1	D1	L1	V	60	B
Renault Mégane Grandtourer SIARR discontinued model	06/09-		316 290 600 001	0849	90	22	7,72	75	1300	316 290 300 113	S	A	--	E1	D1	L1	V	60	B
Renault Mégane Grandtourer SIARR	06/09-		316 291 600 001	10259	90	25	8,41	75	1500	316 290 300 113	S	A	--	E1	D1	L1	V	60	B
Renault Mégane Grandtourer KIT = towbar inc. electrical kit 13 pins SIARR	06/09-		316 291 900 113	10259	90	27	8,41	75	1500	electrical kit 13 pins in the kit: 316 290 300 113	S	A	--	E1	D1	L1	V	60	B
Renault Mégane Hatchback 5 doors inc.Phase II, exc.Coach, exc.convertible	01/96- 10/02		316 107 600 001	0122	90	15,8	7,6	75	1350	300 072 300 107 300 072 300 113	--	FRE	--	E1	--	--	V		B
Renault Mégane Hatchback 3 / 5 doors	11/02- 11/08		316 175 600 001	1514	60	18	7,56	75	1350	-12/05 300 072 300 107 -12/05 300 072 300 113 discontinued model 12/05-	--	FRE	--	E1	--	--	V		B
Renault Mégane Hatchback 3 / 5 doors discontinued model	11/02- 11/08		316 176 600 001	1515	90	18	7,56	75	1350	-12/05 300 072 300 107 -12/05 300 072 300 113 discontinued model 12/05-	--	FRE	--	E1	--	--	V		B
Renault Mégane Saloon	07/03-		316 208 600 001	1653	90	21,5	7,7	75	1350	300 072 300 107 300 072 300 113	--	FRE	--	E1	--	--	V		B
Renault Mégane Saloon	07/03-		316 209 600 001	1716	90	22	7,7	75	1350	300 072 300 107 300 072 300 113	--	FRE	--	E1	--	--	V		B

Renault Modus I exc. vehicles with factory provided bicycle carriers preparation.	10/04-01/08		316 216 600 001	1923	60		16	5,77	75	900	for vehicles with earth switched rear fog lights please order separately: 300 065 300 005 316 190 300 107 316 190 300 113	-- -- S FRE -- S FRE --	-- -- E1 -- E1 D1	-- -- -- -- L1	H H H	15 45 45	B B B
Renault Modus II exc. vehicles with rear end carrier system Velofix SIARR	01/08-		316 283 600 001	0129	60	✂	18	5,77	75	900		-- A -- S FRE --	E1 D1 E1 --	L1 --	V H	90 45	B L
Renault Modus II exc. vehicles with rear end carrier system Velofix SIARR	01/08-		316 284 600 001	0130	60	✂	19	5,77	75	900		-- A -- S FRE --	E1 D1 E1 --	L1 --	V H	90 45	B L
Renault Scenic inc. Phase II from '99, exc.4 WD	01/97-06/03		316 113 600 001	0235	90		16,3	8	75	1380	09/99- (Phase II) 300 072 300 107 -08/99 (Phase I) 300 072 300 113 09/99- (Phase II) 316 113 300 113	-- FRE -- -- FRE -- S FRE --	E1 -- E1 D1 E1 D1	-- -- L1 L1	V V V		B B B
Renault Scenic inc. Phase II from '99, exc.4 WD discontinued model	01/97-06/03		316 114 600 001	0224	120	✂	20	8	75	1380	09/99- (Phase II) 300 072 300 107 -08/99 (Phase I) 300 072 300 113 09/99- (Phase II) 316 113 300 113	-- FRE -- -- FRE -- S FRE --	E1 -- E1 D1 E1 D1	-- -- L1 L1	V V V		B B B
Renault Scenic inc. Grand Scenic, exc. Conquest	07/03-06/09		316 206 600 001	1616	90	✂	19,5	8,1	75	1350	316 170 300 107 316 170 300 113	S FRE -- S FRE --	E1 -- E1 D1	-- -- L1 H	H H	45 45	B B
Renault Scenic KIT = towbar inc. electrical kit 13 pins inc. Grand Scenic, exc. Conquest	07/03-06/09		316 206 900 113	1616	90	✂	21	8,1	75	1350	electrical kit 13 pins in the kit. 316 170 300 113	S FRE --	E1 D1	L1	H	45	B
Renault Scenic inc. Grand Scenic, exc. Conquest	07/03-06/09		316 230 600 001	2274	90	✂	21,5	8,1	75	1350	316 170 300 107 316 170 300 113	S FRE -- S FRE --	E1 -- E1 D1	-- -- L1 H	H H	45 45	B B
Renault Scenic inc. Grand Scenic, exc. Conquest	07/03-06/09		316 207 600 001	1669	90	✂	20	8,1	75	1350	316 170 300 107 316 170 300 113	S FRE -- S FRE --	E1 -- E1 D1	-- -- L1 H	H H	45 45	B B













Renault

















Renault Scenic KIT = towbar inc. electrical kit 13 pins inc. Grand Scenic, exc. Conquest	07/03- 06/09		316 207 900 113	1669	90		22	8,1	75	1350	electrical kit 13 pins in the kit: 316 170 300 113	S	FRE --	E1	D1	L1	H	45	B
Renault Scenic SIARR	06/09-		316 292 600 001	0835	90		18,3	7,93	75	1300	316 294 300 107 316 294 300 113	S	A --	E1	--	--	H	60	B
Renault Scenic KIT = towbar inc. electrical kit 13 pins SIARR	06/09-		316 292 900 113	0835	90		20,3	7,93	75	1300	electrical kit 13 pins in the kit: 316 294 300 113	S	A --	E1	D1	L1	H	60	B
Renault Scenic SIARR	06/09-		316 294 600 001	0836	90		22,4	7,93	75	1300	316 294 300 107 316 294 300 113	S	A --	E1	--	--	H	60	B
Renault Scenic KIT = towbar inc. electrical kit 13 pins SIARR	06/09-		316 294 900 113	0836	90		24,4	7,93	75	1300	electrical kit 13 pins in the kit: 316 294 300 113	S	A --	E1	D1	L1	H	60	B
Renault Traffic Van Monoflex	05/01-		314 364 600 001	2042	60		21	12,3	85	2100	discontinued model -08/06 314 263 300 107 -08/06 314 263 300 113 08/06-03/10 314 860 300 107 08/06-03/10 314 860 300 113 08/06-03/10 314 860 300 157 03/10- 314 870 300 107 03/10- 314 870 300 113 03/10- 314 870 300 157	S	FRE --	E1	--	--	H	60	L
Renault Traffic Van KIT = towbar inc. electrical kit 13 pins Monoflex	08/06- 03/10		314 364 900 113	2042	60		23	12,3	85	2100	electrical kit 13 pins in the kit: 314 860 300 113	S	FRE --	E1	D1	L1	H	60	B

Renault Traffic Van KIT = towbar inc. electrical kit 13 pins Monoflex	03/10-		314 870 900 113	2042	60		23	12,3	85	2100	electrical kit 13 pins in the kit: 314 870 300 113	S	FRE --	E1	D1	L1	H	60	B
Renault Twingo	98- 05/07		316 193 600 001	1085	40		14,5	5	50	600	300 072 300 107 300 072 300 113	--	FRE -- FRE --	E1	-- E1	-- D1	V V		B B
Renault Twingo exc. model "Sport" (also for 12/1 phase III) Phase I and II inc. Gordini R.S. (a visible cutout is necessary)	06/07-		316 326 600 001	3289	60		17	4,15	65	500	300 210 300 107 300 210 300 113	--	A -- A --	E1	-- E1	-- D1	V V	90 90	B B
Renault Velsatis SIARR	02-		316 256 600 001	4170	120		24	9,46	75	1650	300 210 300 107 300 210 300 113	--	A -- A --	E1	-- E1	-- D1	V V	90 90	B B

















Saab 9-3 X SportCombi Monoflex	11/09-		3057	90	✂	15	9,39	80	1600	300 210 300 107	--	A --	E1 --	--	V	90	B
										300 210 300 113	--	A --	E1 D1	L1	V	90	B
Saab 9-5 Saloon and Estate	98-10		0631	150	✂	10,7	9,9	75	1800	324 014 300 113	S	FRE --	--	D1	V	90	L
										314 386 300 107	S	CAN --	E --	--	V	75	B
Saab 9-5 Saloon and Estate Monoflex	08/10-		4274	90	✂	23	11	80	2000	314 386 300 113	S	CAN --	E D	L1	V	75	B
										314 386 300 113	S	CAN --	E D	L1	V	75	B
Saab 9-5 Saloon and Estate Monoflex	08/10-		4249	90	✂	25	11	80	2000	314 386 300 107	S	CAN --	E --	--	V	75	B
										314 386 300 113	S	CAN --	E D	L1	V	75	B























Seat

Seat Alhambra Please order also bumper bracket (no. 321330616001).	96-05/00		321 329 600 001	0003	120		17	12,2	85	2400	321 458 300 107 321 458 300 113	S FRE -- S FRE --	E -- E D1	-- L1 H	H	60	B
Seat Alhambra thermal-insulation plate inc. Please order also bumper bracket (no. 321330616001). Please order cover cap for bumper cutout from Seat dealer. discontinued model	96-05/00		321 330 600 001	0007	90		22,2	12,2	85	2400	321 458 300 107 321 458 300 113	S FRE -- S FRE --	E -- E D1	-- L1 H	H	60	B
Seat Alhambra thermal-insulation plate inc. inc. 4WD bumper bracket is not necessary	05/00-09/10		321 665 600 001	2138	90		24	12,5	100	2500	321 458 300 107 321 458 300 113	S FRE -- S FRE --	E -- E D1	-- L1 H	H	60	B
Seat Alhambra KIT = towbar inc. electrical kit 13 pins thermal-insulation plate inc. inc. 4WD bumper bracket is not necessary	05/00-09/10		321 665 900 113	2138	90		26	12,5	100	2500	electrical kit 13 pins in the kit: 321 458 300 113	S FRE --	E D1	L1 H	H	60	B
Seat Alhambra inc. 4WD 4-Motion: Please check the operating instructions of the vehicle before fitting the towbar.	05/00-09/10		321 775 600 001	0681	90		26	12,5	100	2500	321 458 300 107 321 458 300 113	S FRE -- S FRE --	E -- E D1	-- L1 H	H	60	B
Seat Alhambra KIT = towbar inc. electrical kit 13 pins inc. 4WD 4-Motion: Please check the operating instructions of the vehicle before fitting the towbar.	05/00-09/10		321 775 900 113	0681	90		28	12,5	100	2500	electrical kit 13 pins in the kit: 321 458 300 113	S FRE --	E D1	L1 H	H	60	B
Seat Alhambra	10/10-		321 698 600 001	3315			22	12,3	100	2500	321 600 300 107 321 600 300 113 321 600 300 153	S CAN C S CAN C S CAN C	E -- E D E D	-- L1 V L1 V	V	105	L
Seat Alhambra KIT = towbar inc. electrical kit 13 pins	10/10-		321 698 900 113	3315			24	12,3	100	2500	electrical kit 13 pins in the kit: 321 600 300 113	S CAN C	E D	L1 V	V	105	L
















Seat Alhambra	10/10-		321 699 600 001	3314			22	12,3 100 2500		321 600 300 107	S CAN	C	E	--	V	105	L	
Seat Alhambra Please order separately Spoiler and cover for bumper cutout at Seat dealers.	10/10-		321 700 600 001	3316			22	12,3 100 2500		321 600 300 107	S CAN	C	E	--	V	105	L	
Seat Alhambra KIT = towbar inc. electrical kit 13 pins Please order separately Spoiler and cover for bumper cutout at Seat dealers.	10/10-		321 700 900 113	3316			24	12,3 100 2500		electrical kit 13 pins in the kit: 321 600 300 113	S CAN	C	E	D	L1	V	105	L
Seat Alhambra KIT = towbar inc. electrical kit 13 pins Please order separately Spoiler and cover for bumper cutout at Seat dealers.	10/10		321 700 900 153	3316			24	12,3 100 2500		electrical kit 13 pins in the kit: 321 600 300 153	S CAN	C	E	D	L1	V	105	R
Seat Altea exc. FR	06/04-		344 043 600 001	1933	60		18	9,3 100 1650		344 044 300 107	S CAN	C	E	--	V	75	L	
Seat Altea KIT = towbar inc. electrical kit 13 pins exc. FR	06/04-		344 043 900 113	1933	60		20	9,3 100 1650		electrical kit 13 pins in the kit: 344 044 300 113	S CAN	C	E	D	L1	V	90	L
Seat Altea inc. FR Please order separately cover for bumper cutout at Seat dealer s, no. 5P0 803 595.	06/04-		344 044 600 001	3446	60		18	9,3 100 1650		344 044 300 107	S CAN	C	E	--	V	75	L	
Seat Altea KIT = towbar inc. electrical kit 13 pins inc. FR Please order separately cover for bumper cutout at Seat dealer s, no. 5P0 803 595.	06/04-		344 044 900 113	3446	60		19,5	9,3 100 1650		electrical kit 13 pins in the kit: 344 044 300 113	S CAN	C	E	D	L1	V	90	L













Seat









Seat Altea XL + Freerack	10/06-		344 043 600 001	1933	60		18	9,3	100	1650		with preliminary setup 344 042 300 113 without preliminary setup 344 044 300 107 without preliminary setup 344 044 300 113 without preliminary setup 344 044 300 153	S CAN C S CAN C S CAN C S CAN C	E E E E	D -- D D	L1 -- L1 L1	H V V V	45 75 90 90	B L L R
	10/06-		344 043 900 113	1933	60		20	9,3	100	1650		electrical kit 13 pins in the kit: 344 044 300 113	S CAN C	E	D	L1	V	90	L
	10/06-		344 048 600 001	2597	60		17,5	9,3	100	1650		with preliminary setup 344 042 300 113 without preliminary setup 344 044 300 107 without preliminary setup 344 044 300 113 without preliminary setup 344 044 300 153	S CAN C S CAN C S CAN C S CAN C	E E E E	D -- D D	L1 -- L1 L1	H V V V	45 75 90 90	B L L R
	10/06-		344 048 900 113	2597	60		19,5	9,3	100	1650		electrical kit 13 pins in the kit: 344 044 300 113	S CAN C	E	D	L1	V	90	L
	01/96- 12/02		344 025 600 001	0427	90		17	6,7	70	1200		300 072 300 107 300 072 300 113	-- FRE -- -- FRE --	E1 -- E1 --	-- D1	-- L1	V V		B B
Seat Cordoba Saloon all models, CLX/ GLX/ GTI and Coupé SX	01/03-		344 040 600 001	1232	90		20	7	50	1200		344 041 300 107 344 041 300 113	S C2 C S C2 C	-- --	-- D1	-- L1	H H	45 45	L L
	01/03-		344 039 600 001	1231	90		22	7	50	1200		344 041 300 107 344 041 300 113	S C2 C S C2 C	-- --	-- D1	-- L1	H H	45 45	L L
Seat Cordoba Vario	07/97- 03		344 025 600 001	0427	90		17	6,7	70	1200		300 072 300 107 300 072 300 113	-- FRE -- -- FRE --	E1 -- E1 --	-- D1	-- L1	V V		B B















Seat Exeo Saloon and ST/Estate	03/09-		344 053 600 001	3139	120		19	10,6	100	2000		305 208 300 153	S CAN	C	--	D1	L1	H	100	R
												305 210 300 107	S CAN	C	E	--	--	V	105	L
												305 210 300 113	S CAN	C	E	D1	L1	V	105	L
Seat Exeo Saloon and ST/Estate KIT = towbar inc. electrical kit 13 pins	03/09-		344 053 900 113	3139	120		21	10,6	100	2000		electrical kit 13 pins in the kit: 305 210 300 113	S CAN	C	E	D1	L1	V	105	L
Seat Exeo Saloon and ST/Estate	03/09-		344 054 600 001	3111	120		20	10,6	100	2000		305 208 300 153	S CAN	C	--	D1	L1	H	100	R
												305 210 300 107	S CAN	C	E	--	--	V	105	L
												305 210 300 113	S CAN	C	E	D1	L1	V	105	L
Seat Exeo Saloon and ST/Estate KIT = towbar inc. electrical kit 13 pins	03/09-		344 054 900 113	3111	120		22	10,6	100	2000		electrical kit 13 pins in the kit: 305 210 300 113	S CAN	C	E	D1	L1	V	105	L
Seat Ibiza exc. FR/Cupra	03/02- 07/08		344 040 600 001	1232	90		20	7	50	1200		344 040 300 107	S C2	C	--	--	--	H	45	B
												344 040 300 113	S C2	C	--	D1	--	H	45	B
Seat Ibiza inc. FR/Cupra	03/02- 07/08		344 039 600 001	1231	90		22	7	50	1200		344 040 300 107	S C2	C	--	--	--	H	45	B
												344 040 300 113	S C2	C	--	D1	--	H	45	B
Seat Ibiza ST Estate / 3/5 doors SIARR	07/08-		344 059 600 001	0131	90		17,5	8,33	75	1400		317 420 300 107	S CAN	C	E	--	--	V	90	L
												317 420 300 113	S CAN	C	E	D1	L1	V	90	L
												317 420 300 153	S							R
Seat Ibiza ST Estate / 3/5 doors Please order separately cover for bumper cutout at Seat dealer's.	07/08-		344 060 600 001	3308	90		22	7,73	75	1400		317 420 300 107	S CAN	C	E	--	--	V	90	L
												317 420 300 113	S CAN	C	E	D1	L1	V	90	L
												317 420 300 153	S							R
Seat Ibiza ST Estate / 3/5 doors KIT = towbar inc. electrical kit 13 pins Please order separately cover for bumper cutout at Seat dealer's.	07/08-		344 060 900 113	3308	90		24	7,73	75	1400		electrical kit 13 pins in the kit: 317 420 300 113	S CAN	C	E	D1	L1	V	90	L
Seat Inca	11/95-		321 437 600 001	0193	90		15	6,7	50	1100		344 503 300 107	S C2	--	--	--	--	H	45	L
												344 503 300 113	S C2	--	--	D1	--	H	45	L
Seat Leon cover for bumper: 944038630001 exc. Cupra, Top Sport, Leon 4, exc. FR	00- 08/05		344 024 600 001	0700	90		16,1	8,6	75	1600		300 072 300 107	--	FRE	--	--	--	V		B
												300 072 300 113	--	FRE	--	D1	L1	V		B














Seat








Seat Leon exc. FR + FRV Formula Race, exc. Cupra	09/05-		344 043 600 001	1933	60		18	9,3	100	1650		321 600 300 107 321 600 300 113 321 600 300 153	S CAN S CAN S CAN	C C C	E D D	-- L1 L1	V V V	105 105 105	L L R	
Seat Leon inc. FR, exc. FRV Formula Race, exc. Cupra Please order separately cover for bumper cutout at Seat dealer's, no. -05/09: 5P0 803 595, 05/09-: 1P0 092 595.	09/05-		344 044 600 001	3446	60		18	9,3	100	1650		321 600 300 107 321 600 300 113 321 600 300 153	S CAN S CAN S CAN	C C C	E D D	-- L1 L1	V V V	105 105 105	L L R	
Seat Leon KIT = towbar inc. electrical kit 13 pins inc. FR, exc. FRV Formula Race, exc. Cupra Please order separately cover for bumper cutout at Seat dealer's, no. -05/09: 5P0 803 595, 05/09-: 1P0 092 595.	09/05-		344 044 900 153	3446	60		20	9,3	100	1650		electrical kit 13 pins in the kit: 321 600 300 153	S CAN	C	E	D	L1	V	105	R
Seat Leon	11/12-		344 062 600 001				17	9,9	80	2000		305 404 300 107 305 404 300 113	S S						B B	
Seat Leon KIT = towbar inc. electrical kit 13 pins	11/12-		344 062 900 113				19	9,9	80	2000		electrical kit 13 pins in the kit: 305 404 300 113	S						B	
Seat Leon	11/12-		344 063 600 001				17	9,9	80	2000		305 404 300 107 305 404 300 113	S S						B B	
Seat Leon KIT = towbar inc. electrical kit 13 pins	11/12-		344 063 900 113				19	9,9	80	2000		electrical kit 13 pins in the kit: 305 404 300 113	S						B	
Seat Mii This towbar can only be used in combination with load carriers/cycle carriers! The vehicle is not homologated for towing trailers. Monoflex	11-		350 044 600 001	---			15		50			321 044 300 113	S							
Seat Toledo type 1M form veh.ident no. ...8950	04/99- 11/04		344 023 600 001	0721	90		16,6	8,6	75	1600		300 072 300 107 300 073 300 113	-- --	FRE FRE	-- D1	-- L1	V V	90 90	B B	
Seat Toledo type 1M form veh.ident no. ...8950	04/99- 11/04		344 024 600 001	0700	90		16,1	8,6	75	1600		300 072 300 107 300 073 300 113	-- --	FRE FRE	-- D1	-- L1	V V	90 90	B B	









Seat Toledo type 6L, 5P, 1P	11/04-		344 043 600 001	1933	60		18	9,3 100	1650		344 044 300 107 344 044 300 113 344 044 300 153	S CAN S CAN S CAN	C C C	E D D	-- L1 L1	V V V	75 90 90	L L R	
Seat Toledo KIT = towbar inc. electrical kit 13 pins type 6L, 5P, 1P	11/04-		344 043 900 113	1933	60		20	9,3 100	1650		electrical kit 13 pins in the kit: 344 044 300 113	S CAN	C	E	D	L1	V	90	L
Seat Toledo type 6L, 5P, 1P	11/04-		344 044 600 001	3446	60		18	9,3 100	1650		344 044 300 107 344 044 300 113 344 044 300 153	S CAN S CAN S CAN	C C C	E D D	-- L1 L1	V V V	75 90 90	L L R	
Seat Toledo KIT = towbar inc. electrical kit 13 pins type 6L, 5P, 1P	11/04-		344 044 900 113	3446	60		19,5	9,3 100	1650		electrical kit 13 pins in the kit: 344 044 300 113	S CAN	C	E	D	L1	V	90	L
Seat Toledo	02/13-		317 106 600 001								317 420 300 107 317 420 300 113	S CAN S CAN	C C	E D1	-- L1	V V	90 90	L L	
Seat Toledo KIT = towbar inc. electrical kit 13 pins	02/13-		317 106 900 113								electrical kit 13 pins in the kit: 317 420 300 113	S CAN	C	E	D1	L1	V	90	L
Seat Toledo	02/13-		317 107 600 001								317 420 300 107 317 420 300 113	S CAN S CAN	C C	E D1	-- L1	V V	90 90	L L	
Seat Toledo KIT = towbar inc. electrical kit 13 pins	02/13-		317 107 900 113								electrical kit 13 pins in the kit: 317 420 300 113	S CAN	C	E	D1	L1	V	90	L













Skoda Citigo This towbar can only be used in combination with load carriers/cycle carriers! The vehicle is not homologated for towing trailers. Monoflex	11- 	350 044 600 001	---	15	50	321 044 300 113	S			
Skoda Fabia I Estate/Saloon exc. GT, inc. Praktik -07	11/00- 12/07 	317 059 600 001	1979	60	7 50 1200	317 043 300 107 317 043 300 113 317 043 300 147	S FRE -- S FRE -- S -- --	E -- -- E D1 -- -- --	H 45 L 45 L 45	L L L
Skoda Fabia I Estate/Saloon KIT = towbar inc. electrical kit 13 pins exc. GT, inc. Praktik -07	11/00- 12/07 	317 059 900 113	1979	60	7 50 1200	electrical kit 13 pins in the kit: 317 043 300 113	S FRE --	E D1 --	H 45 L 45	L
Skoda Fabia I Estate/Saloon exc. GT, inc. Praktik -07	11/00- 12/07 	317 060 600 001	1976	60	7 50 1200	317 043 300 107 317 043 300 113 317 043 300 147	S FRE -- S FRE -- S -- --	E -- -- E D1 -- -- --	H 45 L 45 L 45	L L L
Skoda Fabia I Hatchback exc. Combi, inc. GT, exc. RS (RS is not permitted for towing trailers)	12/99- 06/07 	317 043 600 001	0743	60	7 50 1200	317 043 300 107 317 043 300 113 317 043 300 147	S FRE -- S FRE -- S -- --	E -- -- E D1 -- -- --	H 45 L 45 L 45	L L L
Skoda Fabia I Hatchback KIT = towbar inc. electrical kit 13 pins exc. Combi, inc. GT, exc. RS (RS is not permitted for towing trailers)	12/99- 06/07 	317 043 900 113	0753	60	7 50 1200	electrical kit 13 pins in the kit: 317 043 300 113	S FRE --	E D1 --	H 45 L 45	L
Skoda Fabia I Hatchback exc. Combi, inc. GT, exc. RS (RS is not discontinued model)	12/99- 06/07 	317 047 600 001	0753	60	7 50 1200	317 043 300 107 317 043 300 113 317 043 300 147	S FRE -- S FRE -- S -- --	E -- -- E D1 -- -- --	H 45 L 45 L 45	L L L
Skoda Fabia II Estate exc. RS	01/08- 	317 085 600 001	3270	40	7,2 86 1200	-05/10 317 400 300 107 -05/10 317 400 300 113 05/10- 317 420 300 107 05/10- 317 420 300 113 05/10- 317 420 300 153	S C2 C S C2 C S CAN C S CAN C S	E -- C E D1 C E -- C E D1 C	H 45 H 45 V 90 V 90	B B L L R















Skoda Fabia II Estate KIT = towbar inc. electrical kit 13 pins exc. RS	01/08- 05/10		317 085 900 113	3270	40		16,5	7,2	86	1200	electrical kit 13 pins in the kit: 317 400 300 113	S	C2	C	E	D1	--	H	45	B
Skoda Fabia II Estate KIT = towbar inc. electrical kit 13 pins exc. RS	05/10-		317 250 900 113	3270	40		16,5	7,2	86	1200	electrical kit 13 pins in the kit: 317 420 300 113	S	CAN	C	E	D1	L1	V	90	L
Skoda Fabia II Estate exc. RS Please order cover for bumper cutout at Skoda dealers.	01/08-		317 086 600 001	3271	40		14,5	7,2	86	1200	-05/10 317 400 300 113 05/10- 317 420 300 113 05/10- 317 420 300 153	S	C2	C	E	D1	--	H	45	B
Skoda Fabia II Estate KIT = towbar inc. electrical kit 13 pins exc. RS Please order cover for bumper cutout at Skoda dealers.	01/08- 05/10		317 086 900 113	3271	40		16,5	7,2	86	1200	electrical kit 13 pins in the kit: 317 400 300 113	S	C2	C	E	D1	--	H	45	B
Skoda Fabia II Estate KIT = towbar inc. electrical kit 13 pins exc. RS Please order cover for bumper cutout at Skoda dealers.	05/10-		317 251 900 113	2443	40		16,5	7,2	86	1200	electrical kit 13 pins in the kit: 317 420 300 113	S	CAN	C	E	D1	L1	V	90	L
Skoda Fabia II Hatchback exc. RS + Monte Carlo	06/07-		317 085 600 001	3270	40		14,5	7,2	86	1200	-05/10 317 400 300 107 -05/10 317 400 300 113 05/10- 317 420 300 107 05/10- 317 420 300 113 05/10- 344 250 300 153	S	C2	C	E	--	H	45	B	
Skoda Fabia II Hatchback KIT = towbar inc. electrical kit 13 pins exc. RS + Monte Carlo	06/07- 05/10		317 085 900 113	3270	40		16,5	7,2	86	1200	electrical kit 13 pins in the kit: 317 400 300 113	S	C2	C	E	D1	--	H	45	B




















Skoda Fabia II Hatchback KIT = towbar inc. electrical kit 13 pins exc. RS + Monte Carlo	05/10-		317 250 900 113	3270	40		16,5	7,2	86	1200	electrical kit 13 pins in the kit: 317 420 300 113	S	CAN	C	E	D1	L1	V	90	L
Skoda Fabia II Hatchback exc. RS + Monte Carlo Please order cover for bumper cutout at Skoda dealers.	06/07-		317 086 600 001	3271	40		14,5	7,2	86	1200	-05/10 317 400 300 113 05/10- 317 420 300 113 05/10- 344 250 300 153	S	C2	C	E	D1	--	H	45	B
Skoda Fabia II Hatchback KIT = towbar inc. electrical kit 13 pins exc. RS + Monte Carlo Please order cover for bumper cutout at Skoda dealers.	06/07- 05/10		317 086 900 113	3271	40		16,5	7,2	86	1200	electrical kit 13 pins in the kit: 317 400 300 113	S	C2	C	E	D1	--	H	45	B
Skoda Fabia II Hatchback KIT = towbar inc. electrical kit 13 pins exc. RS + Monte Carlo Please order cover for bumper cutout at Skoda dealers.	05/10-		317 251 900 113	3271	40		16,5	7,2	86	1200	electrical kit 13 pins in the kit: 317 420 300 113	S	CAN	C	E	D1	L1	V	90	L
Skoda Felicia Saloon discontinued model	02/95-		317 008 600 001	0013	60		13	5,9	50	1000	300 060 300 107 300 060 300 113 discontinued model: 317 007 300 107 discontinued model: 317 007 300 113	--	C2	--	--	--	--	H	45	B
Skoda Octavia I Saloon/Estate type 1U exc. 4WD, inc. RS Note: For towing capacities of 1400 kg and more please check the operating instructions of your car.	12/96- 01/05		317 015 600 001	0200	90		15	8,4	60	1500	317 015 300 107 317 015 300 113	S	FRE	--	E	--	--	H	45	B
Skoda Octavia I Saloon/Estate KIT = towbar inc. electrical kit 13 pins type 1U exc. 4WD, inc. RS Note: For towing capacities of 1400 kg and more please check the operating instructions of your car.	12/96- 01/05		317 015 900 113	0200	90		17	8,4	60	1500	electrical kit 13 pins in the kit: 317 015 300 113	S	FRE	--	E	D1	L1	H	45	B

















<p>Skoda Octavia I Saloon/Estate type 1U exc. 4 WD, inc. RS Note: For towing capacities of 1400 kg and more please check the operating instructions of your car.</p>	<p>12/96-01/05</p> 	<p>317 016 600 001</p>	<p>0216</p>	<p>90</p>	<p>16,2</p>	<p>8,4 60 1500</p>	<p>317 015 300 107 317 015 300 113</p>	<p>S FRE -- S FRE --</p>	<p>E -- E D1</p>	<p>-- L1 H L1 H</p>	<p>45 45</p>	<p>B B</p>
<p>Skoda Octavia I Saloon/Estate KIT = towbar inc. electrical kit 13 pins type 1U exc. 4 WD, inc. RS Note: For towing capacities of 1400 kg and more please check the operating instructions of your car.</p>	<p>12/96-01/05</p> 	<p>317 016 900 113</p>	<p>0216</p>	<p>90</p>	<p>18,2</p>	<p>8,4 60 1500</p>	<p>electrical kit 13 pins in the kit: 317 015 300 113</p>	<p>S FRE --</p>	<p>E D1</p>	<p>L1 H L1 H</p>	<p>45</p>	<p>B</p>
<p>Skoda Octavia I Saloon/Estate 4x4 Note: For towing capacities of 1400 kg and more please check the operating instructions of your car.</p>	<p>09/99-</p> 	<p>317 037 600 001</p>	<p>0785</p>	<p>90</p>	<p>15,6</p>	<p>9,2 75 1650</p>	<p>317 015 300 107 317 015 300 113</p>	<p>S FRE -- S FRE --</p>	<p>E -- E D1</p>	<p>-- L1 H L1 H</p>	<p>45 45</p>	<p>B B</p>
<p>Skoda Octavia I Saloon/Estate 4x4 Note: For towing capacities of 1400 kg and more please check the operating instructions of your car. discontinued model</p>	<p>09/99-</p> 	<p>317 036 600 001</p>	<p>0682</p>	<p>90</p>	<p>16</p>	<p>9,2 75 1650</p>	<p>317 015 300 107 317 015 300 113</p>	<p>S FRE -- S FRE --</p>	<p>E -- E D1</p>	<p>-- L1 H L1 H</p>	<p>45 45</p>	<p>B B</p>
<p>Skoda Octavia II Estate 1Z / 3T inc. 4 x 4 and RS, inc. Scout Facelift 11/08-: cutout is not necessary</p>	<p>01/05-</p> 	<p>317 104 600 001</p>	<p>3170</p>	<p>40</p>	<p>18</p>	<p>10,6 100 2000</p>	<p>317 056 300 153 321 600 300 107 321 600 300 113 321 600 300 153</p>	<p>S CAN C S CAN C S CAN C S CAN C</p>	<p>E D E -- E D E D</p>	<p>L1 V -- V L1 V L1 V</p>	<p>90 105 105 105</p>	<p>B L L R</p>
<p>Skoda Octavia II Estate KIT = towbar inc. electrical kit 13 pins 1Z / 3T inc. 4 x 4 and RS, inc. Scout Facelift 11/08-: cutout is not necessary</p>	<p>01/05-</p> 	<p>317 104 900 113</p>	<p>3170</p>	<p>40</p>	<p>20</p>	<p>10,6 100 2000</p>	<p>electrical kit 13 pins in the kit: 321 600 300 113</p>	<p>S CAN C</p>	<p>E D</p>	<p>L1 V</p>	<p>105</p>	<p>L</p>
<p>Skoda Octavia II Estate inc. 4 x 4 and RS, inc. Scout Facelift 11/08-: cutout is not necessary SIARR discontinued model</p>	<p>01/05-</p> 	<p>317 076 600 001</p>	<p>0032</p>	<p>20</p>	<p>9,3 75 1700</p>	<p>317 056 300 153 321 600 300 107 321 600 300 113 321 600 300 153</p>	<p>S CAN C S CAN C S CAN C S CAN C</p>	<p>E D E -- E D E D</p>	<p>L1 V -- V L1 V L1 V</p>	<p>90 105 105 105</p>	<p>B L L R</p>	

Skoda Octavia II Estate 1Z / 3T inc. 4 x 4 and RS, inc. Scout Facelift 11/08-; cutout is not necessary	01/05- 	317 102 600 001	3142	40	✂	19	10,6 100 2000		317 056 300 153 321 600 300 107 321 600 300 113 321 600 300 153	S CAN S CAN S CAN S CAN	C C C C	E E E E	D -- D D	L1 -- L1 L1	V V V V	90 105 105 105	B L L R
Skoda Octavia II Estate KIT = towbar inc. electrical kit 13 pins 1Z / 3T inc. 4 x 4 and RS, inc. Scout Facelift 11/08-; cutout is not necessary	01/05- 	317 102 900 113	3142	40	✂	21	10,6 100 2000		electrical kit 13 pins in the kit: 321 600 300 113	S CAN	C	E	D	L1	V	105	L
Skoda Octavia II Estate KIT = towbar inc. electrical kit 13 pins 1Z / 3T inc. 4 x 4 and RS, inc. Scout Facelift 11/08-; cutout is not necessary	01/05- 	317 102 900 153	3142	40	✂	21	10,6 100 2000		electrical kit 13 pins in the kit: 321 600 300 153	S CAN	C	E	D	L1	V	105	R
Skoda Octavia II Saloon 1Z / 3T inc. 4 x 4 and RS, inc. Scout Facelift 11/08-; cutout is not necessary	01/05- 	317 104 600 001	3170	40	✂	18	10,6 100 2000		317 056 300 153 321 600 300 107 321 600 300 113 321 600 300 153	S CAN S CAN S CAN S CAN	C C C C	E E E E	D -- D D	L1 -- L1 L1	V V V V	90 105 105 105	B L L R
Skoda Octavia II Saloon KIT = towbar inc. electrical kit 13 pins 1Z / 3T inc. 4 x 4 and RS, inc. Scout Facelift 11/08-; cutout is not necessary	01/05- 	317 104 900 113	3170	40	✂	20	10,6 100 2000		electrical kit 13 pins in the kit: 321 600 300 113	S CAN	C	E	D	L1	V	105	L
Skoda Octavia II Saloon inc. 4 x 4 and RS, inc. Scout Facelift 11/08-; cutout is not necessary SIARR discontinued model	01/05- 	317 076 600 001	0032		✂	20	9,3 75 1700		317 056 300 153 321 600 300 107 321 600 300 113 321 600 300 153	S CAN S CAN S CAN S CAN	C C C C	E E E E	D -- D D	L1 -- L1 L1	V V V V	90 105 105 105	B L L R
Skoda Octavia II Saloon 1Z / 3T inc. 4 x 4 and RS, inc. Scout Facelift 11/08-; cutout is not necessary	01/05- 	317 102 600 001	3142	40	✂	19	10,6 100 2000		317 056 300 153 321 600 300 107 321 600 300 113 321 600 300 153	S CAN S CAN S CAN S CAN	C C C C	E E E E	D -- D D	L1 -- L1 L1	V V V V	90 105 105 105	B L L R
Skoda Octavia II Saloon KIT = towbar inc. electrical kit 13 pins 1Z / 3T inc. 4 x 4 and RS, inc. Scout Facelift 11/08-; cutout is not necessary	01/05- 	317 102 900 113	3142	40	✂	21	10,6 100 2000		electrical kit 13 pins in the kit: 321 600 300 113	S CAN	C	E	D	L1	V	105	L











Skoda Octavia II Saloon KIT = towbar inc. electrical kit 13 pins 1Z / 3T inc. 4 x 4 and RS, inc. Scout Facelift 11/08-: cutout is not necessary	01/05-		317 102 900 153	3142	40		21	10,6	100	2000		electrical kit 13 pins in the kit: 321 600 300 153	S	CAN	C	E	D	L1	V	105	R
Skoda Octavia III	02/13-		317 096 600 001									317 094 300 107 317 094 300 113	S								
Skoda Octavia III KIT = towbar inc. electrical kit 13 pins	02/13-		317 096 900 113									electrical kit 13 pins in the kit: 317 094 300 113	S								
Skoda Octavia III	02/13-		317 098 600 001									317 094 300 107 317 094 300 113	S								
Skoda Octavia III KIT = towbar inc. electrical kit 13 pins	02/13-		317 098 900 113									electrical kit 13 pins in the kit: 317 094 300 113	S								
Skoda Rapid	10/12-		317 106 600 001									317 420 300 107 317 420 300 113	S	CAN	C	E	--	--	V	90	L
Skoda Rapid KIT = towbar inc. electrical kit 13 pins	10/12-		317 106 900 113									electrical kit 13 pins in the kit: 317 420 300 113	S	CAN	C	E	D1	L1	V	90	L
Skoda Rapid	10/12-		317 107 600 001									317 420 300 107 317 420 300 113	S	CAN	C	E	D1	L1	V	90	L
Skoda Rapid KIT = towbar inc. electrical kit 13 pins	10/12-		317 107 900 113									electrical kit 13 pins in the kit: 317 420 300 113	S	CAN	C	E	D1	L1	V	90	L
Skoda Roomster inc. Skoda Praktik 07-, inc. Scout	09/06-		317 063 600 001	2289	40		17	7,5	50	1200		-05/10 317 400 300 107 -05/10 317 400 300 113 05/10- 317 420 300 107 05/10- 317 420 300 113 317 420 300 153	S	C2	C	E	--	--	H	45	B

Skoda Roomster KIT = towbar inc. electrical kit 13 pins inc. Skoda Praktik 07-, inc. Scout	09/06- 05/10		317 063 900 113	2289	40		19	7,5	50	1200	electrical kit 13 pins in the kit: 317 400 300 113	S	C2	E	D1	--	H	45	B
Skoda Roomster KIT = towbar inc. electrical kit 13 pins inc. Skoda Praktik 07-, inc. Scout	05/10-		317 420 900 113	2289	40		19	7,5	50	1200	electrical kit 13 pins in the kit: 317 420 300 113	S	CAN	E	D1	L1	V	90	L
Skoda Roomster KIT = towbar inc. electrical kit 13 pins inc. Skoda Praktik 07-, inc. Scout	05/10-		317 420 900 153	2289	40		19	7,5	50	1200	electrical kit 13 pins in the kit: 317 420 300 153	S							R
Skoda Roomster inc. Skoda Praktik 07-, inc. Scout SIARR	09/06-		317 083 600 001	0081	40		17	7,5	50	1200	-05/10 317 400 300 107 -05/10 317 400 300 113 05/10- 317 420 300 107 05/10- 317 420 300 113 317 420 300 153	S	C2	E	--	--	H	45	B
Skoda Roomster inc. Skoda Praktik 07-, inc. Scout Please order cover for bumper cutout at Skoda- dealers, order-no. XEA 77001.	09/06-		317 064 600 001	2305	40		17	7,5	50	1200	-05/10 317 400 300 107 -05/10 317 400 300 113 05/10- 317 420 300 107 05/10- 317 420 300 113 317 420 300 153	S	C2	E	--	--	H	45	B
Skoda Roomster KIT = towbar inc. electrical kit 13 pins inc. Skoda Praktik 07-, inc. Scout Please order cover for bumper cutout at Skoda- dealers, order-no. XEA 77001.	09/06- 05/10		317 064 900 113	2305	40		19	7,5	50	1200	electrical kit 13 pins in the kit: 317 400 300 113	S	C2	E	D1	--	H	45	B
Skoda Roomster KIT = towbar inc. electrical kit 13 pins inc. Skoda Praktik 07-, inc. Scout Please order cover for bumper cutout at Skoda- dealers, order-no. XEA 77001.	05/10-		317 421 900 113	2305	40		19	7,5	50	1200	electrical kit 13 pins in the kit: 317 420 300 113	S	CAN	E	D1	L1	V	90	L













Skoda Roomster KIT = towbar inc. electrical kit 13 pins inc. Skoda Praktik 07-, inc. Scout Please order cover for bumper cutout at Skoda- dealers, order-no. XEA 77001.	05/10-		317 421 900 153	2305	40		19	7,5	50	1200		electrical kit 13 pins in the kit: 317 420 300 153	S							R
Skoda Superb exc. vehicles with tuning set by M+S Monoflex	03/02- 06/08		321 772 600 001	3536	120		23	10,05	85	2000		317 050 300 113	S	FRE --	E	D	L1	V	90	B
Skoda Superb exc. vehicles with tuning set by M+S	03/02- 06/08		321 505 600 001	0730	90		20,5	10,3	85	2000		317 050 300 113	S	FRE --	E	D	L1	V	90	B
Skoda Superb Estate	12/09-		317 104 600 001	3170	40		18	10,6	100	2000		321 600 300 107 321 600 300 113 321 600 300 153	S S S	CAN CAN CAN	E E E	-- D D	-- L1 L1	V V V	105 105 105	L L R
Skoda Superb Estate KIT = towbar inc. electrical kit 13 pins	12/09-		317 104 900 113	3170	40		20	10,6	100	2000		electrical kit 13 pins in the kit: 321 600 300 113	S	CAN C	E	D	L1	V	105	L
Skoda Superb Estate	12/09-		317 102 600 001	3142	40		19	10,6	100	2000		321 600 300 107 321 600 300 113 321 600 300 153	S S S	CAN CAN CAN	E E E	-- D D	-- L1 L1	V V V	105 105 105	L L R
Skoda Superb Estate KIT = towbar inc. electrical kit 13 pins	12/09-		317 102 900 113	3142	40		21	10,6	100	2000		electrical kit 13 pins in the kit: 321 600 300 113	S	CAN C	E	D	L1	V	105	L
Skoda Superb Estate KIT = towbar inc. electrical kit 13 pins	12/09-		317 102 900 153	3142	40		21	10,6	100	2000		electrical kit 13 pins in the kit: 321 600 300 153	S	CAN C	E	D	L1	V	105	R
Skoda Superb Saloon	06/08-		317 104 600 001	3170	40		18	10,6	100	2000		321 600 300 107 321 600 300 113 321 600 300 153	S S S	CAN CAN CAN	E E E	-- D D	-- L1 L1	V V V	105 105 105	L L R
Skoda Superb Saloon KIT = towbar inc. electrical kit 13 pins	06/08-		317 104 900 113	3170	40		20	10,6	100	2000		electrical kit 13 pins in the kit: 321 600 300 113	S	CAN C	E	D	L1	V	105	L























Skoda Superb Saloon	06/08-		317 102 600 001	3142	40		19	10,6	100	2000		321 600 300 107 321 600 300 113 321 600 300 153	S CAN S CAN S CAN	C C C	E E E	-- D D	-- L1 L1	V V V	105 105 105	L L R
Skoda Superb Saloon KIT = towbar inc. electrical kit 13 pins	06/08-		317 102 900 113	3142	40		21	10,6	100	2000		electrical kit 13 pins in the kit: 321 600 300 113	S CAN	C	E	D	L1	V	105	L
Skoda Superb Saloon KIT = towbar inc. electrical kit 13 pins	06/08-		317 102 900 153	3142	40		21	10,6	100	2000		electrical kit 13 pins in the kit: 321 600 300 153	S CAN	C	E	D	L1	V	105	R
Skoda Yeti	08/09-		317 080 600 001	3137	40		18	10,3	80	2000		317 079 300 107 317 079 300 113 317 079 300 143	S CAN S CAN S CAN	C C C	E E E	-- D D	-- L1 L1	V V V	105 105 120	L L R
Skoda Yeti KIT = towbar inc. electrical kit 13 pins	08/09-		317 080 900 113	3137	40		20	10,3	80	2000		electrical kit 13 pins in the kit: 317 079 300 113	S CAN	C	E	D	L1	V	105	L
Skoda Yeti For the cutout in the bumper a special tool is necessary. We would therefore recommend to let the cutout be made at Skoda dealers. Please order cover and frame for bumper cutout at Skoda dealers. replaced by 317117600001 discontinued model	08/09-		317 105 600 001	2494	40		18,5	9,8	75	1800		317 079 300 107 317 079 300 113 317 079 300 143	S CAN S CAN S CAN	C C C	E E E	-- D D	-- L1 L1	V V V	105 105 120	L L R
Skoda Yeti For the cutout in the bumper a special tool is necessary. We would therefore recommend to let the cutout be made at Skoda dealers. Please order cover and frame for bumper cutout at Skoda dealers.	08/09-		317 117 600 001	2494	40		19,5	10,3	80	2000		317 079 300 107 317 079 300 113	S CAN S CAN	C C	E E	-- D	-- L1	V V	105 105	L L
Skoda Yeti KIT = towbar inc. electrical kit 13 pins For the cutout in the bumper a special tool is necessary. We would therefore recommend to let the cutout be made at Skoda dealers. Please order cover and frame for bumper cutout at Skoda dealers.	08/09-		317 105 900 113	2494	40		20,5	10,3	80	2000		electrical kit 13 pins in the kit: 317 079 300 113	S CAN	C	E	D	L1	V	105	L

<p>Skoda Yeti KIT = towbar inc. electrical kit 13 pins For the cutout in the bumper a special tool is necessary. We would therefore recommend to let the cutout be made at Skoda dealers. Please order cover and frame for bumper cutout at Skoda dealers.</p>	08/09- 	317 105 900 143 2494	40	 20,5	10,3 80 2000	electrical kit 13 pins in the kit: 317 079 300 143	S CAN C	E	D	L1	V	120	R
---	---	--------------------------------	----	--	--------------------	---	---------	---	---	----	---	-----	---














Ssang Yong Actyon exc. Sport Monoflex discontinued model	06-		349 034 600 001	3491	45	22	12,06	110	2400		300 061 300 107 300 061 300 113	-- --	C2 C2	-- --	D1 L1	H H	B B
Ssang Yong Actyon Sport (Pick up) Monoflex	06- 05/12		349 035 600 001	3517	60	26	12,37	100	2300		300 052 300 107 300 052 300 113	-- --	FRE FRE	-- --	D1 --	V V	B B
Ssang Yong Korando C	10/10-		349 038 600 001	3238	60	21	11,55	100	2400		349 039 300 113 349 039 300 157	S S	A --	E --	L1 --	V H	B 45 L
Ssang Yong Korando C KIT = towbar inc. electrical kit 13 pins	10/10-		349 038 900 113	3238	60	23	11,5	100	2400		electrical kit 13 pins in the kit: 349 039 300 113	S	A	E	L1	V	B
Ssang Yong Korando C	10/10-		349 039 600 001	3287	60	22	11,55	100	2400		349 039 300 113 349 039 300 157	S S	A --	E --	L1 --	V H	B 45 L
Ssang Yong Korando C KIT = towbar inc. electrical kit 13 pins	10/10-		349 039 900 113	3287	60	24	11,5	100	2400		electrical kit 13 pins in the kit: 349 039 300 113	S	A	E	L1	V	B
Ssang Yong Kyron exc. vehicles with park distance control	11/05-		349 026 600 001	2237	90	29	11,9	100	2300	✂	300 061 300 107 300 061 300 113	-- --	C2 C2	-- --	-- D1	H H	B B
Ssang Yong Kyron	11/05-		349 027 600 001	2238	90	29	11,9	100	2300	✂	300 061 300 107 300 061 300 113	-- --	C2 C2	-- --	-- D1	H H	B B
Ssang Yong Rexton towball 329076600001 inc.	02-		349 028 600 001	2339	90	22	14,5	140	3500		300 061 300 107 300 061 300 113	-- --	C2 C2	-- --	-- D1	H H	B B
Ssang Yong Rodius Monoflex	06-		349 036 600 001	3239	60	22	14,34	120	2850	✂	300 073 300 113	--	FRE	--	D1	V	B










Subaru

Subaru Forester	10/97-03/08		348 013 600 001	1642	60	20,9	10	85	1950		300 061 300 107 300 061 300 113	-- --	C2 C2	-- --	-- --	-- --	D1 L1	-- L1	H H	B B	
Subaru Forester Monoflex	03/08-		348 023 600 001	3758	90	✂	25	9,92	80	2000		348 023 300 113	S	C2	--	--	D1	L1	V	40	B
Subaru Forester Monoflex	03/08-		348 024 600 001	3758	90	✂	25	9,92	80	2000		348 023 300 113	S	C2	--	--	D1	L1	V	40	B
Subaru Forester	03/13-		3480386000001																		
Subaru Forester KIT = towbar inc. electrical kit 13 pins	03/13-		348 038 900 113																		
Subaru Forester	03/13-		348 039 600 001																		
Subaru Forester KIT = towbar inc. electrical kit 13 pins	03/13-		348 039 900 113																		
Subaru Impreza exc. WRX Monoflex	10/00-09/07		348 031 600 001	1815	120	✂	23	8,62	80	1600		300 061 300 107 300 061 300 113	-- --	C2 C2	-- --	-- --	D1 L1	-- L1	H H	B B	
Subaru Impreza	01/13-		348..1600001																		
Subaru Impreza Hatchback inc. WRX inc. XV 09/10- Monoflex	09/07-		348 019 600 001	3737	90	✂	29	8,56	75	1600		348 020 300 113	S	C2	--	--	D1	L1	V	40	B
Subaru Impreza Hatchback inc. WRX inc. XV 09/10- Monoflex	09/07-		348 020 600 001	3738	90	✂	29	8,56	75	1600		348 020 300 113	S	C2	--	--	D1	L1	V	40	B
Subaru Impreza Saloon exc. WRX/Si inc. XV 09/10-10/11 Monoflex	09/07-		348 019 600 001	3737	90	✂	29	8,56	75	1600		300 210 300 107 300 210 300 113	-- --	A A	-- --	E1 E1	-- D1	-- L1	V V	90 90	B B











Subaru Impreza Saloon exc. WRX/Sti inc. XV 09/10-10/11 Monoflex	09/07-		348 020 600 001	3738	90		29	8,56	75	1600			300 210 300 107 300 210 300 113	--	A -- A --	E1 -- E1 --	-- D1 L1 V		V	90	B
Subaru Justy (G3X) Monoflex	09/03- 10/07		348 032 600 001	2354	120		24	6,11	70	1000			300 072 300 107 300 072 300 113	--	FRE -- FRE --	E1 -- E1 --	-- D1 L1 V		V		B
Subaru Justy (G3X) Monoflex discontinued model	09/03- 10/07		348 033 600 001	2354	120		24	6,11	70	1000			300 072 300 107 300 072 300 113	--	FRE -- FRE --	E1 -- E1 --	-- D1 L1 V		V		B
Subaru Legacy Estate type BD/BF/BG/BH exc. Outback	04/94- 09/03		348 010 600 001	0110	90		19,2	9,6	80	1900			300 061 300 107 300 061 300 113	--	C2 -- C2 --	-- D1 L1 H		H			B
Subaru Legacy Estate Monoflex	09/09-		348 021 600 001	4063	90		23	9,76	80	1800			348 026 300 113	S	C2 --	-- D1	L1 H		H	75	B
Subaru Legacy Estate Monoflex	09/09-		348 022 600 001	4062	90		24	9,76	80	1800			348 026 300 113	S	C2 --	-- D1	L1 H		H	75	B
Subaru Legacy Estate exc. Outback	09/03- 09/09		348 015 600 001	1782	120		20	10,1	85	2060			300 072 300 107 300 072 300 113	--	FRE -- FRE --	E1 -- E1 --	-- D1 L1 V		V		B
Subaru Legacy Estate exc. Outback discontinued model	09/03- 09/09		348 016 600 001	1855	120		20	10,1	85	2060			300 072 300 107 300 072 300 113	--	FRE -- FRE --	E1 -- E1 --	-- D1 L1 V		V		B
Subaru Legacy Estate Monoflex	09/09-		348 025 600 001	4063	90		23	9,76	80	1800			348 026 300 113	S	C2 --	-- D1	L1 H		H	75	B
Subaru Legacy Estate Monoflex	09/09-		348 026 600 001	4062	90		24	9,76	80	1800			348 026 300 113	S	C2 --	-- D1	L1 H		H	75	B
Subaru Legacy Outback	09/03- 09/09		348 034 600 001	3279	90		21	10,1	85	2000			300 072 300 107 300 072 300 113	--	FRE -- FRE --	E1 -- E1 --	-- D1 L1 V		V		B
Subaru Legacy Outback	09/03- 09/09		348 035 600 001	3289	90		21	10,1	85	2000			300 072 300 107 300 072 300 113	--	FRE -- FRE --	E1 -- E1 --	-- D1 L1 V		V		B



















Subaru









Subaru Legacy Outback Monoflex	09/09-		348 027 600 001	4073	120		23	10,39	80	2000		348 026 300 113	S	C2	--	--	D1	L1	H	75	B
Subaru Legacy Outback Monoflex	09/09-		348 028 600 001	4074	120		26	10,39	80	2000		348 026 300 113	S	C2	--	--	D1	L1	H	75	B
Subaru Trezia Monoflex	03/11-		335 413 600 001	4336	60		17,5	5,84	50	900		335 413 300 107 335 413 300 113	S S	FRE FRE	-- --	E1 E1	-- D1	-- L1	V V	105 105	
Subaru Trezia Monoflex	03/11-		335 414 600 001	4332	60		17,5	5,84	50	900		335 413 300 107 335 413 300 113	S S	FRE FRE	-- --	E1 E1	-- D1	-- L1	V V	105 105	
Subaru Tribeca B9	09/06-		348 018 600 001	2647	120		18	11,1	80	2000		300 210 300 107 300 210 300 113	-- --	A A	-- --	E1 E1	-- D1	-- L1	V V	90 90	B B
Subaru XV Monoflex	03/12-		348 037 600 001	4426	90		20	8,93	75	1600		348 037 300 113	S	A	--	E1	D	L1	V	90	B
Subaru XV KIT = towbar inc. electrical kit 13 pins Monoflex	03/12-		348 037 900 113	4426	90		22	8,93	75	1600		electrical kit 13 pins in the kit: 348 037 300 113	S	A	--	E1	D	L1	V	90	B

Suzuki Alto Monoflex	09-		332 306 600 001	4066	90	✂	15	4,2	50	650		332 306 300 113 332 306 300 157	S FRE -- S -- --	E1 D1 -- --	-- --	H H	60 45	L L
Suzuki Alto KIT = towbar inc. electrical kit 13 pins Monoflex	09-		332 306 900 113	4066	90	✂	17	4,2	50	650		electrical kit 13 pins in the kit. 332 306 300 113	S FRE --	E1 D1	--	H	60	L
Suzuki Grand Vitara 3 + 5 doors + XL7 (FT/GT/HT) Monoflex	98- 09/05		342 172 600 001	1976	60		19	10,43	80	1850		for vehicles with earth switched rear fog lights please order separately: 300 065 300 005 300 072 300 107 300 072 300 113	-- -- FRE -- FRE --	-- -- E1 -- E1 D1	-- -- -- V L1 V	H	15	B B B
Suzuki Grand Vitara 3 doors JT for vehicles with spare wheel on tailgate	10/05-		342 098 600 001	2297	90	✂	20	8,7	100	1600		342 099 300 113	S FRE --	E D1	L1	H	60	B
Suzuki Grand Vitara 3 doors JT exc. vehicles with spare wheel on the tailgate Monoflex	08/10-		341 022 600 001	3087	90	✂	23	8,87	75	1650		342 099 300 113	S FRE --	E D1	L1	H	60	B
Suzuki Grand Vitara 5 doors JT for vehicles with spare wheel on the tailgate Monoflex	04/05-		342 162 600 001	2933	90	✂	26	10,59	80	2000		342 099 300 113	S FRE --	E D1	L1	H	60	B
Suzuki Grand Vitara 5 doors JT exc. vehicles with spare wheel on the tailgate Monoflex	08/10-		341 020 600 001	4283	90	✂	23	10,85	85	2000		342 099 300 113	S FRE --	E D1	L1	H	60	B
Suzuki Grand Vitara 5 doors JT exc. vehicles with spare wheel on the tailgate Monoflex	08/10-		341 021 600 001	4250	90	✂	26	10,85	85	2000		342 099 300 113	S FRE --	E D1	L1	H	60	B
Suzuki Ignis 2x4 JSA (Japanese produced) inc. 4x4 Monoflex	00-03		342 161 600 001	1631	120	✂	20	6,01		1000		300 072 300 107 300 072 300 113	-- FRE -- -- FRE --	E1 -- E1 D1	-- L1	V V		B B









Suzuki










Suzuki Ignis SUV TSM (European produced) exc. Ignis Sport Monoflex	03-		348 032 600 001	2354	120		24	6,11	70	1000		300 072 300 107 300 072 300 113	-- --	FRE -- FRE --	E1 -- E1 D1	-- L1	V V	B B	
Suzuki Ignis SUV TSM (European produced) exc. Ignis Sport Monoflex discontinued model	03-		348 033 600 001	2354	120		24	6,11	70	1000		300 072 300 107 300 072 300 113	-- --	FRE -- FRE --	E1 -- E1 D1	-- L1	V V	B B	
Suzuki Jimny	98-		341 003 600 001	0907	60		26	7	75	1300		300 072 300 107 300 072 300 113	-- --	FRE -- FRE --	E1 -- E1 D1	-- L1	V V	B B	
Suzuki Kizashi Monoflex	09/10-		341 017 600 001	4340	60	✂	19	9,22	75	1700		300 078 300 113	--	FRE --	E1 D1	L1	V	B	
Suzuki Kizashi Monoflex	09/10-		341 018 600 001	4339	60	✂	21	9,22	75	1700		300 078 300 113	--	FRE --	E1 D1	L1	V	B	
Suzuki Samurai for vehicles with manufacturer's code VSE, exc. long chassis discontinued model	01/88-		342 040 600 001	0077	90		16	6,9	75	1400		300 061 300 107 300 061 300 113	-- --	C2 -- C2 --	-- D1	-- L1	H H	B B	
Suzuki SJ 410/413 for vehicles with manufacturer's code VSE, exc. long chassis discontinued model	-04/99		342 040 600 001	0077	90		16	6,9	75	1400		300 061 300 107 300 061 300 113	-- --	C2 -- C2 --	-- D1	-- L1	H H	B B	
Suzuki Splash only for 1,2 l gas engine Monoflex	08-		314 308 600 001	3838	90	✂	16	4,23	50	600		314 309 300 113 332 306 300 157	S S	C2 -- --	-- --	L1 --	V H	45 45	L
Suzuki Splash KIT = towbar inc. electrical kit 13 pins only for 1,2 l gas engine Monoflex	08-		314 308 900 113	3838	90	✂	18	4,23	50	600		electrical kit 13 pins in the kit. 314 309 300 113	S	C2 --	--	L1	V	45	
Suzuki Splash only for 1,2 l gas engine Monoflex	08-		314 309 600 001	3838	90	✂	16	4,23	50	600		314 309 300 113 332 306 300 157	S S	C2 -- --	-- --	L1 --	V H	45 45	L














Suzuki Splash KIT = towbar inc. electrical kit 13 pins only for 1,2 l gas engine Monoflex	08-		314 309 900 113	3838	90		18	4,23	50	600		electrical kit 13 pins in the kit: 314 309 300 113	S	C2	--		D1	L1	V	45		
Suzuki Swift exc. 4 WD	09/05- 10/10		341 006 600 001	2283	90		14	6	60	1000		342 099 300 113	S	FRE	--		D1	L1	H	60	B	
Suzuki Swift 2 + 4 WD exc. Sport not in combination with X-ITE spoiler kit Monoflex	10/10-		341 016 600 001	4295	90		21	6,19	60	1000		341 016 300 113	S	FRE	--		D1	L1	H		B	
Suzuki Swift 4x4 Monoflex	05- 07/07		342 163 600 001	3201	120		24	6,51	60	1100		342 099 300 113	S	FRE	--		D1	L1	H	60	B	
Suzuki SX4 exc. saloon, WRC	06/06-		306 276 600 001	2290	120		24	7,1	70	1200		306 520 300 113 306 520 300 157	S	FRE	--		D1	L1	H	45	B	
Suzuki SX4 KIT = towbar inc. electrical kit 13 pins exc. saloon, WRC	06/06-		306 276 900 113	2290	120		26	7,1	70	1200		electrical kit 13 pins in the kit: 306 520 300 113	S	FRE	--		D1	L1	H	45	B	
Suzuki SX4 exc. saloon, WRC	06/06-		306 277 600 001	2284	120		25	7,1	70	1200		306 520 300 113 306 520 300 157	S	FRE	--		D1	L1	H	45	B	
Suzuki SX4 KIT = towbar inc. electrical kit 13 pins exc. saloon, WRC	06/06-		306 277 900 113	2284	120		27	7,1	70	1200		electrical kit 13 pins in the kit: 306 520 300 113	S	FRE	--		D1	L1	H	45	B	
Suzuki Wagon R chassis no. 210001- Monoflex	10/02-		314 348 600 001	2246	120		20	6,04	80	1000		300 072 300 107 300 072 300 113	--	FRE	--		E1	--	V		B	
																						B

Toyota Avensis Estate KIT = towbar inc. electrical kit 13 pins T25	04/03- 01/09		335 308 600 001	1535	100	23	8,6	75	1550	additional cable for continuous plus (Please order additionally.) 335 025 300 113 electrical kit 13 pins in the kit: 335 304 300 113	-- -- -- S FRE --	-- -- -- E1 D1 L1 H	V	75	L
Toyota Avensis Estate T25 inc. models 07/06-	04/03- 01/09		335 304 600 001	1536	100	24	8,6	75	1550	additional cable for continuous plus 335 025 300 113 335 304 300 113	-- -- -- S FRE --	-- -- -- E1 D1 L1 H	V	75	L
Toyota Avensis Estate KIT = towbar inc. electrical kit 13 pins T25	04/03- 01/09		335 309 600 001	1536	100	25	8,6	75	1550	additional cable for continuous plus (Please order additionally.) 335 025 300 113 electrical kit 13 pins in the kit: 335 304 300 113	-- -- -- S FRE --	-- -- -- E1 D1 L1 H	V	75	L
Toyota Avensis Estate T27 Monoflex	01/09-		335 345 600 001	3930	60	24	10,28	80	2000	335 345 300 113	S FRE --	E1 D L1 V	V	105	
Toyota Avensis Estate KIT = towbar inc. electrical kit 13 pins T27 Monoflex	01/09-		335 345 900 113	3930	60	26	10,28	80	2000	electrical kit 13 pins in the kit: 335 345 300 113	S FRE --	E1 D L1 V	V	105	
Toyota Avensis Estate T27 Monoflex	01/09-		335 346 600 001	3933	60	24	10,28	80	2000	335 345 300 113	S FRE --	E1 D L1 V	V	105	
Toyota Avensis Estate KIT = towbar inc. electrical kit 13 pins T27 Monoflex	01/09-		335 346 900 113	3933	60	26	10,28	80	2000	electrical kit 13 pins in the kit: 335 345 300 113	S FRE --	E1 D L1 V	V	105	
Toyota Avensis Hatchback, 5 doors T25	04/03- 01/09		335 301 600 001	1521	90	24,5	8,6	75	1550	additional cable for continuous plus 335 025 300 113 335 303 300 113	-- -- -- S FRE --	-- -- -- E1 D1 L1 H	V	75	L








Toyota








Toyota Avensis Hatchback, 5 doors KIT = towbar inc. electrical kit 13 pins T25	04/03- 01/09		335 310 600 001	1521	90	25,5	8,6	75	1550	additional cable for continuous plus (Please order additionally.) 335 025 300 113 electrical kit 13 pins in the kit: 335 303 300 113	-- -- -- S FRE --	-- -- -- E1 D1 L1 H	V	75	L
Toyota Avensis Hatchback, 5 doors T25	04/03- 01/09		335 302 600 001	1537	90	27	8,6	75	1550	additional cable for continuous plus 335 025 300 113 335 303 300 113	-- -- -- S FRE --	-- D L V E1 D1 L1 H	V	75	L
Toyota Avensis Hatchback, 5 doors KIT = towbar inc. electrical kit 13 pins T25	04/03- 01/09		335 311 600 001	1537	90	28	8,6	75	1550	additional cable for continuous plus (Please order additionally.) 335 025 300 113 electrical kit 13 pins in the kit: 335 303 300 113	-- -- -- S FRE --	-- D L V E1 D1 L1 H	V	75	L
Toyota Avensis Hatchback, 5 doors T27 Monoflex	01/09-		335 343 600 001	3927	60	24	10,28	80	2000	335 345 300 113	S FRE --	E1 D L1 V	V	105	
Toyota Avensis Hatchback, 5 doors KIT = towbar inc. electrical kit 13 pins T27 Monoflex	01/09-		335 343 900 113	3927	60	26	10,28	80	2000	electrical kit 13 pins in the kit: 335 345 300 113	S FRE --	E1 D L1 V	V	105	
Toyota Avensis Hatchback, 5 doors T27 Monoflex discontinued model	01/09-		335 361 600 001	3927	60	24	10,28	80	2000	335 345 300 113	S FRE --	E1 D L1 V	V	105	
Toyota Avensis Hatchback, 5 doors T27 Monoflex	01/09-		335 344 600 001	3922	60	24	10,28	80	2000	335 345 300 113	S FRE --	E1 D L1 V	V	105	
Toyota Avensis Hatchback, 5 doors KIT = towbar inc. electrical kit 13 pins T27 Monoflex	01/09-		335 344 900 113	3922	60	26	10,28	80	2000	electrical kit 13 pins in the kit: 335 345 300 113	S FRE --	E1 D L1 V	V	105	

Toyota Avensis Saloon T25	04/03-01/09		335 301 600 001	1521	90	24,5	8,6	75	1550	additional cable for continuous plus 335 025 300 113 335 302 300 113	-- -- S FRE --	-- -- E1 D1	L V L1 H	75 45	L B
Toyota Avensis Saloon KIT = towbar inc. electrical kit 13 pins T25	04/03-01/09		335 306 600 001	1521	90	25,5	8,6	75	1550	additional cable for continuous plus (Please order additionally.) 335 025 300 113 electrical kit 13 pins in the kit: 335 302 300 113	-- -- S FRE --	-- -- E1 D1	L V L1 H	75 45	L B
Toyota Avensis Saloon T25	04/03-01/09		335 302 600 001	1537	90	27	8,6	75	1550	additional cable for continuous plus 335 025 300 113 335 302 300 113	-- -- S FRE --	-- -- E1 D1	L V L1 H	75 45	L B
Toyota Avensis Saloon, 4 doors T22	12/97-04/03		335 219 600 001	0519	60	15,3	8,3	75	1550		FRE -- FRE --	E1 -- E1 D1	-- V L1 V		B B
Toyota Avensis Saloon, 4 doors T27 Monoflex	02/09-		335 343 600 001	3927	60	24	10,28	80	2000		S FRE --	E1 D	L1 V	105	
Toyota Avensis Saloon, 4 doors KIT = towbar inc. electrical kit 13 pins T27 Monoflex	02/09-		335 343 900 113	3927	60	26	10,28	80	2000	electrical kit 13 pins in the kit: 335 345 300 113	S FRE --	E1 D	L1 V	105	
Toyota Avensis Saloon, 4 doors T27 Monoflex discontinued model	02/09-		335 361 600 001	3927	60	24	10,28	80	2000		S FRE --	E1 D	L1 V	105	
Toyota Avensis Saloon, 4 doors T27 Monoflex	02/09-		335 344 600 001	3922	60	24	10,28	80	2000		S FRE --	E1 D	L1 V	105	
Toyota Avensis Saloon, 4 doors KIT = towbar inc. electrical kit 13 pins T27 Monoflex	02/09-		335 344 900 113	3922	60	26	10,28	80	2000	electrical kit 13 pins in the kit: 335 345 300 113	S FRE --	E1 D	L1 V	105	









Toyota Corolla Saloon E12 discontinued model	07/02- 08/07		335 286 600 001	1348	70		17,6	7,9	55	1300		300 072 300 107 300 072 300 113	-- --	FRE -- FRE --	E1 -- E1 D1	-- L1	V V	B B
Toyota Corolla Saloon Monoflex	08/07-		335 371 600 001	3556	60		25	8,8	75	1600		300 072 300 107 300 072 300 113	-- --	FRE -- FRE --	E1 -- E1 D1	-- L1	V V	B B
Toyota Corolla Saloon Monoflex	08/07-		335 372 600 001	3556	60		25	8,8	75	1600		300 072 300 107 300 072 300 113	-- --	FRE -- FRE --	E1 -- E1 D1	-- L1	V V	B B
Toyota Corolla Verso E12	01/02- 04/04		335 290 600 001	1326	45		15,5	8,2	55	1400		300 072 300 107 300 072 300 113	-- --	FRE -- FRE --	E1 -- E1 D1	-- L1	V V	B B
Toyota Corolla Verso	04/04- 09		335 322 600 001	1799	70			8,6	75	1450		additional cable for continuous plus 335 025 300 113 335 323 300 113	-- S	-- FRE --	-- E1 D1	L L1	V H	L 45
Toyota Corolla Verso KIT = towbar inc. electrical kit 13 pins	04/04- 09		335 322 900 113	1799	70			8,6	75	1450		additional cable for continuous plus (Please order additionally.) 335 025 300 113 electrical kit 13 pins in the kit: 335 323 300 113	-- S	-- FRE --	-- E1 D1	L L1	V H	L 45
Toyota Corolla Verso	04/04- 09		335 323 600 001	1801	70			8,6	75	1450		additional cable for continuous plus 335 025 300 113 335 323 300 113	-- S	-- FRE --	-- E1 D1	L L1	V H	L 45
Toyota Corolla Verso KIT = towbar inc. electrical kit 13 pins	04/04- 09		335 323 900 113	1801	70			8,6	75	1450		additional cable for continuous plus (Please order additionally.) 335 025 300 113 electrical kit 13 pins in the kit: 335 323 300 113	-- S	-- FRE --	-- E1 D1	L L1	V H	L 45


















Toyota

Toyota Hiace (H12, H12G), inc. 4WD (H18, H18G), inc. facelift 07-	09/95-		335 230 600 001	0246	60	18,4	12	80	2000	additional cable for continuous plus 335 025 300 113 335 229 300 113	-- S	-- FRE	-- E1	D D1	L L1	V H	75 45	L B
Toyota Hiace KIT = towbar inc. electrical kit 13 pins (H12, H12G), inc. 4WD (H18, H18G), inc. facelift 07-	09/95-		335 356 600 001	0246	60	19,4	12	80	2000	additional cable for continuous plus (Please order additionally.) 335 025 300 113 electrical kit 13 pins in the kit: 335 229 300 113	-- S	-- FRE	-- E1	D D1	L L1	V H	75 45	L B
Toyota Hilux Double Cab, 4x4 inc. towball 329059600001 only vehicles with underrun guard official type ident no. of vehicle's type plate: ABE Nr. L642	05- 10/10		335 409 600 001	2203	30	10	13,8	120	2500	335 328 300 107 335 328 300 113	S S	FRE FRE	-- D1	-- L1	V V	75 75	B B	
Toyota Hilux Double Cab, 4x4 KIT = towbar inc. electrical kit 13 pins inc. towball 329059600001 only vehicles with underrun guard official type ident no. of vehicle's type plate: ABE Nr. L642	05- 10/10		335 409 900 107	2203	30	12	13,8	120	2500	electrical kit 7 pins in the kit: 335 328 300 107	S	FRE	--	--	V	75	B	
Toyota Hilux Double Cab, 4x4 KIT = towbar inc. electrical kit 13 pins inc. towball 329059600001 only vehicles with underrun guard official type ident no. of vehicle's type plate: ABE Nr. L642	05- 10/10		335 409 900 113	2203	30	12	13,8	120	2500	electrical kit 13 pins in the kit: 335 328 300 113	S	FRE	--	D1	L1	V	75	B
Toyota Hilux Double Cab, 4x4 inc. towball 329059600001 only vehicles with underrun guard official type ident no. of vehicle's type plate: e11*2007/46*0148	10/10-		335 408 600 001	2203	30	10	13,8	120	2500	335 328 300 107 335 328 300 113	S S	FRE FRE	-- D1	-- L1	V V	75 75	B B	
Toyota Hilux Double Cab, 4x4 KIT = towbar inc. electrical kit 13 pins inc. towball 329059600001 only vehicles with underrun guard official type ident no. of vehicle's type plate: e11*2007/46*0149	10/10-		335 408 900 107	2203	30	12	13,8	120	2500	electrical kit 7 pins in the kit: 335 328 300 107	S	FRE	--	--	V	75	B	












Toyota Hilux Double Cab, 4x4 KIT = towbar inc. electrical kit 13 pins inc. towball 329059600001 only vehicles with underrun guard official type ident no. of vehicle's type plate: e11*2007/46*0148	10/10-		335 408 900 113	2203	30	12	13,8	120	2500	electrical kit 13 pins in the kit: 335 328 300 113	S FRE --	--	D1	L1	V	75	B
Toyota Hilux Extra Cab, 4x4 inc. towball 329059600001 only vehicles with underrun guard official type ident no. of vehicle's type plate: ABE Nr. L643	05- 08/10		335 409 600 001	2203	30	10	13,8	120	2500	335 328 300 107 335 328 300 113	S FRE -- S FRE --	-- --	D1	L1	V	75	B
Toyota Hilux Extra Cab, 4x4 KIT = towbar inc. electrical kit 13 pins inc. towball 329059600001 only vehicles with underrun guard official type ident no. of vehicle's type plate: ABE Nr. L642	05- 08/10		335 409 900 107	2203	30	12	13,8	120	2500	electrical kit 7 pins in the kit: 335 328 300 107	S FRE --	--	--	--	V	75	B
Toyota Hilux Extra Cab, 4x4 KIT = towbar inc. electrical kit 13 pins inc. towball 329059600001 only vehicles with underrun guard official type ident no. of vehicle's type plate: ABE Nr. L643	05- 08/10		335 409 900 113	2203	30	12	13,8	120	2500	electrical kit 13 pins in the kit: 335 328 300 113	S FRE --	--	D1	L1	V	75	B
Toyota Hilux Extra Cab, 4x4 inc. towball 329059600001 only vehicles with underrun guard official type ident no. of vehicle's type plate: e11*2007/46*0149	08/10-		335 408 600 001	2203	30	10	13,8	120	2500	335 328 300 107 335 328 300 113	S FRE -- S FRE --	-- --	D1	L1	V	75	B
Toyota Hilux Extra Cab, 4x4 KIT = towbar inc. electrical kit 13 pins inc. towball 329059600001 only vehicles with underrun guard official type ident no. of vehicle's type plate: e11*2007/46*0149	08/10-		335 408 900 107	2203	30	12	13,8	120	2500	electrical kit 7 pins in the kit: 335 328 300 107	S FRE --	--	--	--	V	75	B
Toyota Hilux Extra Cab, 4x4 KIT = towbar inc. electrical kit 13 pins inc. towball 329059600001 only vehicles with underrun guard official type ident no. of vehicle's type plate: e11*2007/46*0149	08/10-		335 408 900 113	2203	30	12	13,8	120	2500	electrical kit 13 pins in the kit: 335 328 300 113	S FRE --	--	D1	L1	V	75	B











Toyota

Toyota Hilux Single Cab, 4x4 inc. towball 329059600001 only vehicles with underrun guard official type ident no. of vehicle's type plate: e11*2007/46*0148	10/10-		332 408 600 001	2203	30	10	13,8	120	2500	335 328 300 107 335 328 300 113	S FRE -- S FRE --	-- --	-- D1	-- L1	V V	75 75	B B
Toyota Hilux Single Cab, 4x4 KIT = towbar inc. electrical kit 13 pins inc. towball 329059600001 only vehicles with underrun guard official type ident no. of vehicle's type plate: e11*2007/46*0148	10/10-		335 408 900 107	2203	30	12	13,8	120	2500	electrical kit 7 pins in the kit: 335 328 300 107	S FRE --	--	--	V	75	B	
Toyota Hilux Single Cab, 4x4 KIT = towbar inc. electrical kit 13 pins inc. towball 329059600001 only vehicles with underrun guard official type ident no. of vehicle's type plate: e11*2007/46*0148	10/10-		335 408 900 113	2203	30	12	13,8	120	2500	electrical kit 13 pins in the kit: 335 328 300 113	S FRE --	--	D1	L1	V	75	B
Toyota Landcruiser J 9	08/96- 03		335 196 600 001	0135	90	26,5	15,4	130	3500	300 072 300 107 300 072 300 113	-- FRE -- -- FRE --	E1 -- E1 --	-- D1	-- L1	V V	B B	
Toyota Landcruiser J 9, towing bracket inc. towball 329062600001	08/96- 03		335 198 600 001	0139	90	28	15,4	130	3500	300 072 300 107 300 072 300 113	-- FRE -- -- FRE --	E1 -- E1 --	-- D1	-- L1	V V	B B	
Toyota Landcruiser J 10 (former no. 335240600001) discontinued model	03/98-		335 239 600 001	1396	>150	32,7	16,6	150	3500	300 072 300 107 300 072 300 113	-- FRE -- -- FRE --	E1 -- E1 --	-- D1	-- L1	V V	B B	
Toyota Landcruiser J 12	01/03- 10/09		335 294 600 001	1351	75	8,5	16,3	130	3500	300 210 300 107 300 210 300 113 discontinued model: 335 295 300 113	-- A -- -- A -- S C2 --	E1 -- E1 -- --	-- D1 D1	-- L1 L1	V V H	90 90 75	B B B
Toyota Landcruiser J 12 exc. vehicles with spare wheel under the vehicle ball approx. 40 mm deeper.	01/03- 10/09		335 295 600 001	1367	75	12,5	16,3	130	2800	300 210 300 107 300 210 300 113 discontinued model: 335 295 300 113	-- A -- -- A -- S C2 --	E1 -- E1 -- --	-- D1 D1	-- L1 L1	V V H	90 90 75	B B B













Toyota Landcruiser J 12 towing bracket for towballs and automatic bolt coupling matching towball: 32906260001	01/03- 10/09		335 299 600 001	1368	90		7	16,3	130	3500		300 210 300 107 300 210 300 113 discontinued model: 335 295 300 113	--	A --	E1 --	--	V	90	B
Toyota Landcruiser J 15 fitting towballs: 329062600001, 329042600001, 329072600001 Please order separately cover for bumper cutout at Toyota dealers.	11/09-		335 397 600 001	1368	90		16	15,9	130	3500		300 210 300 107 335 398 300 113	--	A --	E1 --	--	V	90	B
Toyota Landcruiser KIT = towbar inc. electrical kit 13 pins J 15 inc. towball: 329062600001 Please order separately cover for bumper cutout at Toyota dealers.	11/09-		335 397 900 113	1368	90		18	15,9	130	3500		electrical kit 13 pins in the kit: 335 398 300 113	S	A --	E1 D	L1 H	75	B	B
Toyota Landcruiser J 15 exc. vehicles with spare wheel under the vehicle Please order separately cover for bumper cutout at Toyota dealers.	11/09-		335 398 600 001	1367	90		17	15,9	130	3500		300 210 300 107 335 398 300 113	--	A --	E1 --	--	V	90	B
Toyota Landcruiser KIT = towbar inc. electrical kit 13 pins J 15 exc. vehicles with spare wheel under the vehicle Please order separately cover for bumper cutout at Toyota dealers.	11/09-		335 398 900 113	1367	90		19	15,9	130	3500		electrical kit 13 pins in the kit: 335 398 300 113	S	A --	E1 D	L1 H	75	B	B
Toyota Landcruiser V8 / 200 Monoflex	08-		335 359 600 001	4057	90		15	17,17	140	3500		-03/12 335 360 300 113	S	C2 --	--	D1	L1 H	75	B
Toyota Landcruiser V8 / 200 Monoflex	08-		335 360 600 001	4058	90		14	17,17	140	3500		-03/12 335 360 300 113	S	C2 --	--	D1	L1 H	75	B
Toyota Picnic	11/96-		335 208 600 001	0177	90		15,8	8,9	60	1500		300 061 300 107 300 061 300 113	--	C2 --	--	--	H	B	B
Toyota Previa inc. 4 x 4 discontinued model	09/90- 06/00		335 133 600 001	F 3878 NL	120		33,7	10,8	75	2000		300 061 300 107 300 061 300 113	--	C2 --	--	--	H	B	B



















Toyota

Toyota Previa discontinued model	07/00-		335 247 600 001	0970	>150	23	10,1	75	1600	300 072 300 107 300 072 300 113	-- --	FRE -- FRE --	E1 -- E1 D1	-- L1 V	V V	B B
Toyota Pro Ace	04/12-		306 331 600 001	2411	75	∞	22,2	122	2200	304 400 300 107 304 400 300 113	S CAN S CAN	C1 C1	E -- E D	-- L1 V	V V	B B
Toyota Pro Ace KIT = towbar inc. electrical kit 13 pins	04/12-		306 331 900 113	2411	75	∞	22,2	122	2200	electrical kit 13 pins in the kit: 304 400 300 113	S CAN	C1	E D	L1 V	V	B
Toyota Pro Ace discontinued model	04/12-		306 332 600 001	2486	75	∞	22,2	122	2200	304 400 300 107 304 400 300 113	S CAN S CAN	C1 C1	E -- E D	-- L1 V	V V	B B
Toyota Pro Ace	04/12-		306 333 600 001	2487	75	∞	22,2	122	2200	304 400 300 107 304 400 300 113	S CAN S CAN	C1 C1	E -- E D	-- L1 V	V V	B B
Toyota Pro Ace KIT = towbar inc. electrical kit 13 pins	04/12-		306 333 900 113	2487	75	∞	22,2	122	2200	electrical kit 13 pins in the kit: 304 400 300 113	S CAN	C1	E D	L1 V	V	B
Toyota RAV4 FunCruiser, 3 and 5 doors and convertible	06/94- 05/00		335 194 600 001	0072	60	16,7	8,8	75	1745	300 061 300 107 300 061 300 113	-- --	C2 -- C2 --	-- D1	-- L1 H	H H	B B
Toyota RAV4 not with rear step	06/00- 02/06		335 246 600 001	0905	>150	∞	9,8	75	2000	335 250 300 113 335 250 300 157	S S	FRE -- --	-- --	D1 --	H H	60 45
Toyota RAV4 not with rear step	06/00- 02/06		335 250 600 001	0927	>150	21	9,8	75	2000	335 250 300 113 335 250 300 157	S S	FRE -- --	-- --	D1 --	H H	60 45
Toyota RAV4 only for Executive and/or vehicles without spare wheel on the tailgate	03/06-		335 324 600 001	2157	90	33,5	10,4	90	2000	335 251 300 107 335 251 300 113 335 251 300 157 permanent plus 335 251 300 183	S S S S	FRE -- FRE -- -- --	E1 -- E1 D1 -- --	-- L1 H -- --	H H H V	60 60 45 60
Toyota RAV4 KIT = towbar inc. electrical kit 13 pins only for Executive and/or vehicles without spare wheel on the tailgate	03/06-		335 347 600 001	2157	90	35	10,4	90	2000	electrical kit 13 pins in the kit: 335 251 300 113 permanent plus (Please order additionally.) 335 251 300 183	S	FRE --	E1 D1	L1 H	H	60
											S	--	--	D L	V	60


Toyota RAV4 only for Executive and/or vehicles without spare wheel on the tailgate discontinued model	03/06-		335 329 600 001	2254	100	35	10,4	90	2000	335 251 300 107	S	FRE --	E1 --	--	H	60	B	
										335 251 300 113	S	FRE --	E1 D1	L1	H	60	B	
										335 251 300 157 permanent plus	S	--	--	--	H	45	L	
										335 251 300 183	S	--	--	D	L	V	60	B
Toyota RAV4 all models	03/06-		335 325 600 001	2158	90	36	10,4	90	2000	335 251 300 107	S	FRE --	E1 --	--	H	60	B	
										335 251 300 113	S	FRE --	E1 D1	L1	H	60	B	
										335 251 300 157 permanent plus	S	--	--	--	H	45	L	
										335 251 300 183	S	--	--	D	L	V	60	B
Toyota RAV4 KIT = towbar inc. electrical kit 13 pins all models	03/06-		335 348 600 001	2158	90	37	10,4	90	2000	electrical kit 13 pins in the kit:								
										335 251 300 113 permanent plus (Please order additionally.)	S	FRE --	E1 D1	L1	H	60	B	
										335 251 300 183	S	--	--	D	L	V	60	B
Toyota RAV4	02/13-		335 418 600 001				10,9	80	2000	335 419 300 107	S							
										335 419 300 113	S							
Toyota RAV4 KIT = towbar inc. electrical kit 13 pins	02/13-		335 418 900 113				10,9	80	2000	electrical kit 13 pins in the kit:								
										335 419 300 113	S							
Toyota RAV4	02/13-		335 419 600 001	3551			10,9	80	2000	335 419 300 107	S							
										335 419 300 113	S							
Toyota RAV4 KIT = towbar inc. electrical kit 13 pins	02/13-		335 419 900 113	3551			10,9	80	2000	electrical kit 13 pins in the kit:								
										335 419 300 113	S							
Toyota Urban Cruiser, 2 WD	03/09-		335 366 600 001	3116	90	21	6	50	980	335 393 300 113	S	A --	E1 D	L1	V	120	B	
Toyota Urban Cruiser, 2 WD	03/09-		335 368 600 001	3117	90	21	6	50	980	335 393 300 113	S	A --	E1 D	L1	V	120	B	
Toyota Urban Cruiser, 2 WD	03/09-		335 367 600 001	2939	90	22	6	50	980	335 393 300 113	S	A --	E1 D	L1	V	120	B	


Toyota


Toyota Urban Cruiser, 4 WD	03/09-		335 392 600 001	3114	90	20	6	50	980		335 393 300 113	S	A	--	E1	D	L1	V	120	B
Toyota Urban Cruiser, 4 WD	03/09-		335 394 600 001	3115	90	20	6	50	980		335 393 300 113	S	A	--	E1	D	L1	V	120	B
Toyota Urban Cruiser, 4 WD	03/09-		335 393 600 001	2990	90	20,5	6	50	980		335 393 300 113	S	A	--	E1	D	L1	V	120	B
Toyota Verso replaced by: 335400600001 discontinued model	04/09-		335 363 600 001	3110	90		9	55	1430		335 411 300 107 335 411 300 113	S FRE -- S FRE --	-- --	-- --	-- D1	-- L1	-- L1	V V	120 120	B B
Toyota Verso	04/09-		335 400 600 001	3537	90		9,3	60	1500		335 411 300 107 335 411 300 113	S FRE -- S FRE --	-- --	-- --	-- D1	-- L1	-- L1	V V	120 120	B B
Toyota Verso KIT = towbar inc. electrical kit 13 pins replaced by: 335400900113 discontinued model	04/09-		335 363 900 113	3110	90		9	55	1430		electrical kit 13 pins in the kit: 335 411 300 113	S FRE --	--	--	--	D1	L1	V	120	B
Toyota Verso KIT = towbar inc. electrical kit 13 pins	04/09-		335 400 900 113	3537	90		9,3	60	1500		electrical kit 13 pins in the kit: 335 411 300 113	S FRE --	--	--	--	D1	L1	V	120	B
Toyota Verso replaced by: 335421600001 discontinued model	04/09-		335 411 600 001	3203	90	20,5	9	55	1430		335 411 300 107 335 411 300 113	S FRE -- S FRE --	-- --	-- --	-- D1	-- L1	-- L1	V V	120 120	B B
Toyota Verso	04/09-		335 421 600 001	3448	90		9,3	60	1500		335 411 300 107 335 411 300 113	S FRE -- S FRE --	-- --	-- --	-- D1	-- L1	-- L1	V V	120 120	B B
Toyota Verso KIT = towbar inc. electrical kit 13 pins replaced by: 335421900113 discontinued model	04/09-		335 411 900 113	3203	90	22,5	9	55	1430		electrical kit 13 pins in the kit: 335 411 300 113	S FRE --	--	--	--	D1	L1	V	120	B
Toyota Verso KIT = towbar inc. electrical kit 13 pins	04/09-		335 421 900 113	3448	90		9,3	60	1500		electrical kit 13 pins in the kit: 335 411 300 113	S FRE --	--	--	--	D1	L1	V	120	B
Toyota Verso S Monoflex	01/11-		335 413 600 001	4336	60	⌘ 17,5	5,84	50	900		335 413 300 107 335 413 300 113	S FRE -- S FRE --	-- --	-- --	-- E1	-- D1	-- L1	V V	105 105	

Toyota Verso S KIT = towbar inc. electrical kit 13 pins Monoflex	01/11-		335 413 900 113	4336	60		19,5	5,84	50	900		electrical kit 13 pins in the kit: 335 413 300 113	S FRE --	E1 D1	L1	V	105
Toyota Verso S Monoflex	01/11-		335 414 600 001	4332	60		17,5	5,84	50	900		335 413 300 107 335 413 300 113	S FRE -- S FRE --	E1 -- E1 D1	-- L1	V V	105 105
Toyota Verso S KIT = towbar inc. electrical kit 13 pins Monoflex	01/11-		335 414 900 113	4332	60		19,5	5,84	50	900		electrical kit 13 pins in the kit: 335 413 300 113	S FRE --	E1 D1	L1	V	105
Toyota Yaris inc. (TS) T- Sport	99- 01/06		335 280 600 001	0997	105		15	6	50	1000		300 072 300 107 300 072 300 113	-- FRE -- -- FRE --	E1 -- E1 D1	-- L1	V V	B B
Toyota Yaris exc. TS	01/06- 10/11		335 350 600 001	2342	60		17	6,8	75	1200		335 411 300 107 335 411 300 113	S FRE -- S FRE --	-- --	-- D1	V L1	120 120
Toyota Yaris exc. TS discontinued model	01/06- 10/11		335 327 600 001	2164	60		18	6,8	75	1200		335 411 300 107 335 411 300 113	S FRE -- S FRE --	-- --	-- D1	V L1	120 120
Toyota Yaris Monoflex	10/11-		335 382 600 001	4422	60		17	6,7	50	1150		335 383 300 107 335 383 300 113	S FRE -- S FRE --	E1 -- E1 D1	-- L1	V V	120 120
Toyota Yaris KIT = towbar inc. electrical kit 13 pins Monoflex	10/11-		335 382 900 113	4422	60		19	6,7	50	1150		electrical kit 13 pins in the kit: 335 383 300 113	S FRE --	E1 D1	L1	V	120
Toyota Yaris	01/06-		335 383 600 001	3434	75		18,7	6,8	50	1200		335 383 300 107 335 383 300 113	S FRE -- S FRE --	E1 -- E1 D1	-- L1	V V	120 120
Toyota Yaris KIT = towbar inc. electrical kit 13 pins	10/11-		335 383 900 113	3434	75		20,7	6,8	50	1200		electrical kit 13 pins in the kit: 335 383 300 113	S FRE --	E1 D1	L1	V	120
Toyota Yaris Verso	99- 01/06		335 281 600 001	0996	105		19,5	6,1	50	1000		300 072 300 107 300 072 300 113	-- FRE -- -- FRE --	E1 -- E1 D1	-- L1	V V	B B



Volkswagen










VW Amarok for vehicles with bumper with integrated step replaced by: 321831600001 discontinued model		08/10	321 842 600 001	3398	3,9	14,6	120	2800	discontinued model: without preliminary setup -12/11	S	CAN	C	E	--	--	V	180	L
									321 702 300 107 discontinued model: without preliminary setup -12/11	S	CAN	C	E	D	--	V	180	L
									321 702 300 113 all years of construction with preliminary setup	S	CAN	C	E	D	--	V	180	L
									321 704 300 107 all years of construction with preliminary setup	S	CAN	C	E	--	--	H		B
									321 704 300 113 all years of construction without preliminary setup	S	CAN	C	E	D	--	H		B
									321 705 300 107 all years of construction without preliminary setup	S	CAN	C	E	--	--	V		L
									321 705 300 107 all years of construction without preliminary setup	S	CAN	C	E	--	--			L
									321 705 300 113 all years of construction without preliminary setup	S	CAN	C	E	D	--	V		L
									321 705 300 113 all years of construction without preliminary setup	S	CAN	C	E	D	--	V		L

VW Amarok for vehicles with reinforced bumper with integrated step		08/10-	321 831 600 001	3398	30	3,9	15,7 130	3200	discontinued model: without preliminary setup -12/11 321 702 300 107 discontinued model: without preliminary setup -12/11 321 702 300 113 all years of construction with preliminary setup 321 704 300 107 all years of construction with preliminary setup 321 704 300 113 all years of construction without preliminary setup 321 705 300 107 all years of construction without preliminary setup 321 705 300 113	S CAN C S CAN C S CAN C S CAN C S CAN C S CAN C S CAN C S CAN C S CAN C S CAN C	E E E E E E E E E	-- D -- -- D -- -- D -- D	-- -- -- -- -- -- -- -- --	V V V V V V V V V	180 180 	L L B B L L
--	---	--------	------------------------	------	----	-----	----------	------	--	--	---	--	--	---	--	--







VW Amarok for vehicles with bumper with integrated step towing bracket inc. towball Monoflex	08/10- 	321 835 600 001	4298	30	10	15,7 130	3200	discontinued model: without preliminary setup -12/11	S	CAN	C	E	--	--	V	180	L
								321 702 300 107 discontinued model: without preliminary setup -12/11	S	CAN	C	E	D	--	V	180	L
								321 702 300 113 all years of construction with preliminary setup	S	CAN	C	E	D	--	V	180	L
								321 704 300 107 all years of construction with preliminary setup	S	CAN	C	E	--	--	H		B
								321 704 300 113 all years of construction without preliminary setup	S	CAN	C	E	D	--	H		B
								321 705 300 107 all years of construction without preliminary setup	S	CAN	C	E	--	--	V		L
								321 705 300 107 all years of construction without preliminary setup	S	CAN	C	E	D	--	V		L
								321 705 300 113 all years of construction without preliminary setup	S	CAN	C	E	D	--	V		L
								321 705 300 113 all years of construction without preliminary setup	S	CAN	C	E	D	--	V		L






Volkswagen

VW Amarok for vehicles without bumper universal HGV towing bracket inc. towball 329059600001 swap system + coupling system possible	08/10-		321 794 600 001	3125	28,5	14,3	100	2800	discontinued model: without preliminary setup -12/11 321 702 300 107 discontinued model: without preliminary setup -12/11 321 702 300 113 all years of construction with preliminary setup 321 704 300 107 all years of construction with preliminary setup 321 704 300 113 all years of construction without preliminary setup 321 705 300 107 all years of construction without preliminary setup 321 705 300 113	S CAN C	E	--	V	180	L																									
																VW Beetle inc. convertible exc. vehicles with park distance control, exc. Rsi	98-09/11		321 468 600 001	0646	>150	∞	17,8	8,3	75	1500	300 073 300 113	--	FRE --	E1	D1	--	L1	V	90	B				
																	VW Beetle is not permitted to tow by manufacturer.		10/11-																					
																			VW Bora Estate exc. Syncro - 4-Motion	10/98-	305 222 600 001	0867	90	∞	17,5	8,9	75	1650	321 457 300 107 321 457 300 113	S FRE -- S FRE --	E E	-- D1	-- L1	H H	60 60	B B				
																				10/98-	305 222 900 113	0867	90	∞	19,5	8,9	75	1650	electrical kit 13 pins in the kit: 321 457 300 113	S FRE --	E	D1	L1	H	60	B				






VW Bora Estate exc. Syncro - 4-Motion	10/98-		305 223 600 001	0859	90	✂ 16,8	8,9 75	1650		321 457 300 107 321 457 300 113	S FRE -- S FRE --	E -- E D1	-- L1 H	H 60	B 60
VW Bora Estate KIT = towbar inc. electrical kit 13 pins exc. Syncro - 4-Motion	10/98-		305 223 900 113	0859	90	✂ 18,8	8,9 75	1650		electrical kit 13 pins in the kit: 321 457 300 113	S FRE --	E D1	L1 H	60	B
VW Bora Estate 4-Motion exc. V6	10/97-		305 277 600 001	0973	120	17	8,9 75	1650		321 457 300 107 321 457 300 113	S FRE -- S FRE --	E -- E D1	-- L1 H	H 60	B 60
VW Bora Saloon exc. Syncro - 4-Motion	10/98-		305 222 600 001	0867	90	✂ 17,5	8,9 75	1650		321 465 300 107 321 465 300 113	S FRE -- S FRE --	E -- E D1	-- L1 H	H 60	B 60
VW Bora Saloon KIT = towbar inc. electrical kit 13 pins exc. Syncro - 4-Motion	10/98-		321 457 900 113	0867	90	✂ 19,5	8,9 75	1650		electrical kit 13 pins in the kit: 321 465 300 113	S FRE --	E D1	L1 H	60	B
VW Bora Saloon exc. Syncro - 4-Motion	10/98-		305 223 600 001	0859	90	✂ 16,8	8,9 75	1650		321 465 300 107 321 465 300 113	S FRE -- S FRE --	E -- E D1	-- L1 H	H 60	B 60
VW Bora Saloon KIT = towbar inc. electrical kit 13 pins exc. Syncro - 4-Motion	10/98-		321 465 900 113	0859	90	✂ 18,8	8,9 75	1650		electrical kit 13 pins in the kit: 321 465 300 113	S FRE --	E D1	L1 H	60	B
VW Caddy 4x4 / 4-Motion inc. bumper bracket	10/08-		321 768 600 001	2793	75	19,5	8,9 80	1500		09/10- 321 554 300 107 09/10- 321 554 300 113 -08/10 321 557 300 107 -08/10 321 557 300 113	S CAN C S CAN C S CAN C S CAN C	E -- E D E -- E D	-- L1 V -- L1 V	V 105 V 105	L L L L
VW Caddy 4x4 / 4-Motion inc. bumper carrier	10/08-		321 837 600 001	3258	75	20,5	8,9 80	1500		09/10- 321 554 300 107 09/10- 321 554 300 113 -08/10 321 557 300 107 -08/10 321 557 300 113	S CAN C S CAN C S CAN C S CAN C	E -- E D E -- E D	-- L1 V -- L1 V	V 105 V 105	L L L L









Volkswagen

VW Caddy Cross all years of construction inc. bumper carrier 5 seats: inc. vehicles with gas drive 7 seats: exc. vehicles with gas drive	03/13-		321 661 600 001	1118	75	19,5	9,4	80	1650	321 554 300 107 321 554 300 113	S CAN S CAN	C C	E E	-- D	-- L1	V V	105 105	L L
VW Caddy Cross KIT = towbar inc. electrical kit 13 pins all years of construction inc. bumper carrier 5 seats: inc. vehicles with gas drive 7 seats: exc. vehicles with gas drive	03/13-		321 554 900 113	1118	75	21,5	9,4	80	1650	electrical kit 13 pins in the kit: 321 554 300 113	S CAN	C	E	D	L1	V	105	L
VW Caddy Cross all years of construction inc. bumper carrier 5 seats: inc. vehicles with gas drive 7 seats: exc. vehicles with gas drive SIARR	03/13-		321 758 600 001	5401	120	19	9,4	80	1650	321 554 300 107 321 554 300 113	S CAN S CAN	C C	E E	-- D	-- L1	V V	105 105	L L
VW Caddy Cross all years of construction inc. bumper carrier 5 seats: inc. vehicles with gas drive 7 seats: exc. vehicles with gas drive	03/13-		321 673 600 001	1415	75	18	9,4	80	1650	321 554 300 107 321 554 300 113	S CAN S CAN	C C	E E	-- D	-- L1	V V	105 105	L L
VW Caddy Cross KIT = towbar inc. electrical kit 13 pins all years of construction inc. bumper carrier 5 seats: inc. vehicles with gas drive 7 seats: exc. vehicles with gas drive	03/13-		321 660 900 113	1415	75	20	9,4	80	1650	electrical kit 13 pins in the kit: 321 554 300 113	S CAN	C	E	D	L1	V	105	L
VW Caddy III / Caddy Life all years of construction inc. bumper carrier 5 seats: inc. vehicles with gas drive 7 seats: exc. vehicles with gas drive	02/04-		321 661 600 001	1118	75	19,5	9,4	80	1650	09/10- 321 554 300 107 09/10- 321 554 300 113 -08/10 321 557 300 107 -08/10 321 557 300 113	S CAN S CAN S CAN S CAN	C C C C	E E E E	-- D D D	-- L1 L1 L1	V V V V	105 105 105 105	L L L L








VW Caddy III / Caddy Life KIT = towbar inc. electrical kit 13 pins all years of construction inc. bumper carrier 5 seats: inc. vehicles with gas drive 7 seats: exc. vehicles with gas drive	02/04- 08/10		321 661 900 113	1118	75	22,5	9,4	80	1650	electrical kit 13 pins in the kit: 321 557 300 113	S CAN	C	E	D	L1	V	105	L
VW Caddy III / Caddy Life KIT = towbar inc. electrical kit 13 pins all years of construction inc. bumper carrier 5 seats: inc. vehicles with gas drive 7 seats: exc. vehicles with gas drive	09/10-		321 554 900 113	1118	75	21,5	9,4	80	1650	electrical kit 13 pins in the kit: 321 554 300 113	S CAN	C	E	D	L1	V	105	L
VW Caddy III / Caddy Life all years of construction inc. bumper carrier 5 seats: inc. vehicles with gas drive 7 seats: exc. vehicles with gas drive SIARR	02/04-		321 758 600 001	5401	120	19	9,4	80	1650	09/10- 321 554 300 107 09/10- 321 554 300 113 -08/10 321 557 300 107 -08/10 321 557 300 113	S CAN	C	E	--	--	V	105	L
VW Caddy III / Caddy Life all years of construction exc. vehicles with gas drive bracket for bumper 921661616001 inc. Please order at VW dealers: receptor box for detachable ball 2K0 804 969.	02/04-		321 673 600 001	1415	75	18	9,4	80	1650	09/10- 321 554 300 107 09/10- 321 554 300 113 -08/10 321 557 300 107 -08/10 321 557 300 113	S CAN	C	E	--	--	V	105	L
VW Caddy III / Caddy Life KIT = towbar inc. electrical kit 13 pins all years of construction exc. vehicles with gas drive bracket for bumper 921661616001 inc. Please order at VW dealers: receptor box for detachable ball 2K0 804 969.	02/04- 08/10		321 659 900 113	1415	75	19	9,4	80	1650	electrical kit 13 pins in the kit: 321 557 300 113	S CAN	C	E	D	L1	V	105	L





Volkswagen

VW Caddy III / Caddy Life KIT = towbar inc. electrical kit 13 pins all years of construction exc. vehicles with gas drive bracket for bumper 921661616001 inc. Please order at VW dealers. receptor box for detachable ball 2K0 804 969.	09/10-		321 660 900 113	1415	75	20	9,4	80	1650	electrical kit 13 pins in the kit: 321 554 300 113	S CAN	C	E	D	L1	V	105	L
VW Caddy Maxi all years of construction inc. bumper carrier 5 seats: inc. vehicles with gas drive 7 seats: exc. vehicles with gas drive	10/07-		321 661 600 001	1118	75	19,5	9,4	80	1650	09/10- 321 554 300 107 09/10- 321 554 300 113 -08/10 321 557 300 107 -08/10 321 557 300 113	S CAN	C	E	--	--	V	105	L
VW Caddy Maxi KIT = towbar inc. electrical kit 13 pins all years of construction inc. bumper carrier 5 seats: inc. vehicles with gas drive 7 seats: exc. vehicles with gas drive	10/07- 08/10		321 661 900 113	1118	75	22,5	9,4	80	1650	electrical kit 13 pins in the kit: 321 557 300 113	S CAN	C	E	D	L1	V	105	L
VW Caddy Maxi KIT = towbar inc. electrical kit 13 pins all years of construction inc. bumper carrier 5 seats: inc. vehicles with gas drive 7 seats: exc. vehicles with gas drive	09/10-		321 554 900 113	1118	75	21,5	9,4	80	1650	electrical kit 13 pins in the kit: 321 554 300 113	S CAN	C	E	D	L1	V	105	L
VW Caddy Maxi all years of construction inc. bumper carrier 5 seats: inc. vehicles with gas drive 7 seats: exc. vehicles with gas drive SIARR	10/07-		321 758 600 001	5401	120	19	9,4	80	1650	09/10- 321 554 300 107 09/10- 321 554 300 113 -08/10 321 557 300 107 -08/10 321 557 300 113	S CAN	C	E	--	--	V	105	L
											S CAN	C	E	D	L1	V	105	L
											S CAN	C	E	D	L1	V	105	L
											S CAN	C	E	--	--	V	105	L
											S CAN	C	E	D	L1	V	105	L

















VW Caddy Maxi all years of construction exc. vehicles with gas drive bracket for bumper 921661616001 inc. Please order at VW dealers: receptor box for detachable ball 2K0 804 969.	10/07-		321 673 600 001	1415	75	18	9,4	80	1650	09/10-	S	CAN	C	E	--	V	105	L	
										321 554 300 107	S	CAN	C	E	D	L1	V	105	L
										09/10-	S	CAN	C	E	--	V	105	L	
										321 557 300 107	S	CAN	C	E	--	V	105	L	
321 557 300 113	S	CAN	C	E	D	L1	V	105	L										
VW Caddy Maxi KIT = towbar inc. electrical kit 13 pins all years of construction exc. vehicles with gas drive bracket for bumper 921661616001 inc. Please order at VW dealers: receptor box for detachable ball 2K0 804 969.	10/07- 08/10		321 659 900 113	1415	75	19	9,4	80	1650	electrical kit 13 pins in the kit:	S	CAN	C	E	D	L1	V	105	L
										321 557 300 113	S	CAN	C	E	D	L1	V	105	L
VW Caddy Maxi KIT = towbar inc. electrical kit 13 pins all years of construction exc. vehicles with gas drive bracket for bumper 921661616001 inc. Please order at VW dealers: receptor box for detachable ball 2K0 804 969.	09/10-		321 660 900 113	1415	75	20	9,4	80	1650	electrical kit 13 pins in the kit:	S	CAN	C	E	D	L1	V	105	L
										321 554 300 113	S	CAN	C	E	D	L1	V	105	L
VW Caddy Van	11/95- 12/03		321 437 600 001	0193	120	13,4	6,7	50	1100	S	C2	--	--	--	H	45	L		
										344 503 300 107	S	C2	--	--	D1	--	H	45	L
VW CC	12-		321 821 600 001	3095	90	17,5	11,3	90	2200	S	CAN	C	E	--	V	105	L		
										321 600 300 107	S	CAN	C	E	D	L1	V	105	L
										321 600 300 153	S	CAN	C	E	D	L1	V	105	R
VW CC KIT = towbar inc. electrical kit 13 pins	12-		321 821 900 113	3095	90	19,5	11,3	90	2200	electrical kit 13 pins in the kit:	S	CAN	C	E	D	L1	V	105	L
										321 600 300 113	S	CAN	C	E	D	L1	V	105	L
VW CC	12-		321 822 600 001	3291	90	17,5	11,3	90	2200	S	CAN	C	E	--	V	105	L		
										321 600 300 113	S	CAN	C	E	D	L1	V	105	L
										321 600 300 153	S	CAN	C	E	D	L1	V	105	R
VW CC	12-		321 823 600 001	3205	90	20	11,3	90	2200	S	CAN	C	E	--	V	105	L		
										321 600 300 107	S	CAN	C	E	D	L1	V	105	L
										321 600 300 153	S	CAN	C	E	D	L1	V	105	R

Volkswagen

VW CC KIT = towbar inc. electrical kit 13 pins	12-		321 823 900 113	3205	90	↘	22	11,3	90	2200	electrical kit 13 pins in the kit: 321 600 300 113	S CAN	E	D	L1	V	105	L
VW CC KIT = towbar inc. electrical kit 13 pins	12-		321 823 900 153	3205	90	↘	22	11,3	90	2200	electrical kit 13 pins in the kit: 321 600 300 153	S CAN	E	D	L1	V	105	R
VW CC KIT = towbar inc. electrical kit 13 pins	12-		321 808 600 001	3431	90	↘	23	11,3	95	2200	electrical kit 13 pins in the kit: 3218083xxxxx	S CAN	E	D	L1	V	90	R
VW CC KIT = towbar inc. electrical kit 13 pins	12-		321 824 600 001	3431	90	↘	23	11,3	95	2200	electrical kit 13 pins in the kit: 3218243xxxxx	S CAN	E	D	L1	V	90	L
VW Crafter Chassis Cab types 30/35/38 Vehicles with 3,0 and 3,5 t max. total weight, increase to 3,8 t max. total weight is possible exc. vehicles with underrun guard towball: 329059600001 (order separately)	04/06-		313 377 600 001	2201	90		20	18,1	150	3500	313 105 300 107 313 105 300 113 vehicles with electrical preparation: 321 106 300 113	S CAN S CAN	E E	-- D1	-- --	V V	90 90	B B
VW Crafter Chassis Cab KIT = towbar inc. electrical kit 13 pins types 30/35/38 Vehicles with 3,0 and 3,5 t max. total weight, increase to 3,8 t max. total weight is possible exc. vehicles with underrun guard towball 329059600001 included	04/06-		313 377 900 113	2201	90		22	18,1	150	3500	electrical kit 13 pins in the kit: 313 105 300 113	S CAN	E	D1	--	V	90	B
VW Crafter Chassis Cab types 46 and 50 Vehicles with 5,0 t max. total weight, reduction to 4,6 t max. total weight is possible wheelbase: 3665 + 4325 mm towball: 329059600001 (order separately) if there is an underrun guard mounted, please change into VW no. 2E3 805 721 A.	04/06-		313 275 600 001	2253	120		18	20,2	150	3500	313 105 300 107 313 105 300 113 vehicles with electrical preparation: 321 106 300 113	S CAN S CAN	E E	-- D1	-- --	V V	90 90	B B














<p>VW Crafter Chassis Cab KIT = towbar inc. electrical kit 13 pins types 46 and 50 Vehicles with 5,0 t max. total weight, reduction to 4,6 t max. total weight is possible wheelbase: 3665 + 4325 mm inc. towball inc.: 329059600001 If there is an underrun guard mounted, please change into VW no. 2E3 805 721 A.</p>	<p>04/06-</p> 	<p>313 275 900 113</p>	<p>2253</p>	<p>120</p>	<p>20</p>	<p>20,2</p>	<p>150</p>	<p>3500</p>	<p>electrical kit 13 pins in the kit: 313 105 300 113</p>	<p>S CAN C</p>	<p>E</p>	<p>D1</p>	<p>--</p>	<p>V</p>	<p>90 B</p>
<p>VW Crafter Van types 30/35/38 Vehicles with 3,0 and 3,5 t max. total weight, increase to 3,8 t max. total weight is possible For vehicles with integrated step device in the bumper the middle part of the outer bumper must be exchanged (Please order separately at Volkswagen dealers.) suitable towball: 329059600001 Step VW is not utilisable.</p>	<p>04/06-</p> 	<p>313 376 600 001</p>	<p>2200</p>	<p>120</p>	<p>20</p>	<p>18,1</p>	<p>150</p>	<p>3500</p>	<p>313 105 300 107 313 105 300 113 vehicles with electrical preparation: 321 106 300 113</p>	<p>S CAN C S CAN C S CAN C</p>	<p>E E E</p>	<p>-- D1 D</p>	<p>-- -- --</p>	<p>V V V</p>	<p>90 B 90 B 45 B</p>
<p>VW Crafter Van KIT = towbar inc. electrical kit 13 pins types 30/35/38 Vehicles with 3,0 and 3,5 t max. total weight, increase to 3,8 t max. total weight is possible For vehicles with integrated step device in the bumper the middle part of the outer bumper must be exchanged (Please order separately at Volkswagen dealers.) Inc. towball: 329059600001 Step VW is not utilisable.</p>	<p>04/06-</p> 	<p>313 376 900 113</p>	<p>2200</p>	<p>120</p>	<p>22</p>	<p>18,1</p>	<p>150</p>	<p>3500</p>	<p>electrical kit 13 pins in the kit: 313 105 300 113</p>	<p>S CAN C</p>	<p>E</p>	<p>D1</p>	<p>--</p>	<p>V</p>	<p>90 B</p>
<p>VW Crafter Van types 46 and 50 and 509-524 Vehicles with 5,0 t max. total weight, reduction to 4,6 t max. total weight is possible wheelbase: 3665 mm For vehicles with integrated step device in the bumper the middle part of the outer bumper must be exchanged (Please order separately at Volkswagen dealers.) towball: 329059600001 (order separately) Step VW is not utilisable.</p>	<p>04/06-</p> 	<p>313 272 600 001</p>	<p>2235</p>	<p>120</p>	<p>21</p>	<p>20,2</p>	<p>150</p>	<p>3500</p>	<p>313 105 300 107 313 105 300 113 vehicles with electrical preparation: 321 106 300 113</p>	<p>S CAN C S CAN C S CAN C</p>	<p>E E E</p>	<p>-- D1 D</p>	<p>-- -- --</p>	<p>V V V</p>	<p>90 B 90 B 45 B</p>












Volkswagen

VW Crafter Van types 46 and 50 Vehicles with 5,0 t max. total weight, reduction to 4,6 t max. total weight is possible wheelbase: 4325 mm For vehicles with integrated step device in the bumper the middle part of the outer bumper must be exchanged (Please order separately at Volkswagen dealers.). towball: 32905960001 (order separately) Step VW is not utilisable.	04/06-		313 273 600 001	2236	120	21	20,2	150	3500		313 105 300 107 313 105 300 113 vehicles with electrical preparation: 321 106 300 113	S CAN S CAN S CAN	C C C	E E E	-- D1 D	-- -- V	V V 45	B B B	
VW Eos Coupé/Convertible Please order spoiler inc. cover for bumper cutout at VW-dealers. inc. facelift 01/11-	06/06-		321 543 600 001	1765	75		18	9,3	100	1800	321 546 300 113	S CAN	C	E	D	L1	V	90	B
VW Fox exc. Cross Fox	10/05-		321 690 600 001	2109	55		14,5	6,7	50	800	discontinued model: 321 526 300 107 discontinued model: 321 526 300 113	S FRE S FRE	-- --	E E	-- --	H H	45 45	L L	
VW Fox exc. Cross Fox discontinued model	10/05-		321 691 600 001	2110	55		15	6,7	50	800	discontinued model: 321 526 300 107 discontinued model: 321 526 300 113	S FRE S FRE	-- --	E E	-- --	H H	45 45	L L	
VW Golf II narrow bumper, inc. Syncro, exc. convertible, exc. Rallye	09/83-07/91		321 252 600 001	0060	75	13,8	7,6	75	1500		300 060 300 107 300 060 300 113	-- --	C2 C2	-- --	D1 L1	H H	45 45	B B	
VW Golf III Estate exc. Syncro	10/93-07/99		321 327 600 001	0158	90		13,9	8,3	75	1500	321 331 300 107 321 331 300 113	S C2 S C2	-- --	-- D1	-- --	H H	45 45	B B	
VW Golf III Hatchback and saloon 4x4, convertible from 09/93-97	11/91-09/97		321 331 600 001	0125	90		15,5	8,2	75	1500	321 331 300 107 321 331 300 113	S C2 S C2	-- --	-- D1	-- --	H H	45 45	B B	
VW Golf IV Estate exc. Syncro - 4-Motion exc. Golf R32 / 241 PS	10/97-		305 222 600 001	0867	90		17,5	8,9	75	1650	321 457 300 107 321 457 300 113	S FRE S FRE	-- --	E E	-- L1	H H	60 60	B B	
VW Golf IV Estate KIT = towbar inc. electrical kit 13 pins exc. Syncro - 4-Motion exc. Golf R32 / 241 PS	10/97-		305 222 900 113	0867	90		19,5	8,9	75	1650	electrical kit 13 pins in the kit: 321 457 300 113	S FRE	--	E	D1	L1	H	60	B



















VW Golf IV Estate exc. Syncro - 4-Motion exc. Golf R32 / 241 PS	10/97-		305 223 600 001	0859	90		16,8	8,9	75	1650		321 457 300 107 321 457 300 113	S FRE -- S FRE --	E -- E D1	-- L1 H	H 60	B 60	
VW Golf IV Estate KIT = towbar inc. electrical kit 13 pins exc. Syncro - 4-Motion exc. Golf R32 / 241 PS	10/97-		305 223 900 113	0859	90		18,8	8,9	75	1650		electrical kit 13 pins in the kit: 321 457 300 113	S FRE --	E D1	L1 H	H	60	B
VW Golf IV Estate 4-Motion	10/97-		305 277 600 001	0973	120		17	8,9	75	1650		321 457 300 107 321 457 300 113	S FRE -- S FRE --	E -- E D1	-- L1 H	H 60	B 60	
VW Golf IV Hatchback exc. Syncro - 4-Motion and convertible exc. Golf R32 / 241 PS	10/97-		305 222 600 001	0867	90		17,5	8,9	75	1650		321 465 300 107 321 465 300 113	S FRE -- S FRE --	E -- E D1	-- L1 H	H 60	B 60	
VW Golf IV Hatchback KIT = towbar inc. electrical kit 13 pins exc. Syncro - 4-Motion and convertible exc. Golf R32 / 241 PS	10/97-		321 457 900 113	0867	90		19,5	8,9	75	1650		electrical kit 13 pins in the kit: 321 465 300 113	S FRE --	E D1	L1 H	H	60	B
VW Golf IV Hatchback exc. Syncro - 4-Motion and convertible exc. Golf R32 / 241 PS	10/97-		305 223 600 001	0859	90		16,8	8,9	75	1650		321 465 300 107 321 465 300 113	S FRE -- S FRE --	E -- E D1	-- L1 H	H 60	B 60	
VW Golf IV Hatchback KIT = towbar inc. electrical kit 13 pins exc. Syncro - 4-Motion and convertible exc. Golf R32 / 241 PS	10/97-		321 465 900 113	0859	90		18,8	8,9	75	1650		electrical kit 13 pins in the kit: 321 465 300 113	S FRE --	E D1	L1 H	H	60	B
VW Golf IV Hatchback 4-Motion exc. vehicles with V6 motor	10/97-		305 277 600 001	0973	120		17	8,9	75	1650		321 465 300 107 321 465 300 113	S FRE -- S FRE --	E -- E D1	-- L1 H	H 60	B 60	
VW Golf V Estate inc. 4-Motion	06/07-		321 662 600 001	1850	90		17	9,3	100	1800		321 600 300 107 321 600 300 113 321 600 300 153	S CAN C S CAN C S CAN C	E -- E D E D	-- L1 V L1 V	V 105	L L R	
VW Golf V Estate KIT = towbar inc. electrical kit 13 pins inc. 4-Motion	06/07-		321 662 900 113	1850	90		19	9,3	100	1800		electrical kit 13 pins in the kit: 321 600 300 113	S CAN C	E D	L1 V	V	105	L
VW Golf V Estate inc. 4-Motion Please order spoiler at VW dealers.	06/07-		321 630 600 001	1766	90		17	9,3	100	1800		321 600 300 107 321 600 300 113 321 600 300 153	S CAN C S CAN C S CAN C	E -- E D E D	-- L1 V L1 V	V 105	L L R	













Volkswagen

VW Golf V Estate KIT = towbar inc. electrical kit 13 pins inc. 4-Motion Please order spoiler at VW dealers.		321 630 900 113	1766	90		21	9,3	100	1800	electrical kit 13 pins in the kit: 321 600 300 113	S CAN	C	E	D	L1	V	105	L
VW Golf V Hatchback and Plus inc. Cross-Golf exc. 'DUNE' RS32 09/05- exc. R20 / 270 HP 09- exc. R inc. 4-Motion / Gti		321 750 600 001	2950	60		17	9,4	100	1700	321 600 300 107 321 600 300 113 321 600 300 153	S CAN S CAN S CAN	C C C	E E E	D D D	L1 L1 L1	V V V	105 105 105	L L R
VW Golf V Hatchback and Plus KIT = towbar inc. electrical kit 13 pins inc. Cross-Golf exc. 'DUNE' RS32 09/05- exc. R20 / 270 HP 09- exc. R inc. 4-Motion / Gti		321 750 900 113	2950	60		18,5	9,4	100	1700	electrical kit 13 pins in the kit: 321 600 300 113	S CAN	C	E	D	L1	V	105	L
VW Golf V Hatchback and Plus KIT = towbar inc. electrical kit 13 pins inc. Cross-Golf exc. RS32 09/05- exc. R20 / 270 HP 09- inc. 4-Motion / Gti		321 750 900 153	2950	60		18,5	9,4	100	1700	electrical kit 13 pins in the kit: 321 600 300 153	S CAN	C	E	D	L1	V	105	R
VW Golf V Hatchback and Plus exc. RS32 09/05- exc. R20 / 270 HP 09- inc. 4-Motion / Gti SIARR		321 756 600 001	0034	60		20	8,95	75	1650	321 600 300 107 321 600 300 113 321 600 300 153	S CAN S CAN S CAN	C C C	E E E	D D D	L1 L1 L1	V V V	105 105 105	L L R
VW Golf V Hatchback and Plus inc. Cross-Golf exc. RS32 09/05- exc. R20 / 270 HP 09- inc. 4-Motion / Gti Please order separately: spoiler and cover for bumper cutout at VW dealers.		321 751 600 001	2951	60		17	9,4	100	1700	321 600 300 107 321 600 300 113 321 600 300 153	S CAN S CAN S CAN	C C C	E E E	D D D	L1 L1 L1	V V V	105 105 105	L L R
VW Golf V Hatchback and Plus KIT = towbar inc. electrical kit 13 pins inc. Cross-Golf exc. RS32 09/05- exc. R20 / 270 HP 09- inc. 4-Motion / Gti Please order separately: spoiler and cover for bumper cutout at VW dealers.		321 751 900 113	2951	60		18,5	9,4	100	1700	electrical kit 13 pins in the kit: 321 600 300 113	S CAN	C	E	D	L1	V	105	L










VW Golf V Hatchback and Plus KIT = towbar inc. electrical kit 13 pins inc. Cross-Golf exc. RS32 09/05- exc. R20 / 270 HP 09- inc. 4-Motion / Gti Please order separately: spoiler and cover for bumper cutout at VW dealers.	03/05-		321 751 900 153	2951	60		18,5	9,4 100	1700	electrical kit 13 pins in the kit: 321 600 300 153	S CAN	C	E	D	L1	V	105	R
VW Golf V Saloon exc. R/RS32 09/05- exc. R/R20 / 270 HP 09- inc. 4-Motion / Gti	11/03-		321 750 600 001	2950	60		17	9,4 100	1700	discontinued model: 321 540 300 147 321 600 300 107 321 600 300 113 321 600 300 153	S CAN S CAN S CAN S CAN	C C C C	E E E E	-- -- D D	-- -- L1 L1	V V V V	90 105 105 105	B L L R
VW Golf V Saloon KIT = towbar inc. electrical kit 13 pins exc. R/RS32 09/05- exc. R/R20 / 270 HP 09- inc. 4-Motion / Gti	11/03-		321 750 900 113	2950	60		18,5	9,4 100	1700	electrical kit 13 pins in the kit: 321 600 300 113	S CAN	C	E	D	L1	V	105	L
VW Golf V Saloon KIT = towbar inc. electrical kit 13 pins exc. R/RS32 09/05- exc. R/R20 / 270 HP 09- inc. 4-Motion / Gti	11/03-		321 750 900 153	2950	60		18,5	9,4 100	1700	electrical kit 13 pins in the kit: 321 600 300 153	S CAN	C	E	D	L1	V	105	R
VW Golf V Saloon exc. RS32 09/05- exc. R20 / 270 HP 09- inc. 4-Motion / Gti SIARR	11/03-		321 756 600 001	0034	60		20	8,95 75	1650	discontinued model: 321 540 300 147 321 600 300 107 321 600 300 113 321 600 300 153	S CAN S CAN S CAN S CAN	C C C C	E E E E	-- -- D D	-- -- L1 L1	V V V V	90 105 105 105	B L L R
VW Golf V Saloon exc. R/RS32 09/05- exc. R/R20 / 270 HP 09- inc. 4-Motion / Gti Please order separately: spoiler and cover for bumper cutout at VW dealers.	11/03-		321 751 600 001	2951	60		17	9,4 100	1700	electrical kit 13 pins in the kit: 321 600 300 153	S CAN S CAN S CAN S CAN	C C C C	E E E E	-- -- D D	-- -- L1 L1	V V V V	90 105 105 105	B L L R




















Volkswagen

VW Golf V Saloon KIT = towbar inc. electrical kit 13 pins exc. R/RS32 09/05- exc. R/R20 / 270 HP 09- inc. 4-Motion / Gti Please order separately: spoiler and cover for bumper cutout at VW dealers.	11/03-		321 751 900 113	2951	60		18,5	9,4 100	1700	electrical kit 13 pins in the kit: 321 600 300 113	S CAN C	E D	L1 V	105	L
VW Golf V Saloon KIT = towbar inc. electrical kit 13 pins exc. R/RS32 09/05- exc. R/R20 / 270 HP 09- inc. 4-Motion / Gti Please order separately: spoiler and cover for bumper cutout at VW dealers.	11/03		321 751 900 153	2951	60		18,5	9,4 100	1700	electrical kit 13 pins in the kit: 321 600 300 153	S CAN C	E D	L1 V	105	R
VW Golf VI Convertible cutout with stencil, alternative: spoiler + cover for cutout from VW dealers	06/11-		321 730 600 001	3408	60		17	9,4 75	1800	305 256 300 107 305 256 300 113	S CAN C S CAN C	E D	-- V	120	B B
VW Golf VI Convertible KIT = towbar inc. electrical kit 13 pins cutout with stencil, alternative: spoiler + cover for cutout from VW dealers	06/11-		321 730 900 113	3408	60		19	9,4 75	1800	electrical kit 13 pins in the kit: 305 256 300 113	S CAN C	E D	-- V	120	B
VW Golf VI Estate inc. 4-Motion	06/09-		321 662 600 001	1850	90		17	9,3 100	1800	321 600 300 107 321 600 300 113 321 600 300 153	S CAN C S CAN C S CAN C	E D	-- V	105	L L R
VW Golf VI Estate KIT = towbar inc. electrical kit 13 pins inc. 4-Motion	06/09-		321 662 900 113	1850	90		19	9,3 100	1800	electrical kit 13 pins in the kit: 321 600 300 113	S CAN C	E D	L1 V	105	L
VW Golf VI Estate inc. 4 x 4 and RS, inc. Scout Facelift 11/08-; cutout is not necessary	06/09-		321 746 600 001	0848	90		21	9,4 100	1700	321 600 300 107 321 600 300 113 321 600 300 153	S CAN C S CAN C S CAN C	E D	-- V	105	L L R
VW Golf VI Estate inc. 4-Motion Please order spoiler at VW dealers.	06/09-		321 630 600 001	1766	90		17	9,3 100	1800	321 600 300 107 321 600 300 113 321 600 300 153	S CAN C S CAN C S CAN C	E D	-- V	105	L L R
VW Golf VI Estate KIT = towbar inc. electrical kit 13 pins inc. 4-Motion Please order spoiler at VW dealers.	06/09-		321 630 900 113	1766	90		21	9,3 100	1800	electrical kit 13 pins in the kit: 321 600 300 113	S CAN C	E D	L1 V	105	L



















VW Golf VI Hatchback and Plus inc. Cross-Golf exc. 'DUNE' RS32 09/05- exc. R20 / 270 HP 09- exc. R inc. 4-Motion / Gti	03/09-		321 750 600 001	2950	60		17	9,4	100	1700		321 600 300 107 321 600 300 113 321 600 300 153	S CAN S CAN S CAN	C C C	E E E	-- D L1 D L1	-- V V	105 105 105	L L R
VW Golf VI Hatchback and Plus KIT = towbar inc. electrical kit 13 pins inc. Cross-Golf exc. 'DUNE' RS32 09/05- exc. R20 / 270 HP 09- exc. R inc. 4-Motion / Gti	03/09-		321 750 900 113	2950	60		18,5	9,4	100	1700		electrical kit 13 pins in the kit: 321 600 300 113	S CAN	C	E	D L1	V	105	L
VW Golf VI Hatchback and Plus KIT = towbar inc. electrical kit 13 pins inc. Cross-Golf exc. 'DUNE' RS32 09/05- exc. R20 / 270 HP 09- exc. R inc. 4-Motion / Gti	03/09-		321 750 900 153	2950	60		18,5	9,4	100	1700		electrical kit 13 pins in the kit: 321 600 300 153	S CAN	C	E	D L1	V	105	R
VW Golf VI Hatchback and Plus inc. Cross-Golf exc. RS32 09/05- exc. R20 / 270 HP 09- inc. 4-Motion / Gti SIARR	03/09-		321 752 600 001	0148	60		17	9,4	100	1700		321 600 300 107 321 600 300 113 321 600 300 153	S CAN S CAN S CAN	C C C	E E E	-- D L1 D L1	V V V	105 105 105	L L R
VW Golf VI Hatchback and Plus inc. Cross-Golf exc. RS32 09/05- exc. R20 / 270 HP 09- inc. 4-Motion / Gti Please order separately: spoiler and cover for bumper cutout at VW dealers.	03/09-		321 751 600 001	2951	60		17	9,4	100	1700		321 600 300 107 321 600 300 113 321 600 300 153	S CAN S CAN S CAN	C C C	E E E	-- D L1 D L1	V V V	105 105 105	L L R
VW Golf VI Hatchback and Plus KIT = towbar inc. electrical kit 13 pins inc. Cross-Golf exc. RS32 09/05- exc. R20 / 270 HP 09- inc. 4-Motion / Gti Please order separately: spoiler and cover for bumper cutout at VW dealers.	03/09-		321 751 900 113	2951	60		18,5	9,4	100	1700		electrical kit 13 pins in the kit: 321 600 300 113	S CAN	C	E	D L1	V	105	L






Volkswagen

VW Golf VI Hatchback and Plus KIT = towbar inc. electrical kit 13 pins inc. Cross-Golf exc. RS32 09/05- exc. R20 / 270 HP 09- inc. 4-Motion / Gti Please order separately: spoiler and cover for bumper cutout at VW dealers.	03/09-		321 751 900 153	2951	60		18,5	9,4 100	1700	electrical kit 13 pins in the kit: 321 600 300 153	S CAN C	E D	L1 V	105	R
VW Golf VI Saloon exc. R/RS32 09/05- exc. R/R20 / 270 HP 09- inc. 4-Motion / Gti	10/08-		321 750 600 001	2950	60		17	9,4 100	1700	321 600 300 107 321 600 300 113 321 600 300 153	S CAN C S CAN C S CAN C	E D E D E D	-- L1 V L1 V	105 105 105	L L R
VW Golf VI Saloon KIT = towbar inc. electrical kit 13 pins exc. R/RS32 09/05- exc. R/R20 / 270 HP 09- inc. 4-Motion / Gti	10/08-		321 750 900 113	2950	60		18,5	9,4 100	1700	electrical kit 13 pins in the kit: 321 600 300 113	S CAN C	E D	L1 V	105	L
VW Golf VI Saloon KIT = towbar inc. electrical kit 13 pins exc. R/RS32 09/05- exc. R/R20 / 270 HP 09- inc. 4-Motion / Gti	10/08-		321 750 900 153	2950	60		18,5	9,4 100	1700	electrical kit 13 pins in the kit: 321 600 300 153	S CAN C	E D	L1 V	105	R
VW Golf VI Saloon exc. R/R20 / 270 HP 09- inc. 4-Motion / Gti SIARR	10/08-		321 752 600 001	0148	60		21	9,4 100	1700	321 600 300 107 321 600 300 113 321 600 300 153	S CAN C S CAN C S CAN C	E D E D E D	-- L1 V L1 V	105 105 105	L L R
VW Golf VI Saloon exc. R/RS32 09/05- exc. R/R20 / 270 HP 09- inc. 4-Motion / Gti Please order separately: spoiler and cover for bumper cutout at VW dealers.	10/08-		321 751 600 001	2951	60		17	9,4 100	1700	321 600 300 107 321 600 300 113 321 600 300 153	S CAN C S CAN C S CAN C	E D E D E D	-- L1 V L1 V	105 105 105	L L R
VW Golf VI Saloon KIT = towbar inc. electrical kit 13 pins exc. R/RS32 09/05- exc. R/R20 / 270 HP 09- inc. 4-Motion / Gti Please order separately: spoiler and cover for bumper cutout at VW dealers.	10/08-		321 751 900 113	2951	60		18,5	9,4 100	1700	electrical kit 13 pins in the kit: 321 600 300 113	S CAN C	E D	L1 V	105	L







VW Golf VI Saloon KIT = towbar inc. electrical kit 13 pins exc. R/RS32 09/05- exc. R/R20 / 270 HP 09- inc. 4-Motion / Gti Please order separately: spoiler and cover for bumper cutout at VW dealers.	10/08-		321 751 900 153	2951	60		18,5	9,4	100	1700		electrical kit 13 pins in the kit: 321 600 300 153	S	CAN	C	E	D	L1	V	105	R
VW Golf VII Saloon	10/12-		321 737 600 001	3469	60		17	9,9	80	2000		305 404 300 107 305 404 300 113	S								B B
VW Golf VII Saloon KIT = towbar inc. electrical kit 13 pins	10/12-		321 737 900 113	3469	60		19	9,9	80	2000		electrical kit 13 pins in the kit: 305 404 300 113	S								B
VW Golf VII Saloon	10/12-		321 785 600 001	3564	60		17	9,9	80	2000		305 404 300 107 305 404 300 113	S								B B
VW Golf VII Saloon	10/12-		321 738 600 001	3468	60		17	9,9	80	2000		305 404 300 107 305 404 300 113	S								B B
VW Golf VII Saloon KIT = towbar inc. electrical kit 13 pins	10/12-		305 404 900 113	3468	60		19	9,9	80	2000		electrical kit 13 pins in the kit: 305 404 300 113	S								B
VW Jetta exc. Syncro	09/83- 07/89		321 252 600 001	0060	75		13,8	7,6	75	1500		300 060 300 107 300 060 300 113 321 600 300 153	-- -- S	C2 C2 CAN	-- -- C	-- -- E	-- D1 D	-- L1 L1	H H V	45 45 105	B B R
VW Jetta	08/05- 12/10		321 662 600 001	1850	90		17	9,3	100	1800		321 600 300 107 321 600 300 113 321 600 300 153	S S S	CAN CAN CAN	C C C	E E E	-- D D	-- L1 L1	V V V	105 105 105	L L R
VW Jetta KIT = towbar inc. electrical kit 13 pins	08/05- 12/10		321 662 900 113	1850	90		19	9,3	100	1800		electrical kit 13 pins in the kit: 321 600 300 113	S	CAN	C	E	D	L1	V	105	L
VW Jetta Please order spoiler at VW dealers.	08/05- 12/10		321 630 600 001	1766	90		17	9,3	100	1800		321 600 300 107 321 600 300 113 321 600 300 153	S S S	CAN CAN CAN	C C C	E E E	-- D D	-- L1 L1	V V V	105 105 105	L L R















Volkswagen

VW Jetta KIT = towbar inc. electrical kit 13 pins Please order spoiler at VW dealers.	08/05- 12/10		321 630 900 113	1766	90		21	9,3	100	1800	electrical kit 13 pins in the kit: 321 600 300 113	S CAN C	E	D	L1	V	105	L
VW Jetta	01/11-		321 825 600 001	3151	40		17	9,3	75	1800	321 600 300 107 321 600 300 113 321 600 300 153	S CAN C S CAN C S CAN C	E E E	D D D	-- L1 L1	V V V	105 105 105	L L R
VW Jetta KIT = towbar inc. electrical kit 13 pins	01/11-		321 825 900 113	3151	40		19	9,3	75	1800	electrical kit 13 pins in the kit: 321 600 300 113	S CAN C	E	D	L1	V	105	L
VW Jetta Please order separately Spoiler and cover for bumper cutout at VW dealer's.	01/11-		321 778 600 001	3095	40		19	9,3	75	1800	321 600 300 107 321 600 300 113 321 600 300 153	S CAN C S CAN C S CAN C	E E E	D D D	-- L1 L1	V V V	105 105 105	L L R
VW Jetta KIT = towbar inc. electrical kit 13 pins Please order separately Spoiler and cover for bumper cutout at VW dealer's.	01/11-		321 778 900 113	3095	40		21	9,3	75	1800	electrical kit 13 pins in the kit: 321 600 300 113	S CAN C	E	D	L1	V	105	L
VW LT II The program can be found in the appendix: "Mercedes-Benz Sprinter / Volkswagen LT 2".	03/96- 03/06																	L
VW Passat saloon, Variant and Syncro discontinued model	04/88- 09/93		321 259 600 001	0054	90		14,3	9,9	85	2000	300 060 300 107 300 060 300 113	-- C2	-- C2	-- D1	-- L1	H H	45 45	B B
VW Passat CC inc. 4-Motion, exc. R36 Please order additionally lower part of the bumper with cover for bumper cutout at VW dealer.	03/05-		321 546 600 001	1703	90		17,5	11,3	90	2200	321 600 300 107 321 600 300 113 321 600 300 153	S CAN C S CAN C S CAN C	E E E	-- D D	-- L1 L1	V V V	105 105 105	L L R
VW Passat CC KIT = towbar inc. electrical kit 13 pins inc. 4-Motion, exc. R36 Please order additionally lower part of the bumper with cover for bumper cutout at VW dealer.	03/05-		321 546 900 113	1703	90		21	11,3	90	2200	electrical kit 13 pins in the kit: 321 600 300 113	S CAN C	E	D	L1	V	105	L
VW Passat Estate B4, all models	10/93- 04/97		321 360 600 001	0156	90		15,8	10,1	85	2000	321 361 300 107 321 361 300 113	S C2 S C2	-- --	-- D1	-- L1	H H	45 45	L L








VW Passat Estate front wheel drive exc. 4-Motion/Syncro Monoflex	04/97- 09/05		321 772 600 001	3536	120	✂	23	10,05	85	2000	-10/00	S	FRE --	E	--	V	60	B	
											321 512 300 107								
											-10/00								
											321 512 300 113								
											11/00-								
321 520 300 107																			
11/00-																			
321 520 300 113																			
VW Passat Estate KIT = towbar inc. electrical kit 13 pins front wheel drive exc. 4-Motion/Syncro Monoflex	11/00- 09/05		321 632 900 113	3536	120	✂	25	10,05	85	2000	electrical kit 13 pins in the kit:	S	FRE --	E	D1	L1	V	60	L
											321 520 300 113								
VW Passat Estate front wheel drive exc. 4-Motion/Syncro Variant from 11/00: To guarantee an optimal fit of the bumper it is necessary to mount a bumper reinforcement, please order from VW-dealer, order no. 3B9 807 251A	04/97- 09/05		321 678 600 001	2180	90		21	10,3	75	2000	-10/00	S	FRE --	E	--	V	60	B	
											321 512 300 107								
											-10/00								
											321 512 300 113								
											11/00-								
321 520 300 107																			
11/00-																			
321 520 300 113																			
VW Passat Estate front wheel drive exc. 4-Motion/Syncro Variant from 11/00: To guarantee an optimal fit of the bumper it is necessary to mount a bumper reinforcement, please order from VW-dealer, order no. 3B9 807 251A Support for detachable towball in spare wheel: 3B0 804 993A	04/97- 09/05		321 505 600 001	0730	90		20,5	10,3	85	2000	-10/00	S	FRE --	E	--	V	60	B	
											321 512 300 107								
											-10/00								
											321 512 300 113								
											11/00-								
321 520 300 107																			
11/00-																			
321 520 300 113																			
VW Passat Estate KIT = towbar inc. electrical kit 13 pins front wheel drive exc. 4-Motion/Syncro Variant from 11/00: To guarantee an optimal fit of the bumper it is necessary to mount a bumper reinforcement, please order from VW-dealer, order no. 3B9 807 251A Support for detachable towball in spare wheel: 3B0 804 993A	11/00- 09/05		321 505 900 113	0730	90		24	10,3	85	2000	electrical kit 13 pins in the kit:	S	FRE --	E	D1	L1	V	60	L
											321 520 300 113								






Volkswagen

VW Passat Estate Sincro - 4-Motion and Passat W8 Variant from 11/00: To guarantee an optimal fit of the bumper it is necessary to mount a bumper reinforcement, please order from VW-dealer, order no. 3B9 807 251A	10/96-09/05		321 637 600 001	0786	90	23,6	11,3	85	2200	-10/00 321 512 300 107 -10/00 321 512 300 113 11/00- 321 520 300 107 11/00- 321 520 300 113	S FRE -- S FRE -- S FRE -- S FRE --	E -- E D1 E -- E D1	-- L1 -- L1	V V V V	60 60 60 60	B B L L
VW Passat Estate Sincro - 4-Motion and Passat W8 Variant from 11/00: To guarantee an optimal fit of the bumper it is necessary to mount a bumper reinforcement, please order from VW-dealer, order no. 3B9 807 251A Support for detachable towball in spare wheel: 3B0 804 993A	10/96-09/05		321 508 600 001	0744	90	23	11,3	85	2200	-10/00 321 512 300 107 -10/00 321 512 300 113 11/00- 321 520 300 107 11/00- 321 520 300 113	S FRE -- S FRE -- S FRE -- S FRE --	E -- E D1 E -- E D1	-- L1 -- L1	V V V V	60 60 60 60	B B L L
VW Passat Estate inc. 4-Motion, inc. R36 08/05-: To guarantee an optimal fit of the bumper it is necessary to mount a bumper reinforcement, please order from VW-dealer order no. 3C9 807 251 A.	09/05-10/10		321 544 600 001	1814	90	16	11,3	90	2200	321 535 300 143 321 535 300 147 321 600 300 107 321 600 300 113 321 600 300 153	S CAN C S CAN C S CAN C S CAN C S CAN C	E D1 E -- E -- E D E D	L1 -- -- L1 L1	V V V V V	90 90 105 105 105	B B L L R
VW Passat Estate KIT = towbar inc. electrical kit 13 pins inc. 4-Motion, inc. R36 08/05-: To guarantee an optimal fit of the bumper it is necessary to mount a bumper reinforcement, please order from VW-dealer order no. 3C9 807 251 A.	09/05-10/10		321 544 900 113	1814	90	18	12,3	90	2200	electrical kit 13 pins in the kit: 321 780 300 113	S CAN C	E D	L1	V		B
VW Passat Estate inc. 4-Motion, inc. R36	09/05-10/10		321 679 600 001	2178	100	17,8	11,3	85	2200	321 600 300 107 321 600 300 113 321 600 300 153	S CAN C S CAN C S CAN C	E -- E D E D	-- L1 L1	V V V	105 105 105	L L R
VW Passat Estate inc. 4-Motion, inc. R36 08/05-: To guarantee an optimal fit of the bumper it is necessary to mount a bumper reinforcement, please order from VW-dealer order no. 3C9 807 251 A.	09/05-10/10		321 546 600 001	1703	90	17,5	11,3	90	2200	321 535 300 143 321 535 300 147 321 600 300 107 321 600 300 113 321 600 300 153	S CAN C S CAN C S CAN C S CAN C S CAN C	E D1 E -- E -- E D E D	L1 -- -- L1 L1	V V V V V	90 90 105 105 105	B B L L R

















VW Passat Estate KIT = towbar inc. electrical kit 13 pins inc. 4-Motion, inc. R36 08/05-: To guarantee an optimal fit of the bumper it is necessary to mount a bumper reinforcement, please order from VW-dealer order no. 3C9 807 251 A.	09/05- 10/10		321 546 900 113	1703	90		21	11,3	90	2200	electrical kit 13 pins in the kit: 321 780 300 113	S CAN C	E D	L1 V	B
VW Passat Estate KIT = towbar inc. electrical kit 13 pins inc. 4-Motion, inc. R36 Please order separately spoiler inc. cover at VW dealers. 08/05-: To guarantee an optimal fit of the bumper it is to mount a bumper reinforcement, please order from VW-dealer order no. 3C9 807 251 A.	09/05- 10/10		321 546 900 153	1703	90		21	11,3	90	2200	electrical kit 13 pins in the kit: 321 600 300 153	S CAN C	E D	L1 V	105 R
VW Passat Estate B7 inc. Alltrack R-Line = visible cut	10/10-		321 821 600 001	3095	90		17,5	11,3	90	2200	321 600 300 107 321 600 300 113 321 600 300 153	S CAN C S CAN C S CAN C	E D E D E D	-- L1 V L1 V	105 L 105 L 105 R
VW Passat Estate KIT = towbar inc. electrical kit 13 pins B7 inc. Alltrack R-Line = visible cut	10/10-		321 821 900 113	3095	90		19,5	11,3	90	2200	electrical kit 13 pins in the kit: 321 600 300 113	S CAN C	E D	L1 V	105 L
VW Passat Estate B7 inc. Alltrack	10/10-		321 822 600 001	3291	90		17,5	11,3	90	2200	321 600 300 107 321 600 300 113 321 600 300 153	S CAN C S CAN C S CAN C	E D E D E D	-- L1 V L1 V	105 L 105 L 105 R
VW Passat Estate B7 inc. Alltrack R-Line = visible cut	10/10-		321 823 600 001	3205	90		20	11,3	90	2200	321 600 300 107 321 600 300 113 321 600 300 153	S CAN C S CAN C S CAN C	E D E D E D	-- L1 V L1 V	105 L 105 L 105 R
VW Passat Estate KIT = towbar inc. electrical kit 13 pins B7 inc. Alltrack R-Line = visible cut	10/10-		321 823 900 113	3205	90		22	11,3	90	2200	electrical kit 13 pins in the kit: 321 600 300 113	S CAN C	E D	L1 V	105 L













Volkswagen

VW Passat Estate KIT = towbar inc. electrical kit 13 pins B7 inc. Alltrack R-Line = visible cut	10/10		321 823 900 153	3205	90	✂	22	11,3	90	2200	electrical kit 13 pins in the kit: 321 600 300 153	S CAN	E	D	L1	V	105	R
VW Passat Estate KIT = towbar inc. electrical kit 13 pins B7 inc. Alltrack R-Line = visible cut	10/10-		321 824 600 001	3431	90	✂	23	11,3	95	2200	electrical kit 13 pins in the kit: 3218243xxxxx	S CAN	E	D	L1	V	90	L
VW Passat Estate KIT = towbar inc. electrical kit 13 pins B7 inc. Alltrack R-Line = visible cut	10/10-		321 808 600 001	3431	90	✂	23	11,3	95	2200	electrical kit 13 pins in the kit: 3218083xxxxx	S CAN	E	D	L1	V	90	R
VW Passat Saloon B4, all models	10/93- 09/96		321 360 600 001	0156	90	✂	15,8	10,1	85	2000	300 060 300 107 300 060 300 113	-- C2 -- -- C2 --	-- -- -- --	-- D1	-- L1	H H	45 45	B B
VW Passat Saloon front wheel drive exc. 4-Motion/Syncro Monoflex	10/96- 08/05		321 772 600 001	3536	120	✂	23	10,5	85	2000	11/00- 321 505 300 107 11/00- 321 505 300 113 -10/00 321 512 300 107 -10/00 321 512 300 113	S FRE -- S FRE -- S FRE -- S FRE --	E -- E -- E -- E --	-- D1	-- L1	V V	60 60	B B B B
VW Passat Saloon KIT = towbar inc. electrical kit 13 pins front wheel drive exc. 4-Motion/Syncro Monoflex	11/00- 08/05		321 772 900 113	3536	120	✂	25	10,5	85	2000	electrical kit 13 pins in the kit: 321 505 300 113	S FRE --	E	D1	L1	V	60	B
VW Passat Saloon front wheel drive exc. 4-Motion/Syncro	10/96- 08/05		321 678 600 001	2180	90		21	10,3	75	1800	11/00- 321 505 300 107 11/00- 321 505 300 113 -10/00 321 512 300 107 -10/00 321 512 300 113	S FRE -- S FRE -- S FRE -- S FRE --	E -- E -- E -- E --	-- D1	-- L1	V V	60 60	B B B B

















VW Passat Saloon front wheel drive exc. 4-Motion/Syncro Support in spare wheel for detachable towball: 3B0 804 993A		10/96- 03/05	321 505 600 001	0730	90	20,8	10,3	85	1800	11/00- 321 505 300 107	S	FRE	--	E	--	--	V	60	B
										11/00- 321 505 300 113	S	FRE	--	E	D1	L1	V	60	B
										-10/00 321 512 300 107	S	FRE	--	E	--	--	V	60	B
										-10/00 321 512 300 113	S	FRE	--	E	D1	L1	V	60	B
										11/00- 321 505 300 107	S	FRE	--	E	--	--	V	60	B
VW Passat Saloon Syncro - 4-Motion and Passat W8		10/96- 03/05	321 637 600 001	0786	90	23,6	11,3	85	2200	11/00- 321 505 300 107	S	FRE	--	E	--	--	V	60	B
										11/00- 321 505 300 113	S	FRE	--	E	D1	L1	V	60	B
										-10/00 321 512 300 107	S	FRE	--	E	--	--	V	60	B
										-10/00 321 512 300 113	S	FRE	--	E	D1	L1	V	60	B
										11/00- 321 505 300 107	S	FRE	--	E	--	--	V	60	B
VW Passat Saloon Syncro - 4-Motion and Passat W8 Support in spare wheel for detachable towball: 3B0 804 993A		10/96- 03/05	321 508 600 001	0744	90	21	11,3	85	2200	11/00- 321 505 300 107	S	FRE	--	E	--	--	V	60	B
										11/00- 321 505 300 113	S	FRE	--	E	D1	L1	V	60	B
										-10/00 321 512 300 107	S	FRE	--	E	--	--	V	60	B
										-10/00 321 512 300 113	S	FRE	--	E	D1	L1	V	60	B
										11/00- 321 505 300 107	S	FRE	--	E	--	--	V	60	B
VW Passat Saloon inc. 4-Motion, inc. R36		03/05- 10/10	321 544 600 001	1814	90	16	11,3	90	2200	S	CAN	C	E	D1	L1	V	90	B	
										321 534 300 147	S	CAN	C	E	--	--	V	90	B
										321 600 300 107	S	CAN	C	E	--	--	V	105	L
										321 600 300 113	S	CAN	C	E	D	L1	V	105	L
										321 600 300 153	S	CAN	C	E	D	L1	V	105	R
VW Passat Saloon KIT = towbar inc. electrical kit 13 pins inc. 4-Motion, exc. R36		03/05- 10/10	321 544 900 113	1814	90	18	12,3	90	2200	electrical kit 13 pins in the kit:									
										321 780 300 113	S	CAN	C	E	D	L1	V		B















Volkswagen

VW Passat Saloon inc. 4-Motion, inc. R36	03/05- 10/10		321 679 600 001	2178	100		17,8	11,3	85	2200		321 534 300 143	S CAN	C	E	D1	L1	V	90	B
												321 534 300 147	S CAN	C	E	--	--	V	90	B
												321 600 300 107	S CAN	C	E	--	--	V	105	L
												321 600 300 113	S CAN	C	E	D	L1	V	105	L
												321 600 300 153	S CAN	C	E	D	L1	V	105	R
VW Passat Saloon inc. 4-Motion, inc. R36 Please order additionally lower part of the bumper with cover for bumper cutout at VW dealer.	03/05- 10/10		321 546 600 001	1703	90		17,5	11,3	90	2200		321 600 300 107	S CAN	C	E	--	--	V	105	L
												321 600 300 113	S CAN	C	E	D	L1	V	105	L
												321 600 300 153	S CAN	C	E	D	L1	V	105	R
VW Passat Saloon KIT = towbar inc. electrical kit 13 pins inc. 4-Motion, inc. R36 Please order additionally lower part of the bumper with cover for bumper cutout at VW dealer.	03/05- 10/10		321 546 900 113	1703	90		21	11,3	90	2200		electrical kit 13 pins in the kit: 321 780 300 113	S CAN	C	E	D	L1	V		B
VW Passat Saloon KIT = towbar inc. electrical kit 13 pins inc. 4-Motion, inc. R36 Please order additionally lower part of the bumper with cover for bumper cutout at VW dealer.	03/05- 10/10		321 546 900 153	1703	90		21	11,3	90	2200		electrical kit 13 pins in the kit: 321 600 300 153	S CAN	C	E	D	L1	V	105	R
VW Passat Saloon B7 R-Line = visible cut	10/10-		321 821 600 001	3095	90		17,5	11,3	90	2200		321 600 300 107	S CAN	C	E	--	--	V	105	L
												321 600 300 113	S CAN	C	E	D	L1	V	105	L
												321 600 300 153	S CAN	C	E	D	L1	V	105	R
VW Passat Saloon KIT = towbar inc. electrical kit 13 pins B7 R-Line = visible cut	10/10-		321 821 900 113	3095	90		19,5	11,3	90	2200		electrical kit 13 pins in the kit: 321 600 300 113	S CAN	C	E	D	L1	V	105	L
VW Passat Saloon B7	10/10-		321 822 600 001	3291	90		17,5	11,3	90	2200		321 600 300 107	S CAN	C	E	--	--	V	105	L
												321 600 300 113	S CAN	C	E	D	L1	V	105	L
												321 600 300 153	S CAN	C	E	D	L1	V	105	R
VW Passat Saloon B7 R-Line = visible cut	10/10-		321 823 600 001	3205	90		20	11,3	90	2200		321 600 300 107	S CAN	C	E	--	--	V	105	L
												321 600 300 113	S CAN	C	E	D	L1	V	105	L
												321 600 300 153	S CAN	C	E	D	L1	V	105	R























VW Passat Saloon KIT = towbar inc. electrical kit 13 pins B7 R-Line = visible cut	10/10-		321 823 900 113	3205	90		22	11,3	90	2200	electrical kit 13 pins in the kit: 321 600 300 113	S CAN C	E D	L1 V	105	L
VW Passat Saloon KIT = towbar inc. electrical kit 13 pins B7 R-Line = visible cut	10/10-		321 823 900 153	3205	90		22	11,3	90	2200	electrical kit 13 pins in the kit: 321 600 300 153	S CAN C	E D	L1 V	105	R
VW Passat Saloon KIT = towbar inc. electrical kit 13 pins B7 R-Line = visible cut	10/10-		321 824 600 001	3431	90		23	11,3	95	2200	electrical kit 13 pins in the kit: 3218243xxxxx	S CAN C	E D	L1 V	90	L
VW Passat Saloon KIT = towbar inc. electrical kit 13 pins B7 R-Line = visible cut	10/10-		321 808 600 001	3431	90		23	11,3	95	2200	electrical kit 13 pins in the kit: 3218083xxxxx	S CAN C	E D	L1 V	90	R
VW Phaeton Please order from VW dealer: Spoiler V6 Petrol + V 8: 3D5 807 434 F Spoiler V6 Diesel + V10: 3D5 807 434 H Spoiler: V12: 3D5 807 434 G cover for bumper: 3D5 807 397 A V7S clip (2x): 6Q0 807 180 bracket to mount towball in the boot consisting of: bracket: 3D5 863 503 holder for towball: 3D5 804 969 A fittings: 3D5 807 996 cover right: 3D5 868 886 A	05/02-		321 525 600 001	0732	90		26	13,6	100	2500	11/08- 321 495 300 113	S CAN C	E D	L1 H	60	L
VW Polo inc. R-Line	06/09-		321 741 600 001	2989	120		15	7	85	1200	321 527 300 107 321 527 300 113 321 527 300 143	S CAN C S CAN C S	E -- E D1	V -- L1 V	90 90	L L R
VW Polo KIT = towbar inc. electrical kit 13 pins inc. R-Line	06/09-		321 741 900 113	2989	120		17	7	85	1200	electrical kit 13 pins in the kit: 321 527 300 113	S CAN C	E D1	L1 V	90	L
VW Polo KIT = towbar inc. electrical kit 13 pins inc. R-Line	06/09-		321 741 900 143	2989	120		17	7	85	1200	electrical kit 13 pins in the kit: 321 527 300 143	S				R





















Volkswagen

VW Polo	06/09-		321 749 600 001	0857	90		18	7	85	1200		321 527 300 107 321 527 300 113 321 527 300 143	S CAN C S CAN C S	E -- D1	-- L1 V	90 90 R	L L R
VW Polo If desired for optical reasons, it is possible to get the complete bumper inc. cover at VW dealers. inc. R-Line 2012- -> extension for socket holder necessary, order no. 921740650010	06/09-		321 748 600 001	2896	120		16,5	7	85	1200		321 527 300 107 321 527 300 113 321 527 300 143	S CAN C S CAN C S	E -- D1	-- L1 V	90 90 R	L L R
VW Polo KIT = towbar inc. electrical kit 13 pins If desired for optical reasons, it is possible to get the complete bumper inc. cover at VW dealers. inc. R-Line 2012- -> extension for socket holder necessary, order no. 921740650010	06/09-		321 748 900 113	2896	120		18,5	7	85	1200		electrical kit 13 pins in the kit: 321 527 300 113	S CAN C S CAN C	E D1	L1 V	90 90	L
VW Polo KIT = towbar inc. electrical kit 13 pins If desired for optical reasons, it is possible to get the complete bumper inc. cover at VW dealers. inc. R-Line 2012- -> extension for socket holder necessary, order no. 921740650010	06/09-		321 748 900 143	2896	120		18,5	7	85	1200		electrical kit 13 pins in the kit: 321 527 300 143	S				R
VW Polo Bluemotion Please check if there is a towing capacity in the car documents.	06/09-		321 741 600 001	2989	120		15	7	85	1200		321 527 300 107 321 527 300 113 321 527 300 143	S CAN C S CAN C S	E -- D1	-- L1 V	90 90 R	L L R
VW Polo Bluemotion KIT = towbar inc. electrical kit 13 pins Please check if there is a towing capacity in the car documents.	06/09-		321 741 900 113	2989	120		17	7	85	1200		electrical kit 13 pins in the kit: 321 527 300 113	S CAN C S CAN C	E D1	L1 V	90 90	L
VW Polo Bluemotion KIT = towbar inc. electrical kit 13 pins Please check if there is a towing capacity in the car documents.	06/09-		321 741 900 143	2989	120		17	7	85	1200		electrical kit 13 pins in the kit: 321 527 300 143	S				R
VW Polo Bluemotion Please check if there is a towing capacity in the car documents.	06/09-		321 749 600 001	0857	90		18	7	85	1200		321 527 300 107 321 527 300 113 321 527 300 143	S CAN C S CAN C S	E -- D1	-- L1 V	90 90 R	L L R











VW Polo Bluemotion Please order separately extension for socket holder, order no. 921740650001. Please check if there is a towing capacity in the car documents.	06/09-		321 748 600 001	2896	120		16,5	7	85	1200	321 527 300 107 321 527 300 113 321 527 300 143	S CAN C S CAN C S	E -- E D1 E	-- L1 V V	90 90 R	L L R
VW Polo Bluemotion KIT = towbar inc. electrical kit 13 pins Please order separately extension for socket holder, order no. 921740650001. Please check if there is a towing capacity in the car documents.	06/09-		321 748 900 113	2896	120		18,5	7	85	1200	electrical kit 13 pins in the kit: 321 527 300 113	S CAN C	E D1	L1 V	90	L
VW Polo Bluemotion KIT = towbar inc. electrical kit 13 pins Please order separately extension for socket holder, order no. 921740650001. Please check if there is a towing capacity in the car documents.	06/09-		321 748 900 143	2896	120		18,5	7	85	1200	electrical kit 13 pins in the kit: 321 527 300 143	S				R
VW Polo Classic Saloon	96-03		344 025 600 001	0427	120		17,6	6,7	70	1200	10/99- 300 060 300 107 10/99- 300 060 300 113 -09/99 321 403 300 107 -09/99 321 403 300 113 10/99- 321 600 300 153	-- C2 -- C2 S C2 S C2 S CAN C	-- -- D1 -- -- D1 E D	-- L1 H -- -- H L1 V	45 45 45 45 105	B B L L R
VW Polo Cross	02/06- 06/09		321 607 600 001	1179	75		16	7	50	1200	321 524 300 107 321 524 300 113	S C2 C S C2 C	E -- E D1	-- L1 H	45 45	B B
VW Polo Cross KIT = towbar inc. electrical kit 13 pins	02/06- 06/09		321 607 900 113	1179	75		18	7	50	1200	electrical kit 13 pins in the kit: 321 524 300 113	S C2 C	E D1	L1 H	45	B
VW Polo Cross Please order cover for bumper cutout at VW dealers.	02/06- 06/09		321 523 600 001	0794	90		16	7	50	1200	321 524 300 113	S C2 C	E D1	L1 H	45	B








Volkswagen

VW Polo Cross KIT = towbar inc. electrical kit 13 pins Please order cover for bumper cutout at VW dealers.	02/06- 06/09		321 523 900 113	0794	90		18	7	50	1200		electrical kit 13 pins in the kit: 321 524 300 113	S	C2	E	D1	L1	H	45	B
VW Polo Cross	06/09-		321 741 600 001	2989	120		15	7	85	1200		321 527 300 107 321 527 300 113 321 527 300 143	S S S	CAN CAN S	E E	-- D1 L1	V V	90 90	L L R	
VW Polo Cross KIT = towbar inc. electrical kit 13 pins	06/09-		321 741 900 113	2989	120		17	7	85	1200		electrical kit 13 pins in the kit: 321 527 300 113	S	CAN	E	D1	L1	V	90	L
VW Polo Cross KIT = towbar inc. electrical kit 13 pins	06/09-		321 741 900 143	2989	120		17	7	85	1200										
VW Polo Cross	06/09-		321 749 600 001	0857	90		18	7	85	1200		321 527 300 107 321 527 300 113 321 527 300 143	S S S	CAN CAN S	E E	-- D1 L1	V V	90 90	L L R	
VW Polo Cross Please order spoiler at VW dealers.	06/09-		321 748 600 001	2896	120		16,5	7	85	1200		321 527 300 107 321 527 300 113 321 527 300 143	S S S	CAN CAN S	E E	-- D1 L1	V V	90 90	L L R	
VW Polo Cross KIT = towbar inc. electrical kit 13 pins Please order spoiler at VW dealers.	06/09-		321 748 900 113	2896	120		18,5	7	85	1200		electrical kit 13 pins in the kit: 321 527 300 113	S	CAN	E	D1	L1	V	90	L
VW Polo Cross KIT = towbar inc. electrical kit 13 pins Please order spoiler at VW dealers.	06/09-		321 748 900 143	2896	120		18,5	7	85	1200		electrical kit 13 pins in the kit: 321 527 300 143	S							R
VW Polo Estate	96-02		344 025 600 001	0427	120		17,6	6,7	70	1200		300 072 300 107 300 072 300 113	-- --	FRE FRE	-- --	-- D1	V L1	V V	B B	
VW Polo Fun It is possible to receive a permission for the assembly of a towbar from VW.	04-09		321 607 600 001	1179	75		16	7	50	1200		321 524 300 107 321 524 300 113	S S	C2 C2	E E	-- D1	-- L1	H H	45 45	B B
VW Polo Fun KIT = towbar inc. electrical kit 13 pins It is possible to receive a permission for the assembly of a towbar from VW.	04-09		321 607 900 113	1179	75		18	7	50	1200		electrical kit 13 pins in the kit: 321 524 300 113	S	C2	E	D1	L1	H	45	B


















VW Polo Fun It is possible to receive a permission for the assembly of a towbar from VW.	04-09		321 523 600 001	0794	90		16	7	50	1200	321 524 300 113	S	C2	E	D1	L1	H	45	B
VW Polo Fun KIT = towbar inc. electrical kit 13 pins It is possible to receive a permission for the assembly of a towbar from VW.	04-09		321 523 900 113	0794	90		18	7	50	1200	electrical kit 13 pins in the kit: 321 524 300 113	S	C2	E	D1	L1	H	45	B
VW Polo Gti	06/09-		321 741 600 001	2989	120		15	7	85	1200	321 527 300 107 321 527 300 113 321 527 300 143	S S S	CAN CAN S	E E E	-- D1 D1	-- L1 L1	V V V	90 90 90	L L R
VW Polo Gti KIT = towbar inc. electrical kit 13 pins	06/09-		321 741 900 113	2989	120		17	7	85	1200	electrical kit 13 pins in the kit: 321 527 300 113	S	CAN	E	D1	L1	V	90	L
VW Polo Gti KIT = towbar inc. electrical kit 13 pins	06/09-		321 741 900 143	2989	120		17	7	85	1200	electrical kit 13 pins in the kit: 321 527 300 143	S							R
VW Polo Gti	06/09-		321 749 600 001	0857	90		18	7	85	1200	321 527 300 107 321 527 300 113 321 527 300 143	S S S	CAN CAN S	E E E	-- D1 D1	-- L1 L1	V V V	90 90 90	L L R
VW Polo Gti Please order cover for bumper cutout at VW dealers.	06/09-		321 748 600 001	2896	120		16,5	7	85	1200	321 527 300 107 321 527 300 113 321 527 300 143	S S S	CAN CAN S	E E E	-- D1 D1	-- L1 L1	V V V	90 90 90	L L R
VW Polo Gti KIT = towbar inc. electrical kit 13 pins Please order cover for bumper cutout at VW dealers.	06/09-		321 748 900 113	2896	120		18,5	7	85	1200	electrical kit 13 pins in the kit: 321 527 300 113	S	CAN	E	D1	L1	V	90	L
VW Polo Gti KIT = towbar inc. electrical kit 13 pins Please order cover for bumper cutout at VW dealers.	06/09-		321 748 900 143	2896	120		18,5	7	85	1200	electrical kit 13 pins in the kit: 321 527 300 143	S							R
VW Polo Hatchback	11/99- 10/01		321 510 600 001	0746	90		14,8	5,2	50	800	300 072 300 107 300 072 300 113	-- --	FRE FRE	-- --	-- D1	-- L1	V V		B B








Volkswagen

VW Polo Hatchback for Polo Fun with permission for the assembly of a towbar by VW , exc. GTI / 150 HP, inc. facelift from 05/05, inc. Blue Motion (a different cutout is necessary)	11/01-09		321 607 600 001	1179	75		16	7	50	1200	-05/05 321 523 300 107 -05/05 321 523 300 113 05/05- 321 524 300 113	S S S	C2 C2 C2	C C C	E E E	-- D1 D1	-- L1 L1	H H H	45 45 45	B B B
VW Polo Hatchback KIT = towbar inc. electrical kit 13 pins for Polo Fun with permission for the assembly of a towbar by VW , exc. GTI / 150 HP, inc. facelift from 05/05, inc. Blue Motion (a different cutout is necessary)	05/05-09		321 607 900 113	1179	75		18	7	50	1200	electrical kit 13 pins in the kit: 321 524 300 113	S	C2	C	E	D1	L1	H	45	B
VW Polo Hatchback for Polo Fun with permission for the assembly of a towbar by VW , exc. GTI / 150 HP, inc. facelift from 05/05, inc. Blue Motion (a different cutout is necessary) Please order the following parts for the bumper cover at VW dealer's: 1 spoiler 6Q6 807 433 B41 1 cover 6Q6 807 397 B41 2 bolt 6Q6 807 643 2 spring cotfers 6Q6 807 180 2 washers 6N0 129 355	11/01-09		321 523 600 001	0794	90		16	7	50	1200	-05/05 321 523 300 107 -05/05 321 523 300 113 05/05- 321 524 300 113	S S S	C2 C2 C2	C C C	E E E	-- D1 D1	-- L1 L1	H H H	45 45 45	B B B
VW Polo Hatchback KIT = towbar inc. electrical kit 13 pins for Polo Fun with permission for the assembly of a towbar by VW , exc. GTI / 150 HP, inc. facelift from 05/05, inc. Blue Motion (a different cutout is necessary) Please order the following parts for the bumper cover at VW dealer's: 1 spoiler 6Q6 807 433 B41 1 cover 6Q6 807 397 B41 2 bolt 6Q6 807 643 2 spring cotfers 6Q6 807 180 2 washers 6N0 129 355	05/05-09		321 523 900 113	0794	90		18	7	50	1200	electrical kit 13 pins in the kit: 321 524 300 113	S	C2	C	E	D1	L1	H	45	B
VW Polo Saloon/Notchback discontinued model	10/03-		321 625 600 001	1578	75		15	7	50	1200	300 072 300 107 300 072 300 113	-- --	FRE FRE	-- --	E1 E1	-- D1	-- L1	V V	B B	
VW Polo Saloon/Notchback	10/03-		321 626 600 001	1682	75		16	7	50	1200	300 072 300 107 300 072 300 113	-- --	FRE FRE	-- --	E1 E1	-- D1	-- L1	V V	B B	






VW Sharan Please order also bumper bracket (no. 321330616001).	95-05/00		321 329 600 001	0003	150		17	12,2	85	2400		321 458 300 107 321 458 300 113	S FRE -- S FRE --	E -- E D1	-- L1	H H	60 60	B B
VW Sharan thermal-insulation plate inc. Please order also bumper bracket (no. 321330616001). Please order cover cap for bumper cutout from VW dealer. discontinued model	95-05/00		321 330 600 001	0007	150		22,2	12,2	85	2400		321 458 300 107 321 458 300 113	S FRE -- S FRE --	E -- E D1	-- L1	H H	60 60	B B
VW Sharan thermal-insulation plate inc. inc. 4WD bumper bracket is not necessary. 4-Motion: Please check the operating instructions of the vehicle before fitting the towbar.	05/00-08/10		321 665 600 001	2138	90		24	12,5	100	2500		321 458 300 107 321 458 300 113	S FRE -- S FRE --	E -- E D1	-- L1	H H	60 60	B B
VW Sharan KIT = towbar inc. electrical kit 13 pins thermal-insulation plate inc. inc. 4WD bumper bracket is not necessary. 4-Motion: Please check the operating instructions of the vehicle before fitting the towbar.	05/00-08/10		321 665 900 113	2138	90		26	12,5	100	2500		electrical kit 13 pins in the kit. 321 458 300 113	S FRE --	E D1	L1	H	60	B
VW Sharan thermal-insulation plate inc. inc. 4WD bumper bracket is not necessary 4-Motion: Please check the operating instructions of the vehicle before fitting the towbar. Vehicles with "tyre-fit-system". Please order support for towball at VW dealers. order no. 7M3 803 994 B	05/00-08/10		321 775 600 001	0681	90		26	12,5	100	2500		321 458 300 107 321 458 300 113	S FRE -- S FRE --	E -- E D1	-- L1	H H	60 60	B B







Volkswagen

VW Sharan KIT = towbar inc. electrical kit 13 pins thermal-insulation plate inc. inc. 4WD bumper bracket is not necessary 4-Motion: Please check the operating instructions of the vehicle before fitting the towbar. Vehicles with "tyre-fit-system": Please order support for towball at VW dealers, order no. 7M3 803 994 B	05/00-08/10		321 775 900 113	0681	90		28	12,5	100	2500	electrical kit 13 pins in the kit: 321 458 300 113	S	FRE	--	E	D1	L1	H	60	B	
VW Sharan	09/10-		321 698 600 001	3315				22	12,3	100	2500	321 600 300 107 321 600 300 113 321 600 300 153	S	CAN	C	E	--	V	105	L	
VW Sharan KIT = towbar inc. electrical kit 13 pins	09/10-		321 698 900 113	3315				24	12,3	100	2500	electrical kit 13 pins in the kit: 321 600 300 113	S	CAN	C	E	D	L1	V	105	L
VW Sharan	09/10-		321 699 600 001	3314				22	12,3	100	2500	321 600 300 107 321 600 300 113 321 600 300 153	S	CAN	C	E	--	V	105	L	
VW Sharan Please order separately Spoiler and cover for bumper cutout at VW dealer's.	09/10-		321 700 600 001	3316				22	12,3	100	2500	321 600 300 107 321 600 300 113 321 600 300 153	S	CAN	C	E	--	V	105	L	
VW Sharan KIT = towbar inc. electrical kit 13 pins Please order separately Spoiler and cover for bumper cutout at VW dealer's.	09/10-		321 700 900 113	3316				24	12,3	100	2500	electrical kit 13 pins in the kit: 321 600 300 113	S	CAN	C	E	D	L1	V	105	L
VW Sharan KIT = towbar inc. electrical kit 13 pins Please order separately Spoiler and cover for bumper cutout at VW dealer's.	09/10-		321 700 900 153	3316				24	12,3	100	2500	electrical kit 13 pins in the kit: 321 600 300 153	S	CAN	C	E	D	L1	V	105	R
VW Tiguan replaced by: 305421600001 discontinued model	11/07-		321 727 600 001	2520	90			19	12	140	2500	321 600 300 107 321 600 300 113 321 600 300 153	S	CAN	C	E	--	V	105	L	
VW Tiguan	11/07-		305 421 600 001	3415	90			19	12,6	100	2500	321 600 300 107 321 600 300 113	S	CAN	C	E	--	V	105	L	






VW Tiguan KIT = towbar inc. electrical kit 13 pins	11/07-		321 727 900 113	2520	90	✂	21	12	140	2500	electrical kit 13 pins in the kit: 321 600 300 113	S CAN C	E	D	L1	V	105	L
VW Tiguan SIARR discontinued model	11/07-		321 745 600 001	0100	90	✂	20	11,59	100	2240	321 600 300 107 321 600 300 113 321 600 300 153	S CAN C S CAN C S CAN C	E E E	D D D	-- L1 L1	V V V	105 105 105	L L R
VW Tiguan replaced by: 305423600001 discontinued model	11/07-		321 728 600 001	2507	90	✂	20	12	140	2500	321 600 300 107 321 600 300 113 321 600 300 153	S CAN C S CAN C S CAN C	E E E	-- D D	-- L1 L1	V V V	105 105 105	L L R
VW Tiguan	11/07-		305 423 600 001	3281	90	✂	21	12,6	100	2500	321 600 300 107 321 600 300 113	S CAN C S CAN C	E E	-- D	-- L1	V V	105 105	L L
VW Tiguan KIT = towbar inc. electrical kit 13 pins	11/07-		321 728 900 113	2507	90	✂	21	12	140	2500	electrical kit 13 pins in the kit: 321 600 300 113	S CAN C	E	D	L1	V	105	L
VW Tiguan KIT = towbar inc. electrical kit 13 pins	11/07-		321 728 900 153	2507	90	✂	21	12	140	2500	electrical kit 13 pins in the kit: 321 600 300 153	S CAN C	E	D	L1	V	105	R
VW Touareg inc. models 04/10- exc. vehicles with spare wheel on tailgate To guarantee an optimal appearance of the vehicle it is necessary to order the rear lower spoiler and the cover (depending on the equipment of the vehicle) separately from the VW dealer (see original VW catalogue ETKA, table 806-50). For vehicles -04/10 please order separately foam support at VW dealers.	11/02-		321 735 600 001	0723	150	✂	33,5	16,4	140	3500	-04/10 321 500 300 113 04/10- exc. vehicles with ACC / distance control 321 765 300 107 04/10- exc. vehicles with ACC / distance control 321 765 300 113	S CAN -- S CAN C	E E	D E	L1 L1	H H	45 180	B B



Volkswagen

VW Touareg inc. models 04/10- exc. vehicles with spare wheel on tailgate To guarantee an optimal appearance of the vehicle it is necessary to order the rear lower spoiler and the cover (depending on the equipment of the vehicle) separately from the VW dealer (see original VW catalogue ETKA, table 806-50). For vehicles -04/10 please order separately foam support at VW dealers.	11/02- 04/10		321 736 600 001	0904	150	34	16,4	140	3500	-04/10 321 500 300 113 04/10- exc. vehicles with ACC / distance control 321 765 300 107 04/10- exc. vehicles with ACC / distance control 321 765 300 113	S CAN -- S CAN C S CAN C	E E	D D	L1 L1	H H	45 180	B B
VW Touareg KIT = towbar inc. electrical kit 13 pins inc. models 04/10- exc. vehicles with spare wheel on tailgate To guarantee an optimal appearance of the vehicle it is necessary to order the rear lower spoiler and the cover (depending on the equipment of the vehicle) separately from the VW dealer (see original VW catalogue ETKA, table 806-50). For vehicles -04/10 please order separately foam support at VW dealers.	11/02- 04/10		321 500 900 113	0904	150	36	16,4	140	3500	electrical kit 13 pins in the kit: 321 500 300 113	S CAN --	E	D	L1	H	45	B
VW Touareg KIT = towbar inc. electrical kit 13 pins inc. models 04/10- exc. vehicles with spare wheel on tailgate To guarantee an optimal appearance of the vehicle it is necessary to order the rear lower spoiler and the cover (depending on the equipment of the vehicle) separately from the VW dealer (see original VW catalogue ETKA, table 806-50). For vehicles -04/10 please order separately foam support at VW dealers.	04/10-		321 736 900 113	0904	150	36	16,4	140	3500	electrical kit 13 pins in the kit: exc. vehicles with ACC / distance control 321 765 300 113	S CAN C	E				180	B
VW Touran inc. Cross-Touran	03/03-		321 536 600 001	1098	90	19,5	9,9	75	1800	321 538 300 147 321 600 300 107 321 600 300 113 321 600 300 153	S CAN C S CAN C S CAN C S CAN C	E E E E	-- -- D D	-- -- L1 L1	V V V V	90 105 105 105	B L L R
VW Touran KIT = towbar inc. electrical kit 13 pins inc. Cross-Touran	03/03-		321 536 900 113	1098	90	21,5	9,9	75	1800	electrical kit 13 pins in the kit: 321 600 300 113	S CAN C	E	D	L1	V	105	L



VW Touran inc. Cross-Touran SIARR discontinued model	03/03- 09/10		321 743 600 001	4701	90	✂	23	8,89	75	1500		321 538 300 147 321 600 300 107 321 600 300 113 321 600 300 153	S CAN S CAN S CAN S CAN	C C C C	E E D D	-- -- L1 L1	V V V V	90 105 105 105	B L L R	
VW Touran inc. Cross-Touran 08/10-: Please order separately cover for bumper cutout at VW dealer's.	03/03-		321 838 600 001	1099	90	✂	20	9,9	75	1800		321 538 300 147 321 600 300 107 321 600 300 113 321 600 300 153	S CAN S CAN S CAN S CAN	C C C C	E E D D	-- -- L1 L1	V V V V	90 105 105 105	B L L R	
VW Touran KIT = towbar inc. electrical kit 13 pins inc. Cross-Touran 08/10-: Please order separately cover for bumper cutout at VW dealer's.	03/03-		321 838 900 113	1099	90	✂	22	9,9	75	1800		electrical kit 13 pins in the kit: 321 600 300 113	S CAN	C	E	D	L1	V	105	L
VW Touran KIT = towbar inc. electrical kit 13 pins inc. Cross-Touran 08/10-: Please order separately cover for bumper cutout at VW dealer's.	03/03-		321 838 900 153	1099	90	✂	22	9,9	75	1800		electrical kit 13 pins in the kit: 321 600 300 153	S CAN	C	E	D	L1	V	105	R
VW Transporter van / minibus and flatbed with rear wheel drive for Carat/Caravelle/Magnum/ California/Blue-Star/White-Star and Atlantic: Please also order 1 set of bumper brackets (no. 921164631001)	08/79-		321 164 600 001	0027	90	✂	18,2	11,8	100	2200		300 060 300 107 300 060 300 113 321 600 300 153	-- -- S	C2 C2 CAN	-- -- E	-- D1 D	-- L1 L1	H H V	45 45 105	B B R
VW Transporter T4 Chassis Cab inc. Syncro	09/90- 03		321 316 600 001	0136	90		26,4	13,7	105	2600		09/98- 300 052 300 107 09/98- 300 052 300 113 -08/98 300 060 300 107 -08/98 300 060 300 113	-- FRE -- FRE -- C2 -- C2	-- -- -- -- -- --	-- -- D1 -- -- --	-- V -- V -- H -- H	B B B B 45 B 45			


Volkswagen

VW Transporter T4 Chassis Cab low-load flatbed, inc. Syncro discontinued model	09/90- 03		321 317 600 001	0136	90	26,5	13,7 105 2600			09/98- 300 052 300 107 09/98- 300 052 300 113 -08/98 300 060 300 107 -08/98 300 060 300 113	-- FRE -- -- FRE -- -- C2 -- -- C2 --	-- -- D1 -- -- -- -- D1 --	-- -- D1 -- -- -- -- D1 --	V V H 45 H 45	B B B B
VW Transporter T4 Van inc. Syncro	09/90- 01/96		321 358 600 001	1742	90	16,5	13,4 100 2600			321 315 300 107 321 315 300 113	S C2 -- S C2 --	-- D1 L1 H D1 L1 H	H -- L1 H L1 H	H 30 H 30	L L
VW Transporter T4 Van inc. Syncro and Caravelle	01/96- 07/03		321 391 600 001	0050	90	20,2	13,4 105 2600			-08/98 321 315 300 107 -08/98 321 315 300 113 09/98- 321 316 300 107 09/98- 321 316 300 113	S C2 -- S C2 -- S C2 -- S C2 --	-- D1 L1 H -- -- D1 L1 H	H -- L1 H H -- H -- L1 H	H 30 H 30 H 30 H 30	L L L L
VW Transporter T4 Van KIT = towbar inc. electrical kit 13 pins inc. Syncro and Caravelle	09/98- 07/03		321 391 900 113	0050	90	22,2	13,4 105 2600			electrical kit 13 pins in the kit: 321 316 300 113	S C2 --	-- D1 L1 H	-- L1 H	H 30	L
VW Transporter T4 Van inc. Syncro and Caravelle bracket for towball: 921405631005	01/96- 07/03		321 405 600 001	0175	90	21	13,4 100 2600			-08/98 321 315 300 107 -08/98 321 315 300 113 09/98- 321 316 300 107 09/98- 321 316 300 113	S C2 -- S C2 -- S C2 -- S C2 --	-- D1 L1 H -- -- D1 L1 H	H -- L1 H H -- H -- L1 H	H 30 H 30 H 30 H 30	L L L L


VW Transporter T5 Chassis Cab high-load flatbed	03-		321 538 600 001	0136	90	26,4	13,7	100	2500	-10/09	321 452 300 107	S	C2	C	--	--	H	45	L	
										-10/09	321 452 300 113	S	C2	C	--	--	H	45	L	
										10/09-	321 454 300 107	S	CAN	C	E	--	V	180	L	
										10/09-	321 454 300 113	S	CAN	C	E	D	L1	V	180	L
										10/09-extension kit for vehicles without fuse box under the drivers seat	321 455 300 001									60
										07/11-05/12 for vehicles with preparation:	321 651 300 113	S	CAN	--	E	D	--	H	15	B
										05/12- for vehicles with preparation:	321 653 300 113	S								
VW Transporter T5 Chassis Cab low-load flatbed	03-		321 601 600 001	0136	90	26,4	13,7	100	2500	-10/09	321 452 300 107	S	C2	C	--	--	H	45	L	
										-10/09	321 452 300 113	S	C2	C	--	--	H	45	L	
										10/09-	321 454 300 107	S	CAN	C	E	--	V	180	L	
										10/09-	321 454 300 113	S	CAN	C	E	D	L1	V	180	L
										10/09-extension kit for vehicles without fuse box under the drivers seat	321 455 300 001									60
										07/11-05/12 for vehicles with preparation:	321 651 300 113	S	CAN	--	E	D	--	H	15	B
										05/12- for vehicles with preparation:	321 653 300 113	S								





Volkswagen

<p>VW Transporter T5 Van KIT = towbar inc. electrical kit 13 pins inc. 4 Motion To guarantee an optimal fit of the bumper it is necessary to mount 2 foam carriers, please order from VW-dealer, order no. 7H0 807 252 A</p>	<p>03-10/09</p> 	<p>321 792 900 113</p>	<p>1870 115 21,5 14 100 2800</p>	<p>additional cable for continuous plus (Please order additionally.) 321 025 300 113 additional wire trailer stability system it is possible to activate trailer stability system starting from the following chassis numbers: WV2ZZZ7HZ5X013 931 and WV2ZZZ7HZ5H059 728 321 451 300 100 electrical kit 13 pins in the kit: 321 451 300 113</p>	<p>-- -- -- -- --</p>	<p>-- -- -- -- --</p>	<p>-- -- -- -- --</p>	<p>-- -- -- -- --</p>	<p>L</p>
<p>VW Transporter T5 Van KIT = towbar inc. electrical kit 13 pins inc. 4 Motion, exc. Rockton To guarantee an optimal fit of the bumper it is necessary to mount 2 foam carriers, please order from VW-dealer, order no. 7H0 807 252 A Van (without back side windows): To guarantee an optimal fit of the bumper it is necessary to mount - 1 x plastic rail 7H0 807 723 - 8 x gasket 357 853 586 B - 8 x clip 701 867 299</p>	<p>10/09-</p> 	<p>321 650 900 113</p>	<p>1870 120 22 14 100 2800</p>	<p>additional cable for continuous plus (Please order additionally.) 321 025 300 113 electrical kit 13 pins in the kit: 321 454 300 113 extension kit for vehicles without fuse box under the drivers seat (Please order additionally.) 321 455 300 001</p>	<p>-- -- -- -- --</p>	<p>-- -- -- -- --</p>	<p>-- -- -- -- --</p>	<p>S CAN C E D L1 V 180</p>	<p>L</p>










VW Transporter T5 Van inc. 4 Motion, exc. Rockton To guarantee an optimal fit of the bumper it is necessary to mount 2 foam carriers, please order from VW-dealer, order no. 7H0 807 252 A Van (without back side windows) 10/09-: To guarantee an optimal fit of the bumper it is necessary to mount - 1 x plastic rail 7H0 807 723 - 8 x gasket 357 853 586 B - 8 x clip 701 867 299		03-	321 681 600 001	2288	120	20	14	100	2800	additional cable for continuous plus 321 025 300 113 additional wire trailer stability system it is possible to activate trailer stability system starting from the following chassis numbers: WV2ZZZ7HZ5X013 931 and WV2ZZZ7HZ5H059 728 321 451 300 100 -10/09 321 451 300 107 -10/09 321 451 300 113 -10/09 321 451 300 147 -10/09 321 453 300 107 10/09- 321 454 300 107 10/09- 321 454 300 113 10/09-extension kit for vehicles without fuse box under the drivers seat 321 455 300 001 07/11-05/12 for vehicles with preparation: 321 650 300 113 05/12- for vehicles with preparation: 321 652 300 113	S S S S S S S S S S S S S	-- -- C C C C C C C C C C C C	E E E -- -- -- -- -- -- -- -- -- --	D -- -- D1 -- -- -- -- -- -- -- --	L V -- -- H H H H H V V V V V	L -- -- L L L L L L L L L L L
---	---	-----	------------------------	------	-----	----	----	-----	------	--	---	--	---	---	--	--













Volkswagen





















<p>VW Transporter T5 Van inc. 4-Motion, exc. Rockton To guarantee an optimal fit of the bumper it is necessary to mount a foam support, VW no. 7H0 807 252 A. Please order from VW dealer. Please order also from VW dealer: bracket for towball: 7H0 804 897 A tensioning belt: 7H0 867 749 Van (without back side windows) 10/09-: To guarantee an optimal fit of the bumper it is necessary to mount - 1 x plastic rail 7H0 807 723 - 8 x gasket 357 853 586 B - 8 x clip 701 867 299</p>		<p>321 651 600 001</p>	<p>1871</p>	<p>120</p>	<p>20</p>	<p>14 100</p>	<p>2800</p>	<p>additional cable for continuous plus 321 025 300 113 additional wire trailer stability system is possible to activate trailer stability system starting from the following chassis numbers: WV2ZZZ7HZ5X013 931 and WV2ZZZ7HZ5H059 728 321 451 300 100 -10/09 321 451 300 107 -10/09 321 451 300 113 -10/09 321 451 300 147 -10/09 321 453 300 107 10/09- 321 454 300 107 10/09- 321 454 300 113 10/09-extension kit for vehicles without fuse box under the drivers seat 321 455 300 001 07/11-05/12 for vehicles with preparation: 321 650 300 113 05/12- for vehicles with preparation: 321 652 300 113</p>	<p>--</p>	<p>--</p>	<p>--</p>	<p>--</p>	<p>D</p>	<p>L</p>	<p>V</p>	<p>60</p>	<p>B</p>
<p>S</p>	<p>E</p>	<p>--</p>	<p>V</p>	<p>60</p>	<p>B</p>												
<p>S</p>	<p>C2</p>	<p>C</p>	<p>--</p>	<p>H</p>	<p>45</p>	<p>L</p>											
<p>S</p>	<p>C2</p>	<p>C</p>	<p>D1</p>	<p>H</p>	<p>45</p>	<p>L</p>											
<p>S</p>	<p>C2</p>	<p>C</p>	<p>--</p>	<p>H</p>	<p>45</p>	<p>R</p>											
<p>S</p>	<p>C2</p>	<p>C</p>	<p>--</p>	<p>H</p>	<p>45</p>	<p>L</p>											
<p>S</p>	<p>CAN</p>	<p>C</p>	<p>--</p>	<p>V</p>	<p>180</p>	<p>L</p>											
<p>S</p>	<p>CAN</p>	<p>C</p>	<p>D1</p>	<p>V</p>	<p>180</p>	<p>L</p>											
<p>S</p>	<p>CAN</p>	<p>--</p>	<p>D</p>	<p>L1</p>	<p>30</p>	<p>B</p>											
<p>S</p>	<p>CAN</p>	<p>--</p>	<p>D</p>	<p>L1</p>	<p>30</p>	<p>B</p>											

<p>VW Transporter T5 Van KIT = towbar inc. electrical kit 13 pins inc. 4-Motion To guarantee an optimal fit of the bumper it is necessary to mount a foam support, VW no. 7H0 807 252 A. Please order from VW dealer. Please order also from VW dealer: bracket for towball: 7H0 804 897 A tensioning belt: 7H0 867 749</p>	<p>03-10/09</p> 	<p>321 717 900 113</p>	<p>1871</p>	<p>120</p>	<p>21</p>	<p>14 100 2800</p>	<p>electrical kit 13 pins in the kit: 321 451 300 113</p>	<p>S C2</p>	<p>E D1 L1 H</p>	<p>45 L</p>
<p>VW Transporter T5 Van KIT = towbar inc. electrical kit 13 pins inc. 4-Motion To guarantee an optimal fit of the bumper it is necessary to mount a foam support, VW no. 7H0 807 252 A. Please order from VW dealer. Please order also from VW dealer: bracket for towball: 7H0 804 897 A tensioning belt: 7H0 867 749 Van (without back side windows): To guarantee an optimal fit of the bumper it is necessary to mount - 1 x plastic rail 7H0 807 723 - 8 x gasket 357 853 586 B - 8 x clip 701 867 299</p>	<p>10/09-</p> 	<p>321 651 900 113</p>	<p>1871</p>	<p>115</p>	<p>22</p>	<p>14 100 2800</p>	<p>additional cable for continuous plus (Please order additionally.) 321 025 300 113 electrical kit 13 pins in the kit: 321 454 300 113 extension kit for vehicles without fuse box under the drivers seat (Please order additionally.) 321 455 300 001</p>	<p>-- -- S CAN C E D L1 V 180</p>	<p>D L V</p>	<p>L 60</p>
<p>VW Up This towbar can only be used in combination with load carriers/cycle carriers! The vehicle is not homologated for towing trailers. Monoflex</p>	<p>11-</p> 	<p>350 044 600 001</p>	<p>---</p>	<p>15</p>	<p>50</p>	<p>321 044 300 113</p>	<p>S</p>	<p></p>	<p></p>	<p></p>
<p>VW Vento discontinued model</p>	<p>03/92-09/98</p> 	<p>321 332 600 001</p>	<p>0161</p>	<p>90</p>	<p>14,8</p>	<p>8,2 75 1500</p>	<p>300 060 300 107 300 060 300 113</p>	<p>-- -- C2 -- --</p>	<p>-- -- D1 L1 H</p>	<p>45 B 45 B</p>















Volvo



















Volvo 740 / 760 / 780 / 940 / 960 discontinued model	06/82-		320 035 600 001	0159	150	✂ 17,3	10,4 100 2100							--	A --	E1 --	--	V	90	B
Volvo 850 Saloon and Estate exc. 4 WD, exc. vehicles with tow-hook on the longitudinal beam right side (from model '92)	93-		320 041 600 001	0022	>150	23,6	9,7 75 1900							--	A --	E1 --	--	V	90	B
Volvo 850 Saloon and Estate exc. 4 WD, exc. vehicles with tow-hook on the longitudinal beam right side (from model '92) discontinued model	93-		320 040 600 001	0011	150	25,2	9,7 75 1900							--	A --	E1 --	--	V	90	B
Volvo C30	12/06-		320 065 600 001	1849	180	✂ 12	8,9 100 1600							S CAN --	S CAN --	E2 --	--	H	60	B
Volvo C30 KIT = towbar inc. electrical kit 13 pins	12/06-		320 065 900 113	1849	180	✂ 14	8,9 100 1600							S CAN --	S CAN --	E2 --	--	H	60	B
Volvo C30	12/06-		320 066 600 001	1829	180	✂ 14,5	8,9 100 1600							S CAN --	S CAN --	E2 --	--	H	60	B
Volvo C30 KIT = towbar inc. electrical kit 13 pins	12/06-		320 066 900 113	1829	180	✂ 16,5	8,9 100 1600							S CAN --	S CAN --	E2 --	--	H	60	B
Volvo C70 / S70 / V70 exc. 4 WD, from '99 an exhaust bracket must be mounted additionally (order no. 920040631001) C70 -05/06	02/97- 03/00		320 041 600 001	0022	150	23,6	9,7 75 1900							--	A --	E1 --	--	V	90	B
Volvo C70 / S70 / V70 exc. 4 WD, from '99 an exhaust bracket must be mounted additionally (order no. 920040631001) C70 -05/06 discontinued model	02/97- 03/00		320 040 600 001	0011	>150	23	9,7 75 1900							--	A --	E1 --	--	V	90	B

















Volvo S40 / V40 Monoflex	04/96- 01/04		320 093 600 001	2239	40		21	8,22	80	1500	-06/00 300 072 300 107	-- FRE --	E1 --	--	V	B	
											-06/00 300 072 300 113	-- FRE --	E1 D1	L1	V	B	
											07/00- 300 210 300 107	-- A --	E1 --	--	V	90	B
											07/00- 300 210 300 113	-- A --	E1 D1	L1	V	90	B
Volvo S40 / V50 exc. Sports, exc. R design	02/04-		320 059 600 001	1849	40		9,7	8,9	100	1600	for V50, -05/07: 320 051 300 113	S FRE --	E2 D	--	H	60	B
											for S40, -05/07: 320 058 300 113	S FRE --	E2 D	L1	H	60	B
											for S40/V50, 06/07-: 320 240 300 107	S CAN --	E2 --	--	H	60	B
											for S40/V50, 06/07-: 320 240 300 113	S CAN --	E2 D	L1	H	60	B
Volvo S40 / V50 KIT = towbar inc. electrical kit 13 pins exc. Sports, exc. R design	06/07-		320 059 900 113	1849	40		11,7	8,9	100	1600	electrical kit 13 pins in the kit: 320 240 300 113	S CAN --	E2 D	L1	H	60	B
											for V50, -05/07: 320 051 300 113	S FRE --	E2 D	--	H	60	B
											for S40, -05/07: 320 058 300 113	S FRE --	E2 D	L1	H	60	B
											for S40/V50, 06/07-: 320 240 300 107	S CAN --	E2 --	--	H	60	B
Volvo S40 / V50 exc. Sports, exc. R design	02/04-		320 060 600 001	1829	40		10	8,9	100	1600	for V50, -05/07: 320 051 300 113	S FRE --	E2 D	--	H	60	B
											for S40, -05/07: 320 058 300 113	S FRE --	E2 D	L1	H	60	B
											for S40/V50, 06/07-: 320 240 300 107	S CAN --	E2 --	--	H	60	B
											for S40/V50, 06/07-: 320 240 300 113	S CAN --	E2 D	L1	H	60	B
Volvo S40 / V50 KIT = towbar inc. electrical kit 13 pins exc. Sports, exc. R design	06/07-		320 060 900 113	1829	40		12	8,9	100	1600	electrical kit 13 pins in the kit: 320 240 300 113	S CAN --	E2 D	L1	H	60	B
											for V50, -05/07: 320 051 300 113	S FRE --	E2 D	--	H	60	B
Volvo S60 exc. S60R - 300HP Monoflex	00- 05/10		320 083 600 001	2113	100		23	8,91	80	1600	-09/04 320 049 300 113	S FRE C	E D	L	H	45	B
											10/04- 320 320 300 113	S FRE --	E2 D	L1	H	60	B









Volvo S60 exc. S60R - 300HP Monoflex	00-05/10		320 085 600 001	2113	105		24	8,91	80	1600		-09/04 320 049 300 113 10/04- 320 320 300 113	S FRE -- S FRE --	E D -- E2 D L1 H	L H	45	B
Volvo S60 Monoflex	06/10-		320 071 600 001	4294	90		15	10,2	80	1800		320 076 300 107 320 076 300 113	S CAN -- S CAN --	E2 -- E2 D L1 H	H	45	B
Volvo S60 KIT = towbar inc. electrical kit 13 pins Monoflex	06/10-		320 071 900 113	4294	90		17	10,2	80	1800		electrical kit 13 pins in the kit: 320 076 300 113	S CAN --	E2 D L1 H	H	45	B
Volvo S60 Monoflex	06/10-		320 072 600 001	4289	90		17	10,2	80	1800		320 076 300 107 320 076 300 113	S CAN -- S CAN --	E2 -- E2 D L1 H	H	45	B
Volvo S60 KIT = towbar inc. electrical kit 13 pins Monoflex	06/10-		320 072 900 113	4289	90		19	10,2	80	1800		electrical kit 13 pins in the kit: 320 076 300 113	S CAN --	E2 D L1 H	H	45	B
Volvo S80 inc. AWD 98-12/03 Monoflex	98-07/06		320 091 600 001	1785	100		21	10,28	80	2000		-99 300 072 300 107 -99 300 072 300 113 99-09/04 320 049 300 113	-- FRE -- -- FRE -- S FRE C	E1 -- E1 D1 E D L H	-- V L1 V L H	45	B
Volvo S80	98-07/06		320 050 600 001	1151	150		25	10,3	100	2000		-99 300 072 300 107 -99 300 072 300 113 99-09/04 320 049 300 113	-- FRE -- -- FRE -- S FRE C	E1 -- E1 D1 E D L H	-- V L1 V L H	60	B
Volvo S80 without height control	07/06-		320 067 600 001	2431	>60		16	10,6	75	2000		320 400 300 113	S FRE --	E2 D1 L1 H	H	60	B
Volvo S80 without height control	07/06-		320 068 600 001	2386	>60		18	10,6	75	2000		320 400 300 113	S FRE --	E2 D1 L1 H	H	60	B
Volvo S80 with height control discontinued model	07/06-		320 080 600 001	2386	>60		18,5	10,6	75	2000		320 400 300 113	S FRE --	E2 D1 L1 H	H	60	B

Volvo























































Volvo V70 with height control exc. 4 WD		03/00- 09/07	320 053 600 001	1151	150		25	10,3	120	2000	-09/04 320 049 300 113 10/04- 320 540 300 113	S FRE -- S FRE --	E2 D E2 D	L1 H L1 H	45 B 45 B
Volvo V70 without height control inc. AWD Monoflex		09/07-	320 069 600 001	3759	90		20	10,99	85	2100	discontinued model: 320 542 300 107 discontinued model: 320 542 300 113 320 543 300 107 320 543 300 113	S CAN -- S CAN -- S CAN -- S CAN --	E2 -- E2 D E2 -- E2 D1	H -- L1 H -- H L1 H	45 B 45 B 45 B 45 B
Volvo V70 KIT = towbar inc. electrical kit 13 pins without height control inc. AWD Monoflex		09/07-	320 069 900 113	3759	90		22	10,99	85	2100	electrical kit 13 pins in the kit: 320 543 300 113	S CAN --	E2 D1	L1 H	45 B
Volvo V70 without height control inc. AWD Monoflex		09/07-	320 075 600 001	4379	60		22	10,99	85	2100	discontinued model: 320 542 300 107 discontinued model: 320 542 300 113 320 543 300 107 320 543 300 113	S CAN -- S CAN -- S CAN -- S CAN --	E2 -- E2 D E2 -- E2 D1	H -- L1 H -- H L1 H	45 B 45 B 45 B 45 B
Volvo V70 KIT = towbar inc. electrical kit 13 pins without height control inc. AWD Monoflex		09/07-	320 075 900 113	4379	60		24	10,99	85	2100	electrical kit 13 pins in the kit: 320 543 300 113	S CAN --	E2 D1	L1 H	45 B
Volvo V70 with height control inc. AWD Monoflex		09/07-	320 073 600 001	3759	90		20	10,99	85	2100	discontinued model: 320 542 300 107 discontinued model: 320 542 300 113 320 543 300 107 320 543 300 113	S CAN -- S CAN -- S CAN -- S CAN --	E2 -- E2 D E2 -- E2 D1	H -- L1 H -- H L1 H	45 B 45 B 45 B 45 B
Volvo V70 KIT = towbar inc. electrical kit 13 pins with height control inc. AWD Monoflex		09/07-	320 073 900 113	3759	90		22	10,99	85	2100	electrical kit 13 pins in the kit: 320 543 300 113	S CAN --	E2 D1	L1 H	45 B

Volvo V70 with height control inc. AWD Monoflex discontinued model	09/07-		320 081 600 001	3759	90		20	10,99	85	2100	320 543 300 107 320 543 300 113	S CAN -- S CAN --	E2 -- E2 D1	-- L1	H H	45 45	B B
Volvo V70 without height control inc. AWD Monoflex discontinued model	09/07-		320 094 600 001	3759	90		20	10,99	85	2100	320 543 300 107 320 543 300 113	S CAN -- S CAN --	E2 -- E2 D1	-- L1	H H	45 45	B B
Volvo V70 with height control inc. AWD replaced by: 320076600001 Monoflex discontinued model	09/07-		320 074 600 001	3759	90		20	10,99	85	2100	320 543 300 107 320 543 300 113	S CAN -- S CAN --	E2 -- E2 D1	-- L1	H H	45 45	B B
Volvo V70 with height control inc. AWD Monoflex	09/07-		320 076 600 001	4380	60		24	10,99	85	2100	320 543 300 107 320 543 300 113	S CAN -- S CAN --	E2 -- E2 D1	-- L1	H H	45 45	B B
Volvo V70 KIT = towbar inc. electrical kit 13 pins with height control inc. AWD Monoflex	09/07-		320 076 900 113	4380	60		24	10,99	85	2100	electrical kit 13 pins in the kit: 320 543 300 113	S CAN --	E2 D1	L1	H	45	B
Volvo XC60 Monoflex	11/08-		320 063 600 001	6183	90		21	11	90	2000	320 543 300 107 320 543 300 113	S CAN -- S CAN --	E2 -- E2 D1	-- L1	H H	45 45	B B
Volvo XC60 KIT = towbar inc. electrical kit 13 pins Monoflex	11/08-		320 063 900 113	6183	90		23	11	90	2000	electrical kit 13 pins in the kit: 320 543 300 113	S CAN --	E2 D1	L1	H	45	B
Volvo XC60 Monoflex discontinued model	11/08-		320 084 600 001	6183	90		22	11	90	2000	320 543 300 107 320 543 300 113	S CAN -- S CAN --	E2 -- E2 D1	-- L1	H H	45 45	B B
Volvo XC60 Monoflex	11/08-		320 064 600 001	3967	90		24	11	90	2000	320 543 300 107 320 543 300 113	S CAN -- S CAN --	E2 -- E2 D1	-- L1	H H	45 45	B B

Volvo XC60 KIT = towbar inc. electrical kit 13 pins Monoflex	11/08-		320 064 900 113	3967	90		26	11	90	2000		electrical kit 13 pins in the kit: 320 543 300 113	S CAN --	E2 D1	L1	H	45	B
Volvo XC70 Monoflex	03/00- 09/07		320 086 600 001	1998	100		17	10,28	80	2000		-09/04 320 049 300 113 10/04- 320 540 300 113	S FRE C S FRE --	E D E2 D	L L1	H H	45 45	B B
Volvo XC70 Monoflex	03/00- 09/07		320 097 600 001	4269	100		26	10,28	80	2000		-09/04 320 049 300 113 10/04- 320 540 300 113	S FRE C S FRE --	E D E2 D	L L1	H H	45 45	B B
Volvo XC70 without height control Monoflex	09/07-		320 073 600 001	3759	90		20	10,99	80	2100		discontinued model: 320 542 300 107 discontinued model: 320 542 300 113 320 543 300 107 320 543 300 113	S CAN -- S CAN -- S CAN -- S CAN --	E2 -- E2 D E2 -- E2 D1	-- L1 -- L1	H H H H	45 45 45 45	B B B B
Volvo XC70 KIT = towbar inc. electrical kit 13 pins without height control Monoflex	09/07-		320 073 900 113	3759	90		22	10,99	80	2100		electrical kit 13 pins in the kit: 320 543 300 113	S CAN --	E2 D1	L1	H	45	B
Volvo XC70 with height control Monoflex	09/07-		320 095 600 001	3759	90		20	10,99	85	2100		discontinued model: 320 542 300 107 discontinued model: 320 542 300 113 320 543 300 107 320 543 300 113	S CAN -- S CAN -- S CAN -- S CAN --	E2 -- E2 D E2 -- E2 D1	-- L1 -- L1	H H H H	45 45 45 45	B B B B
Volvo XC70 KIT = towbar inc. electrical kit 13 pins with height control Monoflex	09/07-		320 095 900 113	3759	90		22	10,99	85	2100		electrical kit 13 pins in the kit: 320 543 300 113	S CAN --	E2 D1	L1	H	45	B
Volvo XC70 without height control Monoflex discontinued model	09/07-		320 081 600 001	3759	90		20	10,99	85	2100		320 543 300 107 320 543 300 113	S CAN -- S CAN --	E2 -- E2 D1	-- L1	H H	45 45	B B

Volvo XC70 without height control replaced by 320076600001 Monoflex discontinued model	09/07-		320 074 600 001	3759	90	✂	20	10,99	85	2100		320 543 300 107 320 543 300 113	S CAN -- S CAN --	E2 -- E2 D1	-- L1	H H	45 45	B B
Volvo XC70 without height control Monoflex	09/07-		320 076 600 001	4380	60	✂	24	10,99	85	2100		320 543 300 107 320 543 300 113	S CAN -- S CAN --	E2 -- E2 D1	-- L1	H H	45 45	B B
Volvo XC70 KIT = towbar inc. electrical kit 13 pins without height control Monoflex	09/07-		320 076 900 113	4380	60	✂	24	10,99	85	2100		electrical kit 13 pins in the kit: 320 543 300 113	S CAN --	E2 D1	L1	H	45	B
Volvo XC70 with height control Monoflex	09/07-		320 092 600 001	3759	90	✂	20	10,99	80	2100		discontinued model: 320 542 300 107 discontinued model: 320 542 300 113 320 543 300 107 320 543 300 113	S CAN -- S CAN -- S CAN -- S CAN --	E2 -- E2 D E2 -- E2 D1	-- L1 -- L1	H H H H	45 45 45 45	B B B B
Volvo XC70 KIT = towbar inc. electrical kit 13 pins with height control Monoflex	09/07-		320 092 900 113	3759	90	✂	22	10,99	80	2100		electrical kit 13 pins in the kit: 320 543 300 113	S CAN --	E2 D1	L1	H	45	B
Volvo XC90 Monoflex	01/03-		320 098 600 001	2374	120	✂	21	12,24	90	2250		-09/04 320 049 300 113 09/04- 320 780 300 113	S FRE C S FRE --	E D E2 D	L L1	H H	45 60	B B
Volvo XC90	01/03-		320 057 600 001	1652	120	✂	26,2	12,2	140	2250		-09/04 320 049 300 113 10/04- 320 780 300 113	S FRE C S FRE --	E D E2 D	L L1	H H	45 60	B B
Volvo XC90 KIT = towbar inc. electrical kit 13 pins	10/04-		320 057 900 113	1652	120	✂	28,2	12,2	140	2250		electrical kit 13 pins in the kit: 320 780 300 113	S FRE --	E2 D	L1	H	60	B

Mercedes-Benz Sprinter / Volkswagen LT 2

max. total weight	wheelbase	Van	Van with high top	Minibus	Minibus with high top	Flatbed	Flatbed with dual cab	Chassis with cab	Chassis with dual cab	Tipper	Tipper with dual cab
2,8 t (2,95 t)	3.000 mm	① 		① 		③ 		③ 			
	3.550 mm	② 	② 	② 	② 	③ 	③ 	③ 	③ 		
3,5 t	3.000 mm	① 		① 		③ 		③ 		③ 	
	3.550 mm	② 	② 	② 	② 	③ 	③ 	③ 	③ 	③ 	③ 
	4.025 mm		② 		② 	③ 	③ 	③ 	③ 		
4,0 t to 4,6 t	3.550 mm	④ 	④ 			⑥ 	⑥ 	⑥ 	⑥ 	⑥ 	⑥ 
	4.025 mm		⑧ 			⑤ 	⑤ 	⑦ 	⑤ 		
6,0 t	3.550 mm					⑨ 	⑨ 	⑨ 	⑨ 		
6,0 t	4.025 mm					⑨ 	⑨ 	⑨ 	⑨ 		

MB Sprinter / VW LT II 03/96-03/06

Ident-no.	towing capacity 2000 kg end of no.: ...600001	towing capacity 2800/3000 kg end of no.: ...600001	ball plate for 4 WD end of no.: ...600001				
1	313087+329059	313152+329059	329042600001				
2	313088+329059	313149+329059	329042600001				
3	313118 (discontinued, repl.313157) +329059 ball 40 mm deeper: 313118+329062	313153+329059 ball 40 mm deeper: 313153+329062	329042600001				
4	313103(discontinued, repl.313154) +329062	313154+329062	329062600001				
5	313105*+329062	313156*+329062	329062600001				
6	313107*+329062	313157*+329062	329062600001				
7	313105*+329062+313112605001	313156*+329062+313112605001	329062600001				
8	313088+329062	313155+329062	329062600001				
9		313145+329062 (3500 kg)					
MB Sprinter / VW LT 2	order no. ...600001	EC no.	D-Value	vertical load	towing capacity	mounting time	
van / minibus, 3,5t max.total weight, wheelbase=3000 mm	313087	-0008	13,7	100	2000	90	
van/ minibus, 3,5t max.total weight, wheelbase=3550/4025 mm	313088	-0002	13,7	100	2000	90	
van / minibus, 4,0 and 4,6t max.total weight, wheelbase=3550mm	313103 <small>discontinued, replaced by 313154</small>	-0009	13,7	100	2000	90	
chassis with cab / dual cab, 4,0 and 4,6t max.total weight, wheelbase=4025 mm	313105*	-0007	13,7	100	2000	120	
chassis with cab / dual cab, 4,0 and 4,6tmax.total weight, wheelbase=3550mm	313107*	-0006	13,7	100	2000	120	
chassis with cab / dual cab 3,5t max.total weight	313118 <small>discontinued, replaced by 313154</small>	-0006	13,7	100	2000	90	
board step for box and estate	313132						
van / minibus, 3,5t max.total weight, wheelbase=3550/4025mm	313149	-0428	17,82	120	2800	150	
van / minibus, 3,5t max.total weight, wheelbase=3000 mm	313152	-0428	17,82	120	2800	150	
chassis with cab / dual cab 3,5t max.total weight	313153	-0440	17,82	120	2800	150	
van / minibus, 4,0 and 4,6t max.total weight, wheelbase=3550mm	313154	-0428	17,82	120	3000	150	
chassis with cab / dual cab, 4,0 and 4,6t max.total weight, wheelbase=4025mm	313155	-0428	17,82	120	3000	150	
chassis with cab / dual cab 4,0 and 4,6t max.tatal weight, wheelbase=4025mm	313156*	-0440	17,82	120	3000	>150	
chassis with cab / dual cab, 4,0 and 4,6t max.total weight, wheelbase 3550mm	313157*	-0440	17,82	120	3000	>150	
chassis with cab / dual cab 6,0t max.total weight, not for dumper	313145*	-0701	22,0	150	3500		
towball	329042	-0448	17,2	120			
towball	329059	-0128	23,5	150			
towball	329062	-0585	19,0	120			
distance plate	313112605001						
swap system for all models	329064600001		18,5	120			
electrical kit, 7-poles, all models until 12/99	313101300107		S	C2	E	-	V
van / minibus from 01/00	313103300107		S	C2	E	D	V
platform from 01/00	300052300107		-	FRE	-	D1	V
electrical kit, 13-poles, all models until 12/99	313101300113		S	C2	E	-	V
van / minibus from 01/00	313103300113		S	C2	E	D	V
flatbed from 01/00	300052300113		-	FRE	-	D1	V

The board step 313132600001 must be used for all vans/minibuses. The originally mounted board step cannot be used for all vans/minibuses. This is also intended for van version with integrated step device in the bumper. Your Mercedes or VW dealer will be of help in case you need further information with regard to the towing capacity of your vehicle.

*When mounting the towbar the integral under run guard can no longer be used on the vehicle. Please order a new under run guard at the Mercedes or VW dealer:

MB-order no.: for flatbed / van 904 520 0333, for dumper 904 520 0733
for flatbed 6,0 t max. total weight 905 520 0133 (313145)
VW-order no.: for flatbed / van 2D3 804 490 N, for dumper 2D3 804 490 Q


Universal HGV towing brackets

Please pay attention to the D-value of each component!

	Order no.		ECE No.	Kg	D-Value kN	kg	kg	kg
Towing bracket with integral under-run guard for HGV. Swap system permitted.	313404600001		EC-0534	69,0	25,1	150	3000 3500	17000 9400
towball recommended:	329060600001		EC-0075	8,2	25,1	120	3000 3500	17000 9400
scope of supply (supply in pairs only)	313404600002 313404600003			46,5 22,5				

Towing bracket

with integral underrun guard
and towball
order no. 329060600001

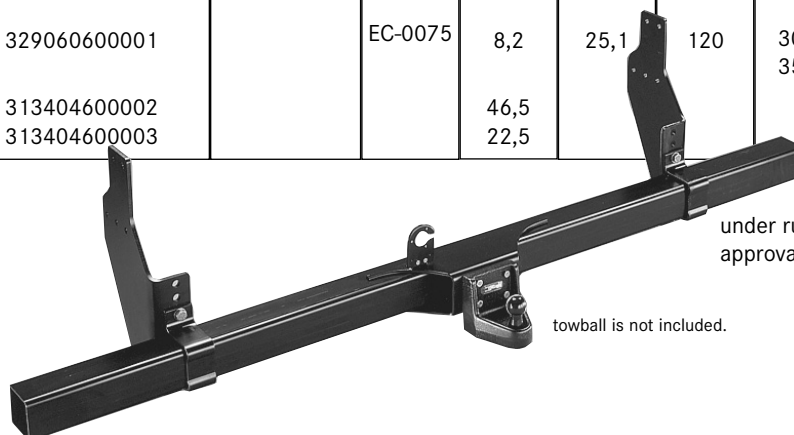


under run guard
approval no.: e13-6131

towball is not included.

Towing bracket with integral under-run guard for HGV. Swap system permitted.	342179600001		EC-1279	76,0	23,5	150	3500	z.B. 7500
towball recommended:	329060600001		EC-0075	8,2	25,1	120		
scope of supply (supply in pairs only)	342179600002 342179600003			46,5 29,5				

Towing bracket

with integral underrun guard
and towball
order no. 329060600001

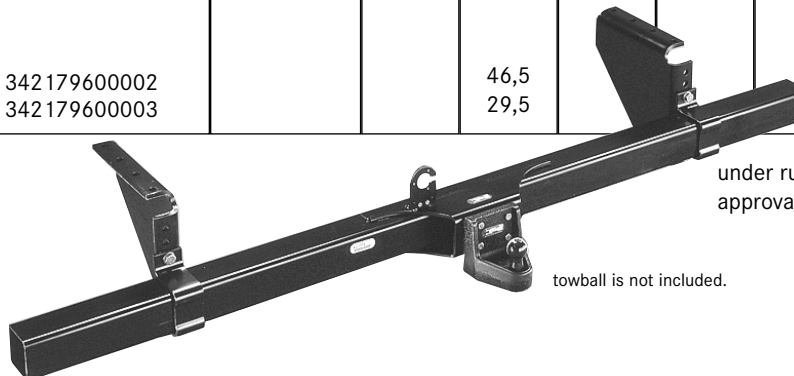


under run guard
approval no.: e13-6130

towball is not included.

Towing bracket for HGV Swap system permitted.	314052600001		EC-0029	27,2	16,4	100	2000	10000
--	--------------	--	---------	------	------	-----	------	-------

Towing bracket

and towball
order no. 329062600001

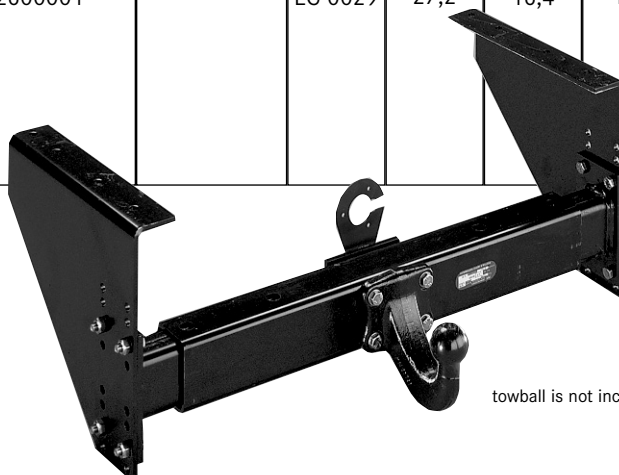


towball is not included.

Universal HGV-electrical kits for 12V	order no.	car specific	flash control	coding	PDC-cut off	permanent plus	charging line	electrical connection	mounting time
	300201300113	-	A	-	-	D1	-	V	




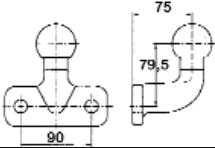
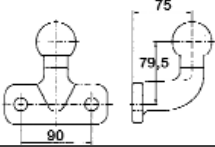
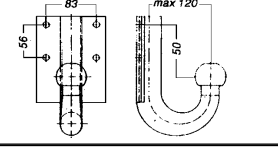
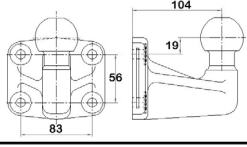
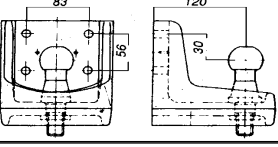
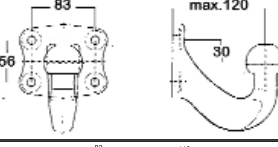
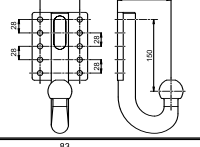
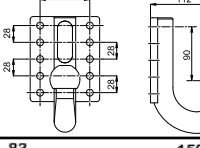

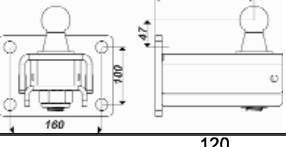
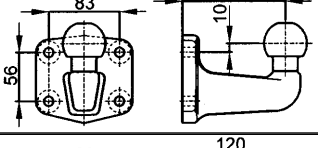
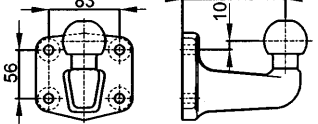
Technical data for universal HGV towbars

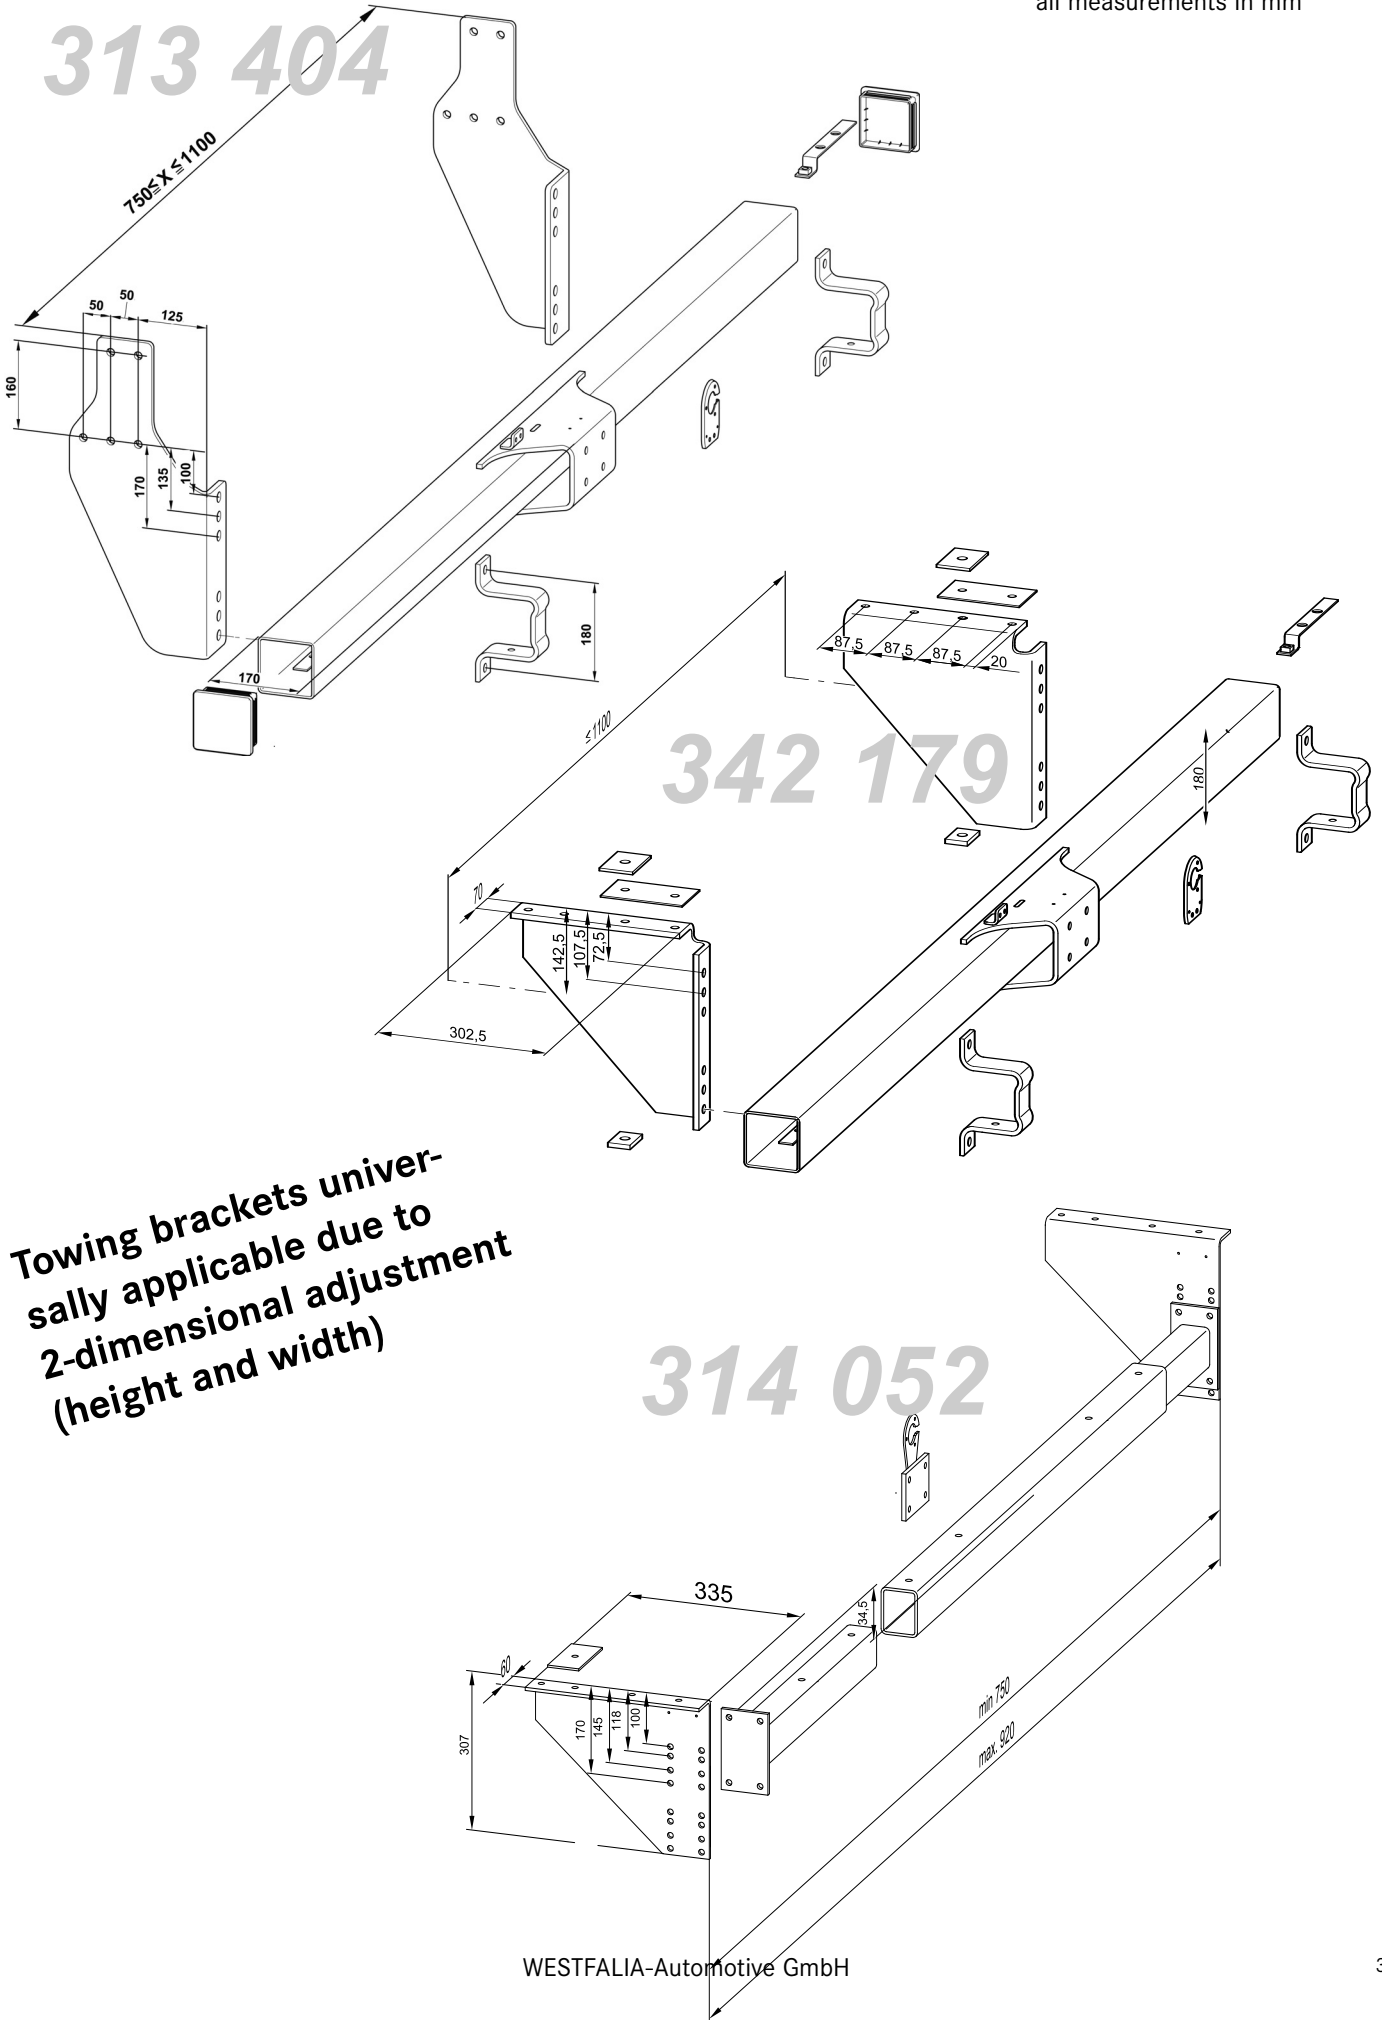all measurements in mm








**Towing brackets univer-
sally applicable due to
2-dimensional adjustment
(height and width)**

Towballs and Couplings for HGV and Off-Road Vehicles

	order no.	ECE F~no.	Kg	D-Value			kg 	
	329076600001	EC-0101	2,4	17,0	150	2.500 or 2.200 or 2.000	5.600 or 8.100 or 11.500	
	incl. 2 screws M 16 x 50, 8.8							
	329080600001	EC-3055	2,4	20,0	150	2.500 or 2.800 or 3.500	11.000 or 7.500 or 4.880	
	incl. 2 screws M 16 x 50, 8.8							
	329042600001	EC-0448	4,4	17,2	100	2.800 or 2.500 or 2.000	4.700 or 5.800 or 14.200	
	329059600001	EC-0128	3,0	23,5	150	2.800 or 3.100 or 3.500	15.000 or 10.000 or 7.500	
	329060600001	EC-0075	8,5	25,1	120	3.500 or 2.500 or 3.000	9.400 or 40.000 or 17.000	
	329062600001	EC-0585	3,6	23,5	150	2.800 or 3.100 or 3.500	15.000 or 10.000 or 7.500	
	329071600001	EC-1176	4,1	17,5	150	2.500 or 2.800 or 3.500	6.200 or 4.900 or 3.600	
	329072600001	EC-1176	3,7	17,5	150	2.500 or 2.800 or 3.500	6.200 or 4.900 or 3.600	
	329089600001	EC-3047	2,8	17,5	150	2.800 or 2.500 or 3.500	4.900 or 6.200 or 3.600	
	329096600001	EC-3894	13	22,64	120	2.700 or 3.000 or 3.300	15.000 or 10.000 or 7.500	
	incl. 4 screws M 20 x 60, 8.8							
	329100600001	EC-0179	3,1	13,7	120	2.000 or 2.300	4.500 or 3.500	
	329101600001	EC-0179	3,1	16	120	2.000 or 2.300 or 2.500	8.800 or 6.500 or 4.690	
Auslaufmodell, Ersatz: 329059600001								

Towballs and Couplings for HGV and Off-Road Vehicles

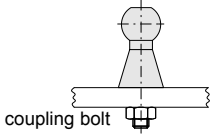	order no.	ECE F~no.		D-Value			kg 	
 coupling bolt	900008600001	EC-1525	1,05	18,5	150	2.800 or 2.500	5.600 or 7.500	

Mounting parts for Couplings

traverse of the towing vehicle or towing bracket	towball or coupling (order no. ends with ...600001)	screw kit*	
8 - 12 mm	321 169, 329 042 329 050, 329 057, 329 059, 329 062, 329 071, 329 072 329 060	900 040 632 340 900 045 632 325 900 055 632 552	
15 - 20 mm	329 169, 329 042, 329 057, 329 062, 329 071, 329 072 329 050, 329 059 329 060	900 050 632 424 900 055 632 552 900 060 632 523	
60 - 65 mm	321 169, 329 042, 329 057, 329 062, 329 071, 329 072 329 050, 329 059 329 060	900 095 632 553 900 100 632 527 900 105 632 554	
65 - 70 mm	321 169, 329 042, 329 057, 329 062, 329 071, 329 072 329 050, 329 059 329 060	900 100 632 527 900 105 632 554 900 110 632 505	
70 - 75 mm	321 169, 329 042, 329 057, 329 062, 329 071, 329 072 329 050, 329 059 329 060	900 105 632 554 900 110 632 505 900 115 632 524	
75 - 80 mm	321 169, 329 042, 329 057, 329 062, 329 071, 329 072 329 050, 329 059 329 060	900 110 632 505 900 115 632 524 900 120 632 516	
80 - 85 mm	321 169, 329 042, 329 057, 329 062, 329 071, 329 072 329 050, 329 059 329 060	900 115 632 524 900 120 632 516 900 125 632 504	
85 - 90 mm	321 169, 329 042, 329 057, 329 062, 329 071, 329 072 329 050, 329 059 329 060	900 120 632 516 900 125 632 504 900 130 632 539	
90 - 95 mm	321 169, 329 042, 329 057, 329 062, 329 071, 329 072 329 050, 329 059 329 060	900 125 632 504 900 130 632 539 900 135 632 379	

* Each kit contains: 4 screws M10 10.9, 4 nuts, 8 washers.
4th - 6th position of the part no. indicates the length of the screws in mm.

Swap system





**Application
in estatenation with:**

towball

or


coupling system

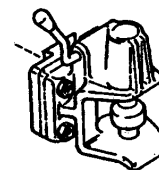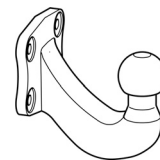

order no.	set	screw-hole circle mm	D/Dc- Value kN	weight kg	vertical load kg
329064600001	1 ground plate 2 exchangeable plates 1 cover	83 x 56	18,5	3,5	120

coupling bolt

Rockinger-Nr. 243A11000

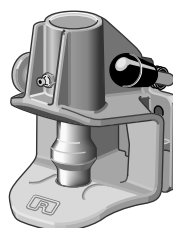

order no.	screw-hole circle mm	D-Value kN	Dc-Value kN <small>(depends on the height of the ball)</small>	weight kg	vertical load kg
342090600001	83 x 56	18,0	min. 18,0 max. 30,0	5,0	250

Mounting parts for swap system

Towball or coupling on adapting plate	flange	screws	screw kit*	
321 169, 329 042	5 - 10 mm	M 10 x 50	900 050 636 186	
329 050, 329 057, 329 059, 329 062, 329 072, 329 089, 329 100, 329 101 Rockinger coupling bolt	10 - 15 mm	M 10 x 55	900 055 636 187	
329 060	15 - 20 mm	M 10 x 60	900 060 636 188	

base plate on towing vehicle or towbar	screws	screw kit*	
8 - 12 mm	M 10 x 40	900 040 636 176	
15 - 20 mm	M 10 x 45	900 045 636 177	
60 - 65 mm	M 10 x 90	900 090 636 178	
70 - 75 mm	M 10 x 100	900 100 636 180	
75 - 80 mm	M 10 x 105	900 105 636 181	
80 - 85 mm	M 10 x 110	900 110 636 182	
85 - 90 mm	M 10 x 115	900 115 636 183	
90 - 95 mm	M 10 x 120	900 120 636 184	
95 - 105 mm	M 10 x 130	900 130 636 185	

* Each kit contains: 4 screws M10 (10.9)
 4 nuts M10
 4 washers 10,5

4th - 6th position of the part no. indicates the length of the screws in mm.

Special Couplings



to tow trailers with a ball or ring coupling
Perfect for heavy vehicles
Not in connection with trailers fitted with ALKO-AKS

order no.	329 095 600 001	329 097 600 001
flange plate	130 X 90	130 X 90
hole Ø mm	17	17
diameter mm	2-holes 90	4-holes 90 x 40
max. total weight kg	3500	3500
D-value kN ball	10,3	10,3
D-value kN flange	17,2	17,2
vertical load kg ball	100	100
vertical load kg flange	120	120
weight kg	3	3



to tow trailers with ring coupling
Perfect for heavy vehicles

order no.	329 091 600 001
flange plate	114 x 73
hole Ø mm	17
diameter mm	2-Loch 90
max. total weight kg	3500
opening mm	50 Ø
D-value kN	27,5
vertical load kg	150
weight kg	3,5

Special Couplings



to tow trailers with a ball or ring coupling
Perfect for heavy vehicles

order no.	329 098 600 001	329 094 600 001	329 090 600 001
flange plate	122 x 91	122 x 91	122 x 91
hole Ø mm	17	17	11
diameter mm	2-Loch 90	4-Loch 90 x 40	4-Loch 83 x 56
max. total weight kg	3500	3500	3500
D-value kN	31	31	31
vertical load kg	340	340	340
weight kg	5,2	5,2	5,2

Coupling for US vehicles



with square receptor tube and 51,5 x 51,5 mm in diameter

order no.	342 171600 001	342 192 600 001
set	1 ground plate 1 towball (2 holes) 1 socket holder 1 mounting kit	1 ground plate 1 towball (4 holes) 1 socket holder 1 mounting kit
ECE-No.	3653	4220
D/Dc-value	17,17	21,69
weight kg	8	11
vertical load kg	140	140
towing capacity kg	3500	3500

Notes

WESTFALIA

Towbars

Accessories

Spare parts

General information

Accessories



250 degree hinge
for Fiat Ducato/high roof,
Citroën Jumper/high roof,
Peugeot Boxer/high roof
from 04/94

order no. **306167 600 005**



Breakaway Cable Bracket
for trailer breakaway cable

fitting for the receptor tube of the following detachable towbars:
921540 627001 Ø 50 mm, z.B. Audi A3, VW Golf, Passat
Sharan, Caddy, Touran
905243 627001 Ø 56 mm, z.B. Audi A6
905276 627001 Ø 84 mm, z.B. Audi A8

order no. **935 211 627 001**



Towing bolt
thread M 20 x 1,5

order no. **900 008 600 001**



Snap gauge

order no. **900 001 535 051**

Accessories



towball cover

package 100 pieces

order no. **917 034 630 100**

package 10 pieces

order no. **917 034 630 010**



towball cover blue "Baseball cap"

package 50 pieces

order no. **300 050 001 909**

package 10 pieces

order no. **300 010 001 909**



Presentation rack
for towbars
(Towbars are not included.)

order no. **300 100 600 001**

Steps



Step for
Mercedes-Benz Sprinter and VW LTII -03/06
(van and minibus)

order no. **313132 600 001**

Only in conjunction with towbars WAM no.:
313 087/088/103/149/152/154/155 600001



Step for
Mercedes-Benz Sprinter II and
VW LT Crafter 03/06-
(van and minibus)

order no. **313 285 600 001**

Only in conjunction with towbars WAM no.:
313 267/272/273/376 600001



Rear step for
Citroën Jumper, Fiat Ducato, Peugeot Boxer, from 04/94

order no. **306 229 600 001** (in conjunction with 306216600001)



Step for
Ford Transit van / minibus
only in conjunction with Westfalia towbar 307260600001








order no. **307 267 600 001**






Step universal for
all universal HGV towbars with 4 hole towballs and
universal HGV towbars with 2 hole towballs with a hole spacing of 90 mm
e.g. Citroen Jumper, Fiat Ducato, Mercedes Sprinter,
Peugeot Boxer, VW Crafter

order no. **313 440 600 001**


Spare parts for detachable towbars

	<p>Metal nut (incl. 4 steel balls, 1 circlip) Ø of the ball up to 36 mm</p>	order no. 903 062 622 101
	<p>Metal nut (incl. 4 steel balls, 1 circlip) Ø of the ball up to 40 mm</p>	order no. 914 234 622 101
	<p>Ring spanner for metal nut 36 + 40 mm</p>	order no. 903 062 622 102
	<p>Leg spring for manual detachable system</p>	order no. 903 057 626 001
	<p>Skai leather zip bag for all detachable towbars</p> <p>bag PVC for all detachable towbars</p>	order no. 900 001 504 923 order no. 921 600 643 101
	<p>Key for lock automatic towball</p> <p><small>*The last two digits are the numbers that appear on the key head or that you have noted in your manual. Declaration and procedure for ordering keys see also "Frequently asked questions and answers" in the notes to this catalogue.</small></p>	order no. 942 000 513 2...*
	<p>Cover for lock automatic towball (package 10 pieces)</p>	order no. 905 112 630 101

Side caps for towing brackets


 measurements: 95x65 mm	<p>side caps (2 pieces): 321322 / 202 / 203 and 335099 / 153 and 332033 / 093 / 340018 340042 / 340043, 313222</p>	order no. 921 201 630 101
 measurements: 70x50 mm	<p>side caps (2 pieces): 30642 / 151 306127 / 208 / 209, 306210 / 216, 340070</p>	order no. 900 001 503 638
 measurements: 100x100 mm	<p>side caps (2 pieces): 342035 and 332110 342076 / 313146 / 313192 / 313193 313404 / 342179</p>	order no. 900 001 503 587

Spare parts for *Monoflex*-towbars

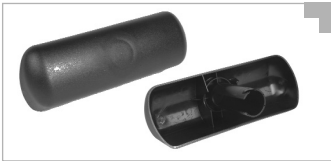


Plug cover
for towbar system MFII

order no. 900 001 059 080

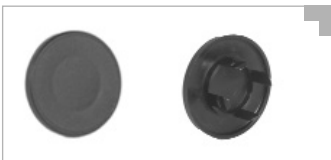

Plug cover
for towbar system MFII

order no. 900 001 059 170

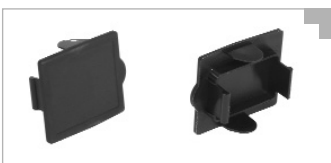

Plug cover for front support
for towbar system AHII
and AVII from year of construction 2003

order no. 900 001 005 405



Rear plug cover
for AHII and AVII from year of construction 2003

order no. 900 001 005 406



Knob
for towbar system MFII

order no. 900 001 001 017



Rubber boot for knob
for MFII

order no. 900 001 001 014



Rubber boot for towball
for MFII

order no. 900 001 001 016



Receptor tube
incl. clothing/knob
for MFII

order no. 900 001 059 114

Spare parts for *Monoflex*-towbars



Socket holder
universal

order no. 900 001 005 347



Cotter pin
for Monoflex universal and MFI,
detachable systems

order no. 900 001 005 944



Knob incl. lock and key
for towbar system AHII and AVII

order no. 900 001 005 407

Plug covers for detachable towbars

order no towbar	order no. plug cover
--------------------	-------------------------

303078	903 078 630 121
303085	903 078 630 121
303091	903 078 630 121
303095	903 078 630 121
303124	903 078 630 121
303127	903 078 630 121
303130	903 078 630 121
303140	903 140 630 103
303144	903 078 630 121
303149	903 078 630 121
303155	903 078 630 121
303170	903 137 630 101
303173	903 078 630 121
303176	903 078 630 121
303185	903 140 630 103
303189	903 078 630 121
303202	903 140 630 103
303205	903 078 630 121
303207	903 137 630 101
303228	903 078 630 121
303229	903 078 630 121
303230	903 078 630 121
303231	903 078 630 121
303232	903 078 630 121
303235	903 140 630 103
303240	903 078 630 121
303264	903 078 630 121
303266	903 078 630 121
303273	921 630 630 121
303290	903 137 630 101
303292	921 630 630 121
303294	921 630 630 121
303304	903 078 630 121
303314	921 630 630 121
303317	913 183 630 121
303323	903 078 630 121
303330	903 078 630 121
303336	921 630 630 121
303338	903 078 630 121
303340	921 630 630 121
303352	903 078 630 121
304052	903 011 630 108
304056	903 011 630 108
304057	903 011 630 108
304059	903 011 630 108
304060	903 011 630 108
304064	916 114 630 120
304068	913 183 630 121
304072	913 183 630 121
304073	913 183 630 121
304075	913 183 630 121
304076	913 183 630 121

order no towbar	order no. plug cover
--------------------	-------------------------

304079	913 183 630 121
304092	913 183 630 121
304100	913 183 630 121
304128	933 034 630 101
304131	913 183 630 121
304137	933 034 630 101
304139	913 183 630 121
304144	913 183 630 121
304145	913 183 630 121
304148	913 183 630 121
305112	905 063 630 103
305131	905 051 630 106
305156	905 063 630 103
305161	905 063 630 103
305164	914 234 630 101
305170	905 063 630 103
305176	905 146 630 101
305191	905 063 630 103
305195	905 063 630 103
305196	905 063 630 103
305197	905 063 630 103
305206	905 146 630 101
305220	905 146 630 101
305223	903 078 630 121
305224	914 234 630 101
305225	903 140 630 103
305243	905 063 630 103
305244	905 063 630 103
305245	905 063 630 103
305246	905 063 630 103
305262	903 078 630 121
305263	905 219 630 103
305269	905 063 630 103
305276	905 219 630 103
305277	903 078 630 121
305291	905 063 630 103
305300	903 078 630 121
305302	905 146 630 101
305309	903 137 630 101
305314	903 137 630 101
305323	913 183 630 121
305350	913 183 630 121
305365	905 368 608 010
305384	921 630 630 121
305398	903 137 630 101
305400	913 183 630 121
305403	921 630 630 121
305407	913 183 630 121
305412	913 183 630 121
305413	903 137 630 101
305415	903 137 630 101

Plug covers for detachable towbars

order no towbar	order no. plug cover
305423	913 183 630 121
305425	905 368 608 010
305429	913 183 630 121
306115	903 011 630 108
306126	903 011 630 108
306128	903 011 630 108
306138	903 011 630 108
306139	903 011 630 108
306143	903 011 630 108
306145	903 011 630 108
306146	903 011 630 108
306147	903 011 630 108
306150	903 011 630 108
306153	905 063 630 103
306160	914 234 630 101
306161	903 011 630 108
306166	903 011 630 108
306168	914 234 630 101
306172	914 234 630 101
306174	914 234 630 101
306176	903 011 630 108
306187	903 078 630 121
306189	914 234 630 101
306190	903 011 630 108
306195	903 011 630 108
306197	903 011 630 108
306203	903 011 630 108
306206	903 011 630 108
306211	903 011 630 108
306215	903 078 630 121
306217	914 234 630 101
306218	903 140 630 103
306220	914 234 630 101
306222	903 078 630 121
306224	903 078 630 121
306226	903 011 630 108
306230	903 140 630 103
306231	903 078 630 121
306232	903 011 630 108
306235	903 011 630 108
306237	913 183 630 121
306238	913 183 630 121
306239	913 183 630 121
306240	913 183 630 121
306241	913 183 630 121
306244	903 078 630 121
306245	913 183 630 121
306246	913 183 630 121
306247	913 183 630 121
306249	913 183 630 121
306250	913 183 630 121

order no towbar	order no. plug cover
306254	913 183 630 121
306262	913 183 630 121
306264	903 011 630 108
306265	903 078 630 121
306266	903 078 630 121
306269	913 183 630 121
306271	903 137 630 101
306275	903 078 630 121
306277	913 183 630 121
306279	913 183 630 121
306286	903 078 630 121
306291	913 183 630 121
306310	916 211 630 121
306311	916 211 630 121
306319	933 034 630 101
306321	913 183 630 121
306322	913 183 630 121
306323	913 183 630 121
306333	933 034 630 101
306350	933 034 630 101
306353	913 183 630 121
306356	921 630 630 121
306361	903 078 630 121
306369	903 078 630 121
306371	903 078 630 121
306372	903 078 630 121
306374	903 078 630 121
306379	933 034 630 101
306381	933 034 630 101
306383	913 183 630 121
306384	913 183 630 121
306389	921 630 630 121
306392	913 183 630 121
306393	913 183 630 121
306394	913 183 630 121
306400	921 630 630 121
307200	903 078 630 121
307210	903 078 630 121
307233	914 234 630 101
307235	903 078 630 121
307237	903 078 630 121
307239	903 078 630 121
307242	903 078 630 121
307245	903 078 630 121
307247	903 078 630 121
307265	913 183 630 121
307269	903 078 630 121
307286	933 034 630 101
307290	933 034 630 101
307291	933 020 630 101
307305	913 183 630 121
307308	913 183 630 121

Plug covers for detachable towbars

order no towbar	order no. plug cover
307329	921 630 630 121
307330	913 183 630 121
307332	921 630 630 121
307333	913 183 630 121
307335	921 630 630 121
307336	921 630 630 121
307338	913 183 630 121
307340	913 183 630 121
307343	913 183 630 121
307355	913 183 630 121
307356	913 183 630 121
307430	900 001 005 405
307441	913 183 630 121
307455	921 630 630 121
307458	913 183 630 121
307461	921 630 630 121
307463	913 183 630 121
307464	921 630 630 121
313062	903 011 630 108
313073	903 078 630 121
313082	903 078 630 121
313090	903 011 630 108
313097	903 078 630 121
313117	903 011 630 108
313120	903 078 630 121
313129	913 183 630 121
313160	903 078 630 121
313167	903 078 630 121
313174	903 078 630 121
313176	903 078 630 121
313179	903 078 630 121
313183	913 183 630 121
313189	913 183 630 121
313192	903 137 630 101
313195	903 078 630 121
313200	903 078 630 121
313204	903 078 630 121
313211	903 078 630 121
313214	903 078 630 121
313222	903 078 630 121
313231	903 078 630 121
313234	913 183 630 121
313239	903 078 630 121
313241	903 078 630 121
313252	921 630 630 121
313276	903 078 630 121
313340	903 137 630 101
313361	921 630 630 121
313373	913 183 630 121
313382	903 078 630 121
313398	913 183 630 121

order no towbar	order no. plug cover
313406	903 137 630 101
313421	903 137 630 101
314434	921 630 630 121
313438	903 078 630 121
313439	903 078 630 121
314232	914 234 630 101
314233	914 234 630 101
314234	914 234 630 101
314235	914 234 630 101
314237	914 234 630 101
314239	903 078 630 121
314244	914 234 630 101
314247	903 011 630 108
314251	903 078 630 121
314254	914 234 630 101
314257	903 078 630 121
314259	903 137 630 101
314266	903 078 630 121
314267	903 078 630 121
314270	913 183 630 121
314281	913 183 630 121
314283	903 078 630 121
314287	903 078 630 121
314289	913 183 630 121
314293	913 183 630 121
314295	903 078 630 121
314305	913 183 630 121
314307	903 078 630 121
314309	900 001 005 405
314310	913 183 630 121
314341	913 183 630 121
314342	913 183 630 121
314348	900 001 059 080
314350	921 630 630 121
314351	921 630 630 121
314354	903 078 630 121
314357	921 630 630 121
314372	921 630 630 121
314386	921 630 630 121
314392	921 630 630 121
314406	903 078 630 121
314409	913 183 630 121
314415	921 630 630 121
314416	921 630 630 121
314420	916 114 630 120
314437	903 078 630 121
314440	921 630 630 121
314448	903 078 630 121
314451	913 183 630 121
314461	913 183 630 121

Plug covers for detachable towbars

order no towbar	order no. plug cover
--------------------	-------------------------

314470	921 630 630 121
314472	903 078 630 121
314473	921 630 630 121
315039	903 011 630 108
315049	903 011 630 108
315050	903 011 630 108
315055	903 078 630 121
315059	903 011 630 108
315060	903 011 630 108
315062	903 011 630 108
315073	903 011 630 108
315074	903 011 630 108
315076	903 011 630 108
315078	903 011 630 108
315080	914 234 630 101
315084	903 011 630 108
315085	903 011 630 108
315086	903 011 630 108
315087	903 011 630 108
315088	903 078 630 121
315090	913 183 630 121
315092	903 137 630 101
315096	903 078 630 121
315097	903 137 630 101
315098	903 078 630 121
315100	903 011 630 108
315103	903 078 630 121
315105	913 183 630 121
315107	913 183 630 121
315109	903 078 630 121
315111	933 034 630 101
315114	933 034 630 101
315115	933 034 630 101
315119	913 183 630 121
315150	913 183 630 121
315152	913 183 630 121
315158	913 183 630 121
315167	900 001 059 080
315168	900 001 059 080
315171	913 183 630 121
315175	913 183 630 121
315176	900 001 059 080
315178	913 183 630 121
315182	913 183 630 121
315185	913 183 630 121
315188	913 183 630 121
316097	903 011 630 108
316100	903 011 630 108
316105	914 234 630 101
316108	903 011 630 108
316110	914 234 630 101
316112	903 011 630 108

order no towbar	order no. plug cover
--------------------	-------------------------

316114	916 114 630 120
316117	916 114 630 120
316119	916 114 630 120
316123	903 011 630 108
316128	903 078 630 121
316137	913 183 630 121
316140	913 183 630 121
316142	913 183 630 121
316143	913 183 630 121
316145	913 183 630 121
316152	913 183 630 121
316156	903 078 630 121
316166	913 183 630 121
316176	913 183 630 121
316177	913 183 630 121
316186	903 078 630 121
316192	903 078 630 121
316194	903 078 630 121
316197	907 286 630 001
316199	907 286 630 001
316207	913 183 630 121
316209	913 183 630 121
316214	916 211 630 121
316217	907 286 630 001
316220	933 034 630 101
316222	933 034 630 101
316225	921 630 630 121
316227	921 630 630 121
316250	916 211 630 121
316252	916 211 630 121
316262	913 183 630 121
316265	913 183 630 121
316267	913 183 630 121
316269	933 034 630 101
316273	913 183 630 121
316278	916 211 630 121
316284	933 034 630 101
316287	933 034 630 101
316291	933 034 630 101
316294	913 183 630 121
316297	913 183 630 121
316307	933 034 630 101
316310	933 034 630 101
316315	913 183 630 121
316320	913 183 630 121
316322	913 183 630 121
316324	913 183 630 121
316325	933 034 630 101
316326	933 034 630 101
317016	903 078 630 121
317021	903 011 630 108
317023	903 011 630 108

Plug covers for detachable towbars

order no towbar	order no. plug cover
317035	903 078 630 121
317036	903 078 630 121
317044	903 078 630 121
317046	903 078 630 121
317047	903 078 630 121
317056	903 078 630 121
317058	903 078 630 121
317060	903 078 630 121
317064	921 630 630 121
317066	921 630 630 121
317086	921 630 630 121
317088	903 078 630 121
317102	921 630 630 121
317105	903 078 630 121
317117	903 078 630 121
320040	903 078 630 121
320042	903 011 630 108
320044	903 011 630 108
320048	903 078 630 121
320050	913 183 630 121
320053	913 183 630 121
320057	903 078 630 121
320060	903 078 630 121
320064	921 630 630 121
320066	903 078 630 121
320068	913 183 630 121
320070	900 001 005 405
320072	913 183 630 121
320074	900 001 005 405
320075	913 183 630 121
320076	913 183 630 121
320080	913 183 630 121
320085	900 001 005 405
320088	900 001 059 080
320092	900 001 005 405
320097	921 628 630 121
321330	903 078 630 121
321399	903 011 630 108
321405	903 078 630 121
321407	903 011 630 108
321408	903 011 630 108
321409	903 011 630 108
321423	914 234 630 101
321424	903 078 630 121
321441	903 078 630 121
321453	903 078 630 121
321464	903 078 630 121
321468	903 078 630 121
321505	903 078 630 121
321508	903 078 630 121
321523	903 078 630 121

order no towbar	order no. plug cover
321525	903 137 630 101
321537	903 078 630 121
321540	903 078 630 121
321543	921 630 630 121
321546	921 546 608 001
321556	903 078 630 121
321605	903 137 630 101
321626	903 011 630 108
321628	921 630 630 121
321630	921 630 630 121
321647	921 630 630 121
321651	921 630 630 121
321659	903 078 630 121
321673	903 078 630 121
321691	913 183 630 121
321700	921 630 630 121
321728	913 183 630 121
321730	921 630 630 121
321736	903 137 630 101
321738	921 630 630 121
321740	921 630 630 121
321748	903 078 630 121
321751	921 630 630 121
321775	903 078 630 121
321778	921 630 630 121
321823	921 630 630 121
321838	903 078 630 121
323045	905 146 630 101
323052	905 146 630 101
323062	923 062 630 101
323079	903 078 630 121
323080	903 078 630 121
323084	903 078 630 121
323097	903 078 630 121
323100	903 078 630 121
323102	921 628 630 121
323107	903 137 630 101
324012	903 011 630 108
324013	903 011 630 108
324015	914 234 630 101
324019	914 234 630 101
324021	933 020 630 101
324022	933 034 630 101
324028	913 183 630 121
324040	900 001 059 170
327014	905 063 630 103
332058	903 078 630 121
332060	903 078 630 121
332099	903 078 630 121
332120	903 011 630 108
332122	903 011 630 108

Plug covers for detachable towbars

order no towbar	order no. plug cover
332124	903 011 630 108
332135	914 234 630 101
332154	903 078 630 121
332176	903 078 630 121
332186	903 078 630 121
332198	903 078 630 121
332206	903 078 630 121
332223	903 078 630 121
332227	903 078 630 121
332232	903 078 630 121
332235	903 078 630 121
332240	933 034 630 101
332241	933 034 630 101
332247	903 078 630 121
332262	933 034 630 101
332265	913 183 630 121
332296	913 183 630 121
332304	921 630 630 121
332305	921 630 630 121
335201	903 011 630 108
335203	903 011 630 108
335210	903 011 630 108
335216	914 234 630 101
335218	903 011 630 108
335221	903 011 630 108
335225	914 234 630 101
335231	903 011 630 108
335239	913 183 630 121
335240	916 114 630 120
335250	903 137 630 101
335268	913 183 630 121
335281	903 011 630 108
335282	933 020 630 101
335285	913 183 630 121
335289	913 183 630 121
335291	913 183 630 121
335295	913 183 630 121
335302	913 183 630 121
335304	913 183 630 121
335305	913 183 630 121
335323	913 183 630 121
335325	913 183 630 121
335327	933 034 630 101
335344	913 183 630 121
335346	913 183 630 121
335353	913 183 630 121
335355	913 183 630 121
335357	913 183 630 121
335358	913 183 630 121
335360	921 630 630 121
335364	903 078 630 121

order no towbar	order no. plug cover
335367	903 078 630 121
335372	900 000 059 080
335383	913 183 630 121
335393	903 078 630 121
335398	916 114 630 120
335411	903 078 630 121
335414	913 183 630 121
335419	921 630 630 121
335421	903 078 630 121
338038	903 137 630 101
338054	900 001 059 080
338058	907 286 630 001
338059	903 011 630 108
338066	913 183 630 121
338075	900 001 005 405
338081	913 183 630 121
338087	900 001 059 080
338090	933 034 630 101
338092	933 034 630 101
338094	900 001 059 080
338098	913 183 630 121
338104	913 183 630 121
340031	903 011 630 108
340037	903 078 630 121
340039	903 078 630 121
340040	905 063 630 103
340052	903 078 630 121
340066	913 183 630 121
340068	933 034 630 101
340072	903 137 630 101
340074	933 034 630 101
340076	900 001 005 405
340081	913 183 630 121
340093	921 630 630 121
340094	921 630 630 121
340095	921 628 630 121
341003	903 137 630 101
341004	914 234 630 101
341006	933 034 630 101
341016	933 034 630 101
341018	913 183 630 121
341021	913 183 630 121
342062	903 011 630 108
342068	914 234 630 101
342092	903 078 630 121
342093	903 137 630 101
342097	903 137 630 101
342098	903 137 630 101
342099	903 137 630 101
342103	913 183 630 121
342105	913 183 630 121

Plug covers for detachable towbars

order no towbar	order no. plug cover
342107	933 034 630 101
342113	903 137 630 101
342125	900 001 005 405
342127	916 211 630 121
342129	900 001 005 405
342131	913 183 630 121
342136	916 211 630 121
342138	900 001 059 080 od.:
342138	900 001 059 170
342139	900 001 005 405
342140	900 001 005 405
342151	900 001 059 080
342153	900 001 059 080
342154	900 001 059 080
342155	900 001 059 080
342157	900 001 059 405
342159	900 001 059 080
342163	900 001 059 080
342165	900 001 005 405
342172	900 001 059 080
342177	900 001 005 405
342178	921 630 630 121
342183	913 183 630 121
342185	921 628 630 121
342188	913 183 630 121
342189	913 183 630 121
343023	903 011 630 108
343024	903 078 630 121
343037	933 020 630 101
343038	913 183 630 121
343040	913 183 630 121
343043	933 034 630 101
343044	933 034 630 101
343046	913 183 630 121
343047	913 183 630 121
343056	913 183 630 121
343058	913 183 630 121
343061	921 630 630 121
343063	921 630 630 121
343067	913 183 630 121
344008	903 011 630 108
344019	903 011 630 108
344024	903 011 630 108
344027	903 011 630 108
344031	903 011 630 108
344039	903 078 630 121
344044	913 183 630 121
344048	913 183 630 121
344050	903 078 630 121
344054	905 146 630 101

order no towbar	order no. plug cover
344060	921 630 630 121
345003	903 011 630 108
345016	903 137 630 101
345017	914 234 630 101
345019	903 011 630 108
345021	903 078 630 121
345026	933 034 630 101
345028	903 078 630 121
345036	903 078 630 121
345039	903 078 630 121
345055	900 000 059 080
345059	903 078 630 121
345065	913 183 630 121
345068	913 630 630 121
345070	913 183 630 121
345077	913 183 630 121
345079	913 183 630 121
345080	933 034 630 101
345082	913 183 630 121
345084	913 183 630 121
345086	913 183 630 121
346016	903 137 630 101
346019	903 078 630 121
346021	913 183 630 121
346024	933 034 630 101
346026	913 183 630 121
346047	900 001 059 080
346049	913 183 630 121
346051	900 001 059 080
346057	900 001 005 405
346059	900 001 005 405
346060	913 183 630 121
346061	913 183 630 121
346064	913 183 630 121
346066	913 183 630 121
346071	913 183 630 121
346072	913 183 630 121
346074	913 183 630 121
346083	913 183 630 121
348002	903 011 630 108
348003	903 011 630 108
348007	903 011 630 108
348009	903 011 630 108
348012	903 011 630 108
348014	933 020 630 101
348016	913 183 630 121
348018	903 078 630 121
348020	900 001 005 405
348022	913 183 630 121
348024	900 001 005 405

Plug covers for detachable towbars

order no towbar	order no. plug cover
348026	913 183 630 121
348028	913 183 630 121
348031	900 001 005 405
348033	900 001 059 080
348035	913 183 630 121
348037	921 628 630 121
349025	921 630 630 121
349027	921 630 630 121
349039	903 078 630 121

Regulations, fitting and benefit

Vertical load

The maximum permitted vertical load is the approved vertical load for a vehicle. This value is defined by the vehicle manufacturer and should not be exceeded. Please check the vehicle handbook to confirm the maximum vertical load for an individual vehicle model. The vertical load is often referred to as the nose load.

Towing Capacity

Vehicle manufacturers specify the towing capacity for individual models. Our figure refers to the towbar - in most cases both figures are usually the same.

Towball

The towball diameter is 50 mm and conforms to DIN 74058 and ISO 1103. The distance between the centre of the ball and the surface of the road is 350 to 420 mm when the vehicle is fully loaded (gross vehicle weight).

Fitting

Every WESTFALIA towbar is supplied complete with all the necessary fixings such as bolts, connecting plates, etc., as well as comprehensive fully illustrated fitting instructions. The installation of a towbar and electrical kit should only be carried out by a suitably qualified person.

Year of manufacture

If no year of construction is given, the vehicle model applies from the date when the vehicle was first introduced up to now or when it was discontinued.

Electrical systems

WESTFALIA offer industry leading 7 and 13 pin electrical kits with vehicle specific plugs for most towbar installations. This makes fitting much simpler and quicker. Alternatively universal electrical kits with self-cutting connectors can be used for most vehicles. Each kit has an automatic rear fog lamp disconnection on the towing vehicle to prevent dazzle when towing.

Safety Check

All WESTFALIA towbars have been tested and approved to the relevant European standards. We recommend for your own safety and depending on country specific requirements, that the towbar installation is regularly checked at a suitably qualified service centre.

D-Value

On the towbars type approval plate you will find the D-Value of the towbar and the maximum vertical load for the towbar. This information is a statutory requirement. The D-Value is the force in kN which was used when the towbar was tested and type approved. Using the D-Value it is possible that the maximum towing capacity and the gross vehicle weight can be altered without the need for special approval of the towbar. It should be noted that any change to the towing capacity and the gross vehicle weight can only be specified and approved by the vehicle manufacturer.

The D value is calculated as follows:

D [kN], GA [kg], GF [kg]

$$D = \frac{GF \times GA \times 9,81}{(GF + GA) \times 1000}$$

$$GF = \frac{D \times GA \times 1000}{(GA \times 9,81) - (1000 \times D)}$$

$$GA = \frac{GF \times D \times 1000}{(GF \times 9,81) - (1000 \times D)}$$

WESTFALIA

Electrical kits

No part of this publication may be reproduced, stored in or introduced into a retrieval system, or transmitted, in any form or by any means (electronic, mechanical, photocopying or otherwise), without the prior written permission of WESTFALIA -Automotive GmbH.

WESTFALIA - Info centre

General technical reference with explanations for:

Adapter:

Adapters are used to fit different sockets (7- or 13-pin) to the trailer connection. The term short adapter indicates an especially compact type of construction.

Charging line (L, L1):

In accordance with DIN/ISO 11446, contact no. 10 of the 13-pin socket is intended as the charging line for the trailer battery. Most of the 13-pin electrical systems come equipped with an appropriate connector (min. 2.5 mm² cross-section, max. 20 A).

This charging line is connected via a cut-off relay to the vehicle battery. As soon as the ignition is turned on or the motor starts running, it can be used for a 2nd battery or a refrigerator in the trailer.

Central plug:

Connections available in the vehicle that can be used for connecting the trailer wire set.

Check Control:

Check Control (abbreviated as CC) refers to the equipment in a vehicle that monitors the lights and indicates any malfunctions. These are optical or acoustic indicators that may be integrated with info displays or dash computers. Since trailers hitched to these vehicles should be operated separately from the rest of the vehicle lighting, many electrical kits feature CC or are expandable in order to prevent damage to the vehicle electronics. Electrical kits with a CC interface require a CC expansion kit in order to function with a CC system. See the notes in the catalogue.

Continuous positive (D, D1):

In accordance with DIN/ISO 11446, contact no. 9 of the 13-pin socket is responsible for supplying continuous power directly from terminal 30 of the battery.

Most of the 13-pin electrical systems come equipped with an appropriate connector (min. 2.5 mm² cross-section, max. 20 A) and corresponding earth at contact no. 13.

Control light (C2):

These are frequently used indicator lights that drivers use to monitor the trailer turn signals, as vehicle regulations require. These are usually green indicator lights that are controlled by the flash unit. The indicators must be situated within the driver's visible range; with some vehicles, these are already installed in the dashboard or they need only be retrofitted. These indicate to the driver whether the trailer turn signals are properly functioning and work together with the original indicators. The function of the existing C2 control light needs to be coded free for various models.

Crimp socket:

A crimp socket generally refers to sockets where the contacts are already crimped to the wire set and prefabricated in a contact holder. In this model, the especially flat versions (40 mm) are available.

Data bus (CAN):

Designates a particular digital mode of data transmission in the vehicle. Usually most of the control units are connected with each other via the data bus and exchange the necessary signals. In some vehicles, the trailer control unit is also connected by the data bus to the vehicle's on-board electrical system. This type of transmission is often also known as CAN (Controller Area Network)! The two lines, CAN High and CAN Low, are generally laid out in the vehicle, twisted with each other.

Disabling the acoustic parking system (E):

The acoustic parking system is sometimes referred to as APS, parking distance control (PDC), Parktronic, or EPH (in Germany). This parking system monitors the distance behind the vehicle for example and potential obstacles are indicated optically or acoustically whenever the driver switches into reverse gear. To avoid incorrect information, the acoustic parking system should be turned off when operating with a trailer. When hitching and unhitching the trailer, APS can be disabled and enabled automatically using the microswitch in the socket, or as with most Westfalia electrical kits, automatically using the control unit. Many vehicles are equipped with an appropriate switch in the cockpit.

Important note: When mounting permanently attached hitches, the ball may be located in the sensor range. Whether the desired function of the acoustic parking system is ensured in this situation needs to be checked in each case. The problem can be resolved by fitting a detachable towbar.

Disabling the rear fog lights (acc. German traffic regulations):

In accordance with ECE R48, the rear fog light of the towing vehicle can be disabled when towing a trailer. When attaching racks (e.g., bicycle racks) with lighting units, they have to be turned off in order to reduce glare. This is automatically disabled and enabled on the towing vehicle as needed in one of the following ways:

- by a mechanical disconnecting contact in the socket or also
- by a microswitch,
- by an additional cut off relay,
- automatically by the control unit as soon as the trailer is detected.

Enabling the trailer monitoring:

The monitoring of the trailer turn signal is prepared in the vehicle's on-board electrical system and needs to be enabled (coded) after the installation of the electrical kit.

Installation instructions:

The installation instructions provide general information on how to install the electrical system or attach the trailer hitch for the given vehicle. The description is provided in text form, diagrams and/or photos.

LED lights:

A new type of lighting in vehicles that consumes significantly less current and can switch from dark to light state quicker. In vehicle-specific E-kits, these special features are taken into account.

Legal requirements

Throughout Europe, the regulations are specified by EC guidelines. In many countries, the national regulations are currently still valid.

In Germany for instance, the rear fog light switch-off is still specially regulated (refer to "Disabling the rear fog lights"). There are also regulations on the turn signal monitoring that deviate. All WESTFALIA E-kits take the nationally valid regulations into account. In Germany for example, only E-kits are currently still offered that generate an error message in case both turn signal lamps on a trailer fail.

Load current relay:

At least 4-pin relay with increased connected load (e.g. 70A) and larger flat pins. Use in the command centre, e.g. with Volvo.

Microswitch:

Small switch, partially built into the socket, that is used for functions such as rear fog light switch-off or trailer auto-detect.

7-pin socket in accordance with DIN/ISO 1724:

Simple connection (N version), not watertight, sufficiently fulfils the original legal requirements. It is not possible to include continuous positive or reverse lamp signals, because all of the lines are already in use, refer also to the wiring plans in the catalogue. As of 1 January 1991, reverse lamps are mandatory on all vehicles and racks (e.g. bicycle racks) with reverse lamps also have to include all of the other light signals, thus meaning that the 7-pin socket is no longer sufficient.

7-pin socket in accordance with DIN/ISO 3732:

Simple connection (S version) as an extension to standard 7-pin socket for reverse lamps and continuous positive, pin connections not identical to standard 7-pin socket (sometimes used in GB).

13-pin socket in accordance with DIN/ISO 11446:

Simple connection, watertight with simple handling. Corresponds to automobile industry standard. Signals such as reverse lamp and continuous positive can be suitably transferred and reserve lines are available, allowing for additional options that are especially useful in camping applications.

Pole reversal kit.

Is used if the switched signal, for instance of the rear fog light, is applied as a negative signal at the light, but is needed as a positive signal for the trailer and the switch-off. Using the relay, the signal's pole is reversed before the switch-off.

The same principle is valid for individual systems of the acoustic parking system. In addition, the circuit logic can be adapted using the kit.

Rear fog light switch-off relay:

Usually a 3-pin relay with special circuitry, without extra earth connection (e.g. Daimler E-class W/S210)

Socket West:

Special socket with 7-pin connection acc. DIN/ISO 1724 and 6 additional contacts for signals such as RFS, Kl.30 etc.

Substitute light function (example Mercedes W203):

If there is a defect for example of a turn signal lamp on the vehicle, then the reverse lamp flashes as a substitute. The fault is indicated in the vehicle and ought not influence the function at the trailer.

On many current vehicles, the brake light is switched on and dimmed as a substitute light in case a side lamp fails. As a rule here, an error signal is sent to the driver.

Tail lights dimmed:

If various brightness's are shown by a single bulb, then a dimmed signal is meant. The signals come from the vehicle's on-board electrical system and can generate for example with a conventional 21 Watt single thread bulb various brightness's and thus show functions such as side lamp and brake light. This equipment usually requires special trailer control units that are included in vehicle-specific electrical systems.

Trailer auto-detect:

The trailer auto-detect signals to the towing vehicle or control unit whether or not a trailer is hitched. This information is used to control the turn signals, acoustic parking system, and other control functions. A microswitch installed in the socket selects whether to transfer the information to the control unit or directly to the electronic system of the vehicle.

In the current version, an attached trailer is usually detected electronically by the electrical load of the trailer lighting and the required information is passed on accordingly.

Trailer control unit:

This is the designation for control units that partially or even completely supply the trailer lighting. This is controlled generally via the tail lights and the continuous positive to be attached to the control unit supplies the trailer. In vehicles without Check Control, the turn signals and partially the rear fog lights are supplied via the control unit. In vehicles with Check Control, the entire trailer is supplied via the control unit so that the vehicle electronics are only loaded minimally. The original turn signals do not have to be replaced.

Turn signals:

The flash unit, often referred to as a "flash relay", regulates the flash pulses sent to the vehicle and, if hitched, also to the trailer. Malfunctions are indicated by changes to the flashing rate of the control lights. In most cases, the flash unit is integrated with the main electrical system. It can however also be estatened with the warning blinker switch and other control units. For operation with trailers, the original flash units were replaced in most cases by flash units with C2 function and an additional control was installed. Flash units are available in a wide range of pin configurations, some of which require additional adapters in order to install a C2 flash unit.

TSP, Trailer stability program

This system is known in the industry also by the following terms:

- TSP, Trailer-Stabilization-Program (trademark of Johannes Gubernath)
- TSM, Trailer Sway Mitigation
- TSA, Trailer Stability Assist
· GST, Gespann-Stabilisierungs-Programm (in Germany)

This system monitors the drive situation of the rig by sensors on the vehicle. The vehicle detects after the connection of the trailer plug that the vehicle is in trailer mode and monitors the velocity-dynamic movements that are relevant to this operating mode. In case the rig gets into to critical driving state, for example because of oscillation/fishtailing of the trailer, the vehicle's systems support the driver until the rig returns to a stable condition. Such systems are offered by many automobile manufacturers now as an option or as a standard feature. The activation of the TSP is done by linking to the vehicle's on-board electrical system using coordinated control units, usually by CAN bus.

Westfalia now provides a number of electrical cable looms with this safety-relevant system. Such solutions are marked in the catalogue with the comment "CAN". If the vehicle is prepared with a TSP/TSM/TSA system, then it can be activated following installation of the Westfalia electrical cable loom, if necessary. Another important step for increasing traffic safety.

Vehicle-specific connection (S):

All of the vehicle connections are made using the available connections so as to avoid connection errors and save time. The wire lengths are adapted to the vehicle.

Westfalia-Tronic:

This is the designation for electrical systems that work with a trailer control unit and usually do not require modifications to the dashboard electronics. Faults in the trailer turn signal system are indicated by an increased flashing rate of the turn signal indicators in the vehicle. No additional C2 lights are required.

For further information please visit our internet site: www.westfalia-automotive.de

CAN Electrical Kits

Advantages:

- Enables and supports new functions, such as rig stabilising, pneumatic suspension and brake assistance, also for trailer operation
- Diagnostics capable
- Reduced installation effort
- OEM quality offers security in all situations
- Comprehensive product portfolio of vehicle-specific electrical kits
- In case coding/activation is required on the vehicle, this can be performed with, for instance, the KTS diagnostic devices and the software ESI(tronic) from Bosch.



Technology:

- Connection to the vehicle on-board electrical system with WESTFALIA CAN bus module "UCC" or by the original manufacturer control unit.
- Control and monitoring of the lighting function with active communication with the vehicle data bus
- All control units with e1 type approval

Two strong brands for your success:

WESTFALIA +  **BOSCH**
Technology for life



Extension kits



Continuous positive extension kit "D1"

(Catalogue identification "D1" in the 16 table column)

Contains the connection for contact 9 (13) acc. DIN/ISO 11446 incl. fuse.

order no. **300 027 300 113**



Charging line extension kit "L1"

(Catalogue identification "L1" in the 17 table column)

Contains the connection for contact 10 and 11 acc. DIN/ISO 11446 incl. fuse and cut-off relay, 12 V

order no. **300 028 300 113**



Continuous positive and charging line extension kit

Contains the connection for contact 9 and 10 acc. DIN/ISO 11446 incl. fuse and cut-off relay, 12 V

order no. **300 025 300 113**



Rear fog light / Acoustic parking system switch-over kit

Contains a switch-over relay (12V)/ Connection accessories for changing the polarity of the specific function, for example earth-switched rear fog lights on the vehicle.

order no. **300 065 300 005**



Checkcontrol extension kit (for individual BMW and Opel/General Motors models)

Contains the control unit (12V) incl. continuous positive connection and fuse, for 10-pin interfaces.

order no. **300 025 300 173**




Checkcontrol extension kit (for individual Audi models)

Contains the control unit incl. continuous positive connection and fuse, for 6-pin interfaces.

order no. **305 160 300 173**

Universal electrical kits (12 V on-board electrical systems)

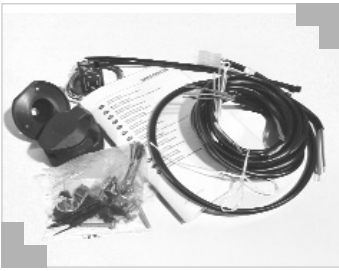

Turn signal monitoring by flash unit with C2 function

Universally applicable for vehicles **without** Checkcontrol system, with European 3-pin replacement flash unit with C2 connection with rear fog light shutdown

- order no. **300 060 300 107**
300 060 300 113
300 061 300 107 (with adapter for deviant flash unit wiring)
300 061 300 113 (with adapter for deviant flash unit wiring)
300 096 300 157 (only wire set for vehicles with C2 feature)
300 096 300 163 (only wire set for vehicles with C2 feature)



Turn signal monitoring by control unit with double flashing rate

Universally applicable for vehicles **without** Checkcontrol system, with rear fog light and acoustic parking system shutdown

- order no. **300 052 300 107** (socket with screw contacts, extended socket supplyline, e.g.: for flatbed)
300 052 300 113 (socket with screw contacts, extended socket supplyline, e.g. for flatbed)
300 072 300 107 (socket with screw contacts)
300 072 300 113 (socket with screw contacts)
300 073 300 113 (flat 40 mm socket with crimp contact and cable inlet on the side)



Turn signal monitoring by control unit with double flashing rate

Universally applicable for vehicles **with** Checkcontrol system, with rear fog light and acoustic parking system shutdown

- order no. **300 056 300 107** (socket with screw contacts, extended socket supply line, e.g. for flatbed)
300 056 300 113 (socket with screw contacts, extended socket supply line, e.g. for flatbed)



Turn signal monitoring by control unit with acoustic error message

Universally applicable for vehicles **with** Checkcontrol system, partially also for vehicles with data bus technology (CAN), with rear fog light and parking system shutdown

- order no. **300 210 300 107** (socket with screw contacts)
300 210 300 113 (socket with screw contacts)


Adapter and plugs



Adapter, short 13/7

from car 13-pins to trailer 7-pins

order no. **300 100 320 113**

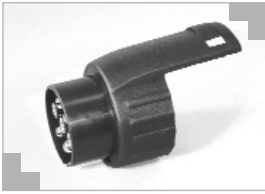

Adapter, short 7/13

from car 7-pins to trailer 13-pins

order no. **300 100 310 107**



Adapter 13p West

from car 13-pins (DIN/ISO 11446) to trailer 7-/13-pins West

order no. **900 001 506 997**



Plug 13p

order no. **900 001 506 533**

Sockets and seals

Sockets 7-pins



Screw connection, rear fog light disconnecting contact, axial cable outlet
(N-version DIN/ISO 1724)

order no. **900 001 506 424**



Screw connection, rear fog light disconnecting contact, cable outlet on right side
(N-version DIN/ISO 1724)

order no. **900 001 506 397**



Screw connection, microswitch changer, axial cable outlet
(N-version DIN/ISO 1724)

order no. **900 001 506 054**



Crimp connection, without rear fog light disconnecting contact, axial cable outlet
(N-version DIN/ISO 1724)

order no. **900 001 506 384**



7p. Extension socket for English vehicle market
(S-version DIN/ISO 3732)

order no. **900 001 506 656**

Sockets 13-pins



Screw connection (option for cable outlet in the side w. seal 900 001 507 001)

order no. **900 001 506 439** axial cable outlet, without rear fog light disconnecting contact
order no. **900 001 506 680** axial cable outlet, with rear fog light disconnecting contact
order no. **900 001 506 001** cable outlet on side, with rear fog light disconnecting contact



Screw connection, microswitch

order no. **900 001 506 387** axial cable outlet
order no. **900 001 506 386** cable outlet on side

Sockets and seals

Sockets 13-pins



Contact sockets with solder connections, double microswitch, axial cable outlet

order no. **900 001 506 037**



Flat version 40 mm high, crimp contact, microswitch, cable outlet on right side

order no. **900 001 506 124**



West plug system

Screw connection without rear fog light disconnecting contact, axial cable outlet similar to (N-Version DIN/ISO 1724) + 6 contacts

order no. **900 001 506 210**

Accessories for sockets



Substitute socket housing 52 mm high, axial cable outlet

order no. **900 001 506 438**



Socket seal, axial cable outlet

order no. **900 010 506 531** (package 10 pieces)



Socket seal, round shape, axial cable outlet

order no. **900 010 508 235** (package 10 pieces)



Socket seal with bellows, axial cable outlet

order no. **900 001 506 024**

order no. **900 010 506 024** (package 10 pieces)

Accessories for sockets



Screw connection with bellows, cable outlet on right side
(not for 900001-506439, -506680, -506001)

order no. **900 001 503 924**
900 010 503 924 (package 10 pieces)



Socket seal, 2 axial cable outlets

order no. **900 001 506 010**



Additional socket plate for 2nd socket
(GB market)

order no. **900 001 535 208**



Spare part kit folding plastic socket holder

order no. **907 292 608 001** with slot
order no. **921 504 608 001** without slot



Socket base plate for slit holders

order no. **900 010 506 616** (package 10 pieces)



Seal for 900 001 506 439/680/001/, outlet on right side, 2 pieces

order no. **900 001 507 001**
order no. **900 010 507 001** (package 10 pieces)



Substitute socket holder, universal


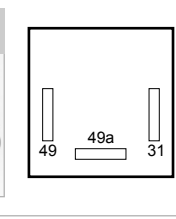
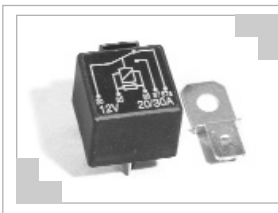
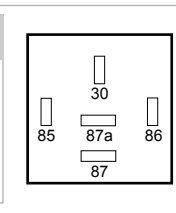

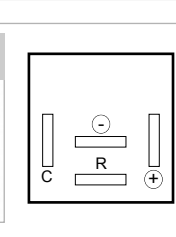
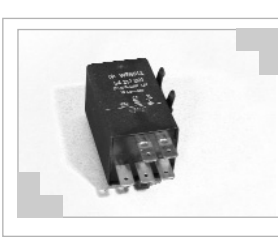
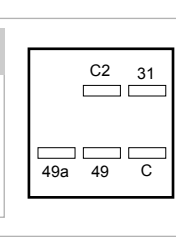
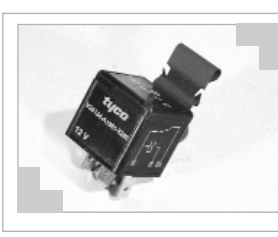
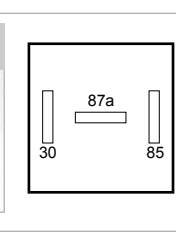
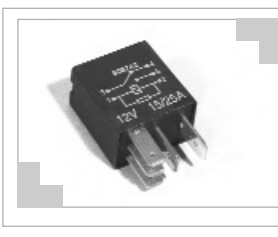
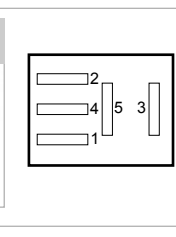
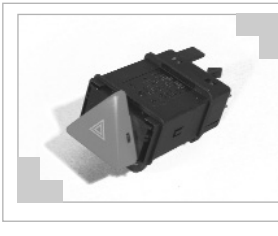
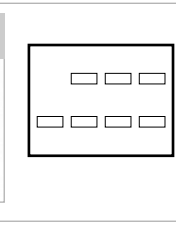
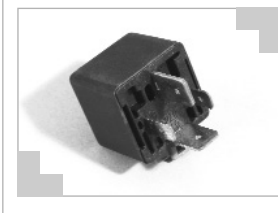
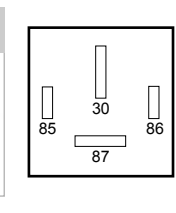
order no. **920 036 608 001**
order no. **920 036 608 110** (package 10 pieces)



Cable support sleeve angled, for 40 mm car body openings, cable diameter:
6 - 14 mm

order no. **900 010 303 015** (package 10 pieces)

Relays 12 V

		<p>Turn signal (European) 3-pin + C2 (506 811)</p> <p>order no. 900 001 506 811 order no. 900 002 506 811 (kit with C2 light and cable)</p>	<p>B = 49 input flash unit L = 49 a output flash unit E = 31 earth</p>
		<p>Amplifier up to 25A (changer)</p> <p>order no. 900 001 506 186</p>	<p>1 = 86 = input control wire 2 = 85 = earth control wire 3 = 30 = input connecting contact 4 = 87a = opener connection contact 5 = 87 = closer connection contact</p>
		<p>Turn signal (French) 4-pin (506 148)</p> <p>order no. 900 001 506 147 (kit with C2 light and cable)</p>	<p>C = 49 a output flash unit + = 49 input flash unit - = 31 earth R = C 1st indicator</p>
		<p>Turn signal (various) 5-pin (54 212 001)</p> <p>order no. 900 001 507 731</p>	<p>49 = input flash unit 49 a = output flash unit 31 = earth C = 1st indicator C2 = 2nd indicator (trailer)</p>
		<p>Rear fog light switch-off relay e.g. DC class E</p> <p>order no. 900 001 506 053</p>	<p>30 = input (rear fog light switch) 87 a = open contact (rear fog light vehicle) 85 = output socket (rear fog light trailer)</p>
		<p>Relay Mini-model, e.g. Espace, Alfa, Fiat, ... (506 742)</p> <p>order no. 900 001 506 742</p>	<p>1 = 86 = input control wire 2 = 85 = earth control wire 3 = 30 = input connecting contact 4 = 87a = opener connection contact 5 = 87 = closer connection contact</p>
		<p>Warning blinker switch with C2 function (VW T4 07/98-)</p> <p>order no. 900 001 506 287</p>	
		<p>Amplifier up to 70A (e.g. Volvo, ...)</p> <p>order no. 900 001 506 464</p>	<p>1 = 86 = input control wire 2 = 85 = earth control wire 3 = 30 = input connecting contact 4 = 87a = opener connection contact 5 = 87 = closer connection contact</p>

Accessories



Signal generator

6 - 24 Volt


order no. **900 001 300 200**



C2 light compl. 12 V


order no. **900 001 506 547** short version

order no. **900 001 507 809** long version

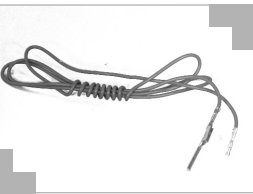

C2 cable bridge for older Opel vehicles

order no. **914 083 303 020**

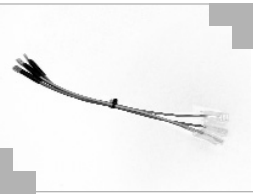

Relay adapter


(for adapting various different relay assignments)

order no. **900 061 305 001**



Cable connector for cable diameter 0.35-0.75 m²

order no. **900 001 506 102** (package 4 pieces)

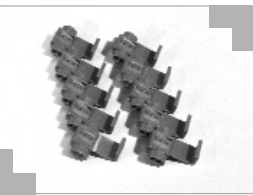

Cable connector for cable diameter 1.0-2.5 m²

order no. **900 010 507 391** (package 10 pieces)



Vehicle tester trailer simulation 12 V, for function control and fault simulation

order no. **900 001 300 199**




Charger / Voltage stability device Bosch (BAT 415)

Used for stabilising the voltage even without vehicle battery.

Loading with connected battery, battery support during test mode

order no. **900 001 506 599**

Control unit 12 V

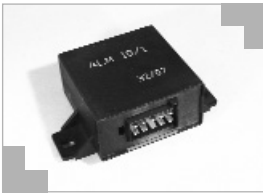

10p ALM10 (former: 58207002)
Turn signal control (continuous positive necessary)

order no. **900 001 506 274**



10p CCM 506 079
Signal amplification for Checkcontrol, continuous positive necessary

order no. **300 025 300 173** (only complete kit)



12p ASTM 12 (former: ALM 12, ASG 2000-121)
Turn signal control, rear fog light shutdown, APS signal (continuous positive necessary)

order no. **900 001 506 005**



12p ASTM 10, ASTM R
Turn signal control, rear fog light shutdown, APS signal (no continuous positive necessary)

order no. **900 001 506 542** (ASTM 10)

order no. **900 001 506 623** (ASTM R)



8p 58 227 001
C2 Turn signal control (continuous positive necessary)

order no. **900 001 506 540**



30p control unit 506275, 506270A, 506450
Turn signal control and all light signals (continuous positive necessary), APS signal

order no. **900 001 506 275**

900 001 506 270

900 001 506 450



30p ASTM pro C1(replaces: A1 and B1)
Turn signal control and all light signals (continuous positive necessary), APS signal, also for dimmed lights

order no. **900 001 506 244**



30p Lancia, 506 691, turn signal control with synchronised fault output
Turn signal control and all light signals (continuous positive necessary), APS signal

order no. **900 001 506 691**

Control unit 12 V



16p 58 231 021

Turn signal control with C2, light functions (continuous positive necessary)

order no. **900 001 506 727**

900 001 506 580 (WLC-version)



12/16p AAG (506553 replaces 506328 and 506153)

CAN control unit (Volkswagen group, lighting system trailer 1K0 ...)

order no. **900 001 506 558** (VW, LED) 1K0 ...

order no. **900 001 506 765** (Audi) 4F0 907 ...

order no. **900 001 506 101** (Audi) 8E0 907 ...

order no. **900 001 506 651** (Audi Q7 LED) 4L0 907 ...

order no. **900 001 506 667** (VW Touareg) 7L0 ...

order no. **900 001 506 553** (VW, Seat, Skoda) 1K0 ...



22p ASG 2000-221 (replaces ALM 22/2, ALM 22/1)

Lighting system compl. on the trailer

order no. **900 001 506 434** (-221)

order no. **900 001 506 129** (-222)



12/14p Opel Astra, Zafira

Lighting system compl. on the trailer

order no. **900 001 506 907**



8/4/4p Daimler group

CAN control unit, lighting system compl. trailer

order no. **900 001 506 172** (A169)

900 001 506 173 (A211)

900 001 506 156 (A212)



14/22p ASG 2000-361 W/S 203

Lighting system compl. on the trailer

order no. **900 001 506 447**



14/10/8p (321132) W/S 203

Lighting system compl. on the trailer

order no. **900 001 506 472**

Control unit 12 V



15p (8369019 or 6908767)
Lighting system compl. on the trailer

order no. **900 001 506 563**



18p + 10p
Lighting system compl. on the trailer

order no. **900 001 506 577** (CAN-module 5F001)

order no. **900 001 506 578** (5C028)



Uni CAN Control
CAN control unit, lighting system compl. trailer

order no. **900 001 506 625** BMW UCC1

900 001 506 627 Ford UCC1

900 001 506 631 Opel UCC1

900 001 506 626 PSA UCC1


900 001 506 668 Volvo UCC1 (506628) and 3

900 001 506 669 Volvo UCC2 (506632) and 4



Control unit ASTM V4
30p replaces ASTM pro A1, B1, C1 and 506275
Turn signal control and all light signals (permanent plus necessary), PDC signal, also for dimmed lights

order no. **900 001 506 499**

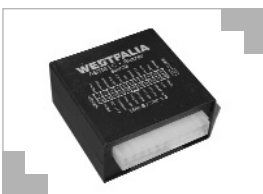


Control unit ASTM LC
22p
Turn signal control and all light signals (permanent plus necessary), PDC signal, also for dimmed lights

order no. **900 001 506 633**

Pin assignments


7-pin universal with rear foglamp disconnection N-Version according

DIN / ISO 1724

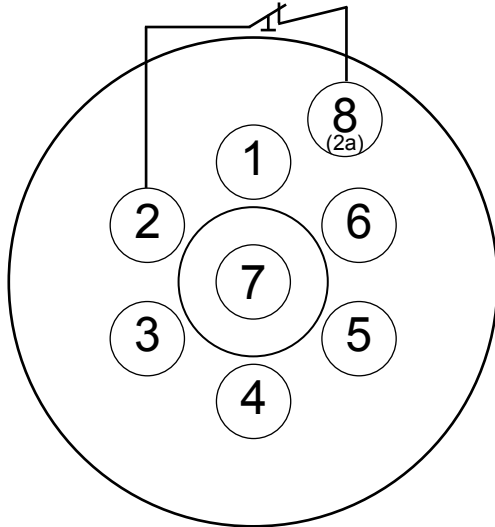

- 1/L Turn indicator, left
- 2/54g Rear foglamp from switch
- 3/31 Ground (for circuit pins)
- 4/R turn indicator, right
- 5/58R rear side light right
- 6/54 brake lights
- 7/58L rear side light left
- 8/58b (2a) rear foglamp (vehicle)

13-pin according DIN / ISO 11446

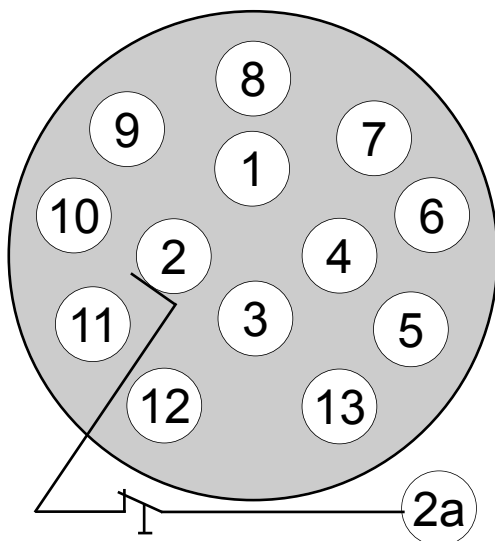

- 1 turn indicator, left
- 2 rear foglamp (switch)
- 2 a rear foglamp (vehicle)
- 3* ground (for circuit pins 1 to 8)
- 4 turn indicator, right
- 5 r/h rear side light, end-outline marker lamp, side marker lamp and number plate lamp
- 6 break lights
- 7 l/h rear side light, end-outline marker lamp, side marker lamp and number plate lamp
- 8 reversing lamp
- 9 power supply (continuous plus)
- 10 charge lead, positive for batteries in trailer
- 11 ground (for pin no. 10)
- 12 control lead for trailer identification
- 13* ground (for circuit pins 9 to 12)


* All ground leads must not be electrically bonded at the trailer end.

The foglamp is mechanically tripped by means of pin 2 and 2a in the socket.

Technical changes reserved.

Pin assignments


7-/13-pin West

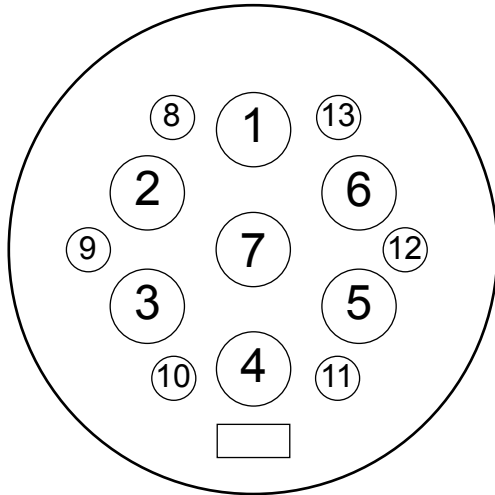

- 1 turn indicator, left
- 2 rear foglamp (switch)
- 2 a rear foglamp (vehicle)
- 3* ground (for circuit pins 1 to 8)
- 4 turn indicator, right
- 5 r/h rear side light, end-outline marker lamp, side marker lamp and number plate lamp
- 6 break lights
- 7 l/h rear side light, end-outline marker lamp, side marker lamp and number plate lamp
- 8 reversing lamp
- 9 power supply (continuous plus)
- 10 charge lead, positive for batteries in trailer
- 11 ground (for pin no. 10)
- 12 control lead for trailer identification
- 13* ground (for circuit pins 9 to 12)

7-pin universal S-version according DIN/ISO 3732 (GB-version)

Plug-image is not compatible with N-Version

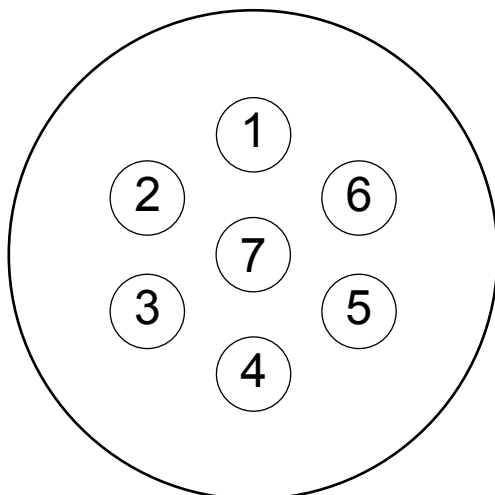

- 1 turn indicator, left
- 2 trailer detection
- 3 ground for 4
- 4 power supply (continuous plus)
- 5 -
- 6 charge line
- 7 ground for 6

Technical changes reserved.

Control Units and Sockets

Wiring Kits order no.	Identifications number	Control unit / Relay order no.	Socket	
			7 pins order no.	13 pins order no.
300025300173	Control unit 10p 506079	only complete wiring kit		
300052300107/113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	900001506424	900001506439
300056300107/113	Control unit 30p 506 270 A	900001506270	900001506424	900001506439
300060300107/113	Relay 3p+2p C2 506 811	900 001506811	900001506424	900001506680
300061300107/113	Relay 3p+2p C2 506 811	900 001506811	900001506424	900001506680
300061300107/113	Adapter	900061305001		
300070300107/113	Control unit 10p ALM 10/1 (alt: 582070002)	900001506274	900001506424	900001506680
300071300107/113	Control unit 22p (58 231 024)	900001506104	900001506054	900001506387
300072300107/113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	900001506397	900001506001
30073300113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	-	900001506124
300076300107/113	Control unit 22p ASG 2000-221	900001506434	900001506424	900001506439
300077300107/113	Control unit 22p 506 434	900001506434	900001506424	900001506439
300077300107/113	Control unit 30p 506 270 A	900001506270	900001506424	900001506439
300078300107/113	Control unit ASTM pro C1	900001506244	900001506424	900001506439
300080300107/113	Flashadapter EKS 2000	900001506811	900001506424	900001506680
300200300113	Relay 30p 506691	900001506691	-	900001506439
300201300113	Control unit 22p ASTM LC	900001506633	-	900001506439
300210300107/113	Control unit 22p ASTM LC	900001506633	900001506424	900001506439
303056300107/113	Relay 4p Westfalia	900001507786	900001506397	900001506680
303180300107/113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	900001506424	900001506439
303116300107/113	Relay 8p 54 220 003	900001506961	900001506424	900001506680
303117300107/113	Relay 8p 54 220 003	900001506961	900001506424	900001506680
303119300107/113	Relay 8p 54 220 003	900001506961	900001506424	900001506680
303120300107/113	Relay 8p 54 220 003	900001506961	900001506424	900001506680
303121300113	Control unit 15p 6 908 767	900001506563	-	900001506439
303122300113	Relay 8p 54 220 003	900001506961	-	-
303123300113	Control unit 15p 8 369 019 / 6 908 767	900001506563	-	900001506439
303124300113	Control unit 15p 8 369 019 / 6 908 767	900001506563	-	900001506439
303127300113	Control unit 15p 8 369 019 / 6 908 767	900001506563	-	900001506439
303137300113	Control unit 15p 8 369 019 / 6 908 767	900001506563	-	900001506680
303140300107/113	Control unit 15p 8 369 019 / 6 908 767	900001506563	900001506384	900001506439
303189300113	Control unit 15p 8 369 019 / 6 908 767	900001506563	-	900001506439
303202300113	Control unit 30p ASTM pro C1	900001506244	-	900001506386
303205300113	Control unit 30p ASTM pro C1	900001506244	-	900001506387
303235300113	Control unit 30p ASTM pro C1	900001506244	-	900001506386
303240300113	Control unit 30p ASTM pro C1	900001506244	-	900001506387
303338300107/113	Control unit BMW UCC-3	900001506722	900001506397	900001506001
303450300113	Control unit 18+10p 506577 (5F001)	900001506577	-	900001506439
303451300107/113	Control unit BMW UCC-1	900001506625	900001506424	900001506439
303460300107/113	Control unit BMW UCC-1	900001506625	900001506424	900001506439
303461300113	Control unit 18+10p 506577 (5F001)	900001506577	-	900001506439
304047300107/113	Relay 3p+2p C2 506 811	900001506811	900001506424	900001506680
304054300107/113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	900001506424	900001506439
304060300107/113	Relay 3p+2p C2 506 811	900001506811	900001506424	900001506680
304061300107/113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	900001506424	900001506439
304064300107/113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	900001506424	900001506439
304144300113	Control unit PSA UCC-2 506796	900001506796	-	900001506001
304400300107/113	WA_PSA_UCC-1	900001506626	900001506548	900001506439
304401300107/113	WA_PSA_UCC-1	900001506626	900001506548	900001506439
304402300107/113	WA_PSA_UCC-1	900001506626	900001506548	900001506439
304510300107/113	Relay 3p+2p C2 506 811	900001506811	900001506424	900001506680
305161300107/113	Control unit 8p 321099/321105/321106	900001506252	900001506397	900001506386
305171300107/113	Control unit 30p ASTM 30	900001506275	900001506424	900001506439
305177300107/113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	900001506397	900001506001
305179300107/113	Control unit 14p 321095	900001506399	900001506054	900001506386
305180300107/113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	900001506397	900001506001
305191300107/113	Control unit 30p ASTM 30	900001506275	900001506424	900001506439
305205300107/113	Control unit 10+14+14op 321133	900001506473	900001506397	900001506001
305206300107/113	Control unit 30p ASTM 30	900001506275	900001506397	900001506001
305207300107/113	Control unit 14p 321095	900001506399	900001506054	900001506386

Control Units and Sockets

Wiring Kits order no.	Identifications number	Control unit / Relay order no.	Socket	
			7 pins order no.	13 pins order no.
305208300107/113	Control unit 30p ASTM pro C1	900001506244	900001506397	900001506001
305209300107/113	Control unit 30p ASTM pro C1	900001506244	900001506397	900001506001
305210300107/113	Control unit 5DS 008 408-10	900001506101	900001506397	900001506124
305212300107/113	Control unit 506205	900001506205	900001506397	900001506124
305213300107/113	Control unit 506205	900001506205	900001506397	900001506124
305213300107/113	Control unit 5DS 008 408-10	900001506562	900001506054	900001506386
305214300107/113	Control unit 300001506562	900001506562	900001506397	900001506124
305216300107/113	Control unit 300001506557	900001506557	900001506397	900001506124
305220300107/113	Control unit 14p 321095	900001506399	900001506054	900001506386
305221300107/113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	900001506397	900001506001
305222300107/113	Control unit 30p ASTM 30	900001506275	900001506397	900001506001
305223300107/113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	900001506397	900001506001
305224300107/113	Control unit 10+14+14op 321133	900001506473	900001506397	900001506001
305226300113	Control unit AAG	900001506765	-	900001506386
305227300113	Control unit AAG	900001506765	-	900001506124
305255300107/113	Control unit AAG	900001506328	900001506424	900001506124
305256300107/113	Control unit 300001506558	900001506558	900001506397	900001506124
305268300113	Control unit 300001506560	900001506560	900001506397	900001506124
305269300107	Control unit AAG	900001506765	900001506397	-
305269300113	Control unit AAG	900001506479	-	900001506124
305272300107/113	Control unit AAG	900001506327	900001506397	900001506124
305329300107/113	1K0.907.383.F	900001506658	900001506344	900001506123
305330300107/113	1K0.907.383.F	900001506658	900001506344	900001506123
305384300113	4H0.907.383.C	900001506663	-	900001506123
305385300113	4G8.907.383	900001506710	-	900001506123
305403300107/113	Control unit AAG	900001506821	900001506397	900001506617
305404300107/113	Control unit AAG	900001506821	900001506397	900001506617
305410300107/113	Control unit 506758	900001506153	900001506397	900001506124
305500300113	Control unit AAG	900001506569	-	900001506387
306126300113	Control unit 16p 58 231 021/12V	900001506727	-	900001506680
306142300107/113	Relay 3p+2p C2 506811	900001506811	900001506424	900001506680
306150300107/113	Relay 3p+2p C2 506811	900001506811	900001506424	900001506680
306151300107/113	Relay 3p+2p C2 506811	900001506811	900001506424	900001506680
306152300107/113	Relay 3p+2p C2 506811	900001506811	900001506424	900001506680
306153300107/113	Relay 3p+2p C2 506811	900001506811	900001506424	900001506680
306154300107/113	Relay 3p+2p C2 506811	900001506811	900001506424	900001506680
306155300107/113	Relay 3p+2p C2 506811	900001506811	900001506424	900001506680
306174300107/113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	900001506424	900001506439
306175300107/113	Control unit 30p 506270	900001506270	900001506424	900001506439
306186300107/113	Control unit 30p 506270	900001506270	900001506424	900001506439
306189300113	Control unit 30p 506270	900001506270	-	900001506439
306197300107/113	Relay 4p Westfalia	900001507786	900001506424	900001506680
306201300107/113	Relay 4p Westfalia	900001507786	900001506424	900001506680
306203300113	Control unit 16p 58 231 021/12V	900001506727	-	900001506680
306204300107/113	Control unit 30p 506270	900001506270	900001506424	900001506439
306215300107/113	Control unit 30p 506270	900001506270	900001506424	900001506439
306216300107/113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	900001506424	900001506439
306217300001	Control unit ALM12/1/ASTM12/ASG2000-121	900001506005	-	-
306218300113	Control unit 30p 506691	900001506691	-	900001506386
306220300113	Control unit 30p ASTM pro C1	900001506244	-	900001506386
306221300107/113	Control unit 30p ASTM pro C1	900001506244	900001506397	900001506386
306224300107/113	Control unit 30p ASTM 31	900001506450	900001506397	900001506386
306226300107/113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	900001506424	900001506439
306227300107/113	Control unit 12p ASTM 12	900001506005	900001506424	900001506438
305228300107/113	Control unit 30p ASTM 30	900001506270	900001506424	900001506439
306231300107/113	Control unit 30p ASTM 31	900001506450	900001506424	900001506439
306237300107/113	Control unit 30p ASTM 30	900001506270	900001506397	900001506001
306238300107/113	Control unit 30p ASTM 31	900001506450	900001506424	900001506439
306239300113	Control unit 30p ASTM 31	900001506450	-	900001506439
306240300107/113	Control unit 30p ASTM 31	900001506450	900001506424	900001506439
306249300107/113	Control unit ASTM pro V4	900001506499	900001506397	900001506124

Control Units and Sockets

Wiring Kits order no.	Identifications number	Control unit / Relay order no.	Socket	
			7 pins order no.	13 pins order no.
306252300107/113	Control unit 30p ASTM 30	900001506270	900001506397	900001506386
306254300113	Control unit ASTM pro V4	900001506499	-	900001506124
306260300113	Control unit 30p 506270 A	900001506270	-	900001506124
306263300107/113	Control unit 30p 506270 A	900001506270	900001506397	900001506001
306265300107/113	Control unit ASTM pro V4	900001506499	900001506424	900001506439
306271300107/113	Control unit ASTM pro V4	900001506499	900001506424	900001506439
306353300113	Control unit 30p 506270 A	900001506270	-	
306371300107/113	Control unit ASTM pro V4	900001506499	900001506397	900001506124
306374300107/113	Control unit ASTM pro V4	900001506499		
306375300107/113	Control unit UCC-1 Fiat		900001506424	
306383300113	Control unit ASTM pro V4	900001506499	-	900001506439
306392300113	Control unit ASTM pro V4	900001506499	-	900001506439
306394300107/113	Control unit ASTM pro V4	900001506499	900001506424	900001506439
306397300107/113	Control unit ASTM pro V4	900001506499	900001506424	900001506438
306507300107/113	Relay 3p+2p C2 506811	900001506811	9000015064424	900001506680
306508300107/113	Relay 3p+2p C2 506811	900001506811	9000015064424	900001506680
306510300107/113	Control unit 30p 506270 A	900001506270	900001506424	900001506439
306520300113	Control unit 12p ASTM 10	900001506542	-	900001506387
306530300107/113	Control unit 506270 A	900001506270	900001506424	900001506439
306531300107/113	Control unit 506270 A	900001506270	900001506424	900001506439
306540300113	Control unit 30p (ASTM pro C1 alt) ASTM V4	900001506499	-	900001506439
306550300107/113	Control unit 30p (ASTM pro C1 alt) ASTM V4	900001506499	900001506397	900001506386
306560300113	Control unit 30p (ASTM pro C1 alt) ASTM V4	900001506499	-	900001506386
306570300113	Control unit 506270 A	900001506270	-	900001506386
306580300113	Control unit 506270 A	900001506270	900001506424	900001506439
306590300107/113	Control unit Lancia	900001506691	900001506424	900001506439
306592300113	Control unit 7p 58 227 001	900001506540	-	900001506387
306605300107/113	Control unit ASTM pro V4	900001506499	900001506424	900001506439
306606300113	Control unit 506270 A	900001506270	-	900001506001
307120300107/113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	900001506397	900001506386
307121300107/113	Control unit 12p ASTM 10	900001506542	900001506424	900001506439
307162300107/113	Relay 3p+2p C2 506811	900001506811	900001506424	900001506680
307194300107/113	Relay 3p+2p C2 506811	900001506811	900001506424	900001506680
307200300107/113	Control unit 12p ASTM 12	900001506005	900001506397	900001506386
307231300107/113	Control unit 12p ASTM 12	900001506005	900001506397	900001506386
307232300107/113	Control unit 12p ASTM 12	900001506005	900001506424	900001506438
307234300107/113	Control unit 10p/12p 5C006 / ASTM 12	900001506398	900001506397	900001506001
307234300107/113	Control unit 10p/12p 5C006 / ASTM 12	900001506005	900001506397	900001506001
307240300107/113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	900001506397	900001506386
307242300107/113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	900001506424	900001506439
307244300107/113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	900001506424	900001506439
307260300107/113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	900001506424	900001506439
307260300113	Control unit 12p ASTM 10	900001506542	-	900001506387
307264300107/113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	900001506397	900001506439
307280300107/113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	900001506397	900001506386
307290300107/113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	900001506397	900001506001
307360300107/113	Control unit 12p ALM 12/1 ASTM 10	900001506542	900001506397	900001506386
307376300113	Flash Control - (2+1)* 21 W	900001506786	-	
307385300107/113				
307397300107/113				
307400300107/113	Control unit Ford UCC-1	900001506627	900001506424	900001506439
307442300107/113	Control unit Ford UCC-2 506738	900001506738	900001506397	900001506001
313004300107	Control unit 58 211 001	900001507401	900001506424	-
313053300107/113	Control unit 13p 5DK 004 087-02	900001507900	900001506424	900001506680
313061300107/113	Control unit 7p 58 227 001	900001506540	900001506424	900001506680
313067600107/113	Control unit 7p 58 227 001	900001506540	900001506424	900001506680
313072300107	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	900001506424	-
313082300107/113	Control unit 30p ASTM 30	900001506275	900001506424	900001506680
313084300107/113	Control unit 14p+22p ASG 2000-361	900001506447	900001506424	900001506439
313084300107/113	Control unit 14p+22p 321132 PA66GS30	900001506472	900001506424	900001506439
313101300107/113	Control unit 7p 58 227 01	900001506540	900001506424	900001506680

Control Units and Sockets

Wiring Kits order no.	Identifications number	Control unit / Relay order no.	Socket	
			7 pins order no.	13 pins order no.
313103300107/113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	900001506424	900001506439
313105300107/113	Control unit 5DS 008 769-10	900001506172	900001506424	900001506439
313116300107/113	no control unit necessary, integrated in the onboard electrical system		900001506054	900001506387
313117300107/113	not available	-	900001506397	900001506386
313120300107/113	Control unit 10p ALM 10/1 (alt: 58207002)	900001506274	900001506424	900001506680
313120300107/113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	900001506424	900001506439
313121300107/113	Control unit 30p ASTM pro C1	900001506244	900001506397	900001506386
313122300107/113	Control unit 5DS 008 769-10	900001506172	900001506424	900001506439
313134300113	not necessary	-	-	900001506386
313135300113	not necessary	-	-	900001506439
313138300113	not necessary	-	-	900001506438
313167300107/113	Control unit 5DS 008 102-107	900001506171	900001506424	900001506439
313168300107/113	Control unit 5DS 008 769-10	900001506172	900001506692	900001506439
313174300107/113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	900001506397	900001506001
313176300107/113	Control unit 30p 506 270	900001506270	900001506424	900001506439
313195300107/113	-	-	900001506397	900001506001
313196300107/113	Control unit 5DS 008 493-107	900001506173	900001506397	900001506386
313208300107/113	Control unit 506 156	900001506156	900001506397	900001506439
313210300107/113	Control unit 506 156	900001506156	900001506397	900001506124
313211300107/113	Control unit 300001506573	900001506573	900001506397	900001506124
313212300107/113	Control unit 300001506573	900001506573	900001506397	900001506124
313231300107/113	Control unit Mercedes UCC-2 506822	900001506822	900001506424	900001506123
313234300107/113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	-	900001506438
313361300107/113	Control unit Mercedes UCC-1 506629	900001506629	900001506397	900001506124
313386300143	Control unit Mercedes UCC-1 506629	900001506629	-	
313398300107/113	Control unit Mercedes UCC-1 506629	900001506629	900001506424	
314237300107/113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	900001506424	900001506439
314244300107/113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	900001506424	900001506439
314245300107/113	Control unit 14p/12p 321095	900001506399	900001506054	900001506387
314245300107/113	Control unit 14p/12p ASTM 12	900001506005	900001506054	900001506387
314250300107/113	Relay 3p+2p C2 506811	900001506811	900001506424	900001506680
314251300107/113	Relay 3p+2p C2 509811	900001506811	900001506424	900001506680
314253300107/113	Relay 3p+2p C2 509811	900001506811	900001506424	900001506680
314254300107/113	Relay 3p+2p C2 509811	900001506811	900001506424	900001506680
314256300107/113	Relay 3p+2p C2 509811	900001506811	900001506424	900001506680
314257300107/113	Relay 3p+2p C2 509811	900001506811	900001506424	900001506680
314257300107/113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	900001506424	900001506439
314263300107/113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	900001506424	900001506439
314263300107/113	Control unit 12p ASTM R	900001506623	900001506424	900001506439
314264300107/113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	900001506424	900001506439
314265300107/113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	900001506424	900001506439
314267300113	Control unit ASTM R	900001506623	-	900001506439
314283300107/113	Control unit 30p ASTM pro A1/C1/V4	900001506244	900001506424	900001506439
314289300107/113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	900001506424	900001506439
314295300113	Control unit 16p only available at Opel dealers	-	-	900001506439
314300300107/113	Control unit 244 538 50	900001506907	900001506424	900001506438
314307300107/113	Control unit ASTM LC	900001506633	900001506548	900001506439
314335300113	Control unit ASTM R	900001506623	-	900001506439
314342300107/113	WA Opel UCC-1	900001506631	900001506548	900001506439
314373300113	Control unit ASTM 10	900001503907	-	900001506439
314386300107/113	WA Opel UCC-1	900001506631	900001506548	900001506439
314390300113	only available at Opel dealers	-	-	900001506387
314400300107/113	Control unit 30p ASTM pro A1/C1/V4	900001506244	900001506424	900001506439
314402300113	only available at Opel dealers	-	-	900001506387
314451300107/113	Control unit ASTM LC	900001506633	900001506424	900001506439
314860300107/113	Control unit ASTM R	900001506623	900001506054	900001506387
314870300107/113	Control unit ASTM R	900001506623	900001506548	900001506439
315072300107/113	Relay 3p+2p C2 509811	900001506811	900001506424	900001506680
315073300107/113	Relay 3p+2p C2 509811	900001506811	900001506424	900001506680
315097300107/113	Relay 3p+2p C2 509811	900001506811	900001506424	900001506680
315109300107/113	Control unit PSA UCC-1 506626	900001506626	900001506424	900001506439

Control Units and Sockets

Wiring Kits order no.	Identifications number		Control unit / Relay order no.	Socket	
				7 pins order no.	13 pins order no.
315185300113					
316113300107/113	Control unit 12p	ALM12/1/ASTM12/ASG2000-121	900001506005	900001506397	900001506001
316114300113	Control unit 10p	ALM 10/1 (former no.: 58207002)	900001506274	900001506397	900001506001
316114300113	Control unit 12p	ALM12/1/ASTM12/ASG2000-121	900001506005	900001506397	900001506001
316117300113	Control unit 10p	ALM 10/1 (former no.: 58207002)	900001506274	900001506424	900001506680
316117300113	Control unit 12p	ALM12/1/ASTM12/ASG2000-121	900001506005	900001506424	900001506439
316118300107/113	Control unit 12p	ALM12/1/ASTM12/ASG2000-121	900001506005	900001506424	900001506439
316120300107/113	Relay 4p+2p C2	70 BGI000	900001506147	900001506424	900001506439
316123300107/113	Control unit 12p	ALM12/1/ASTM12/ASG2000-121	900001506005	900001506424	900001506439
316124300107/113	Relay 5p	54 201 126	900001507731	900001506424	900001506680
316126300107/113	Relay 5p	54 201 126	900001507731	900001506424	900001506680
316128300107/113	Control unit 12p	ALM12/1/ASTM12/ASG2000-121	900001506005	900001506424	900001506680
316130300107/113	Control unit	ASTM 10	900001506542	900001506424	900001506439
316135300113	no Control unit		-	-	900001506387
316140300107/113	Control unit 12p	ALM12/1/ASTM12/ASG2000-121	900001506005	900001506397	900001506001
316142300107/113	Control unit 12p	ALM12/1/ASTM12/ASG2000-121	900001506005	900001506397	900001506001
316143300107/113	Control unit 12p	ALM12/1/ASTM12/ASG2000-121	900001506005	900001506397	900001506001
316152300113	Control unit 12p	ALM12/1/ASTM12/ASG2000-121	900001506005	900001506397	900001506001
316156300107/113	Control unit 12p	ASTM 10	900001506542	900001506424	900001506439
316170300107/113	Control unit 12p	ALM12/1/ASTM12/ASG2000-121	900001506005	900001506397	900001506001
316174300107/113	Control unit 12p	ALM12/1/ASTM12/ASG2000-121	900001506005	900001506397	900001506001
316174300107/113	Control unit 10p	ASTM R	900001506623		900001506680
316176300113	Control unit 10p	TLM C2+54	900001506730	-	
316187300107/113	Control unit 12p	ALM12/1/ASTM12/ASG2000-121	900001506005	900001506397	900001506001
316190300107/113	Control unit 12p	ASTM 10	900001506542	900001506424	900001506439
316192300107/113	Control unit 12p	ALM12/1/ASTM12/ASG2000-121	900001506005	900001506424	900001506439
316214300107/113	Control unit	ASTM R	900001506623	900001506424	900001506439
316259300113	Control unit 10p	TLM C2+54	900001506730		
316273300107/113	Control unit	ASTM LC	900001506633	900001506548	900001506439
316294300107/113	Control unit	ASTM LC	900001506633	900001506548	900001506439
316297300107/113	Control unit 22p	LC	900001506633	900001506424	900001506439
316300300107/113				900001506054	900001506387
316315300107/113	Control unit 10p	506623	900001506623	900001506424	900001506439
316318300113	-		-	-	900001506721
316319300113	-		-	-	900001506123
316321300113	Control unit	ASTM LC	900001506633	-	900001506439
316333300107/113					
316337300107/113					
316340300107/113					
316353300107/113					
316410300113	Control unit 10p	506623	900001506623	-	900001506001
316430300107/113	Control unit	ASTM LC	900001506633	900001506397	900001506001
316440300107/113	no Control unit		-	900001506054	900001506387
316442300107/113	Control unit 10p	900001506623	900001506623	900001506424	900001506439
317007300107/113	Relay 4p	Westfalia	900001507786	900001506424	900001506680
317013300107/113	Relay 4p	Westfalia	900001507786	900001506424	900001506680
317015300107/113	Control unit 10p	ALM 10/1 (former no.: 58207002)	900001506274	900001506397	900001506001
317015300107/113	Control unit 12p	ALM12/1/ASTM12/ASG2000-121	900001506005	900001506397	900001506001
317043300107/113	Control unit 12p	ALM12/1/ASTM12/ASG2000-121	900001506005	900001506397	900001506001
317050300107/113	Control unit 12p	ALM12/1/ASTM12/ASG2000-121	900001506005	900001506397	900001506001
317056300107/113	Control unit AAG	(former no.: 506328) 506758	900001506758	900001506397	900001506617
317064300107/113	Control unit not necessary		-	900001506054	900001506617
317079300107/113	Control unit	506153	900001506153	900001506397	900001506617
317094300107/113					
317400300107/113	Control unit not necessary		-	900001506054	900001506617
317420300107/113	1K0.907.383.F	506758	900001506758	900001506054	900001506617
320039300107/113	Control unit not necessary		-	900001506424	900001506680
320044300107/113	Relay 3p+2p C2	506811	900001506811	900001506424	900001506680
320049300113	without Control unit	506464	900001506464	-	900001506439
320051300113	Control unit 30p	ASTM pro C1/V4	900001506244	-	900001506439
320058300113	Control unit 30p	ASTM pro C1/V4	900001506244	-	900001506439

Control Units and Sockets

Wiring Kits order no.	Identifications number	Control unit / Relay order no.	Socket	
			7 pins order no.	13 pins order no.
320076300107/113	Control unit Volvo UCC 3 506668	900001506668		900001506439
320240300107/113	Control unit 16p UCC 1 oder 3	900001506668	900001506424	900001506439
320320300113	Control unit 30p ASTM pro C1/V4	900001506244	-	900001506439
320400300113	Control unit 30p ASTM pro C1/V4	900001506244	-	900001506386
320540300113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	-	900001506001
320542300107/113	WA Volvo UCC-3	900001506668	900001506548	900001506438
320543300107/113	WA Volvo UCC-3	900001506668	900001506424	900001506680
320780300113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	-	900001506439
320108300107/113				
321106300113	Control unit 5DS 008 769 - 107	900001506172	-	900001506439
321315300107/113	Relay 3p+2p C2 506811	900001506811	900001506424	900001506680
321316300107/113	WBXS 6NO 953 253 C	900001506287	900001506424	900001506680
321317300107/113	WBS 6NO 953 253 C	900001506287	900001506424	900001506680
321327300107/113	Relay 3p+2p C2 506811	900001506811	900001506424	900001506680
321331300107/113	Relay 3p+2p C2 506811	900001506811	900001506424	900001506680
321360300107/113	Relay 3p+2p C2 506811	900001506811	900001506424	900001506680
321361300107/113	Relay 3p+2p C2 506811	900001506811	900001506424	900001506680
321403300107/113	Relay 3p+2p C2 506811	900001506811	900001506424	900001506680
321451300107/113	without Control unit	-	900001506054	900001506387
321452300107/113	without Control unit	-	900001506054	900001506387
321454300107/113	Control unit 506758	900001506758	900001506054	900001506387
321455300107/113	Control unit 506558, 506658, 506758	900001506758		
321456300107/113	Control unit 506558, 506658, 506758	900001506758		
321457300107/113	Control unit 8p 321099/105/106	900001506252	900001506397	900001506001
321457300107/113	Control unit 12p 321099/105/106	900001506005	900001506397	900001506001
321458300107/113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	900001506397	900001506001
321465300107/113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	900001506397	900001506001
321468300107/113	WBS-Relay 1C0 953235 A	900001506022	-	900001506617
321500300113	Control unit AAG 506 107	900001506667	-	900001506439
321505300107/113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	900001506397	900001506001
321512300107/113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	900001506397	900001506001
321520300107/113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	900001506397	900001506001
321523300113	without Control unit	-	-	900001506617
321524300107/113	without Control unit	-	900001506054	900001506617
321525300107/113	Control unit 506658, 506758	900001506758	900001506054	900001506387
321526300107/113	Control unit 12p ASTM 10	900001506542	900001506424	900001506439
321534300107/113	Control unit AAG 506658, 506758	900001506758	900001506397	900001506617
321535300107/113	Control unit AAG 506658, 506758	900001506758	900001506397	900001506617
321537300107/113	Control unit AAG 506658, 506758	900001506758	900001506397	900001506617
321538300107/113	Control unit AAG 506658, 506758	900001506758	900001506397	900001506617
321539300107/113	Control unit C1 504244 / V4	900001506244	900001506397	900001506617
321540300107/113	Control unit AAG 506658, 506758	900001506758	900001506397	900001506617
321543300107/113	Control unit AAG 506658, 506758	900001506758	900001506397	900001506617
321545300107/113	Control unit AAG 506658, 506758	900001506758	900001506397	900001506617
321546300107/113	Control unit AAG 506658, 506758	900001506758	900001506397	900001506617
321554300107/113	Control unit AAG 506658, 506758	900001506758	900001506348	900001506438
321556300107/113	Control unit AAG 506658, 506758	900001506758	900001506054	900001506387
321557300107/113	Control unit 506658, 506758	900001506758	900001506054	900001506387
321600300107/113	Control unit 506658, 506758	900001506758	900001506397	900001506617
321650300113	Control unit 506758, 506758	900001506758	-	900001506387
321651300113	Control unit 506758, 506758	900001506758	-	900001506387
321652300113			-	900001506387
321653300113			-	900001506387
321701300107/113	Control unit AAG 506658, 506758	900001506758		
321702300107/113	Control unit AAG 506658, 506758	900001506758	900001506054	
321704300107/113	Control unit 506758, 506758	900001506758	900001506054	900001506387
321765300113	Control unit AAG 7P0.907.383.B NAR	900001506660	900001506342	900001506438
321780300107/113	Control unit VW UCC1 506630	900001506630	900001506397	900001506124
323040300107/113	not necessary	-	900001506424	900001506680
323045300113	Control unit 15p 8 369 018/908 767	900001506563	-	900001506439
323048300107/113	without Control unit	-	90001506424	900001506680

Control Units and Sockets

Wiring Kits order no.	Identifications number	Control unit / Relay order no.	Socket	
			7 pins order no.	13 pins order no.
323064300113	Control unit 15p 6 908 767	900001506563		900001506439
323074300113	-		-	900001506437
323080300113	Control unit 30p ASTM pro C1	900001506244	-	900001506124
323084300113	Control unit 506558	900001506558	-	900001506001
323097300113	Control unit BMW UUC2 506737	900001506625	-	900001506001
323107300113				
323410300113	Control unit 506270 A	900001506270	-	900001506439
324014300107/113	Control unit 14p 321095	900001506399	900001506054	900001506387
327014300113	Control unit 506 107	900001506107	-	900001506439
332108300107/113	Control unit p3+2p C2 506811	900001506811	900001506424	900001506680
332262300107/113	Control unit ASTM LC	900001506633	900001506548	900001506439
332265300107/113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	900001506548	900001506439
332305300113	Control unit ASTM LC	900001506633	-	900001506001
332306300113	Control unit 10p ASTM R	900001503907	-	900001506439
332400300107/113	Control unit 30p 506275	900001506275	900001506424	900001506439
332680300113	Control unit 10p 506079	nur kpl. mit E-Satz	-	900001506387
335229300113	Control unit 10p ASTM 10	900001506542	-	900001506438
335250300113	Control unit 10p ASTM R	900001506623	-	900001506439
335251300107/113	Control unit 10p ASTM 10	900001506542	900001506424	900001506439
335289300113	Control unit p3+2p C2 506811	900001506811	-	900001506439
335289300113	Flash Control - (2+1)*21 W	900001507786	-	
335299300113	Flash Control - (2+1)*21 W	900001507786	-	
335302300113	Control unit 10p ASTM 10	900001506542	-	900001506617
335303300113	Control unit 10p ASTM 10	900001506542	-	900001506617
335304300113	Control unit 10p ASTM 10	900001506542	-	900001506617
335305300113	Control unit 10p 506270 A	900001506270	-	900001506617
335323300113	Control unit 10p ASTM 10	900001506542	-	900001506617
335328300107/113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005		900001506438
335345300113	Control unit ASTM V4	900001506499	900001506397	900001506001
335346300113	Control unit 5C028	900001506578	-	900001506439
335360300113	Control unit 5C028	900001506578		
335364300107/113	Control unit 22p 506633	900001506633	900001506397	900001506001
335383300107/113	Control unit ASTM V4	900001506499	900001506424	900001506439
335393300113	Control unit 5C028	900001506578	-	900001506439
335394300113	Control unit ASTM V4	900001506499	-	900001506439
335397300113	Control unit 22p 506633	900001506633	-	900001506439
335398300113	ECS			
335411300107/113	Control unit ASTM V4	900001506499	900001506397	900001506001
335413300107/113	Control unit ASTM V4	900001506499	900001506424	900001506439
335419300107/113				
335600300113	Control unit 12p ASTM 10	900001506542	-	900001506617
338108300113				
338680300113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	-	900001506438
340072300113	Control unit 10p TLM C2+54	900001506639	-	
340075300113	Control unit 10p CCM	900001506079	900001506054	900001506386
340078300107/113				
340093300113	Control unit ASTM LC	900001506633	-	900001506439
340099300107/113				
342041300107/113	Relay 4p Westfalia	900001507786	900001506424	900001506680
342099300107/113	Control unit 12p ASTM 10	900001506542	900001506054	900001506387
342103300113	Control unit 5C028	900001506578	-	900001506387
343037300113	Control unit 12p ASTM 10	900001506542	-	900001506439
343056300107/113	Control unit ASTM LC	900001506633	900001506424	900001506439
343060300113	Control unit 12p ASTM 10	900001506542	-	900001506439
343066300113	Control unit ASTM LC	900001506633	-	900001506124
343067300113	Flash Control - (2+1)*21 W	900001506744		
343069300113	Control unit UCC-1 MA/FO	900001506670	-	900001506439
343071300107/113				
343400300107/113	Control unit ASTM LC	900001506633	900001506424	900001506439
343660300113	Control unit 12p ASTM 10	900001506542	-	900001506386

Control Units and Sockets

Wiring Kits order no.	Identifications number	Control unit / Relay order no.	Socket	
			7 pins order no.	13 pins order no.
344023300107/113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	900001506397	900001506001
344027300107/113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	900001506424	900001506680
344040300107/113	without Control unit	-	900001506424	900001506680
344041300107/113	without Control unit	-	900001506424	900001506680
344044300107/113	Control unit AAG 506328, 506758	900001506758	900001506424	900001506617
344063300107/113				
344250300107/113	Control unit 506558, 506758	900001506758	900001506397	900001506617
344500300107/113	Control unit AAG 506328, 506758	900001506758	900001506424	900001506439
344503300107/113	Relay 3p+2p C2 506811	900001506811	900001506424	900001506680
344504300107/113	Relay 3p+2p C2 506811	900001506811	900001506424	900001506680
345059300107/113	Control unit ASTM LC	900001506633	900001506055	900001506387
345070300113	TLM C2-FOG-REV-PDC (+)	900001506723		900001506680
345079300113	Control unit ASTM LC	900001506633	-	900001506439
345080300113	Control unit ASTM LC	900001506633	-	900001506439
345082300113	Control unit ASTM LC	900001506633	-	900001506439
345084300107/113	Control unit ASTM LC	900001506633	900001506397	900001506001
345220300107	Control unit 12p 506005	900001506005	900001506054	
345480300113	Control unit 12p ASTM 10	900001506542	-	900001506438
345760300113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	-	900001506387
345086300107/113	Control unit ASTM LC	900001506633	900001506424	900001506439
345880300113	Control unit 12p ALM12/1/ASTM12/ASG2000-121	900001506005	-	900001506124
345091300107/113				
346018300107/113	Control unit 12p ASTM 10	900001506542	900001506424	900001506439
346049300107/113	Control unit ASTM LC	900001506633	900001506548	900001506439
346059300113	Relay 3p+2p C2 506811	900001506811	-	900001506439
346064300107/113	Control unit ASTM LC	900001506633	900001506424	900001506439
346066300113	Control unit 12p ASTM 10	900001506542	-	900001506439
346071300113	Control unit ASTM LC	900001506633	-	900001506439
346076300107/113				
346800300107/113	Control unit 12p ASTM 10	900001506542	900001506424	900001506439
346810300107/113	Control unit 12p ASTM 10	900001506542	900001506424	900001506439
348020300113	Flash Control - (2+1)*21 W	900001507786		
348023300113	Flash Control - (2+1)*21 W	900001507786		
348026300113	Flash Control - (2+1)*21 W	900001507786		
348037300113	Control unit ASTM LC	900001506633	-	900001506439
349025300113	Control unit	900001506691	-	900001506439
349039300107/113	Control unit ASTM LC	900001506633	900001506054	900001506386

WESTFALIA


Load Carrying System BC 60

Accessories

Spare parts

General Information

Westfalia Bike Carrier BC 60

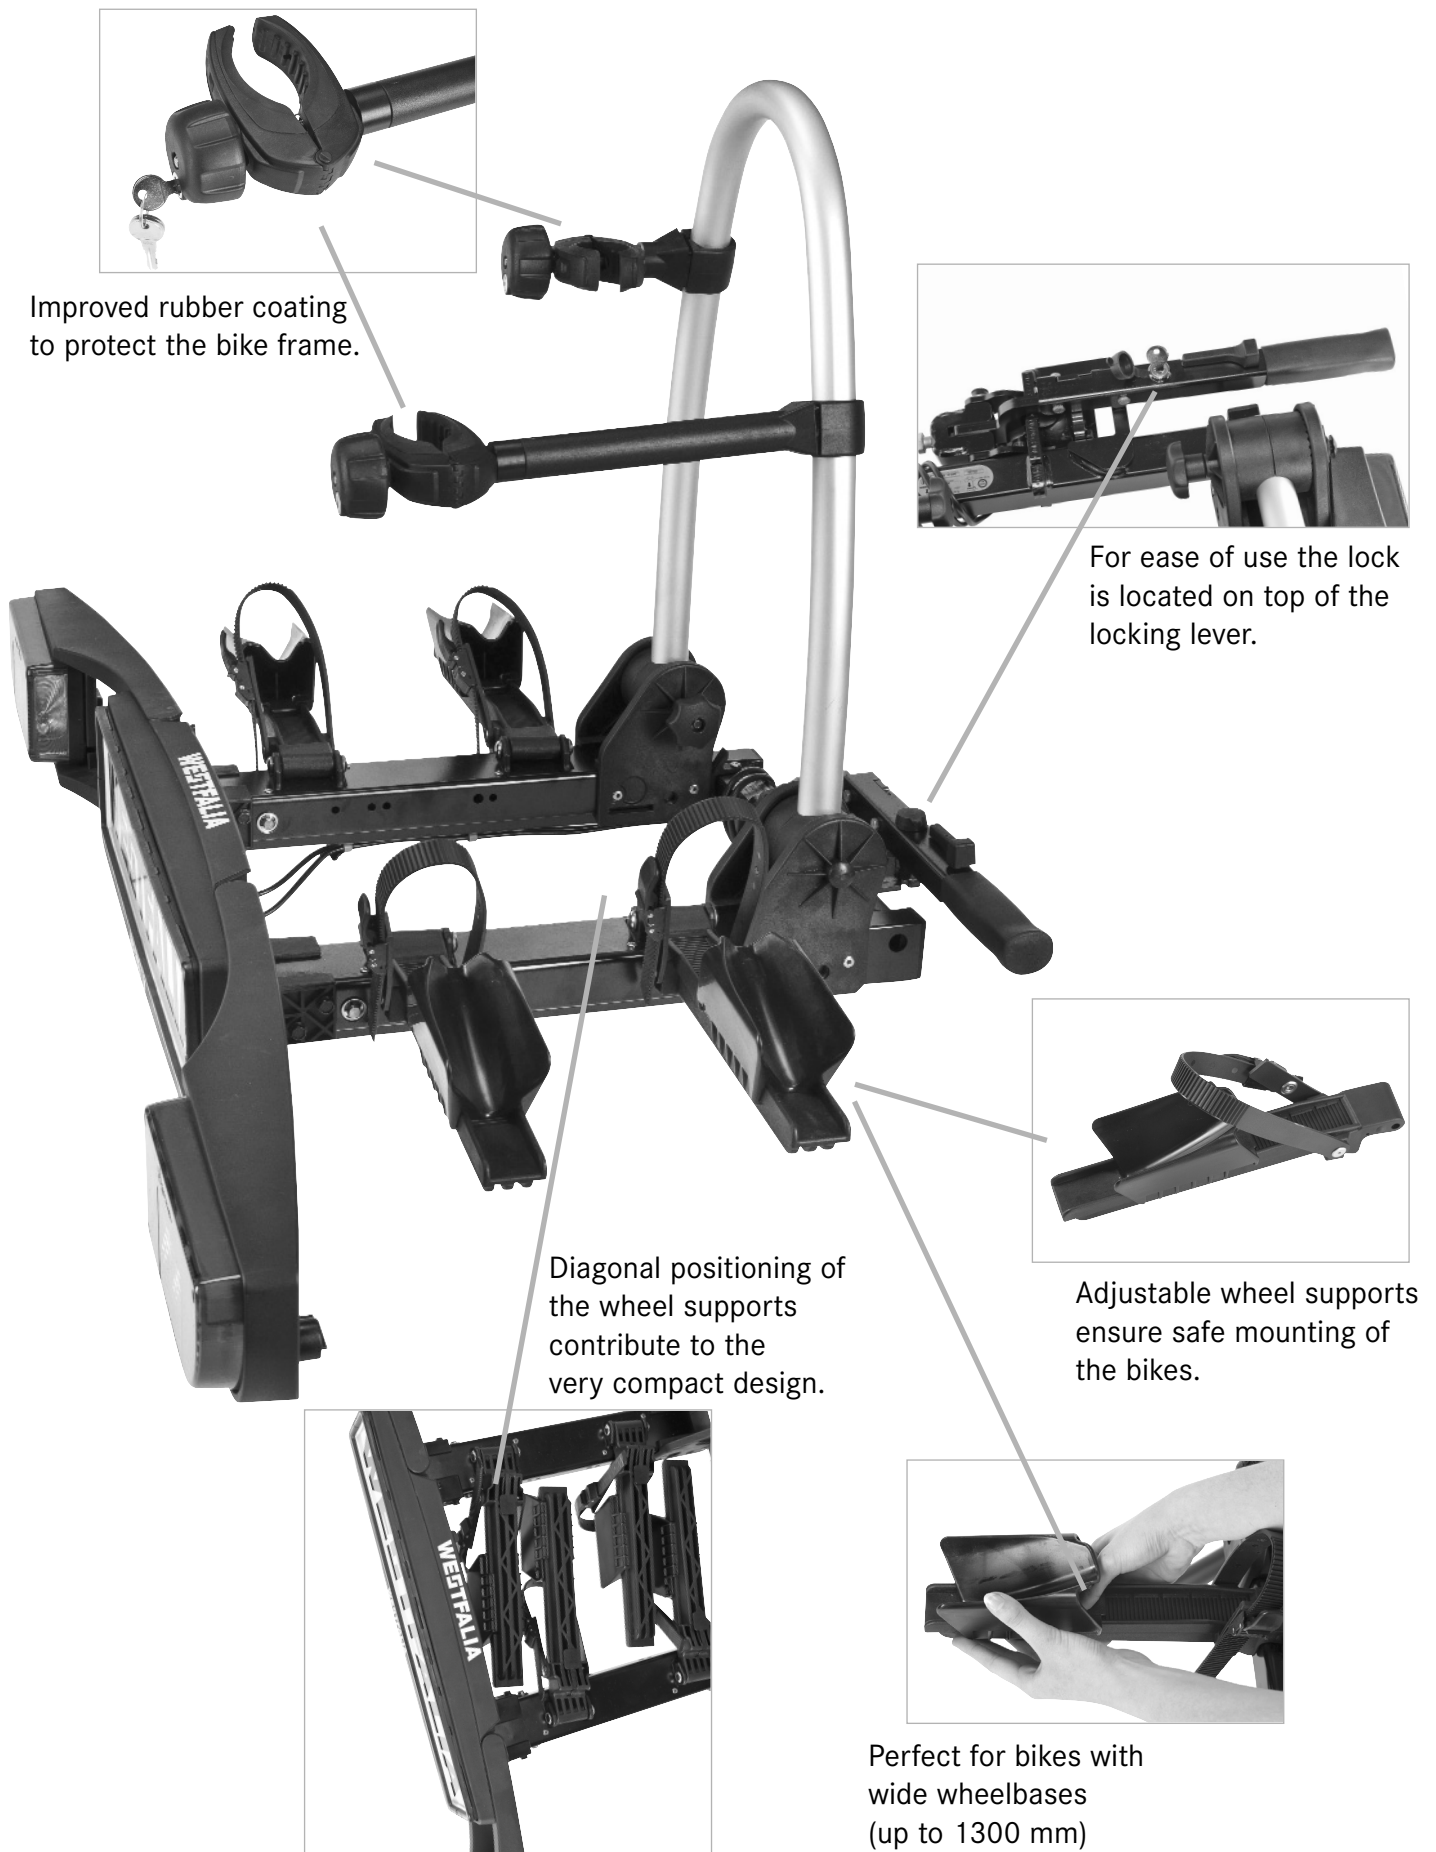

Westfalia Bike Carrier BC 60



- Towbar mounted cycle carrier for 2 bikes.
- The enhanced design of the wheel supports ensure the safe attachment of the bikes.
- Ideal for the use with electric bikes (wheelbases up to 1300 mm)
- The improved rubber coating inside the frame clamps protect the bike frame.
- Folds down to a very compact and easy to store product.
- The swivel down mechanism provides easy access to the boot of the vehicle.
- 60 kg payload.
- Easily extendable to carry a 3rd bike or the box or a platform.
- TÜV-GS-approved



AWARD 09

WESTFALIA-Automotive GmbH



Accessories and Technical data



Bicycle carrier BC 60

measurements:.....in hinged position: 580 x 225 x 690 mm (W/H/D)
in expanded position: 1260 x 660 x 690 mm (W/H/D)
weight:..... 17,5 kg
max. payload:.....60 kg
max. payload per bicycle:.....30 kg
wheelbase:..... up to 1300 mm
bicycle frame:..... - 80 mm diameter
section width:..... - 60 mm

order no. **350010 600001**



Box

measurements:..... 1170 x 600 x 425 mm (B/H/D)
weight:..... 15 kg
max. payload:.....45 kg
capacity:.....200 l
colour:..... anthracite

order no. **350002 600001**



Platform

measurements:..... 1290 x 230 x 413 mm (B/H/D)
weight:..... 6 kg
capacity:..... 54 kg
colour:..... anthracite

order no. **350004 600001**



Expansion rail for the 3rd bicycle

max. payload:.....20 kg

order no. **350014 600001** for models BC 60 (year of constr. 01/12-)
order no. **350001 600001** for models Portilo (year of constr. -12/11)

Accessories and Technical data



Drive up ramp

For easy loading of heavy cycles

order no. **350020 600001** for models BC 60 (year of constr. 01/12-)
order no. **350009 600001** for models Portilo (year of constr. -12/11)



Bag

For clean stowage of the Portilo cycle carrier


order no. **350008 600001**



Wall mounting bracket

Steel construction for easy storage of the Portilo cycles carrier to any wall

order no. **350006 600001**

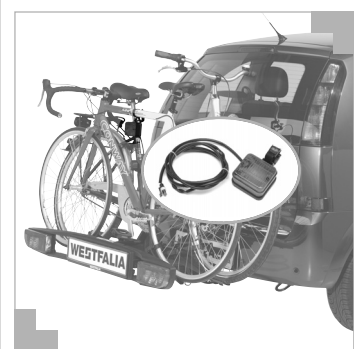

Additional brake light

Legal requirement if the bikes obscure the 3rd brake light of the vehicle

order no. **350000 305173**

Spare parts



claw short incl. key / lock
order no. **950000 633001**

claw long incl. key / lock
order no. **950000 633002**



claw for 3rd bicycle incl. key / lock

order no. **950000 633004**




knob for claw (2 pieces)
incl. 3 keys / lock

order no. **950000 633003**

key for knob (2 pieces)

order no. **950000 5133xx** (xx = number of the key)

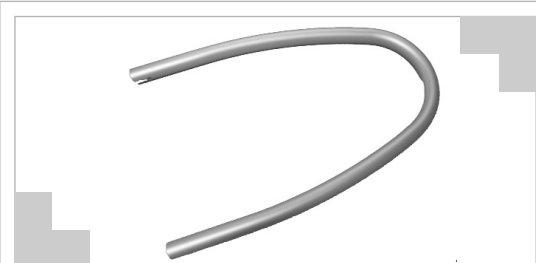

bracket / bow

order no. **950000 613001**



receiver for bracket + 2x cog wheel

order no. **950000 621001**



star grip incl. round head screw

order no. **950000 637001**

Spare parts



rubber for gripping lever

order no. **950000 503001**



wing

order no. **950010 619002 left**

order no. **950010 619003 right**

for models BC 60 (year of constr. 01/12-)

order no. **950000 619001**

for models Portilo (year of constr. -12/11)




locking mechanism for wings (4 pieces)

order no. **950010 627001**




bracket for licence plate (Germany)

order no. **950000 631004**

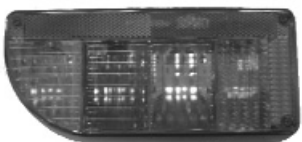

light cluster left (without cable)

order no. **950000 302003**

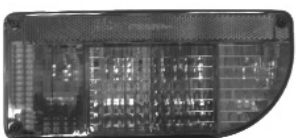

light cluster right (without cable)

order no. **950000 302004**

Spare parts



gear belt incl. clothing
(ratchet belt)


order no. **950010 622001**
for models BC 60 (year of constr. 01/12-)

order no. **950000 622001**
for models Portilo (year of constr. -12/11)



gear belt extension

order no. **950000 622002**

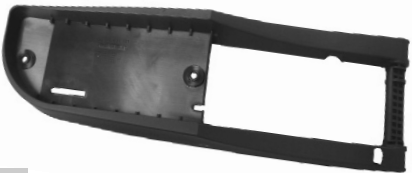

light cluster arm left

order no. **950000 631001**



light cluster arm right

order no. **950000 631002**



light traverse middle

order no. **950000 631003**



Presentation rack Portilo
(Cycle carrier is not included.)

order no. **950003 631001**

WESTFALIA

Frequently asked questions and the answers to them

In this section we have tried to provide you with answers to the most frequently asked questions received by our customer service team. Hopefully, you will find your question here, and then resolve your problem quickly.

Questions and Answers

Attaching Bicycle Racks to Towbars

Can I attach a bicycle rack to my towbar? Some bicycle rack manufacturers prescribe using towbars in which the ball bar is made from 52-3 steel or equivalent.

WESTFALIA towbars are generally suitable for attaching bicycle racks. Exceptions to this are towbars for the Audi 80/100/A4/A6 that were manufactured until the mid-90s. These are made from GGG 40 (nodular graphite iron). Ball bars made from this material are not suitable for attaching bicycle racks. Starting around 1996, the nodular graphite iron GGG 52 was used. This is comparable with 52-3 steel and bicycle racks can be attached without problem. The GGG 40 or GGG 52 materials are indicated by a stamp on the side of the ball neck. Ball bars that are not stamped are always made from 52-3 steel.

If your tow bar is made of aluminum, we can send you a certificate that permits you to use it with a bicycle rack.

C2 indicator lights are missing

The C2 lights have not been included in my electrical kit.

*The C2 lights are generally included with the cable bundle.
However with Top Tronic systems, they are not required and are therefore not included.*

Control Unit Hums

When I check the electrical system, the control unit begins to hum. What can I do?

Check whether the trailer contains a rear fog light. The control unit detects the trailer through the rear fog light. If not, this has to be retrofitted to the trailer.

Flashing Function not available

After installing a Top Tronic system, my turn signals no longer function properly on the trailer and at the rear of the vehicle.

In most cases, this is due to not having connected the continuous positive to the additional relay. Please check this.

Inspecting the Electrical System

The diode test plug that I am using to inspect the electrical equipment lights up like a Christmas tree. What can I do?

Diode test plugs are not appropriate for inspection purposes due to their low loading capacity. The electrical load has to be 21 watt.

Keys for detachable towbars

I lost the key for my detachable towbar. What can I do?

You should always note the number of the key when you receive your automatically detachable towbar. This number is stamped into the head of the key. With this key number, you can have your garage or local WESTFALIA fitting specialist request a new key from us at any time. If you did not note your key number, you should check if there is a number with 5 figures on the lock of the towball. This number is the keycode with which you can order a new key. If you neither have noted a key number nor have a number on the towbar's lock, have your garage or local WESTFALIA fitting specialist request a master key set from us. This contains all of the available keys. After receiving the key set, try out the keys until you find the key that fits and send us back the entire set. You can order the required key or keys through your dealer by providing the number of the key.

Operating License / Expert Opinion

I require an operating license/ expert opinion.

The assembly and operating instructions of the towbar are to be included together with the other vehicle papers. These serve as the operating license during the general vehicle inspection (for example, TÜV in Germany). Additional expert opinions are not required for towbars not subject to design approval, but rather are accepted on a case-by-case basis. You can download the general operating license from our site or request it at our contact page.

Towbar and Accident

My vehicle has been damaged at the rear following a rear-end collision. Can I continue to use the towbar?

When vehicles with a trailer hitch are damaged at the rear, it is likely that the towbar has also been damaged through overloading. This can often be detected by a permanent deformation to the tow bar. Other signs that indicate damage include, for example: Surface damage, unusual notches or distortions in the attachment area, or in tow bars with a detachable towball, too much free play of the removable part. We inspect all towbars that are sent to us using a special reference gauge. If the dimensions of the towbar are no longer within the reference range, one can assume that the tow bar has been damaged by overloading. It is not permissible to continue to use damaged towbars. Inspecting the dimensions of the towbar does not provide information on any possible cracks or crack initiation which would significantly reduce the fatigue strength. As time proceeds, incipient cracks can lead to complete failure of the tow bar when using it for towing. A crack inspection, for example using dye penetration test or x-ray analysis, is very time-consuming and is uneconomical in most cases. If you are in doubt, we generally recommend that you replace the towbar, although the final decision has to be made by the expert technician.

"TSP, Trailer-Stability-Program "

This system is known in the industry also by the following terms:

TSM, Trailer Sway Mitigation
TSA, Trailer Stability Assist

This system monitors the drive situation of the rig by sensors on the vehicle. The vehicle detects by the connection of the trailer plug that the vehicle is in trailer mode and monitors the velocity-dynamic movements that are relevant to this operating mode. In case the rig gets into to critical driving state, for example because of oscillation/fishtailing of the trailer, the vehicle's systems support the driver until the rig returns to a stable condition. Such systems are offered by many automobile manufacturers now as an option or as a standard feature. The activation of the GST/TSP can be done only by connecting (clearing/calibration) to the vehicle's on-board electrical system using tuned, in general original control units.

WESTFALIA now provide a number of electrical cable looms with this safety-relevant system. Such solutions are marked in the catalogue with the comment "On-board electrical system connection possible". If the vehicle is prepared with a GST-/TSP-/TSM-/TSA system, it can be activated following installation of the WESTFALIA electrical cable loom. An important step for improving traffic safety.

For further information please visit our internet site: www.westfalia-automotive.de

Terms of Delivery of the Westfalia Automotive GmbH

I. Validity of terms

1. We shall conclude the contract exclusively according to the following terms of delivery. Said terms are also applicable for all future business connections, even if they are not expressly agreed upon once more. Deviations from these terms are only effective if we confirm them in writing. Terms of business of the purchaser which we do not approve in writing are without obligation for us, even if we do not expressly object to them.
2. Modifications of these terms shall be made known to the purchaser in writing. They shall apply as approved, if the purchaser does not object to them in writing. This consequence shall be especially emphasised when we inform the purchaser. The purchaser must send us the objection within one month after communication of the modifications.
3. Within the scope of our terms, e-mails and telefax letters also constitute the written form.

II. Offers, scope of delivery

1. Our offers remain non-binding. To be valid, oral and telephone agreements need our written confirmation.
2. The documents associated with our offers, such as brochures, illustrations, and diagrams, also weights and measurements, are only competent as approximations, in so far as we do not designate them expressly as binding. - Decisive for the quality of the delivered object is solely our order confirmation. We reserve the right of ownership and copyright of cost estimates, diagrams and other documents. These documents may not be made accessible to a third party without our permission.
3. The parts delivered correspond to the standards and regulations applicable in the Federal Republic of Germany. The purchaser shall be responsible for any necessary inspection and approval of the delivered parts according to foreign standards and regulations.

III. Prices and terms of payment

1. The listed prices valid at the time of delivery are decisive. They shall apply, unless something else is agreed upon, ex works without packaging.
2. Payment with bills of exchange and cheques is only accepted on account of performance. In accepting bills of exchange whose payment shall be transacted abroad or in secondary locations, we are not liable for the punctual presentation, and drawing up of a deed of protest. Discount charges are calculated as of the day of maturity of the billed amount. Should the purchaser blamefully not fulfil his/her payment obligations, or specifically, should he/she not redeem cheques and bills of exchange, or cease payments, we reserve the right to fix a due date of payment for the total remaining debt, even if we have accepted cheques and bills of exchange. Apart from this, we then have the right to demand advance payments.
3. May it, after conclusion of the contract, become ascertainable that our claim for payment is endangered through the purchaser's lack of capacity, we can refuse the service we have obliged ourselves to perform and specify for the purchaser a time limit for delivery versus payment or versus security. In the case of an payment period expiration without consequence, we reserve the right to withdraw from the contract and to demand compensation for damages. Setting a period of payment is superfluous if the purchaser gravely and conclusively refuses to fulfill the payment, or if special circumstances exist which justify our immediate withdrawal under consideration of the interests of both parties.

IV. Date of delivery

1. The periods named in our order confirmations, or agreed upon elsewhere with the purchaser, shall be decisive. The maintenance of these periods presumes the punctual delivery of all documents to be submitted by the purchaser, and also the maintenance of the terms of payment and other obligations agreed upon. Should these terms not be fulfilled punctually, the delivery period shall be extended for the duration of the delay. Partial deliveries are admissible in a scope which is reasonable for the purchaser.
2. In sales contracts, the delivery period is deemed maintained, if the merchandise, which is ready for operation, is in transit or picked up within this period. Should the shipment be delayed on grounds for which the purchaser is responsible, the period shall be deemed maintained when the communication of completion or readiness to deliver takes place within the agreed period. Partial deliveries are admissible to an extent which is reasonable for the purchaser.
3. May we be prevented from fulfilling our obligations by the occurrence of unforeseeable, exceptional circumstances, which we were not able to avoid despite the reasonable care taken according to the circumstances of the case - whether in our works or at our subcontractors - for example operational disturbances, intervention of the authorities, delay in delivery of essential raw materials and building materials, power supply difficulties, the delivery period shall be extended, should the delivery or service be at all possible, by the duration of the hindrance. In the event of the delivery circumstances specified above making the delivery or service impossible, we are no longer bound by the obligation of delivery.
4. The delivery period is also postponed to an appropriate extent in the case of industrial strikes or lock-outs. Should the delivery or service be impossible, we are no longer bound by the obligation of delivery. Should the date of delivery be postponed in the cases described above for more than one month, the purchaser shall reserve the right to withdraw from the contract. The validity of damage compensation claims shall be excluded. Should the circumstances described above occur on the part of the purchaser, the same legal consequences shall also apply to his obligation of receiving. We are only entitled to refer to the circumstances described here if we informed the purchaser without delay.
5. Should the shipment or delivery be delayed at the purchaser's request, we have the right to charge storage payment to the amount of half a percent of the net invoice amount for each started month, beginning one month after announcement of completion or of readiness to deliver. The storage payment is limited to five percent of the net invoice amount, unless we can prove higher costs.

V. Shipment and passage of risk

1. Risk is transferred to the purchaser at shipment. Should the shipment be delayed on grounds which lie within the competency of the purchaser or his/her auxiliary person, the risk shall be transferred to the purchaser already on the day of communication of readiness for delivery.
2. As a basic principle, we insure the total shipment, at purchaser's charge, with a transport insurance usual for the business sector, including loading and unloading, and the bringing of the merchandise to the installation location immediately after unloading. Additional insurance agreements are only concluded at the written request of the purchaser, and with advance payment.

VI. Retention of title

1. The delivered merchandise remains our property until the payment of the agreed price is completed, including all debts ensuing from the business relation plus future claims, and the redemption of bills of exchange and cheques has taken place.
2. Should the purchaser pay by cheque and we in turn issue him/her a refinancing bill of exchange, the retention of title shall only expire when we cannot be claimed for anything ensuing from the bill of exchange.
3. A resale is allowed to the purchaser within the scope of regulatory business transactions. The purchaser shall immediately assign to us his/her claims from resale of the conditional merchandise, especially the payment claim against his/her purchaser. We shall accept this assignment. The purchaser is obliged to notify his/her debtors of the assignment when we request it. The claims and the name of the purchaser's debtors shall be communicated to us.
4. The purchaser reserves the right to redeem demands resulting from the resale. In case of delayed payment or in so far as we learn of circumstances which, according to commercial competence, are liable to diminish the creditworthiness of the purchaser, we reserve the right to cancel the right of collection.
5. For us as manufacturer, handling and processing of the conditional merchandise is done according to § 950 BGB (German Civil Code). Should the conditional merchandise be processed or estated with other objects which do not belong to us, we shall acquire co-ownership of the new object to the net invoice value of the conditional merchandise in proportion to the net invoice value of the other merchandise used, on the date of processing or estating.
6. It is prohibited to transfer the title of merchandise in our ownership as security. Should a third party gain access to the conditional merchandise, especially in an attachment procedure, the purchaser shall instruct on our ownership of the merchandise and shall without delay inform us by sending us a copy of the attachment procedure report.
7. We reserve the right to withdraw from the contract in case of infringement of contract on the part of the purchaser, and to demand the return of merchandise delivered by us.
8. Should the value of the allowed securities exceed our claims by more than 20%, we are obliged on request of the purchaser to re-assign or release securities at our option.

VII. Purchaser's rights as regards defects

1. We hereby transfer our claims against suppliers of essential products of a third party to the purchaser. The purchaser can only make us liable for defects of essential products of a third party, if a previous claiming of a right to the third-party supplier was without success.
2. Should the acquisition be a retail transaction for the purchaser, defects must be communicated to us in writing without delay, at the latest within one week of reception of the merchandise. Any defects which could not be discovered within this period even after careful inspection must be reported as complaint by the purchaser without delay after discovery, in the form stated above.
3. In the event of justified complaints, we reserve the right to correct or deliver replacement within a reasonable period of at least 14 days, at our option. Should the supplementary performance fail, the purchaser may reduce the price or - in so far as the infringement of contract is more than minor - withdraw from the contract. Additionally he/she also reserves the right of demanding damage compensation or reimbursement of expenses. Should the purchaser withdraw from the contract, he/she must return to us the delivered object and - regardless of other claims - pay an appropriate refund for the period of usage to the amount of the usual terms of rent.
4. Claims of the purchaser for expenses ensuing from the later fulfillment, in particular transportation, travel, work, and material expenses, shall be excluded, in so far as the expenses have increased because the delivered merchandise has been transported to a different location from the delivery location by the purchaser or a third party, unless the transport corresponds to the regulatory usage of the delivered object, or was agreed upon with us at the conclusion of the contract.
5. Purchaser's claims against defects are limited to a period of 12 months. This shall not apply in so far as the law in §§ 438 para. 1 no. 2 BGB, 479 para. 1 and 634a para. 1 no. 2 BGB (German Civil Code) prescribes longer periods, namely for buildings, and issues concerning buildings, recourse claims, and constructional defects.

VIII. Limitations of liability, damage compensation

1. We are not liable for infringement of unessential contract obligations through minor negligence.
2. Claims of the purchaser as regards product liability, or bodily injury or harm to health for which we are answerable, also loss of life of the purchaser or his/her auxiliary persons, shall remain untouched.
3. The shortening of the expiration period according to article VII. 5 shall not apply if we can be reproached with serious fault, or should we be answerable for harm to body or health, or for the loss of life of the purchaser or his/her auxiliary persons.

IX. Place of performance, jurisdiction and applicable laws

1. Place of performance for all obligations contained in the contract shall be Rheda-Wiedenbrück.
2. Court of jurisdiction for all litigation ensuing from the contract, should the purchaser concern a merchant, a legal person of the public law, or assets relating to public law, shall be Rheda-Wiedenbrück. We are nonetheless freely disposed to call on the court of law competent for the residence of the purchaser.
3. German Law shall exclusively apply. The application of the agreement of the United Nations on contracts on international merchandising of 11 April 1980 (UN agreement) shall be excluded.

X. Data protection

1. We reserve the right to store, communicate, modify and delete data of the purchaser related to his/her person. The purchaser shall be informed herewith according to § 26 BDSG (German Penal Law).

Notes

**VISIT OUR
WEBSITE**

www.westfalia-automotive.de



Approved supplier
to the automotive industry.

WESTFALIA



WESTFALIA-Automotive GmbH
Am Sandberg 45
33378 Rheda-Wiedenbrück
Telefon: +49 5242 907 0
Telefax: +49 5242 907 195

www.westfalia-automotive.de

